


Ident-Nummern-Konstante
3740


51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

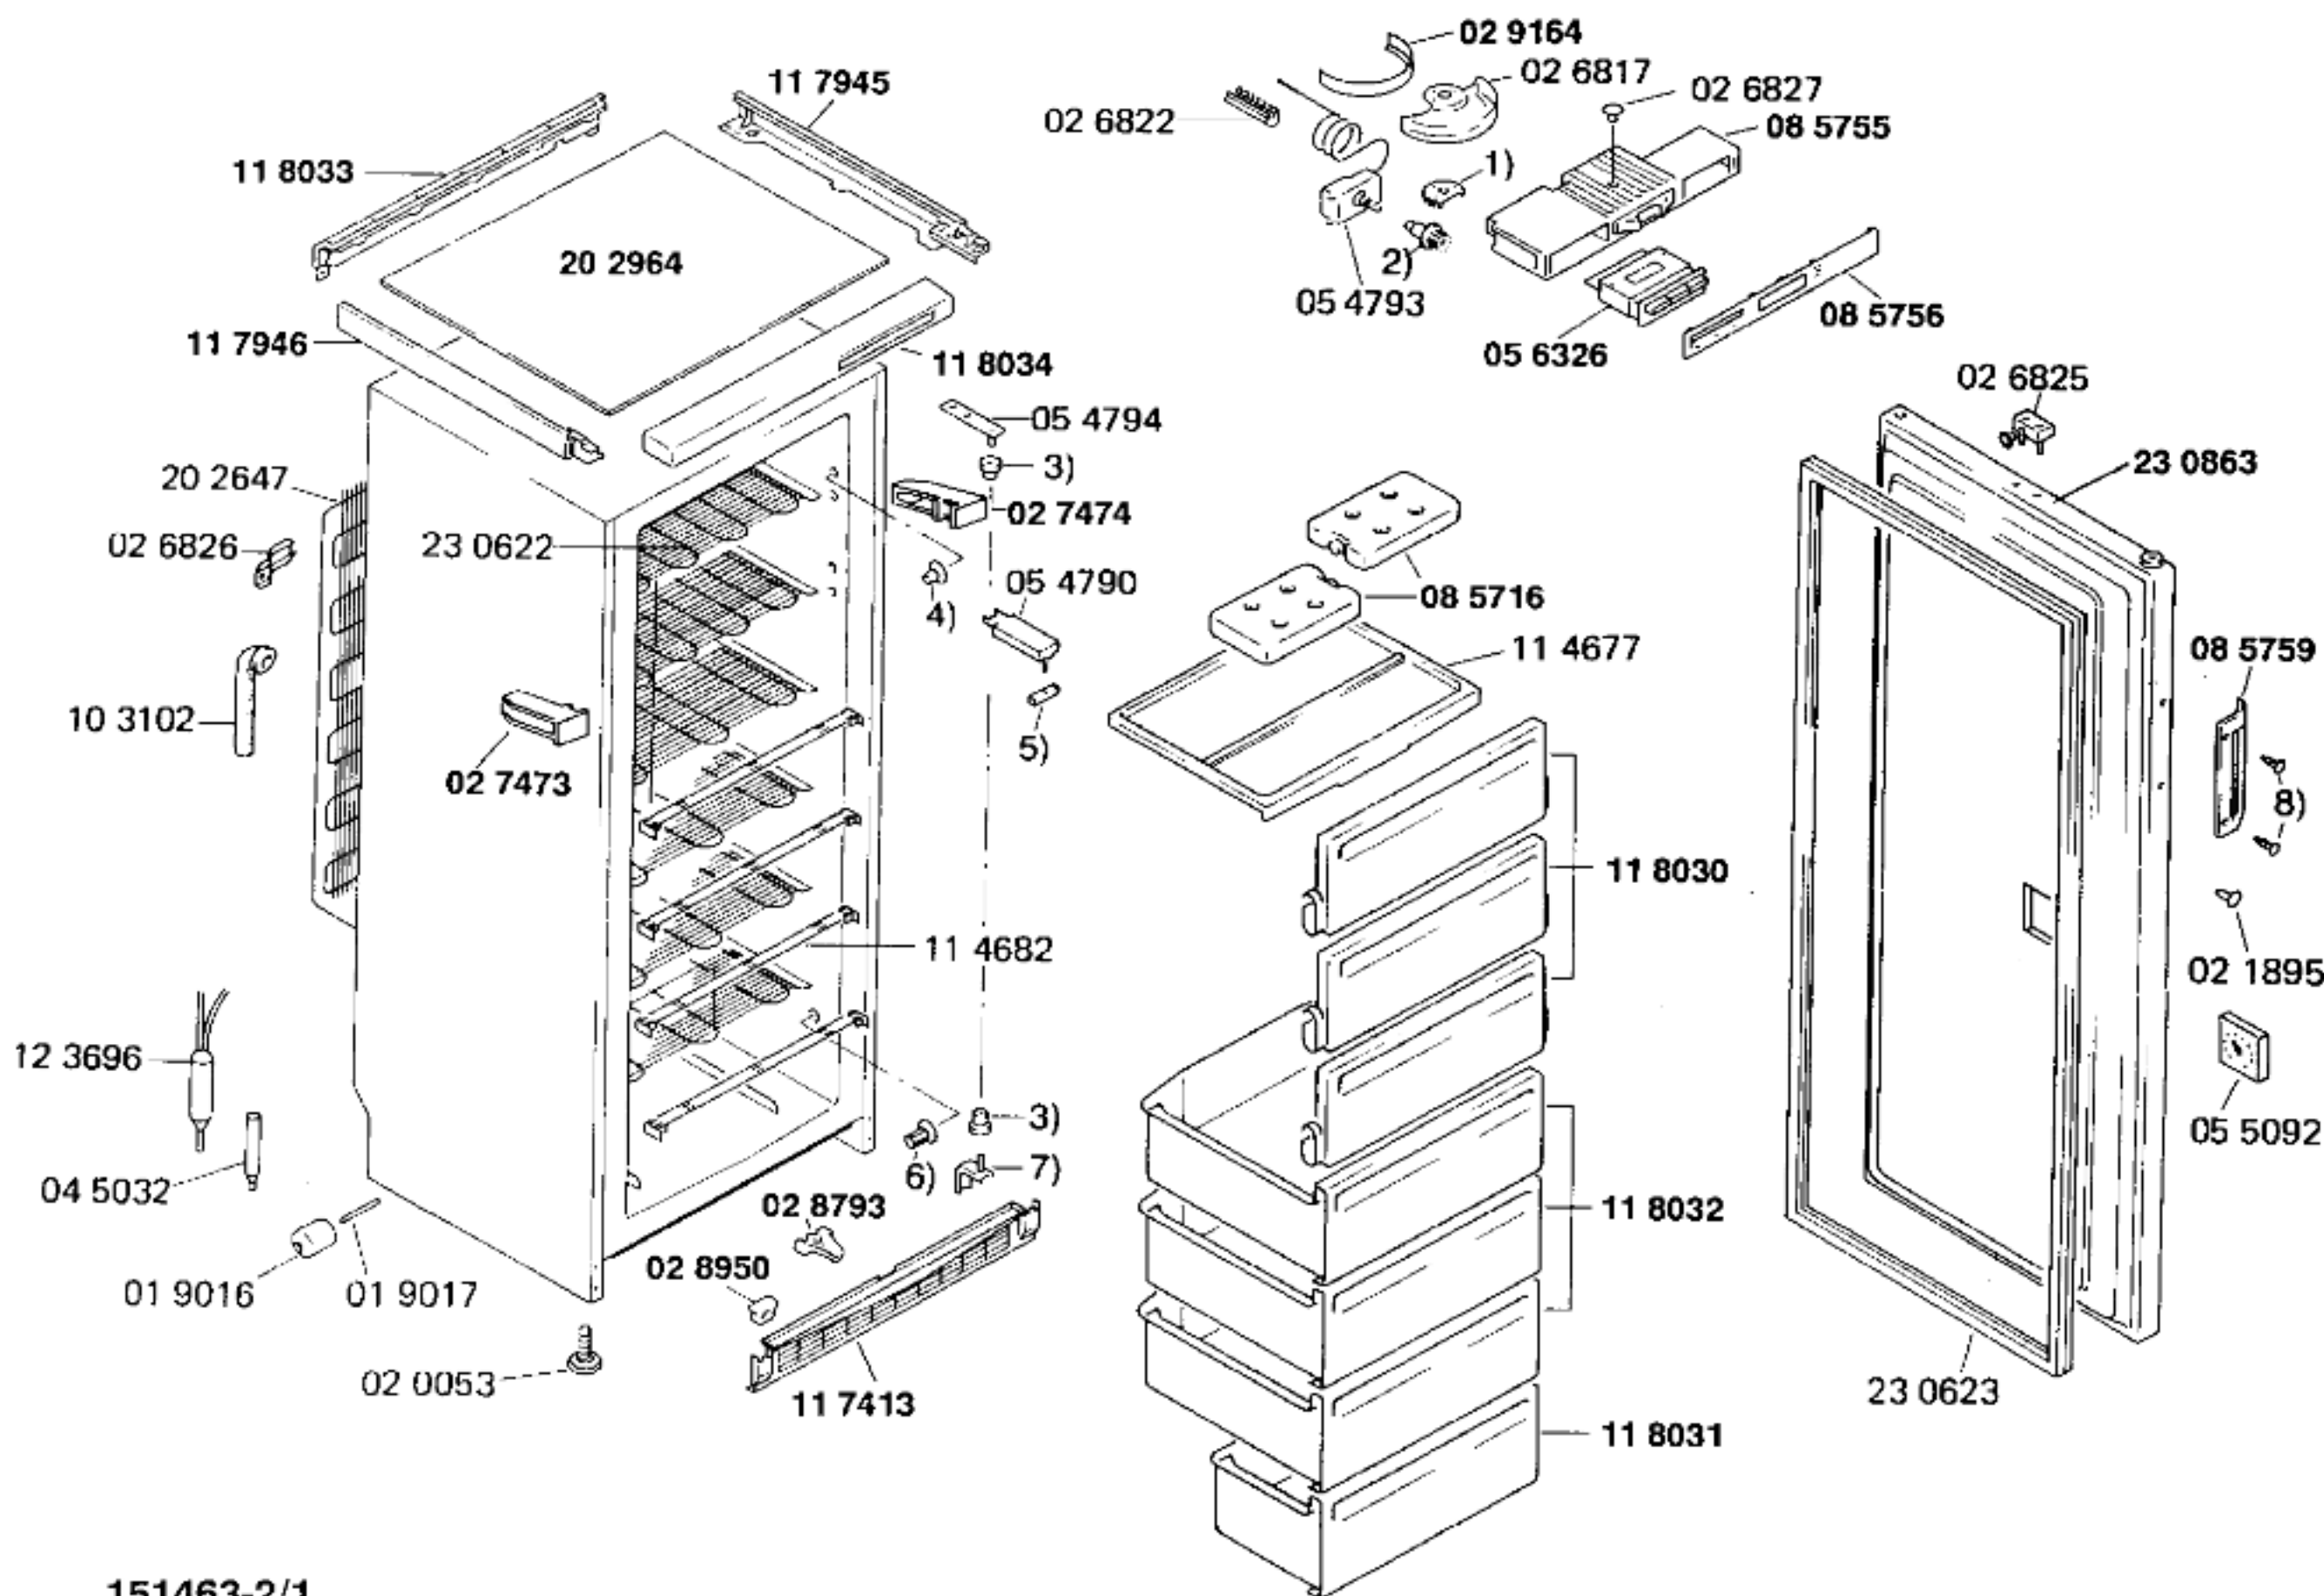

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815

- 6) 01 8901
- 7) 05 4795
- 8) 01 9830

Ident.-Nummern-Konstante
3740

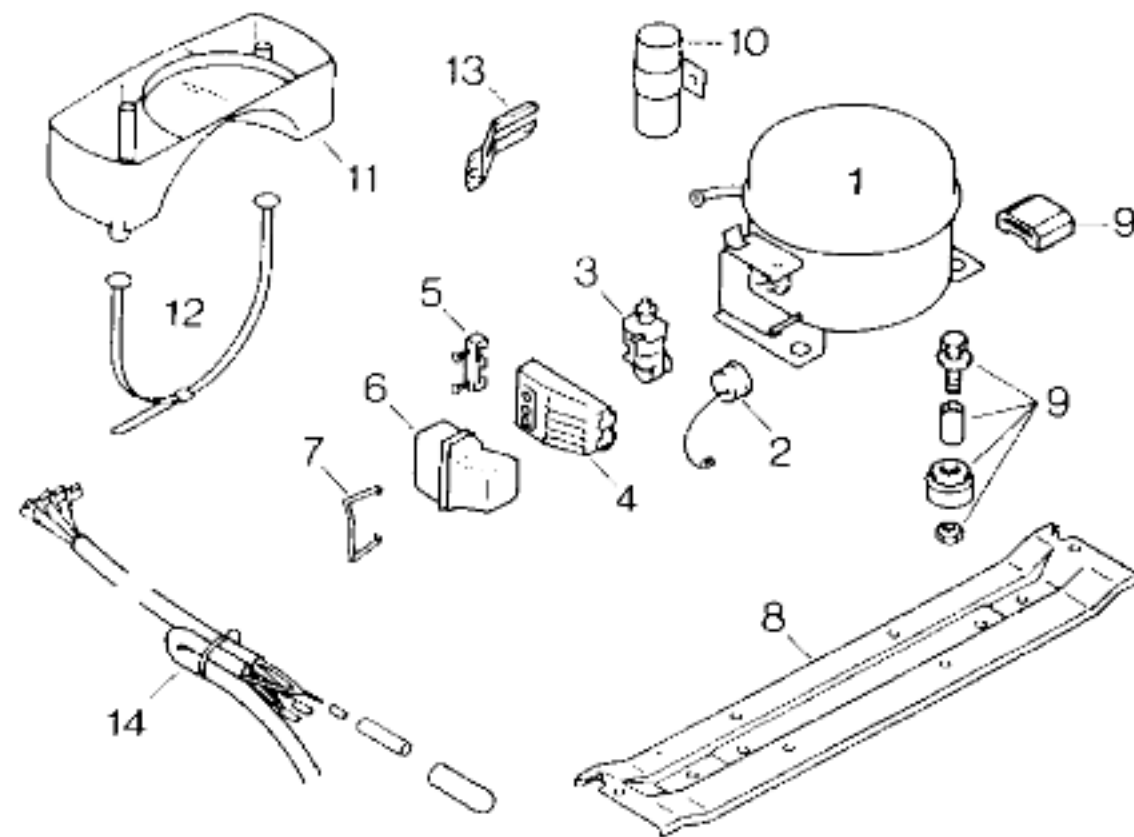

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Danfoss		
Typ/Type		BY 1116 A	FR 8,5 A		
Förderleistung/Delivery/Débit		l/h	1450	1430	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,9	10,3	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	11,7	12,2
		Hi/aux	Ω	37,7	13,7
Temp.-Regler/Thermostat		Danfoss			
Typ/Type		077 B 2054			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/		„ein“	°C	- 24	- 16
Valeurs de commutation		„aus“		- 34	- 24
(„abtauen“ od.)		„alarm“		- 19	- 12
Füllmenge/Fill.quantity/Charge		R12	g	195	
Anschlußwert/Conn.load/Puiss. connectée			W	170	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		

Pos.	EU1	EU2		
	Aspera	Danfoss		
1	14 0312	14 0157		
2	02 6559			
3	02 2342	02 0108		
4	05 1748			
5		02 1361		
6	05 1746	05 1413		
7	02 2339			
8				
9	05 0166			
10				
11				
12				
13				
14				