


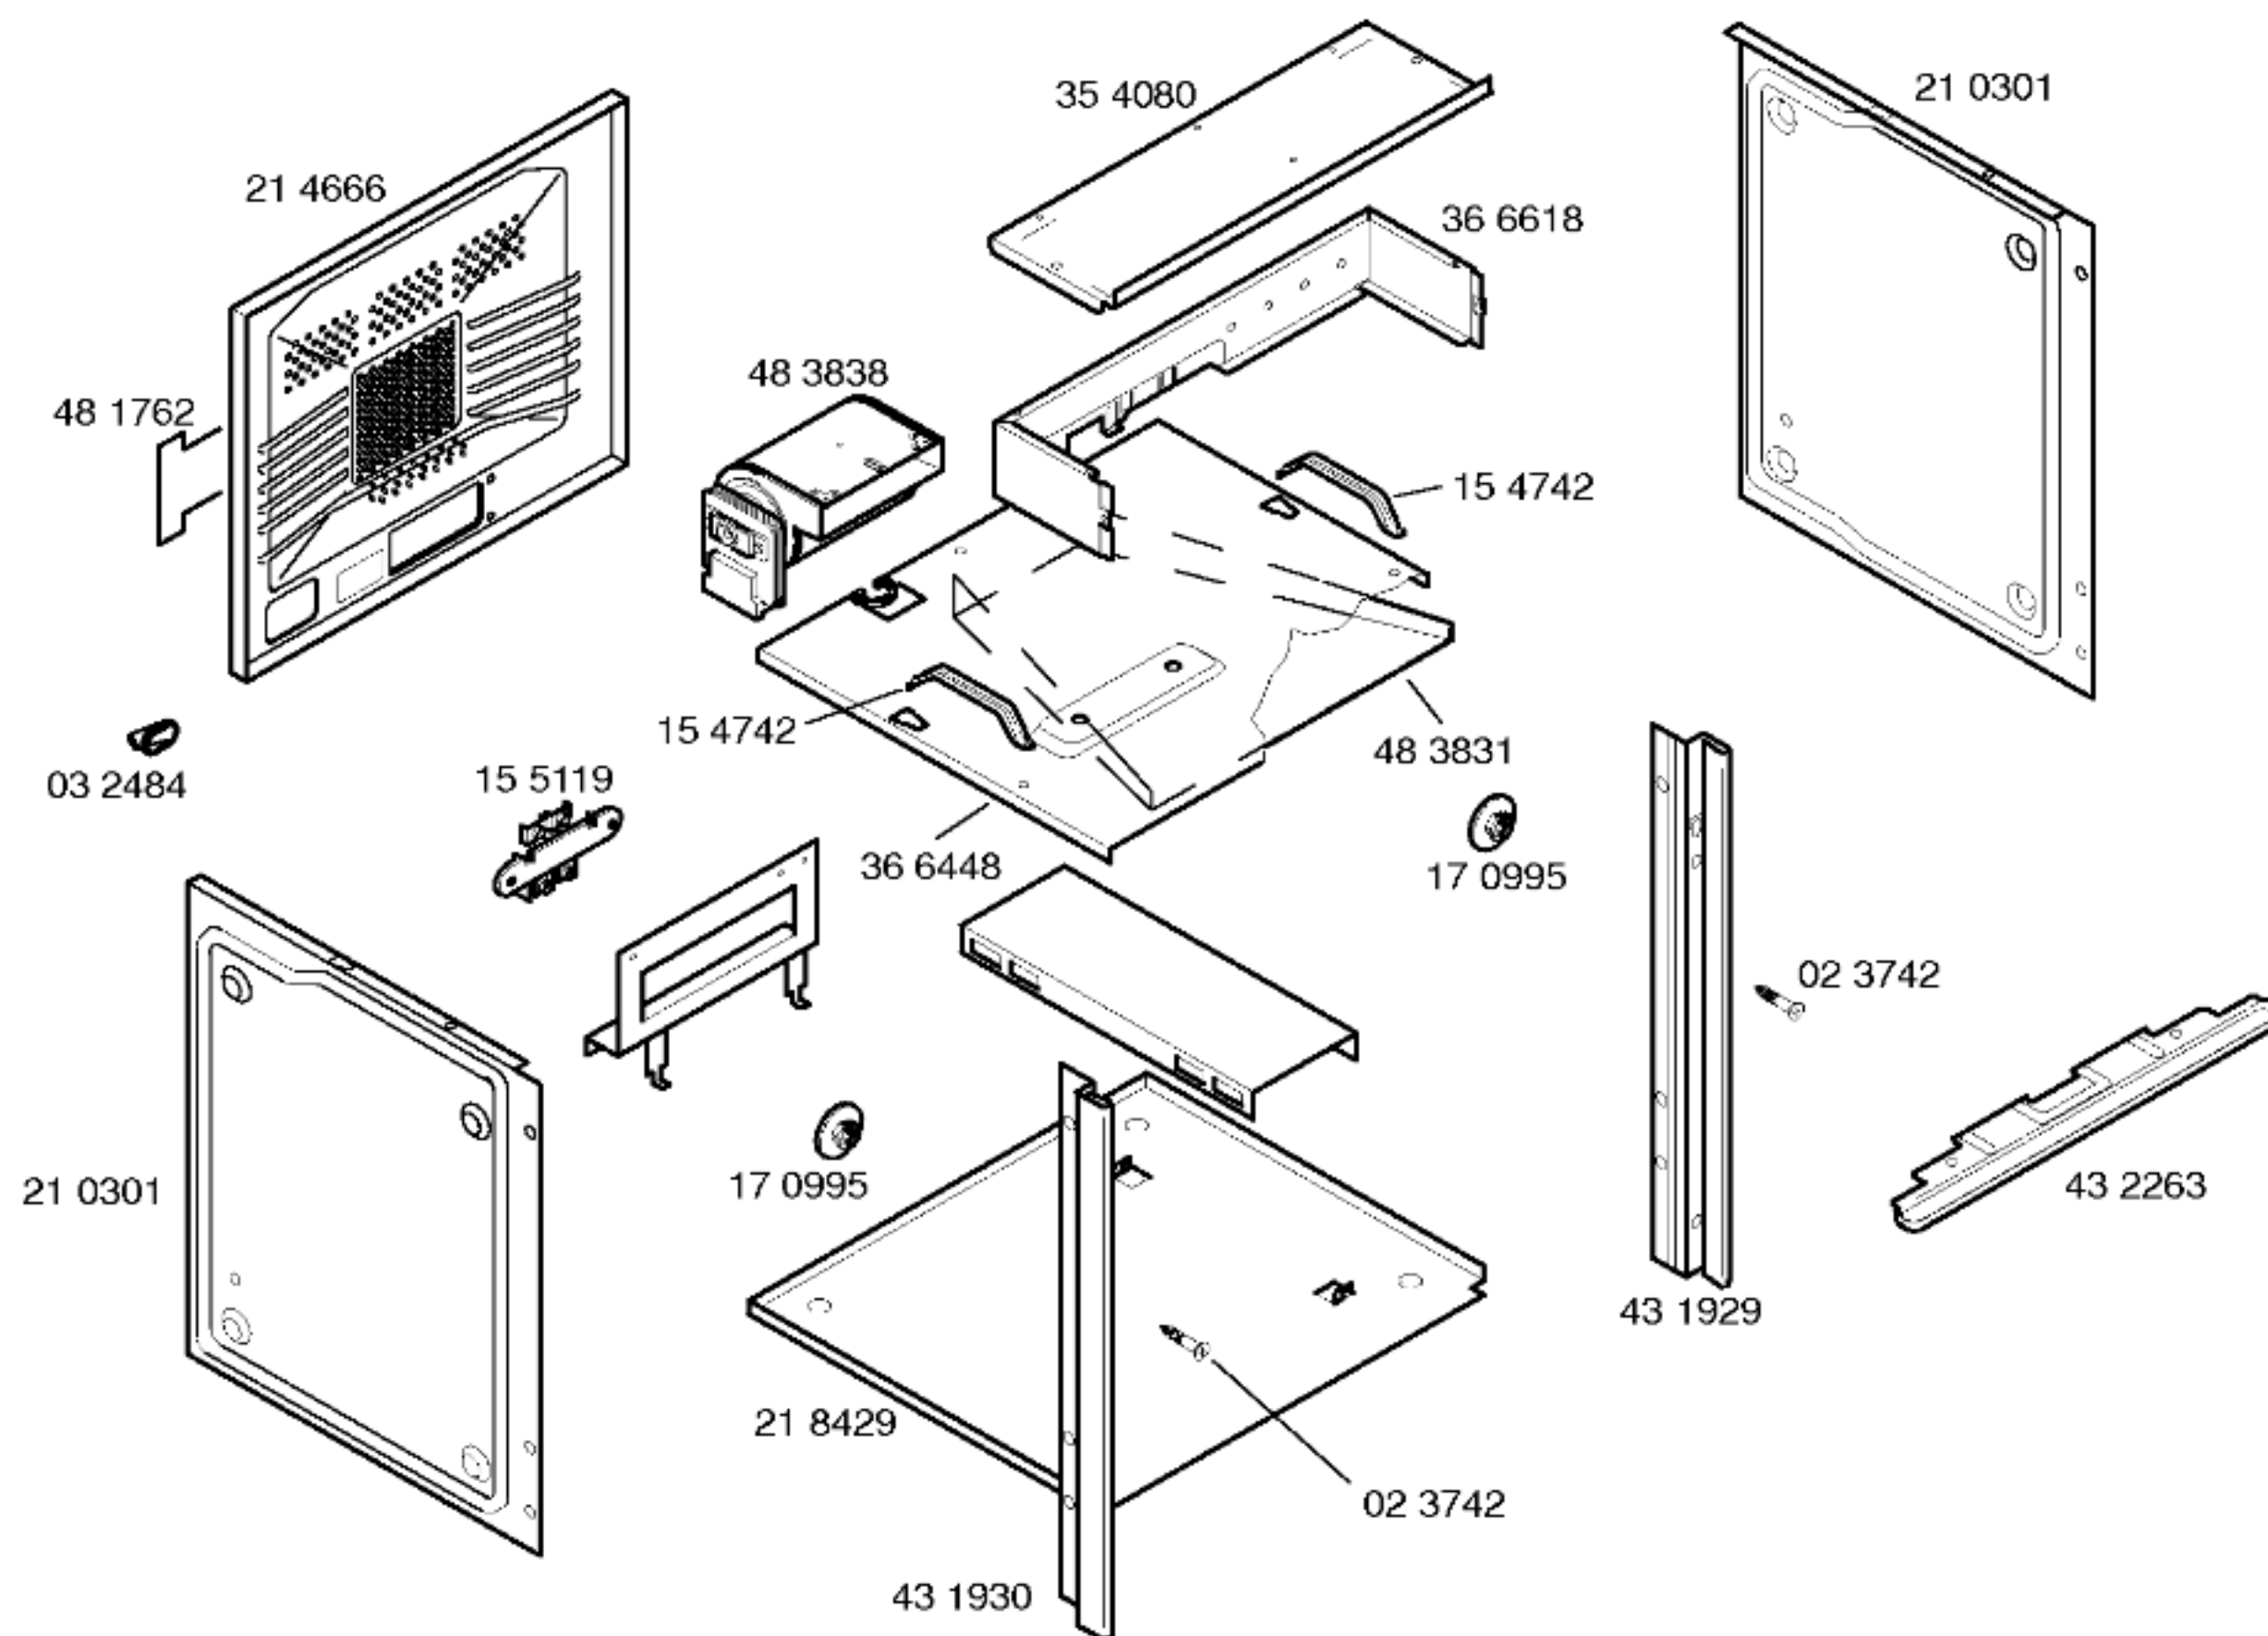


Gebrauchsanweisung
58 6096
(de,en,fr,nl,it,es,el)
Montageanweisung
51 7991
(de,en,fr,nl,it,es,pt,el)
Kochbuch
58 5533


Zubehör:


Dampfgarer
N8640X2

Backblech, Alu
Z1330X0
Backblech Email
Z1340X2
Brotbackstein
Z1910X0
Bratenblech Email
Z1510X2
Nachrüstset Clou4/Kat.
Z1750X0
Auflaufform
Z1270X2
Grillpfanne
Z1230X2

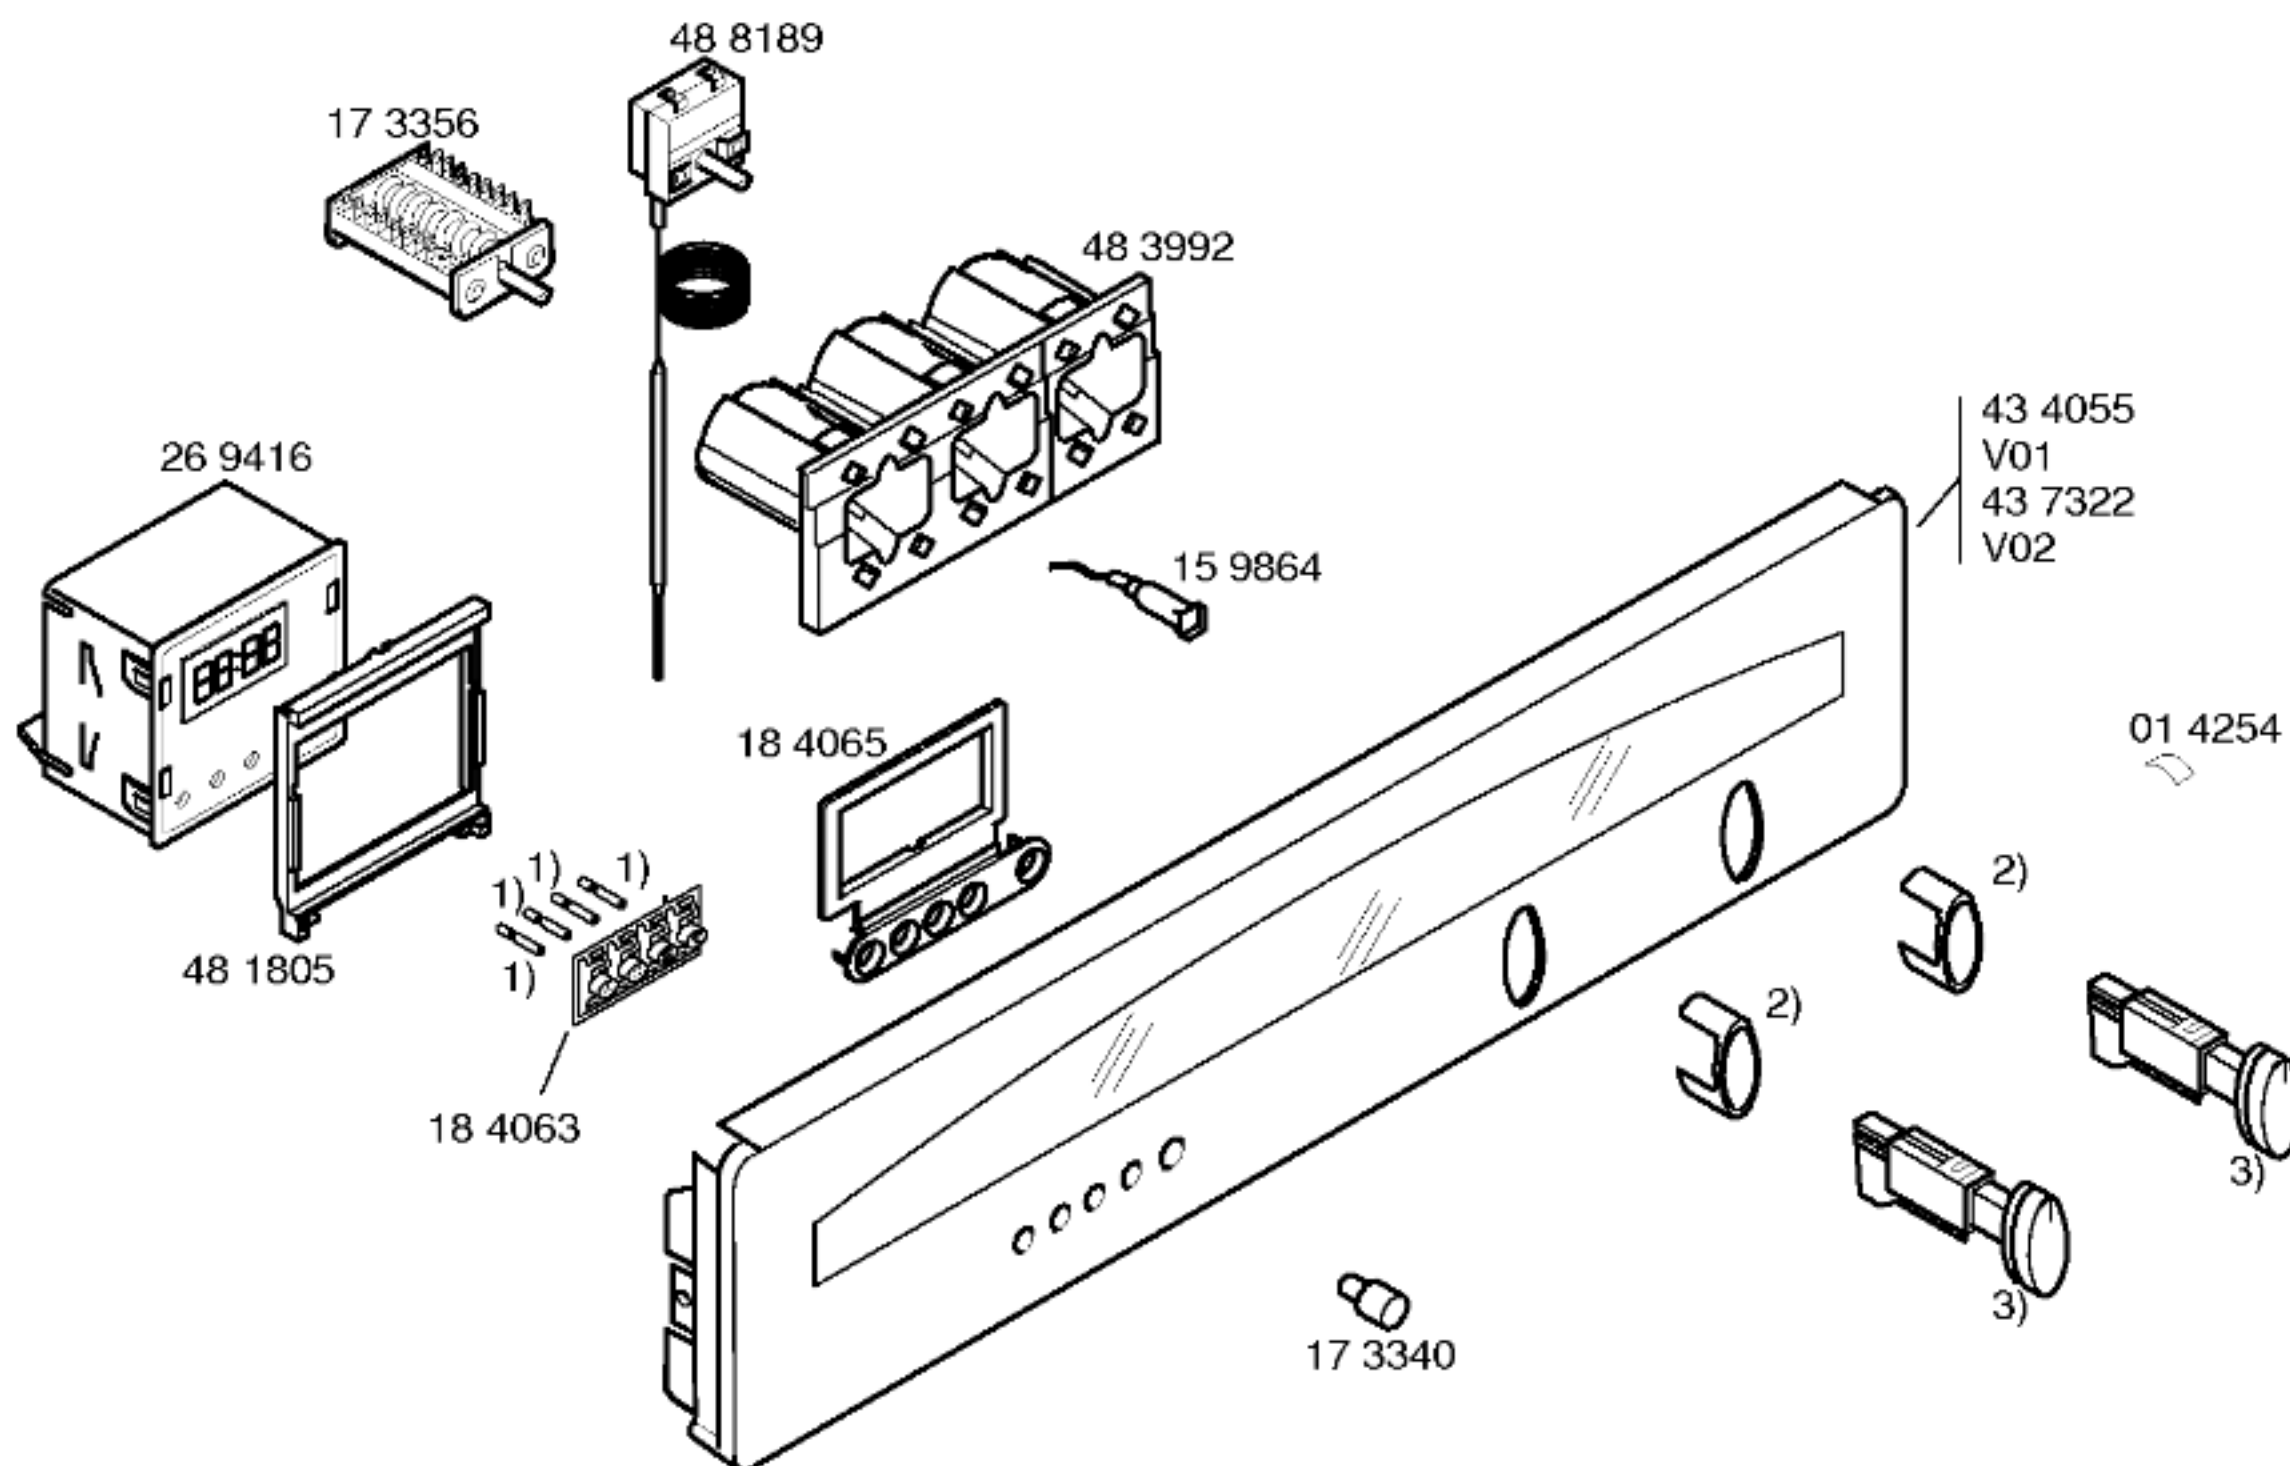

- 1) 16 8588
- 2) 18 8838
- 3) 18 8840

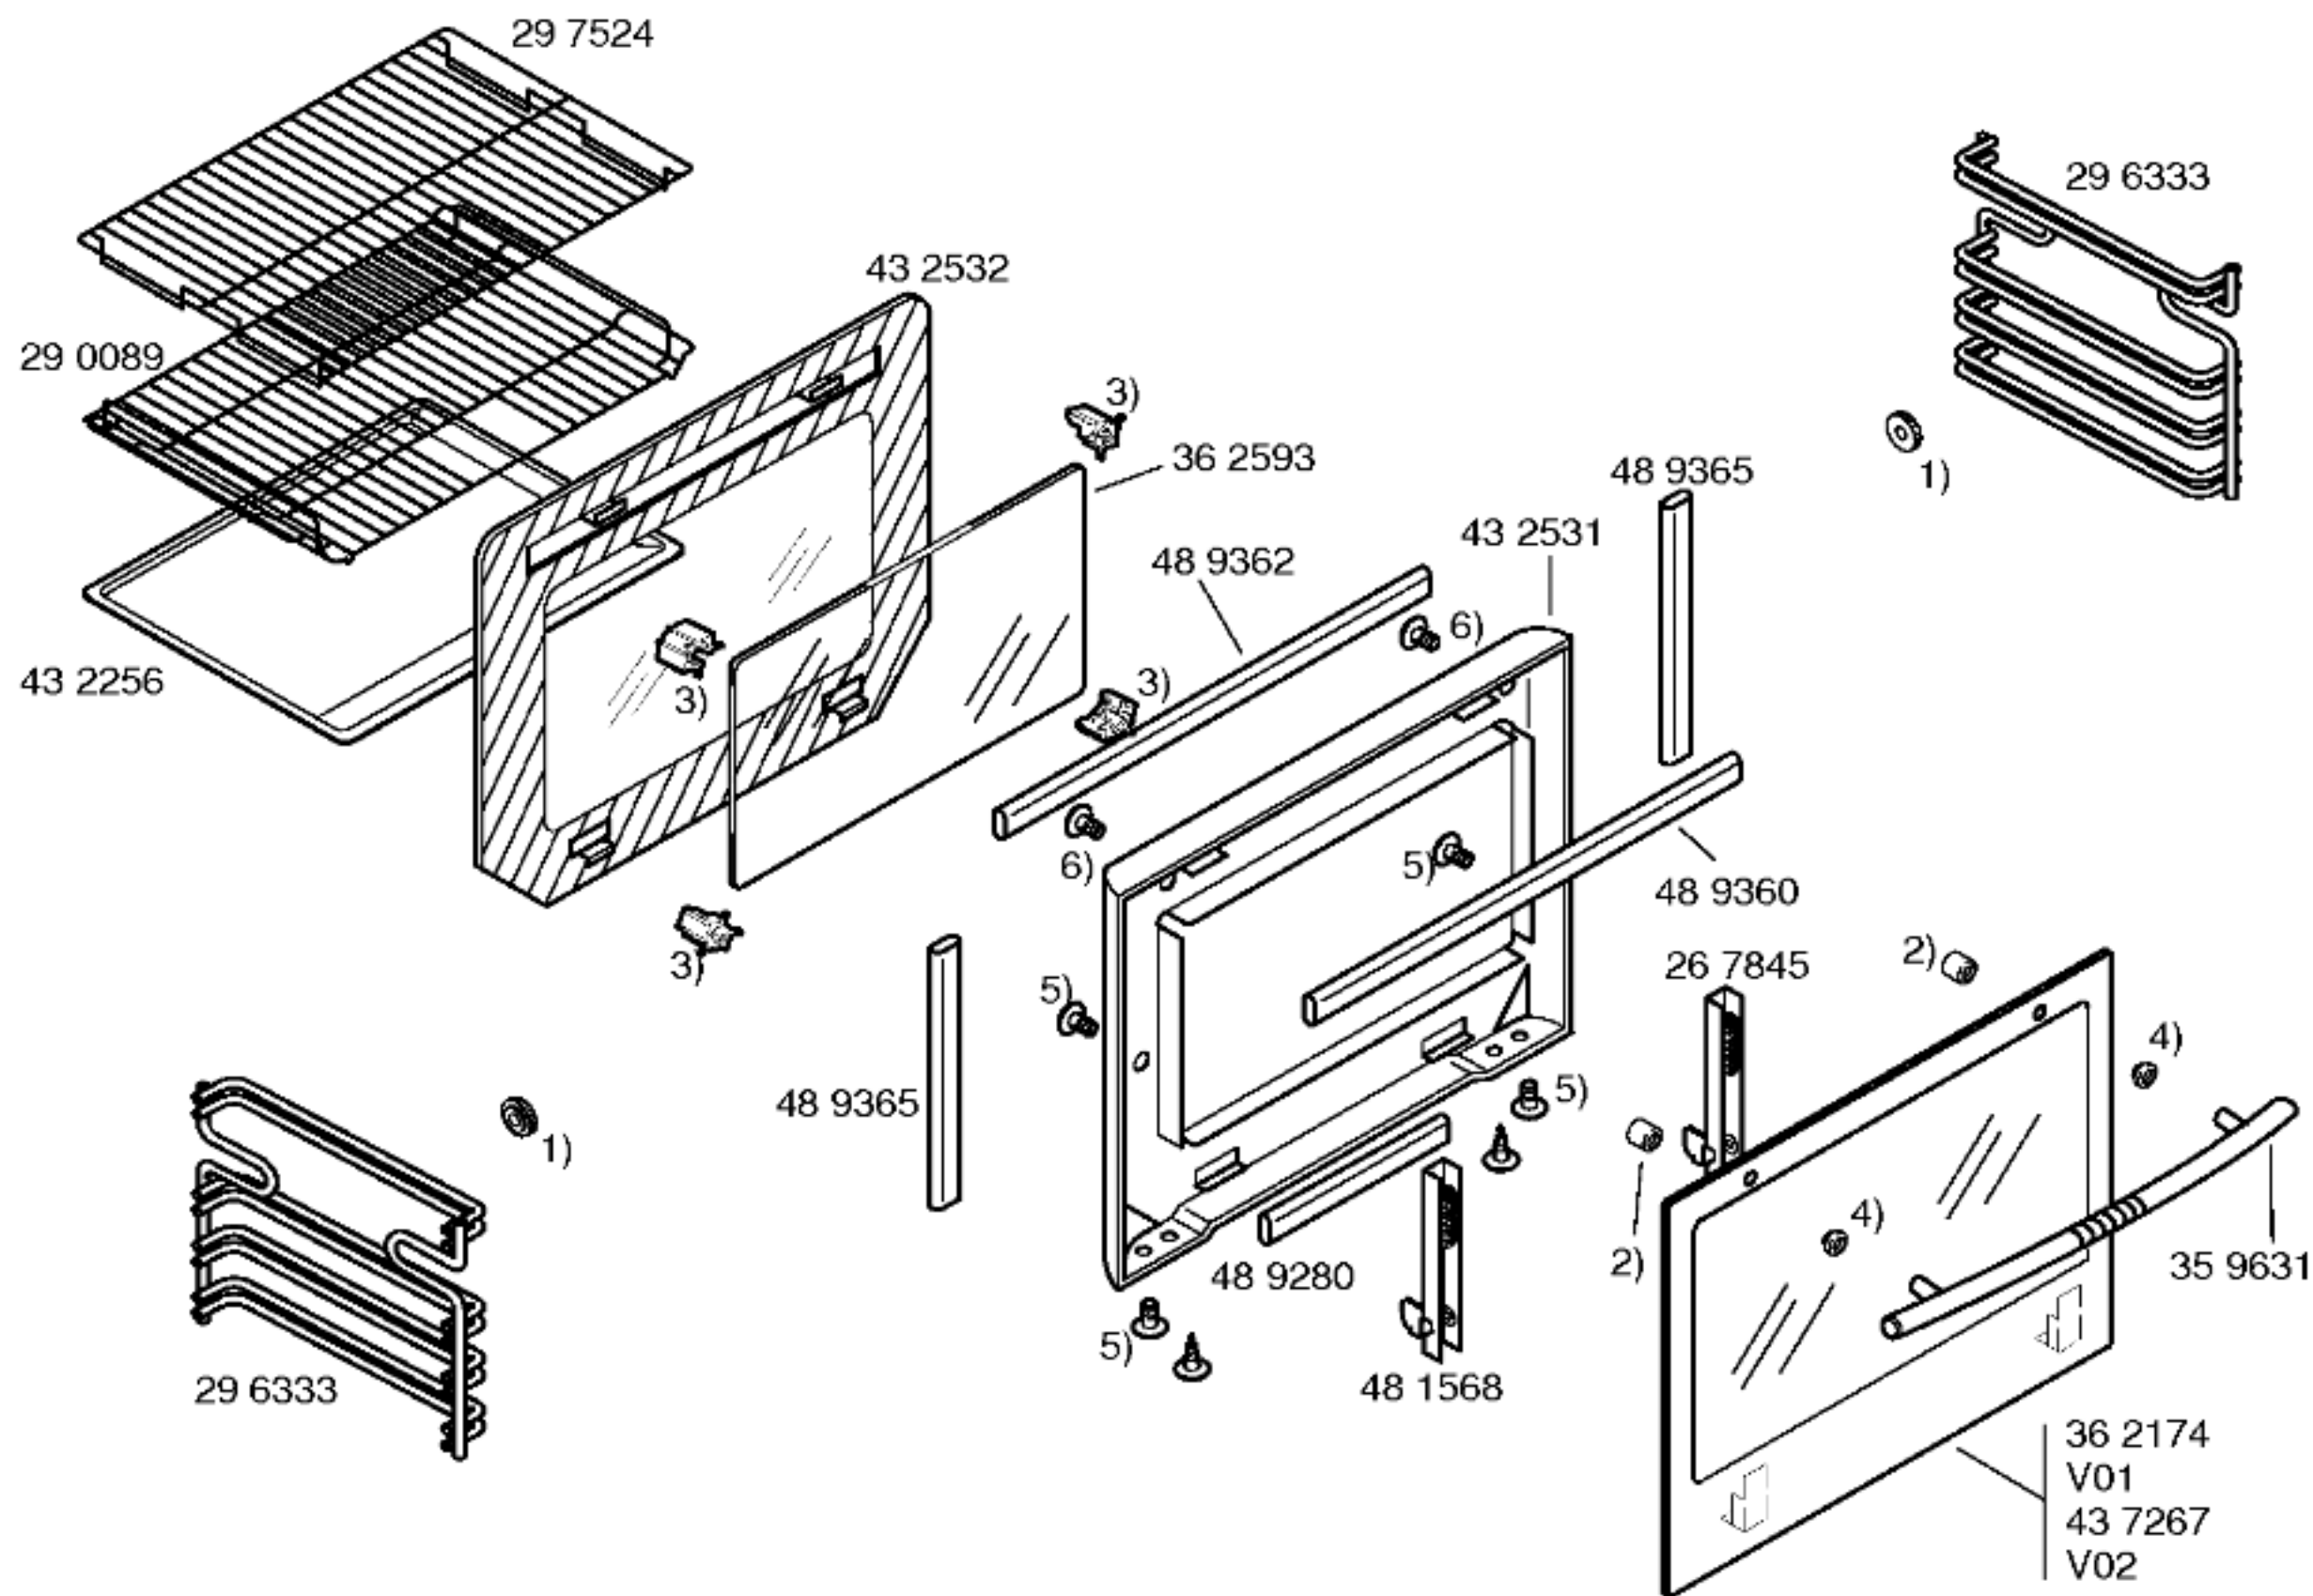

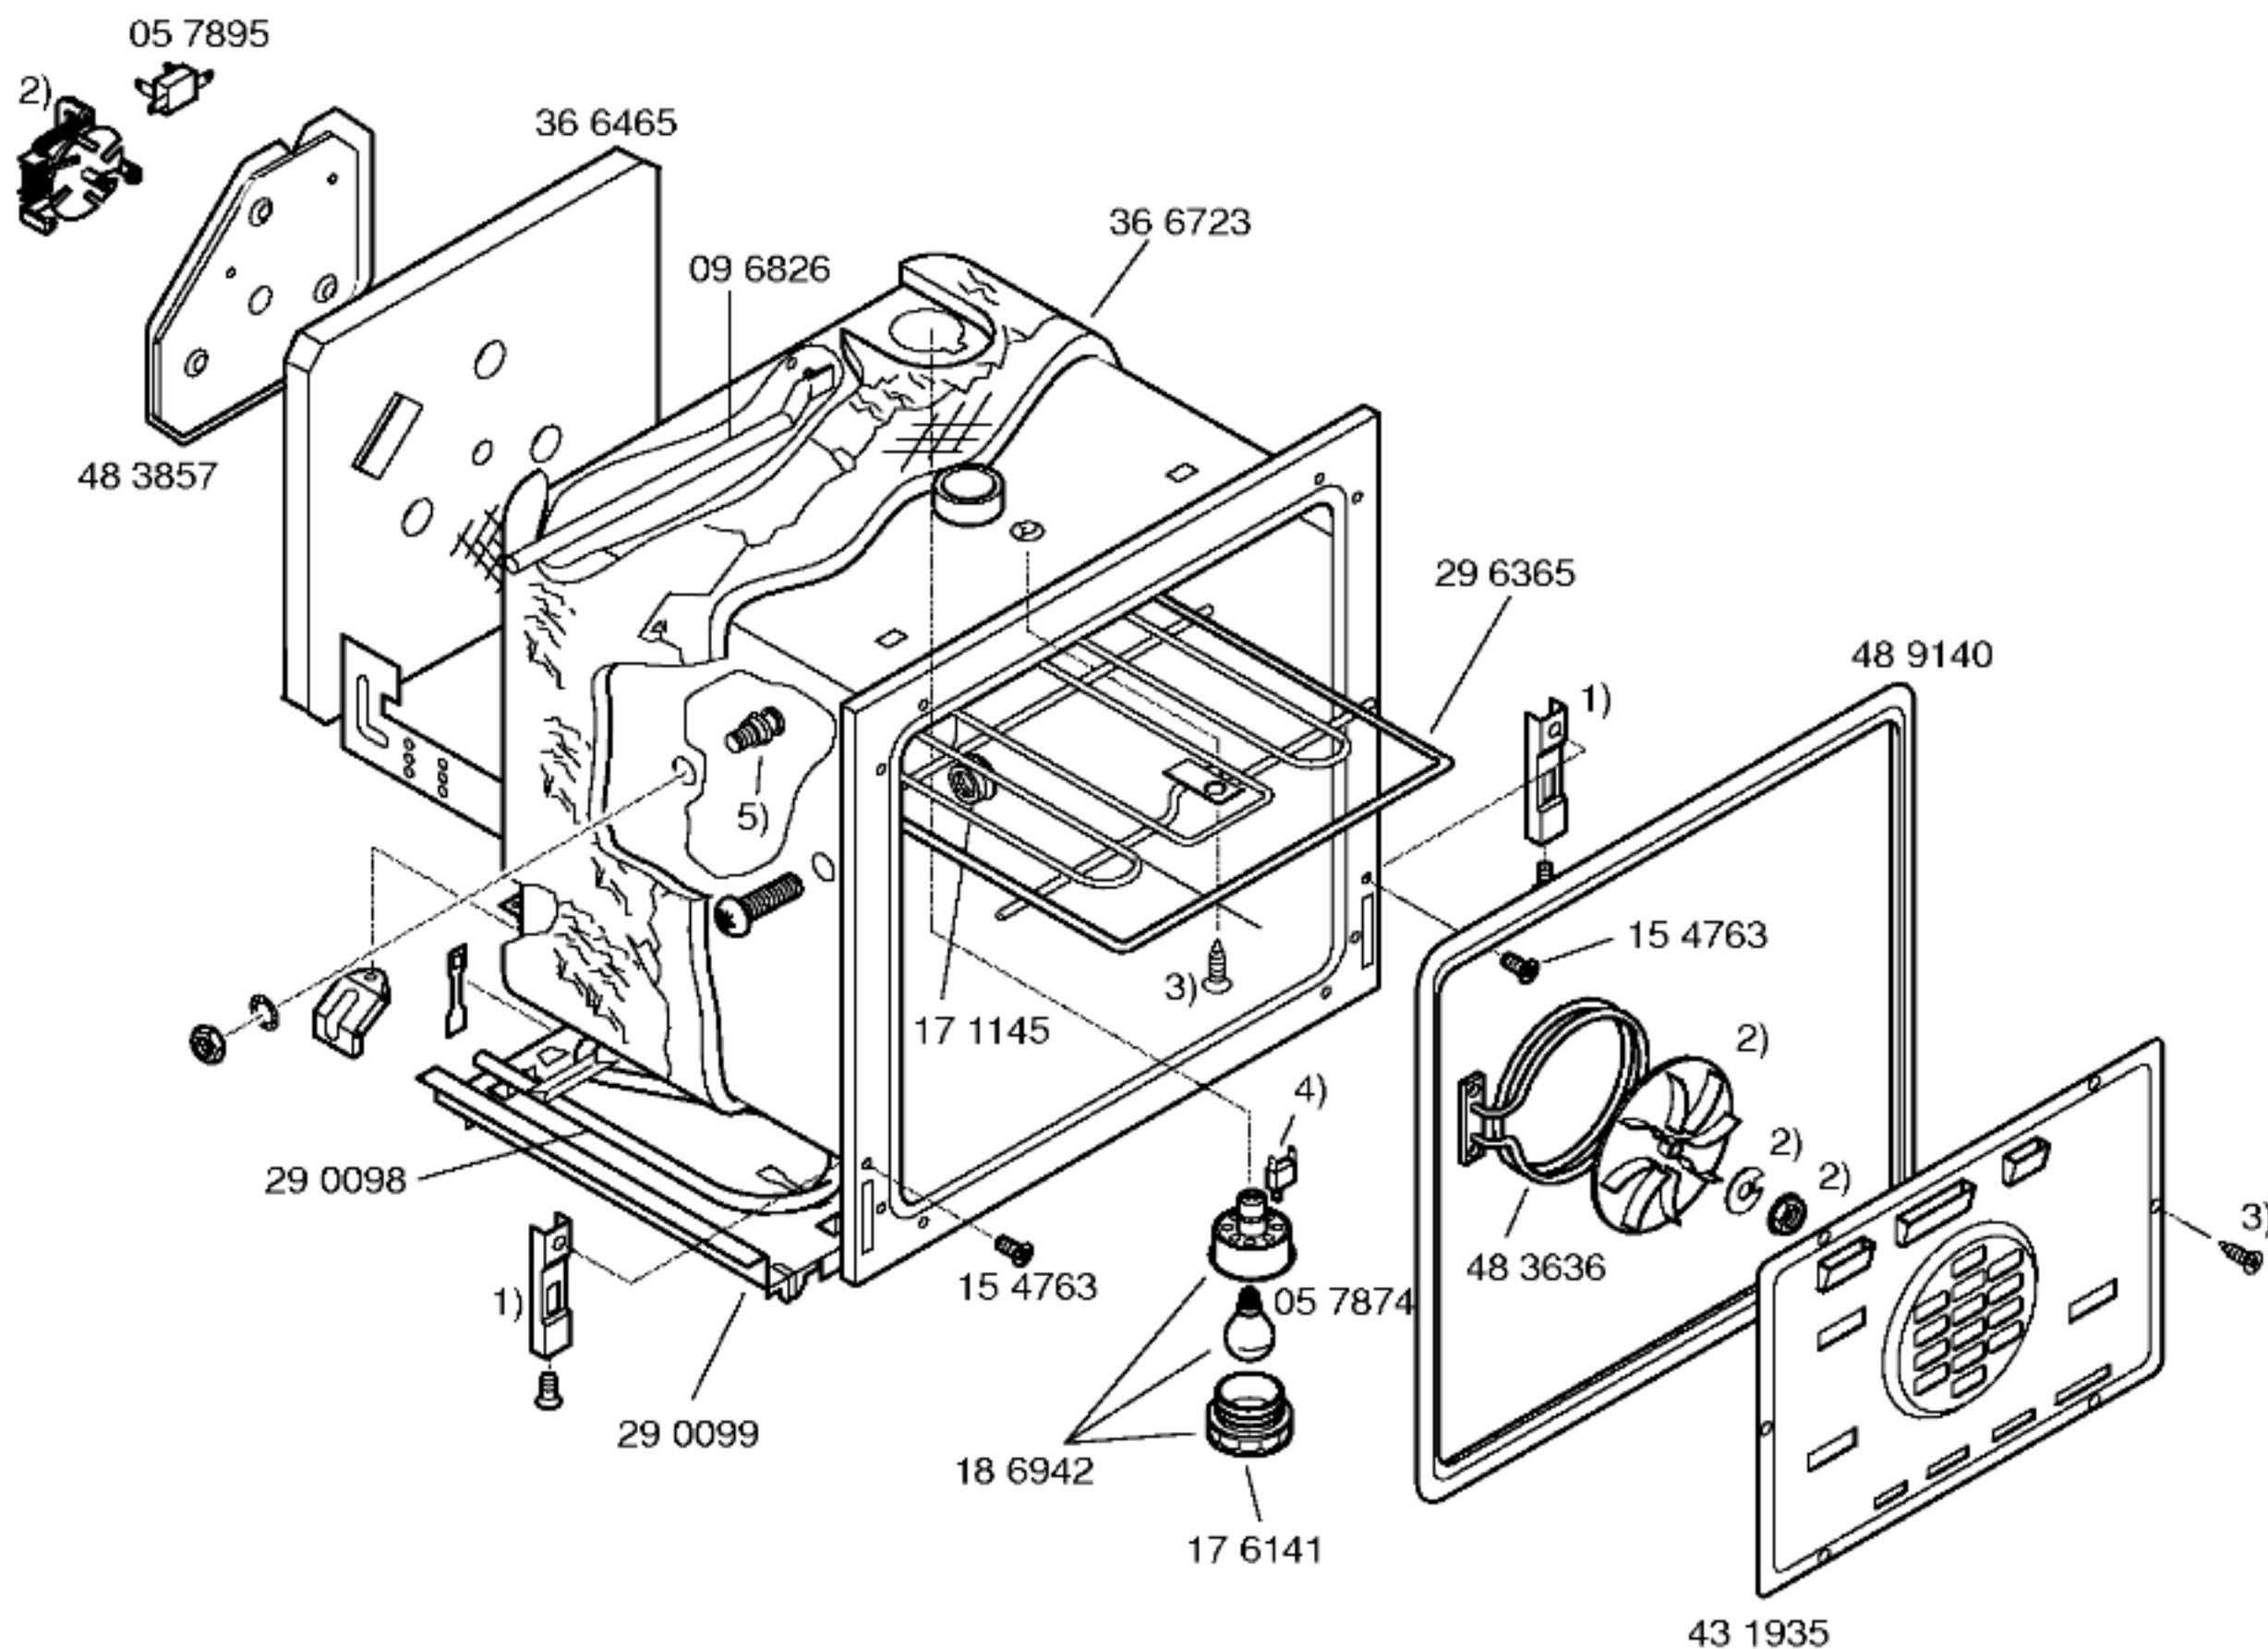

- 1) 17 2647
- 2) 48 3856
kompl.
- 3) 41 8562
- 4) 15 4836
- 5) 17 1146