

**BOSCH**


GFL 100 – 0 705 114 102–D1
 – 0 705 114 103–CH1
 – 0 705 114 104–F1
 – 0 705 114 112–D2

GFL 100 – 0 705 114 113–CH2
 – 0 705 114 114–F2

GEFRIERGERÄTE
 Gefrierschränke, Einbau

Ident-Nummern-Konstante
 3740

51 1734/00
 D1,D2,CH1,CH2,F1,F2
 Gebrauchsanweisung
 (D,GB,F,I,NL,DK,N,S,SF,E)

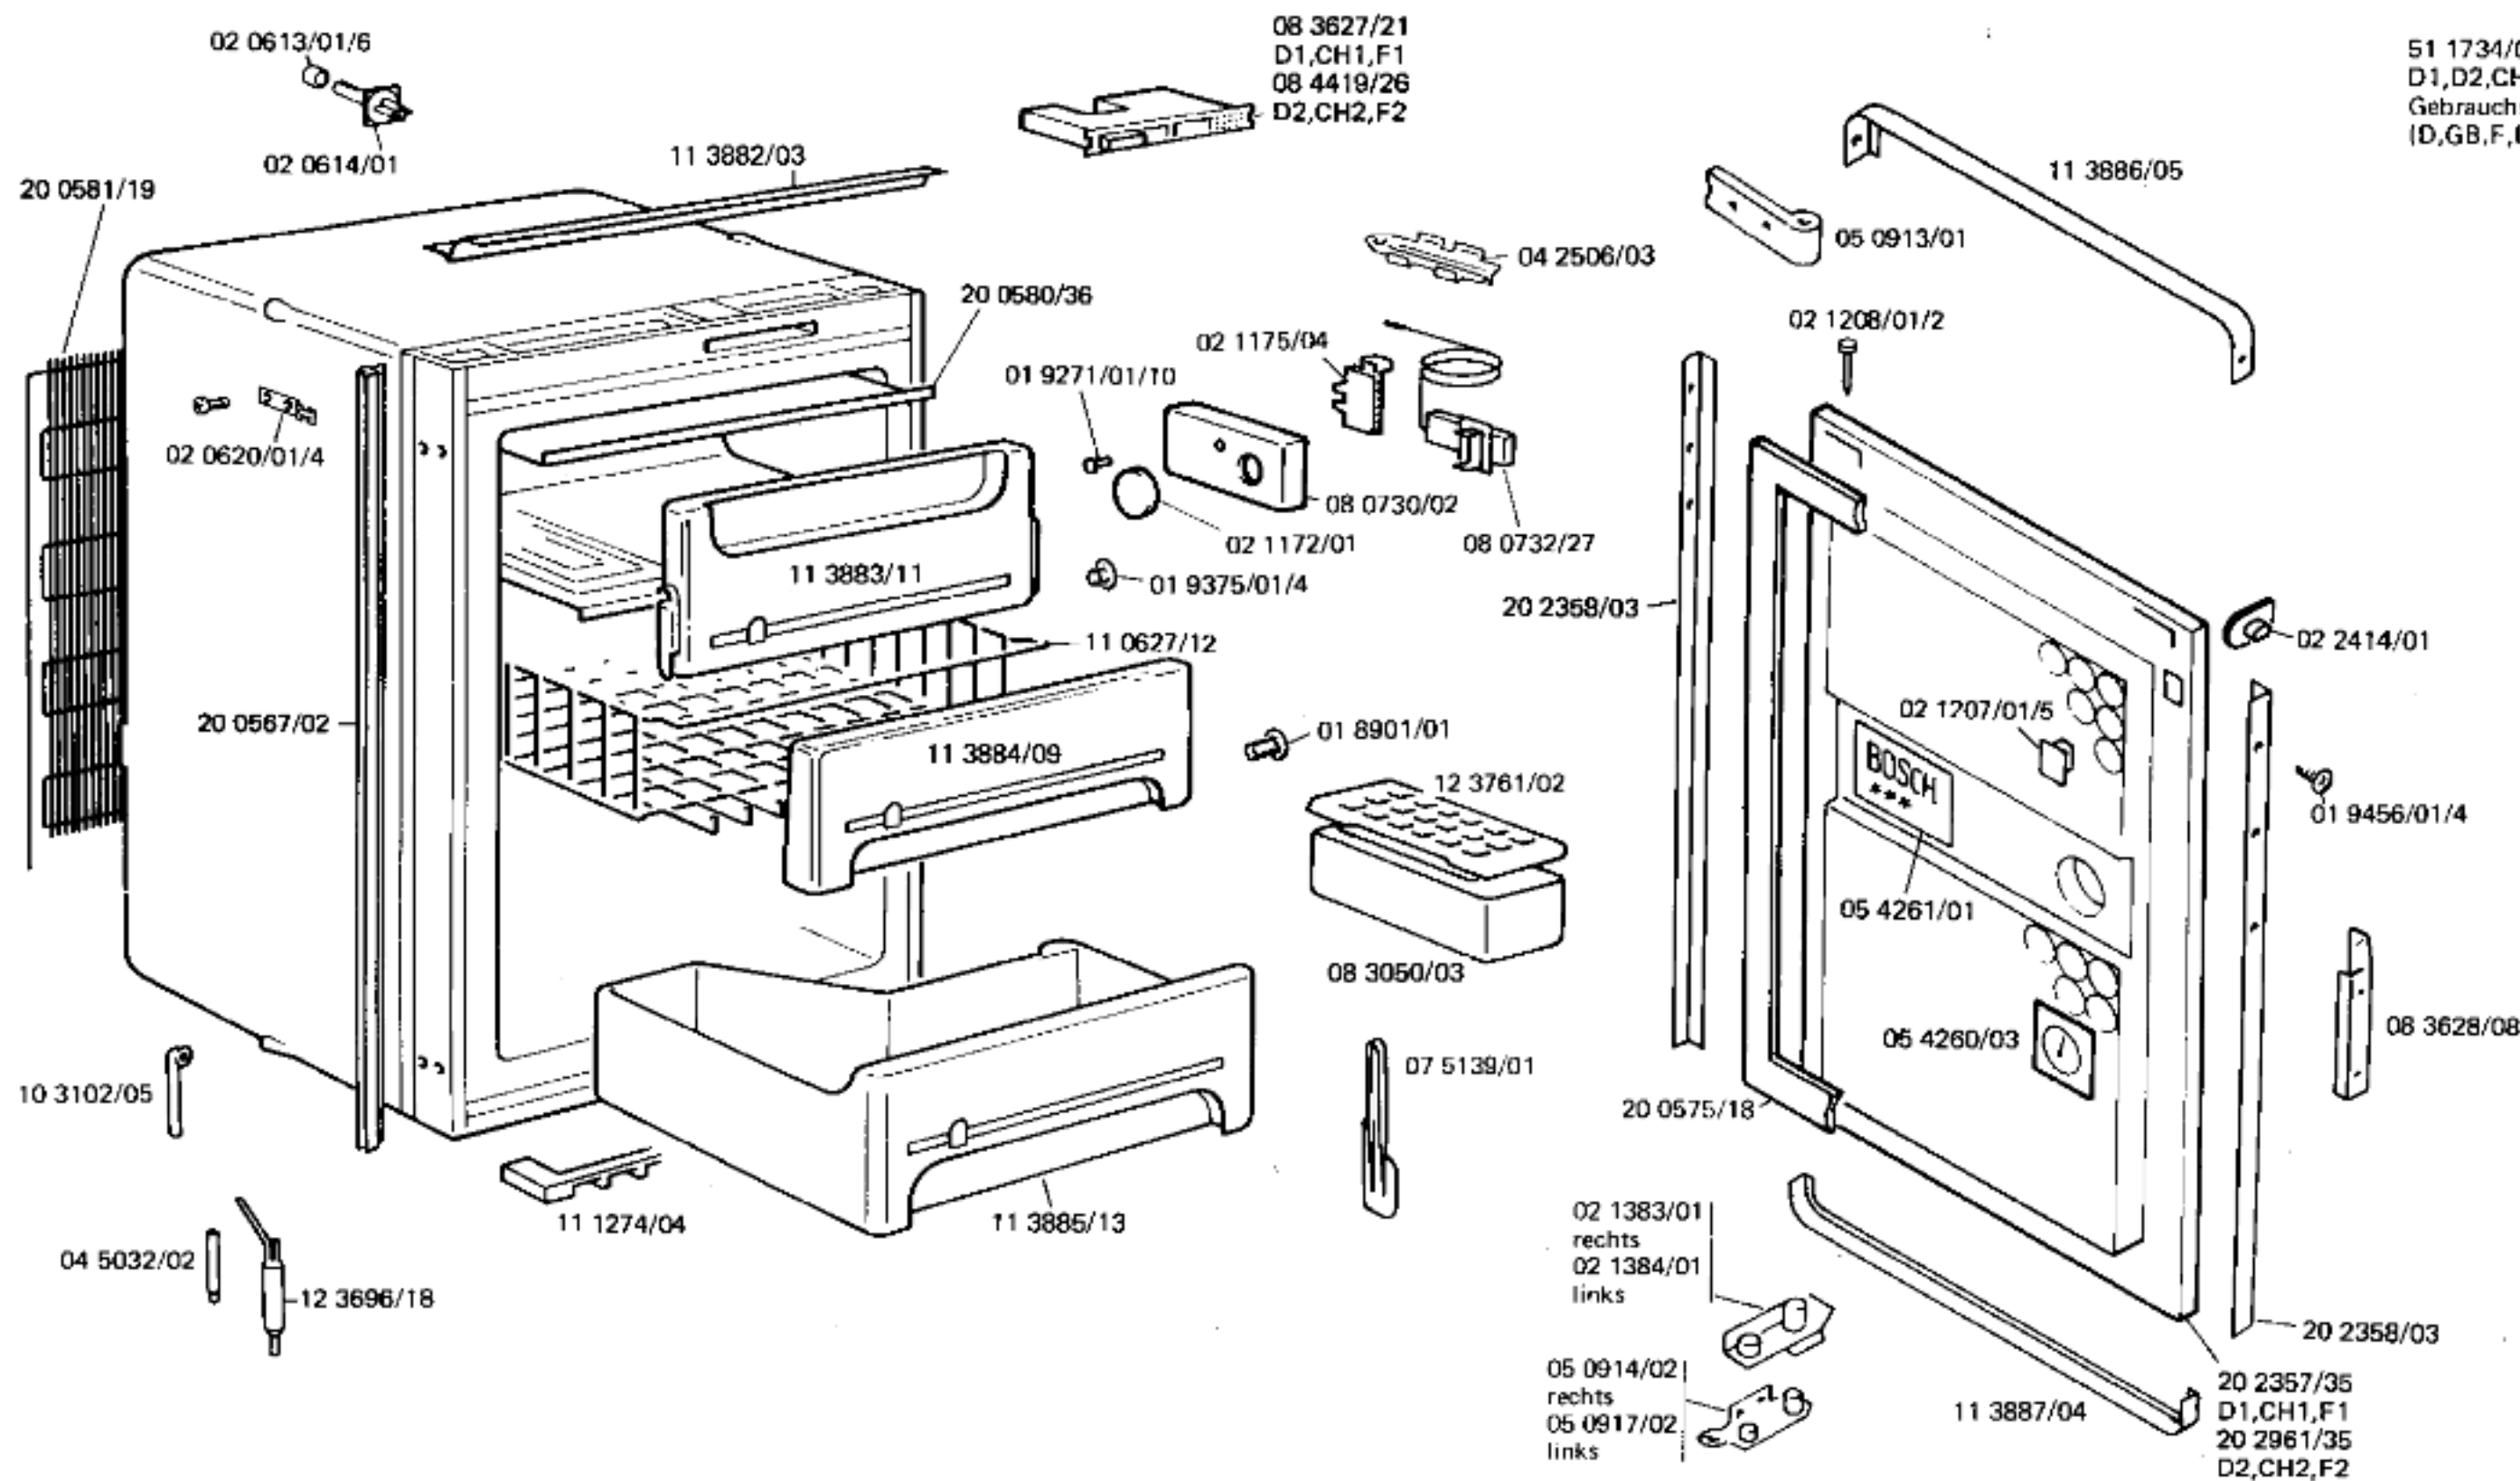


**BOSCH**

GFL 100 – 0 705 114 102–D1 GFL 100 – 0 705 114 113–CH2
 – 0 705 114 103–CH1 – 0 705 114 114–F2
 – 0 705 114 104–F1
 – 0 705 114 112–D2

GEFRIERGERÄTE
 Gefrierschränke, Einbau

Ident-Nummern-Konstante
 3740

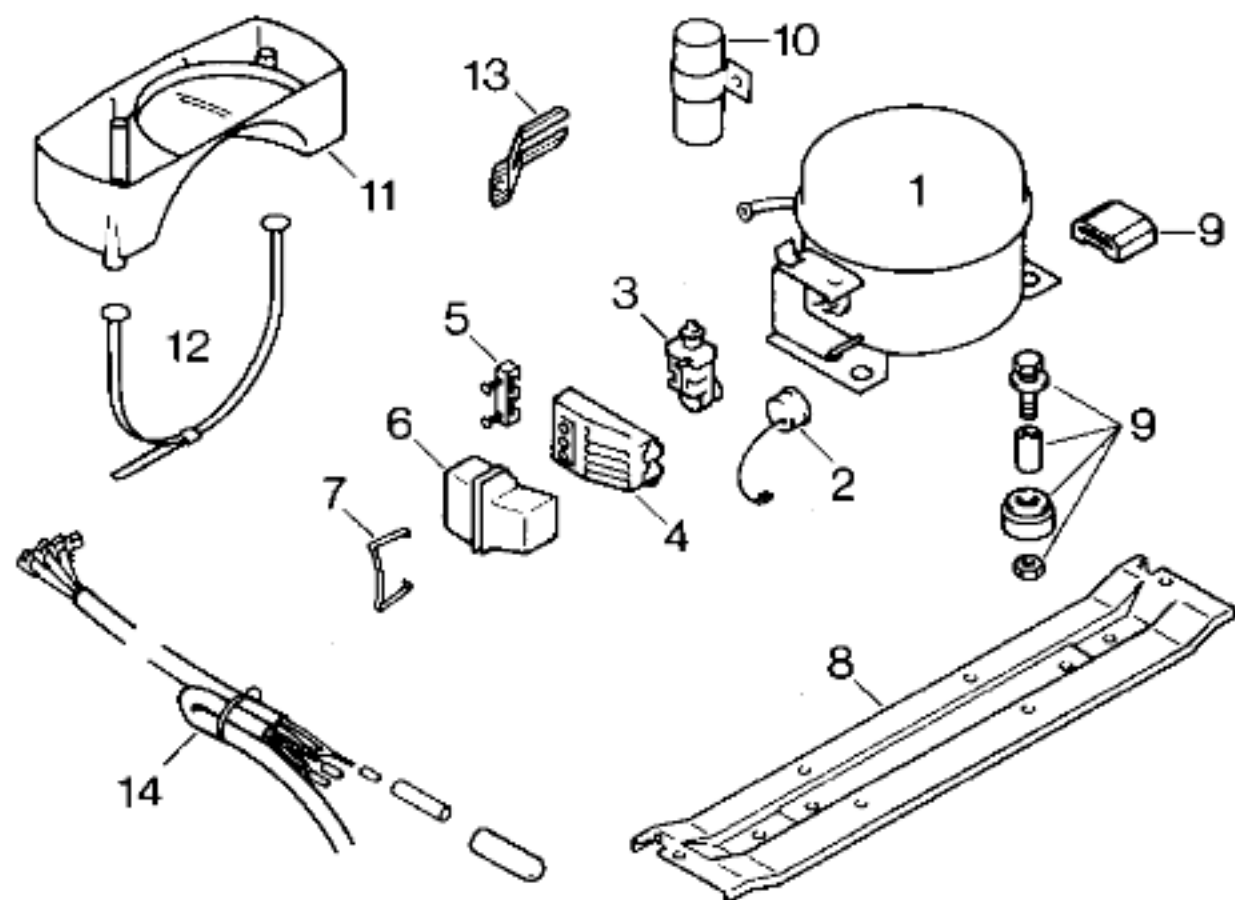**TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES**

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		TL 4 A				
Förderleistung/Delivery/Débit		l/h	V 702			
Anlaufstrom/Starting current/Cour. de démarrage		A	7,8			
Widerstand/Resistance/Résistance		Hi/main/prin.	Ω 23,8			
		Hi/aux	Ω 19,7			
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57 SF				
Reglerstellung/Position			kalt warm			
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C - 28	- 19		
		„aus“	- 34	- 26		
(„abtauen“ od.)		„alarm“	- 20	- 15		
Füllmenge/Fill.quantity/Charge	R12	g	90			
Anschlußwert/Conn.load/Puiss. connectée		W	110			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance		Ω				
Leistung/Power/Puissance		W				
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		Ω				
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance		Ω				
Spannung/Voltage/Tension		V				

Pos.	Danfoss			
1	13 1064/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				