


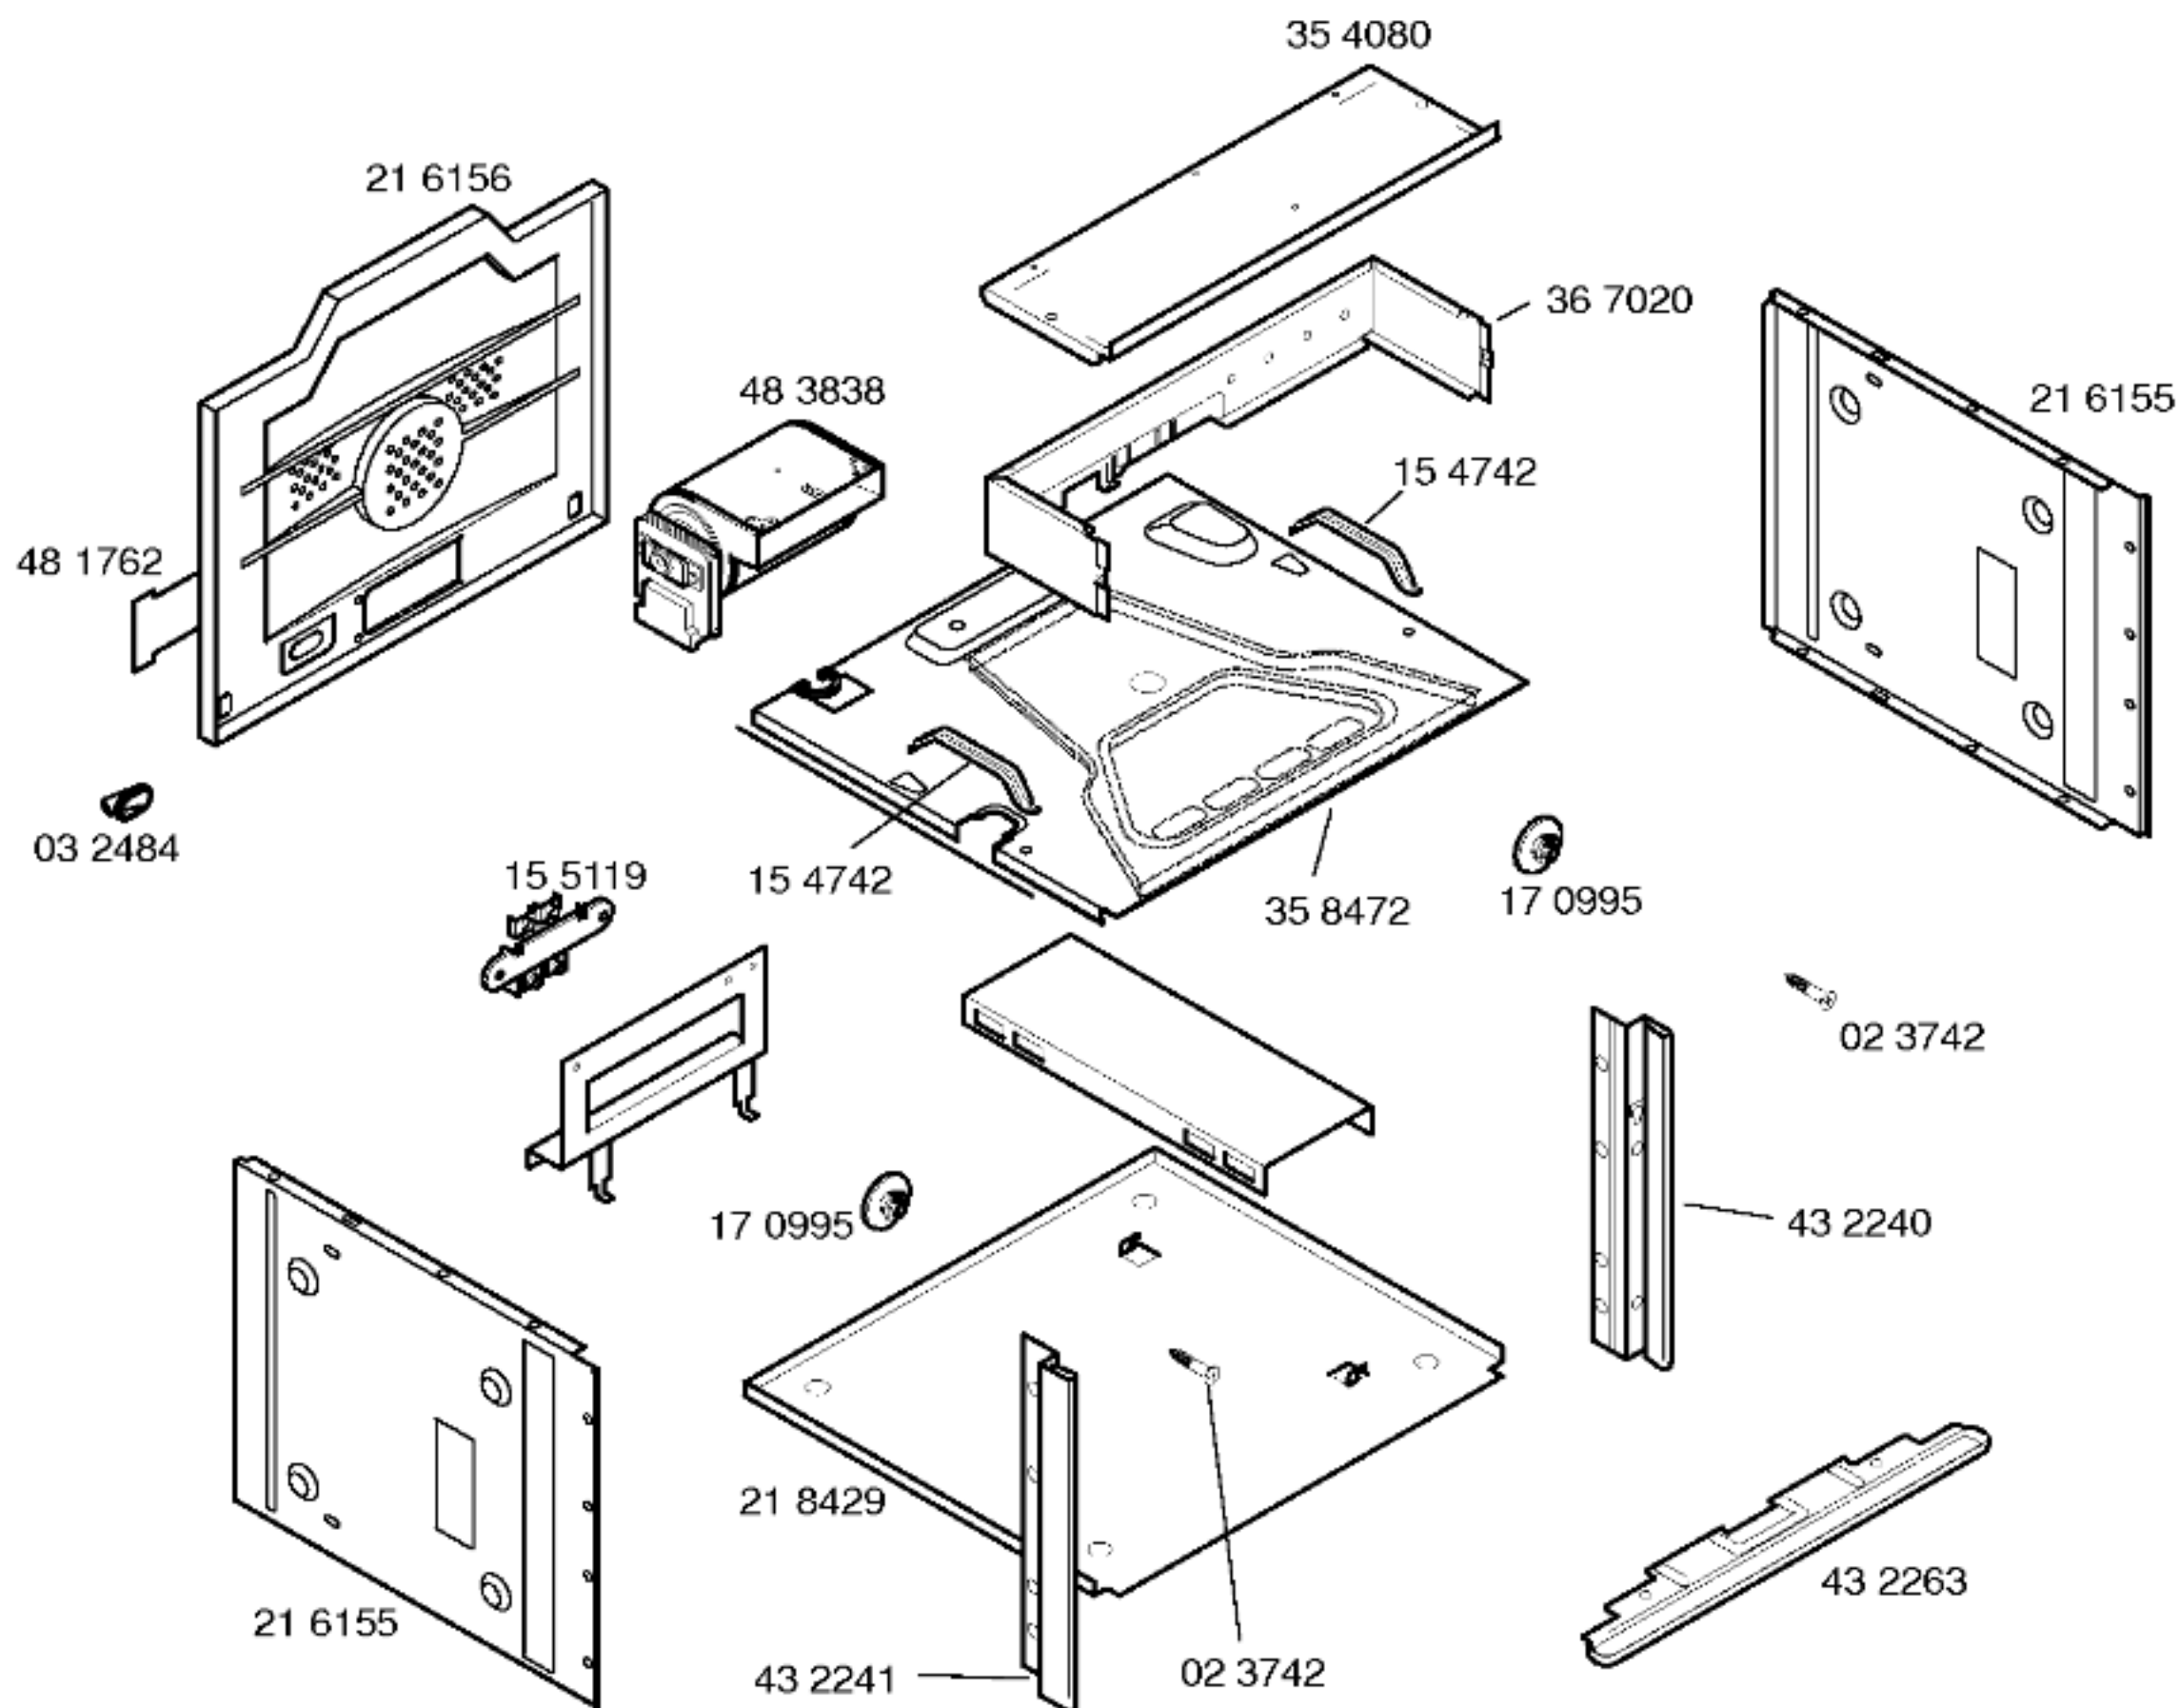


Gebrauchsanweisung  
58 6319  
(de,en)  
Gebrauchsanweisung  
58 6320  
(fr,nl,it,es,el)  
Montageanleitung  
51 7991  
(de,en,fr,nl,it,es,el)  
Kochbuch  
58 5532  
(de)  
Kochbuch  
58 6292  
(de,en,fr,nl,it,es)


#### Zubehör:

Dampfgarer  
N8640X2

Bratrost engmaschig  
Z1440X0  
Bratrost gekröpft  
Z1430X0  
Backblech, Alu  
Z1330X0  
Backblech, email  
Z1340X2  
Bratenblech  
Z1510X2  
Brotbackstein  
Z1910X0  
Grillpfanne u. Bratrost  
Z1230X2  
Auflaufform  
Z1270X2  
Funkant.  
Z1980X0

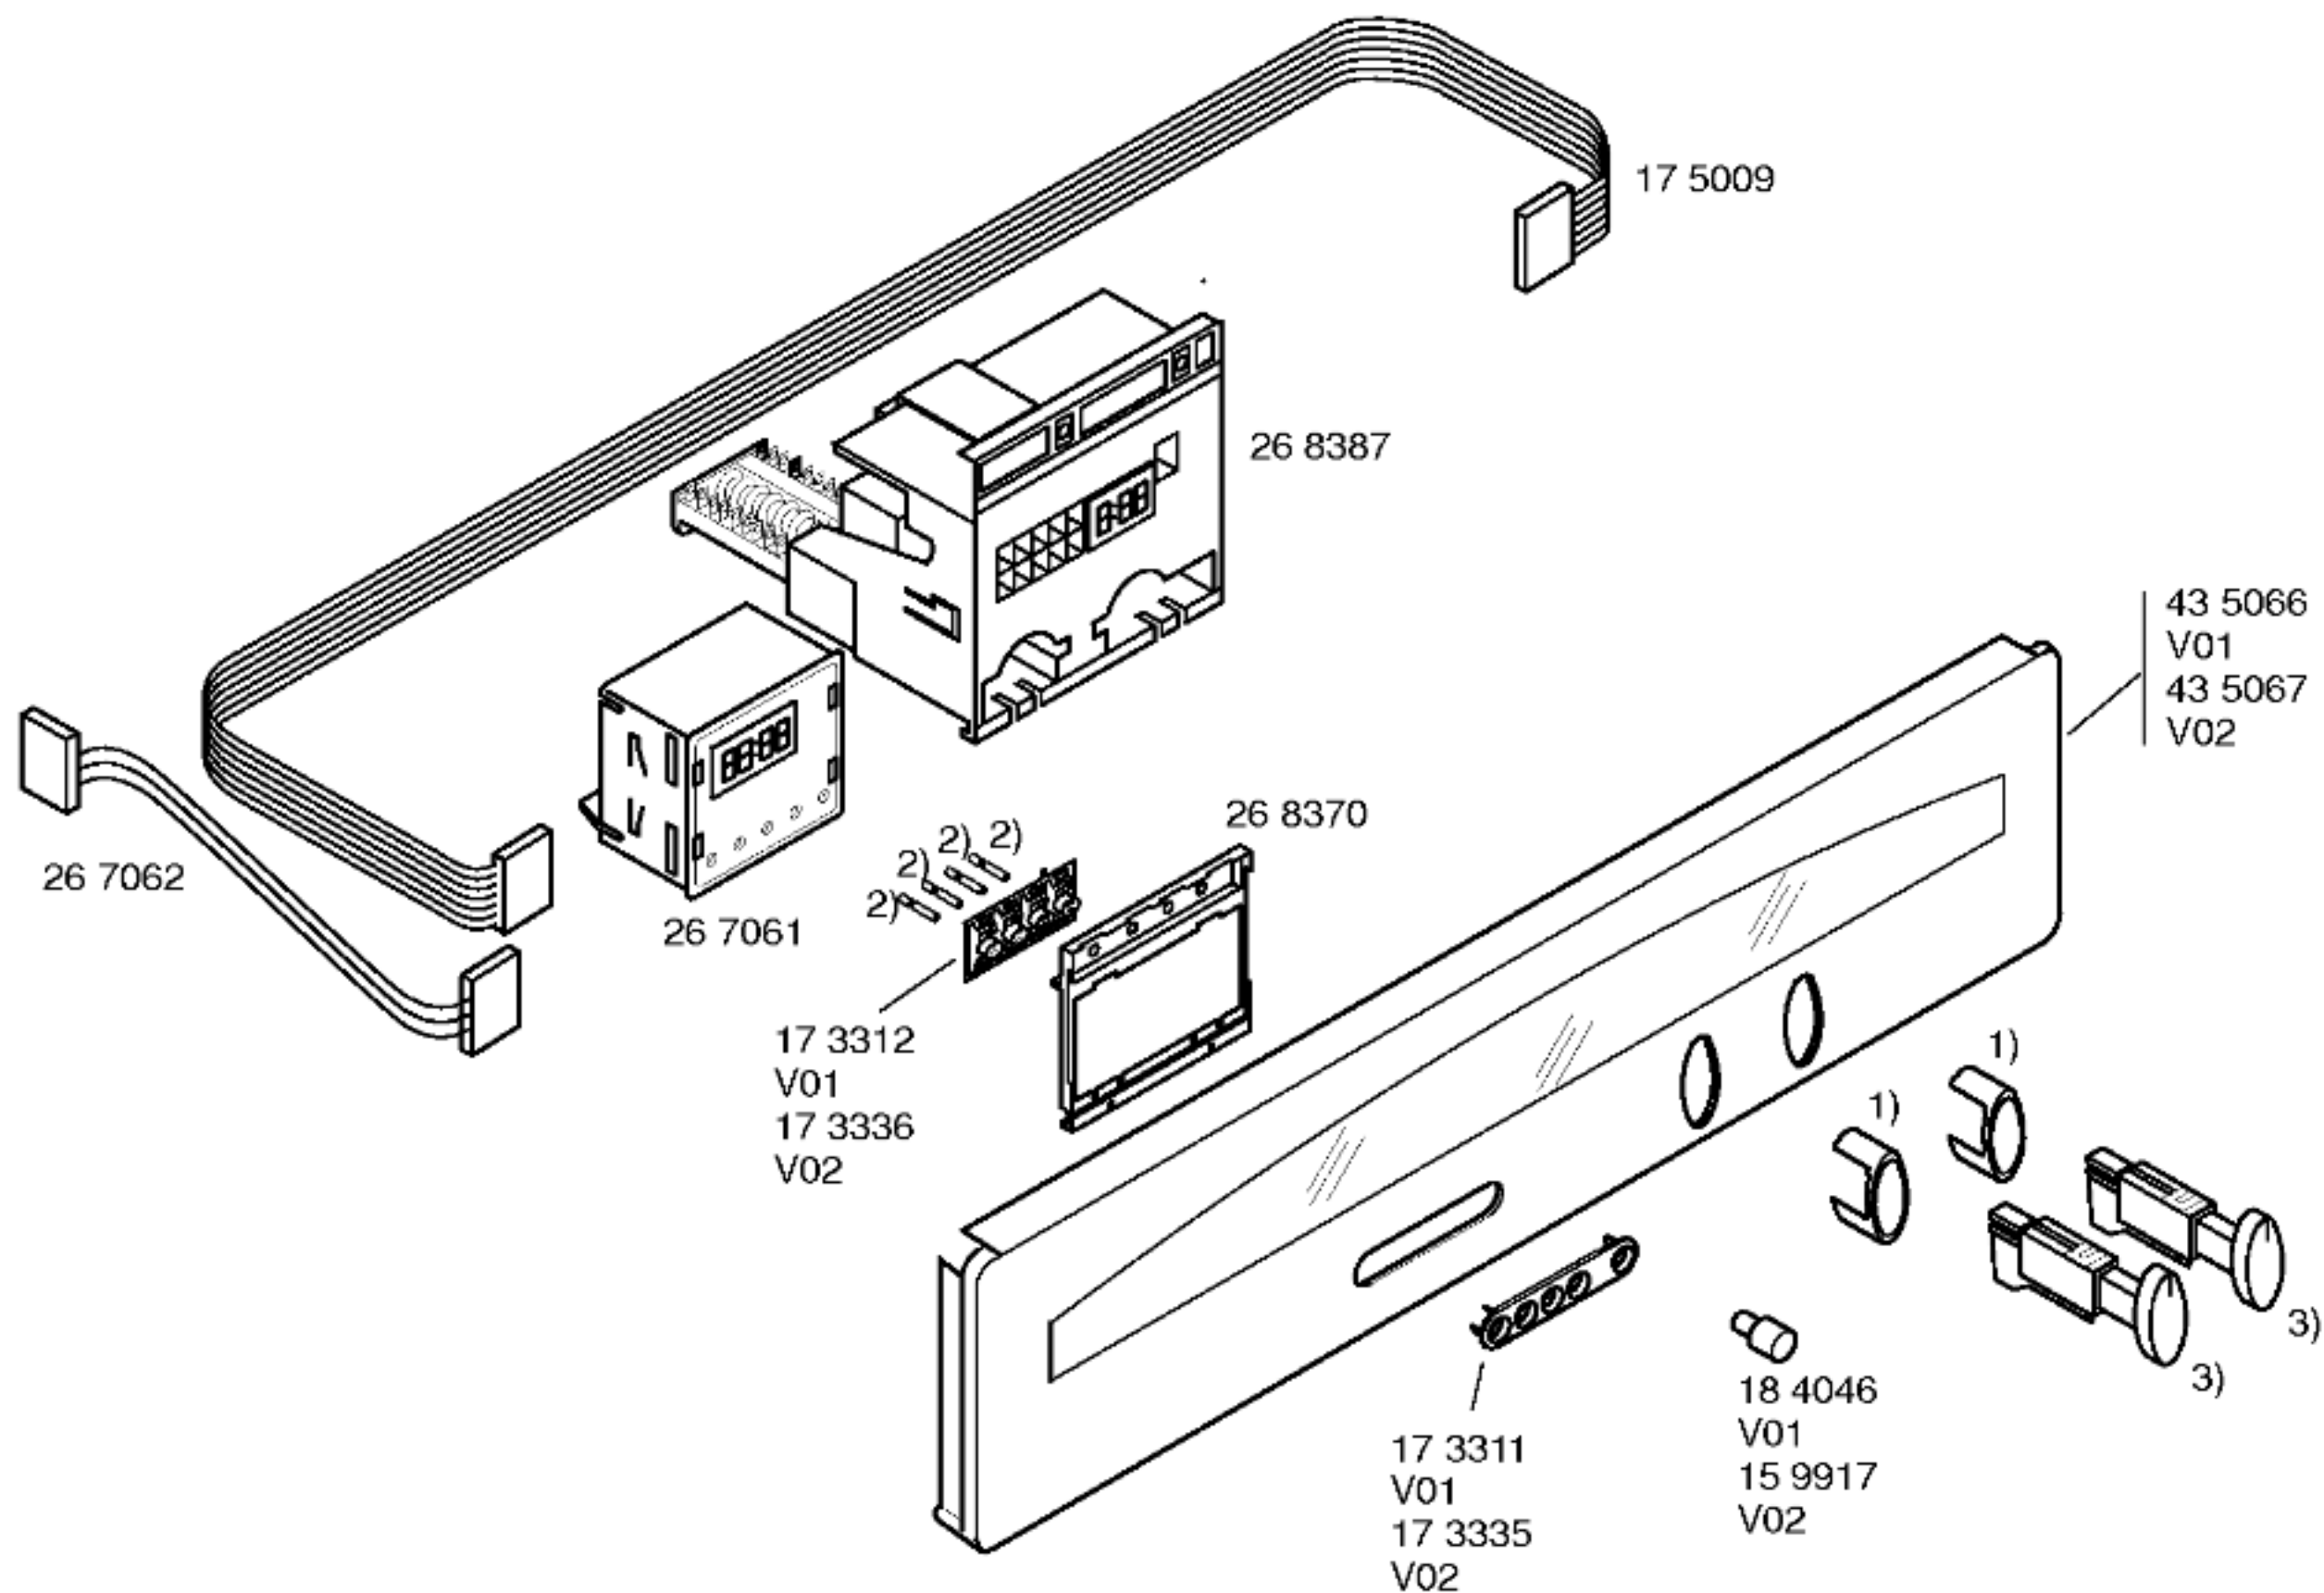


- 1) 17 3182  
V01  
17 3185  
V02
- 2) 16 8588
- 3) 17 3181  
V01  
17 3184  
V02

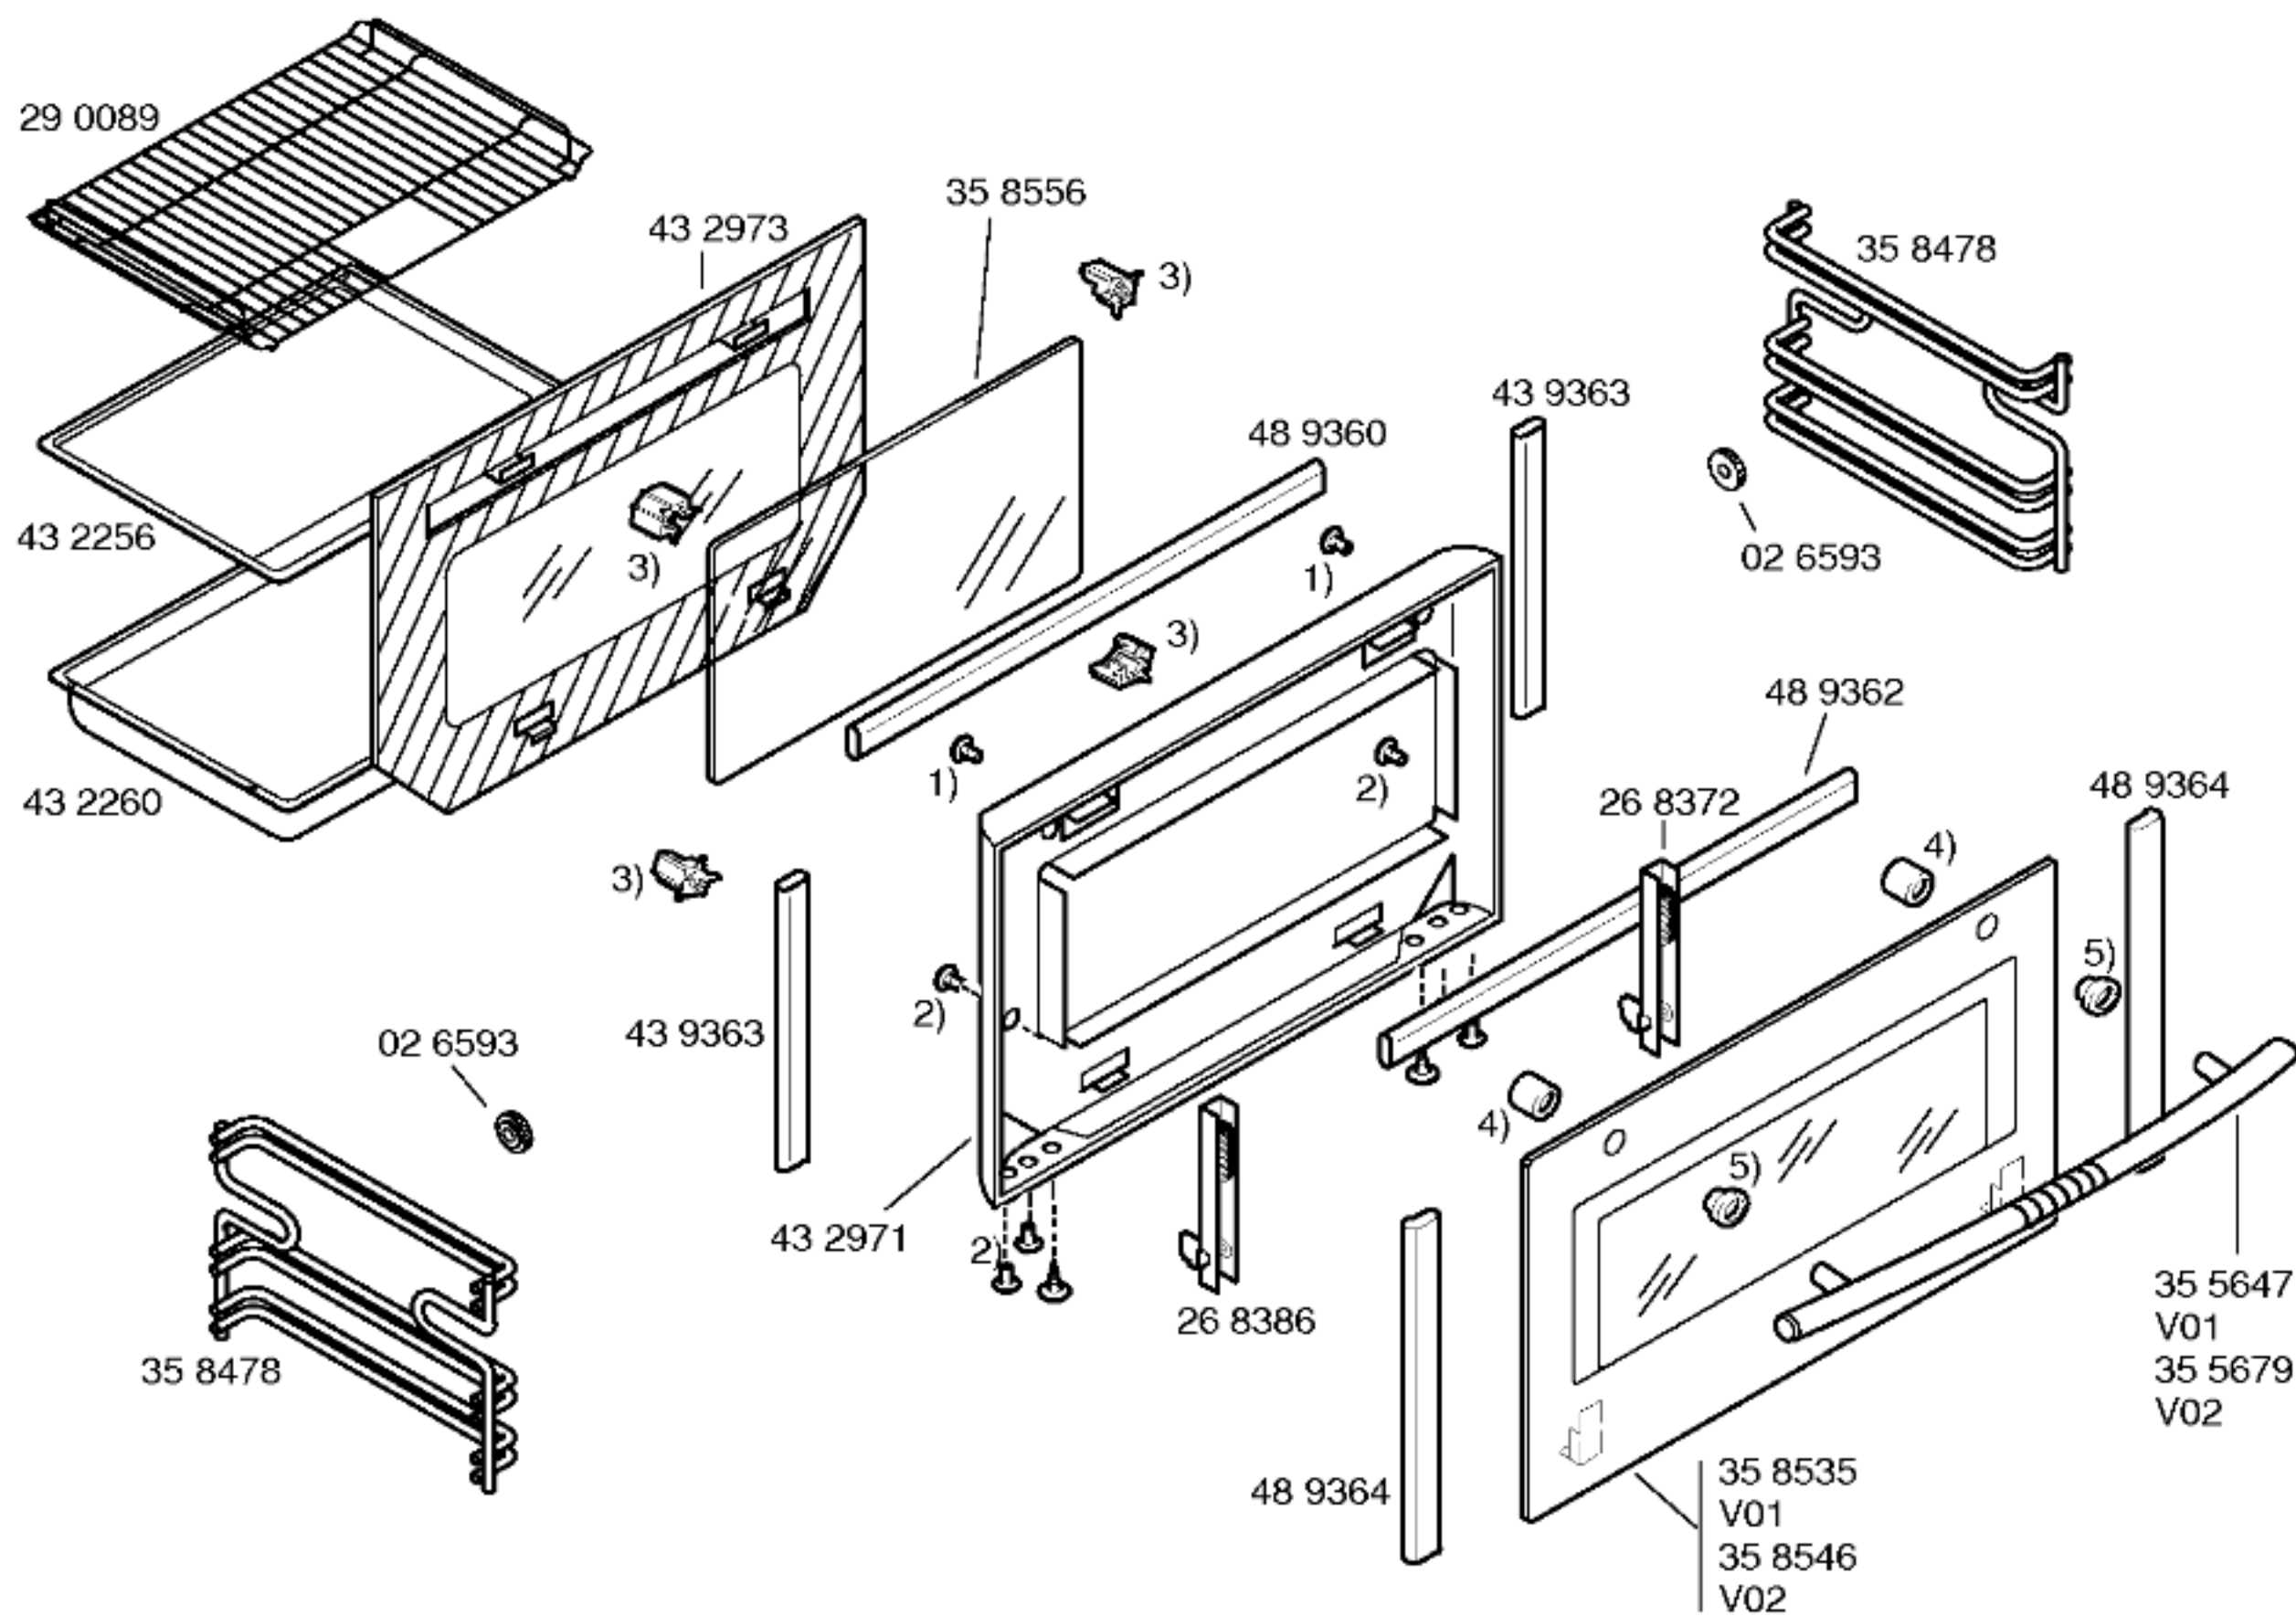

- 1) 17 2765
- 2) 17 2646
- 3) 41 8561
- 4) 17 2643
- 5) 17 2895

V01

17 2958  
V02

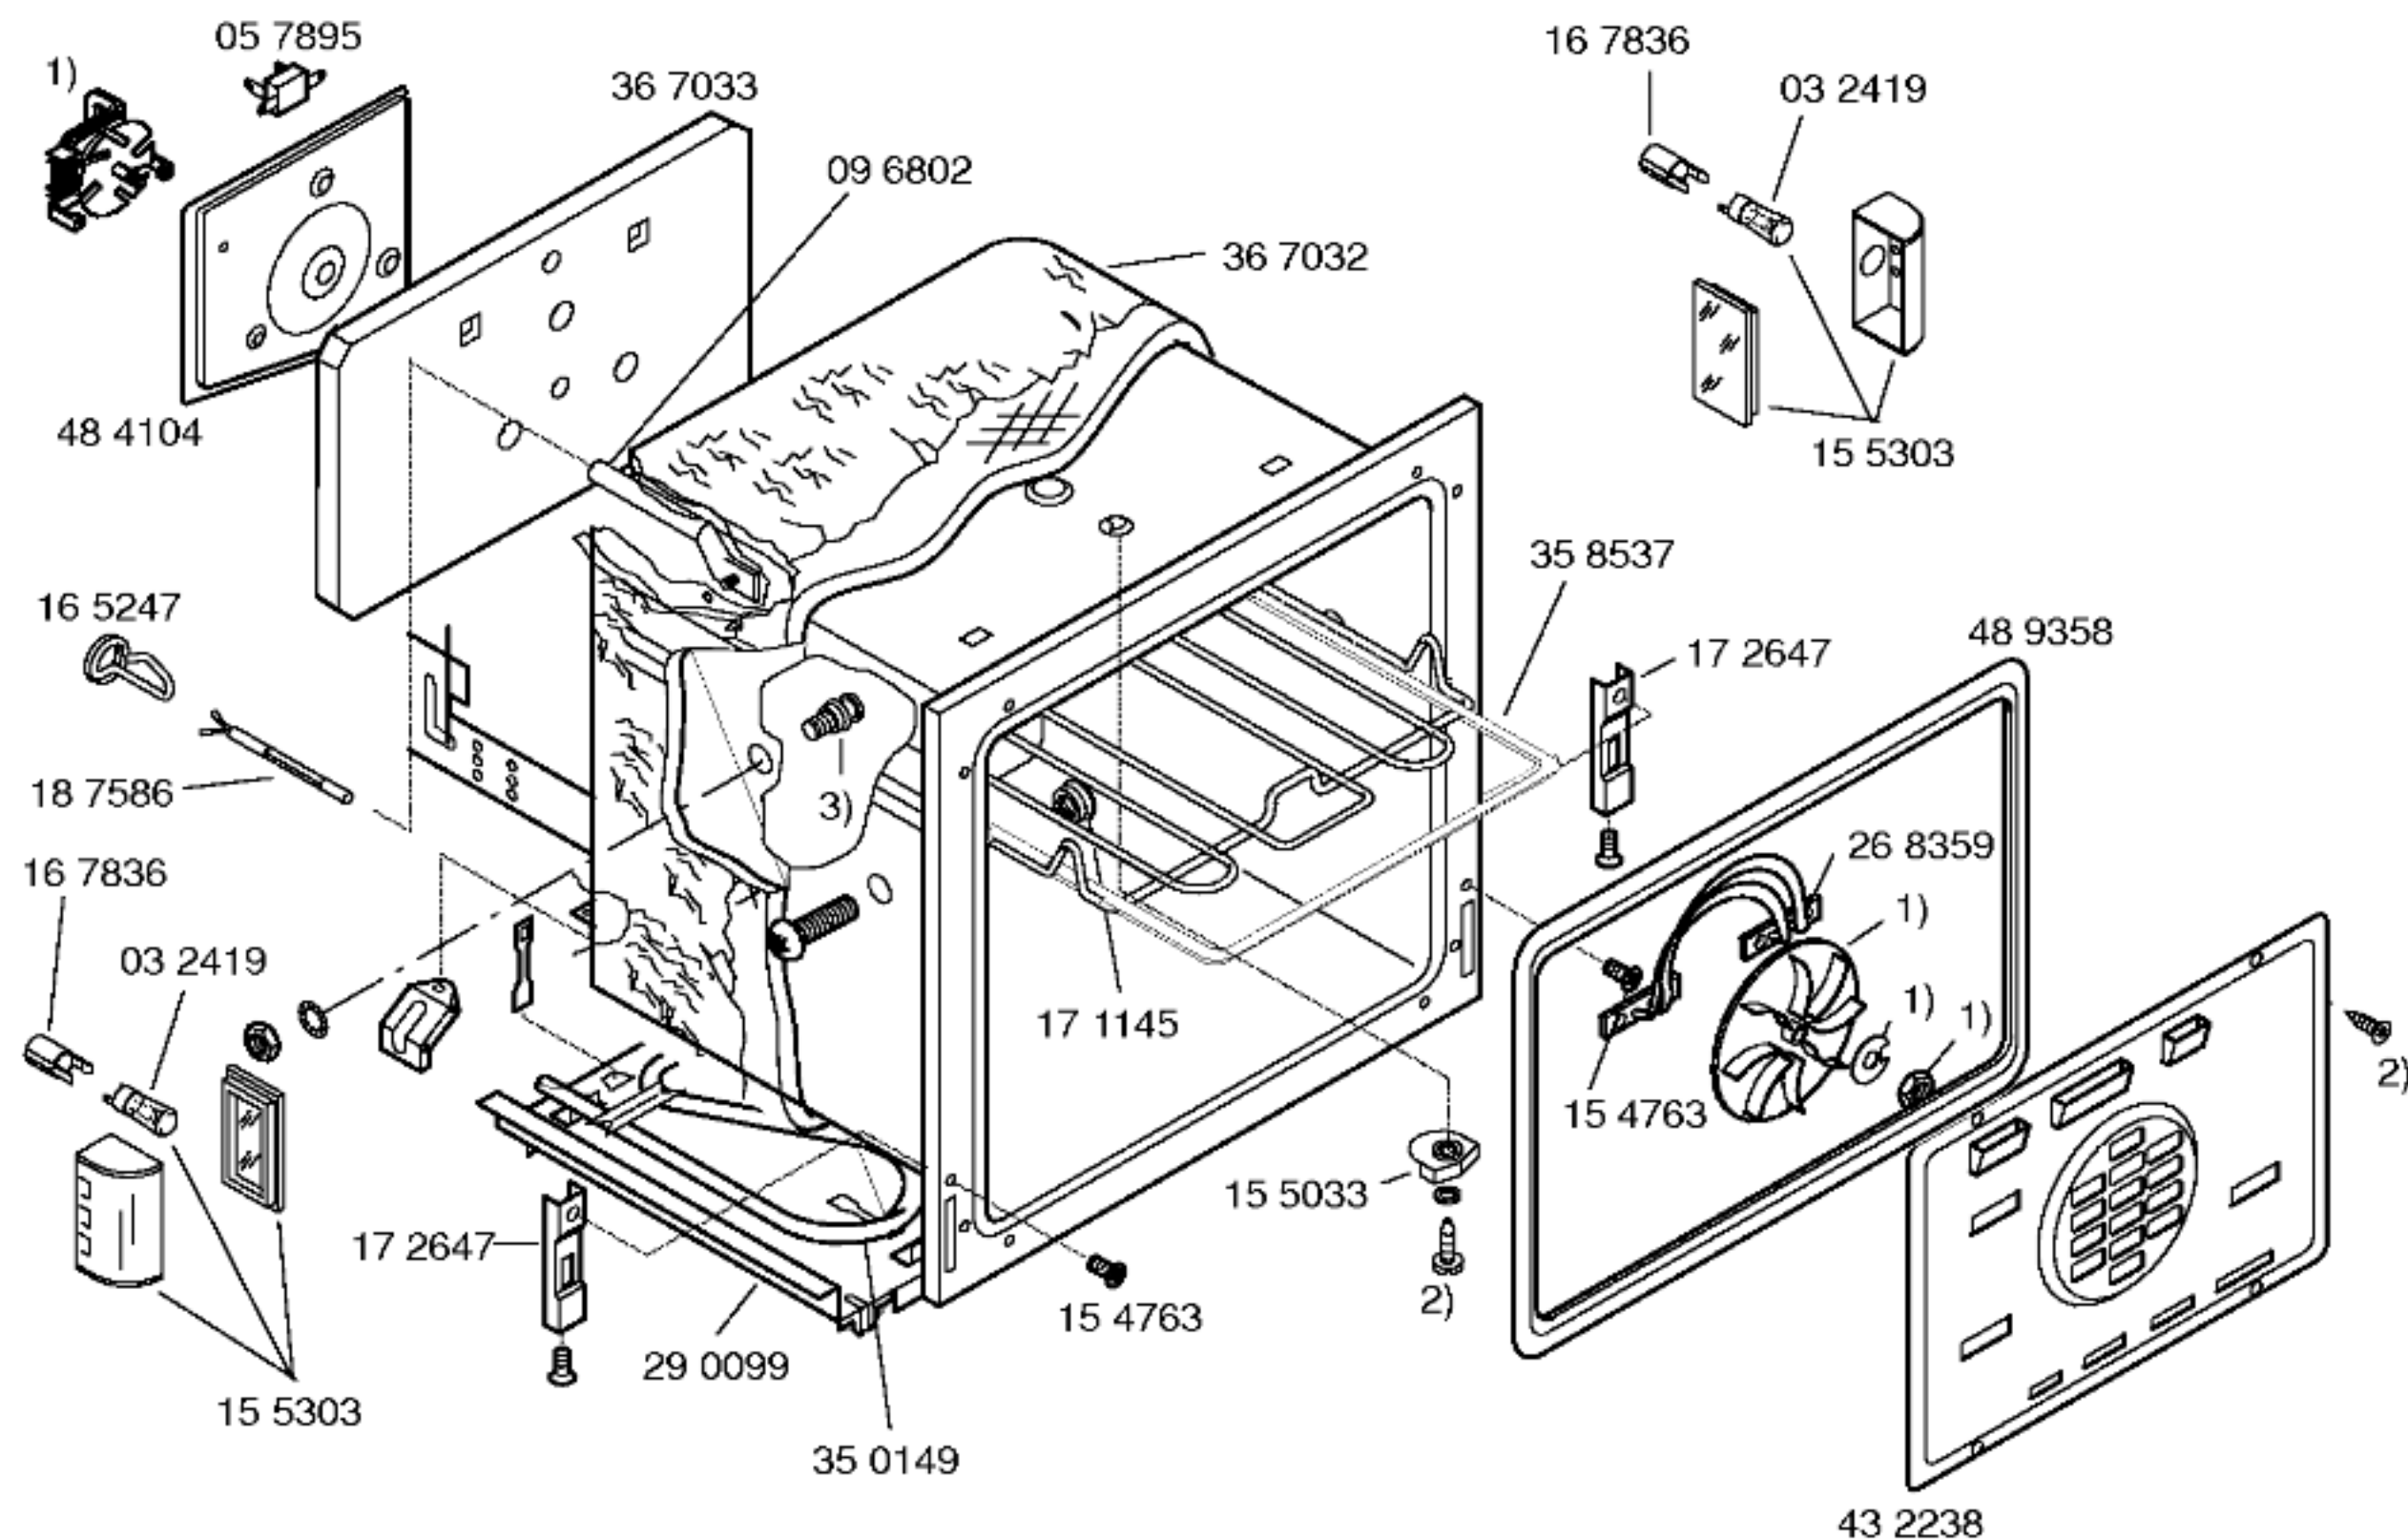

- 1) 48 3856  
kompl.  
2) 41 8562  
3) 17 1146