


**BOSCH**

ALPHA 24 – BBS2451FF/03–F1, burg.–rot
 ALPHA 24 – BBS2451FF/05–F2, burg.–rot
 ALPHA 24 – BBS2455FF/05–F3, burg.–rot

Silence–BBS2435/02–D1, petrol–dunkel
 Silence–BBS2435/05–D2, petrol–dunkel

BODENPFLEGEGERÄTE
 Bodenstaubsauger

Ident – Nummern – Konstante
 3740

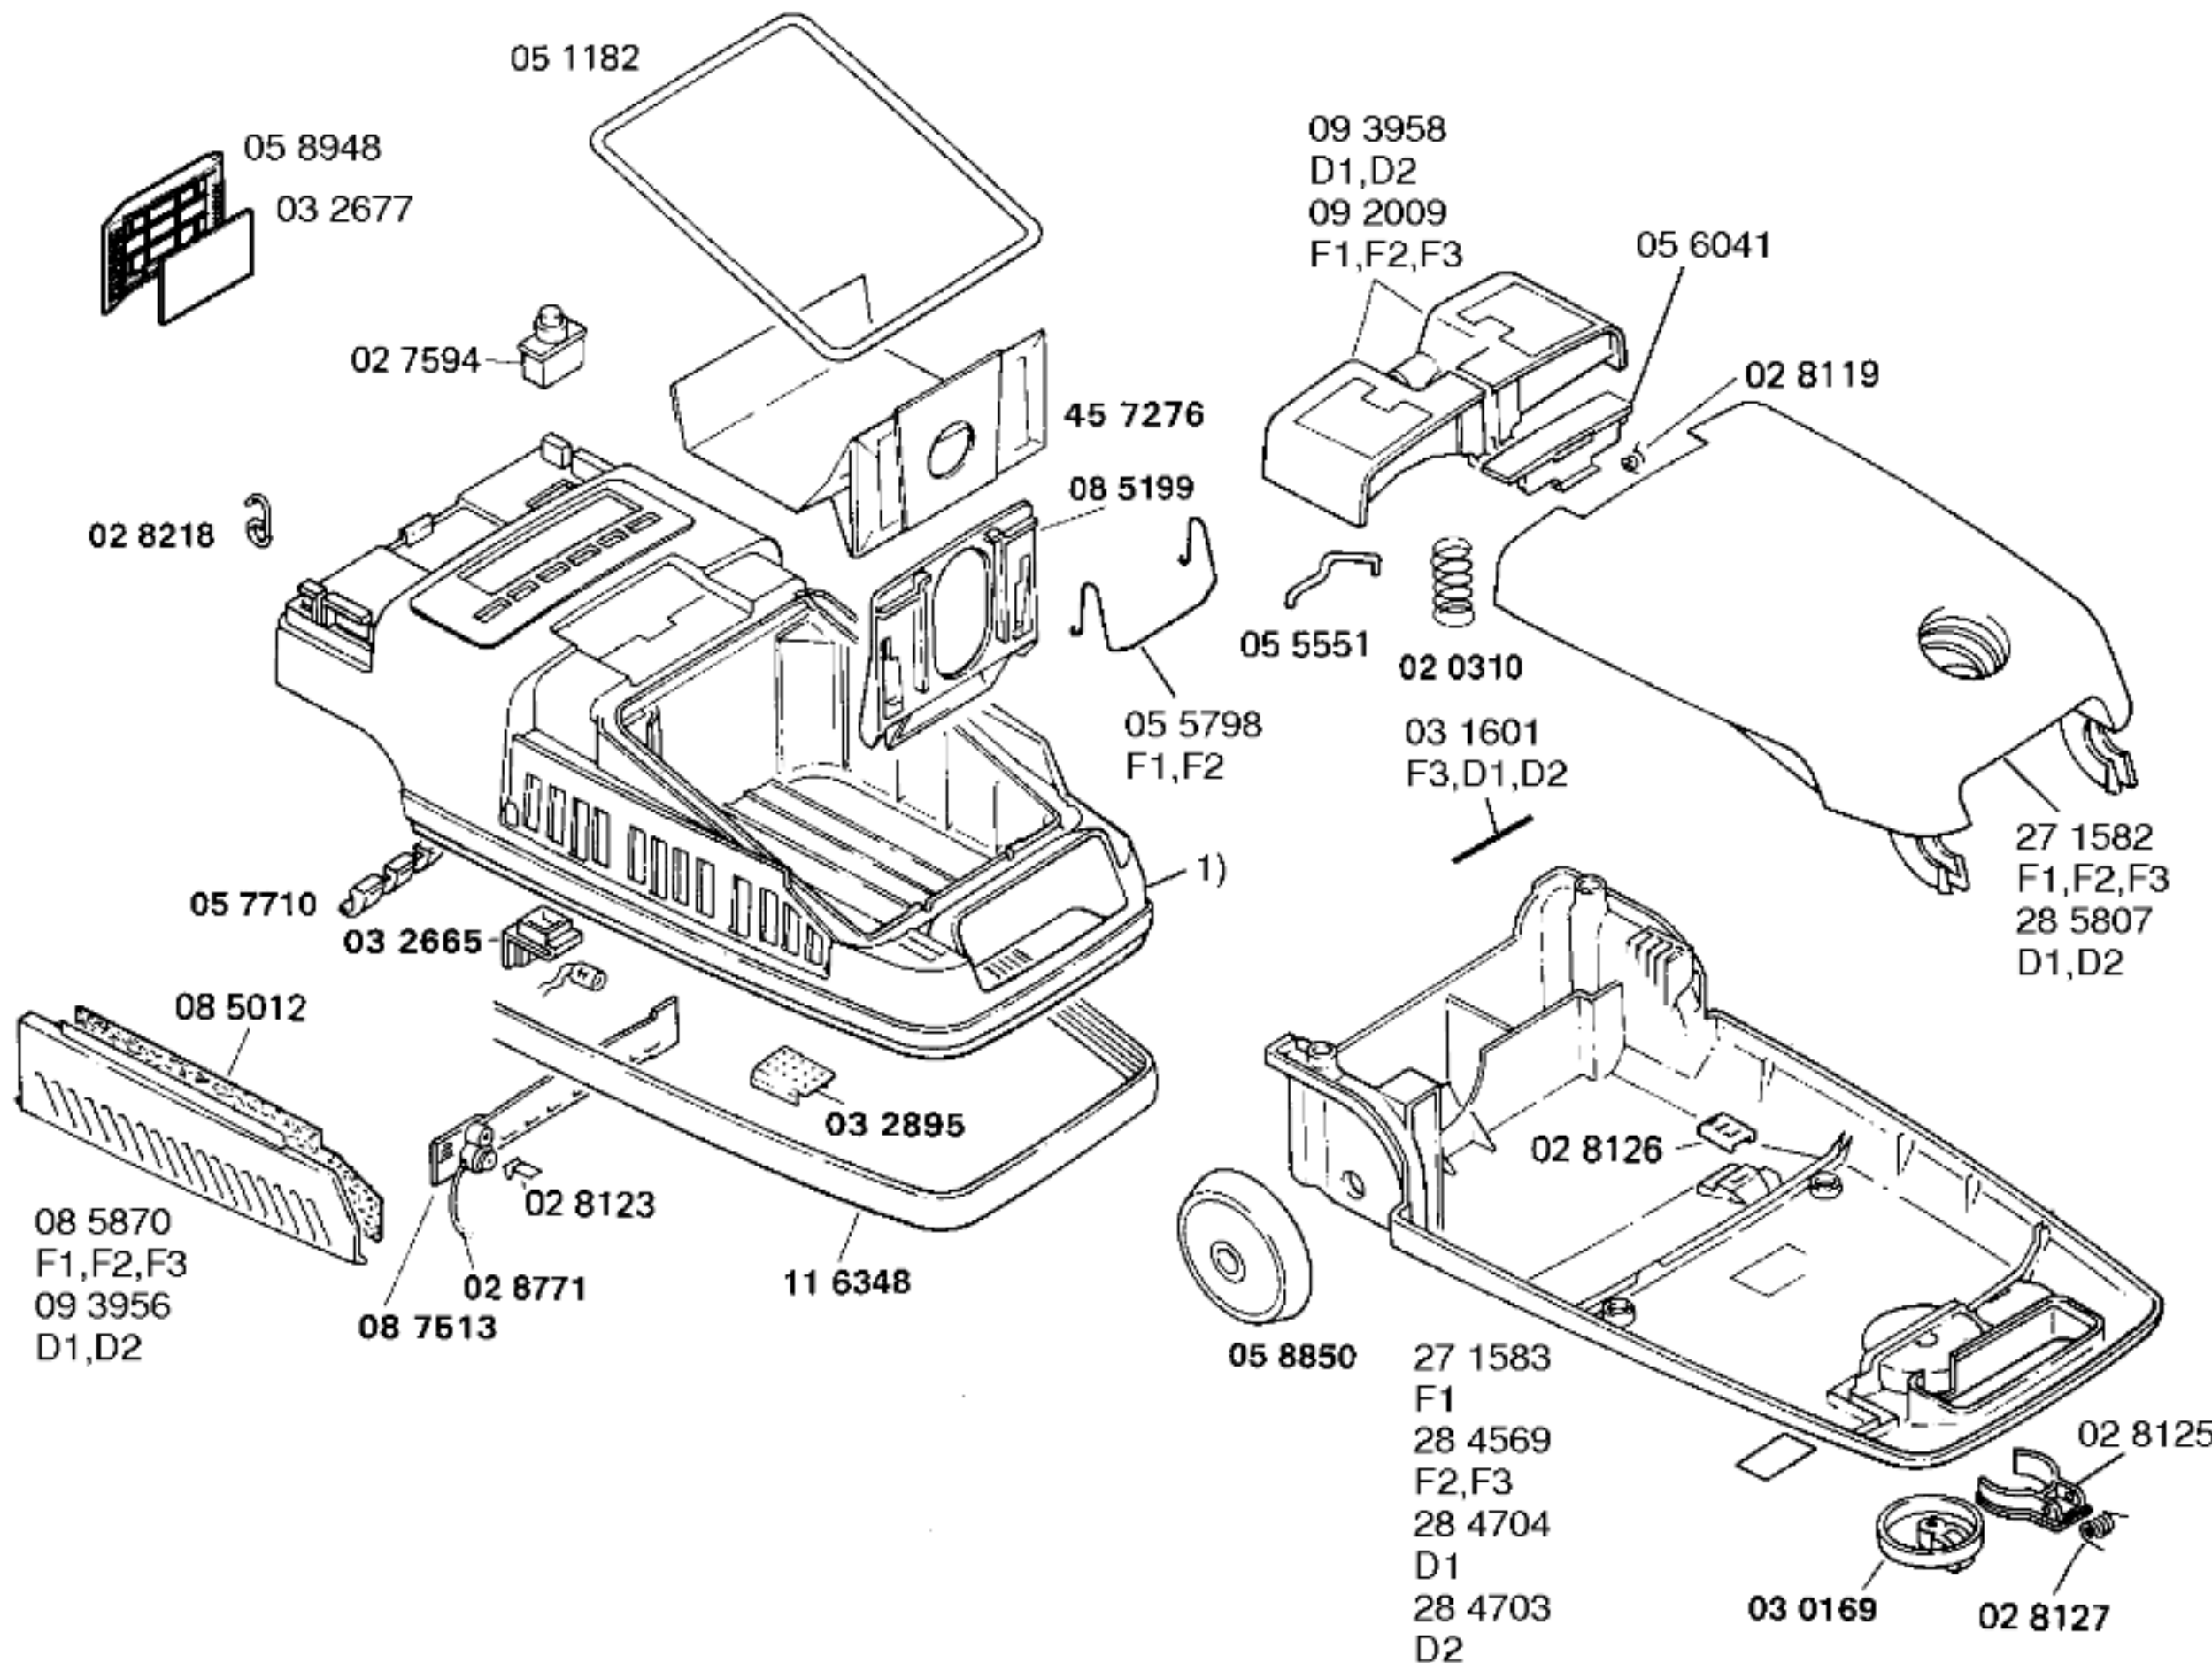

Gebrauchsanweisung
 51 4966
 F1
 (D,GB,F,I,NL,DK,N,S,
 SF,E,P,GR)
 51 5553
 F2
 (D,GB,F,I,NL,DK,N,S,
 SF,E,P,GR)
 51 6816
 F3,D1,D2
 (D,GB,F,I,E,P,GR,DK,
 S,N,SF)


1) 28 5809
 D1
 28 5808
 D2
 27 7863
 F1
 28 2570
 F2
 28 6025
 F3

Zubehör:

Möbelpinsel
 BBZ21MP, grau

Aufsteckschuh
 BBZ25AS, grau

Turbodüse
 BBZ21TB, grau

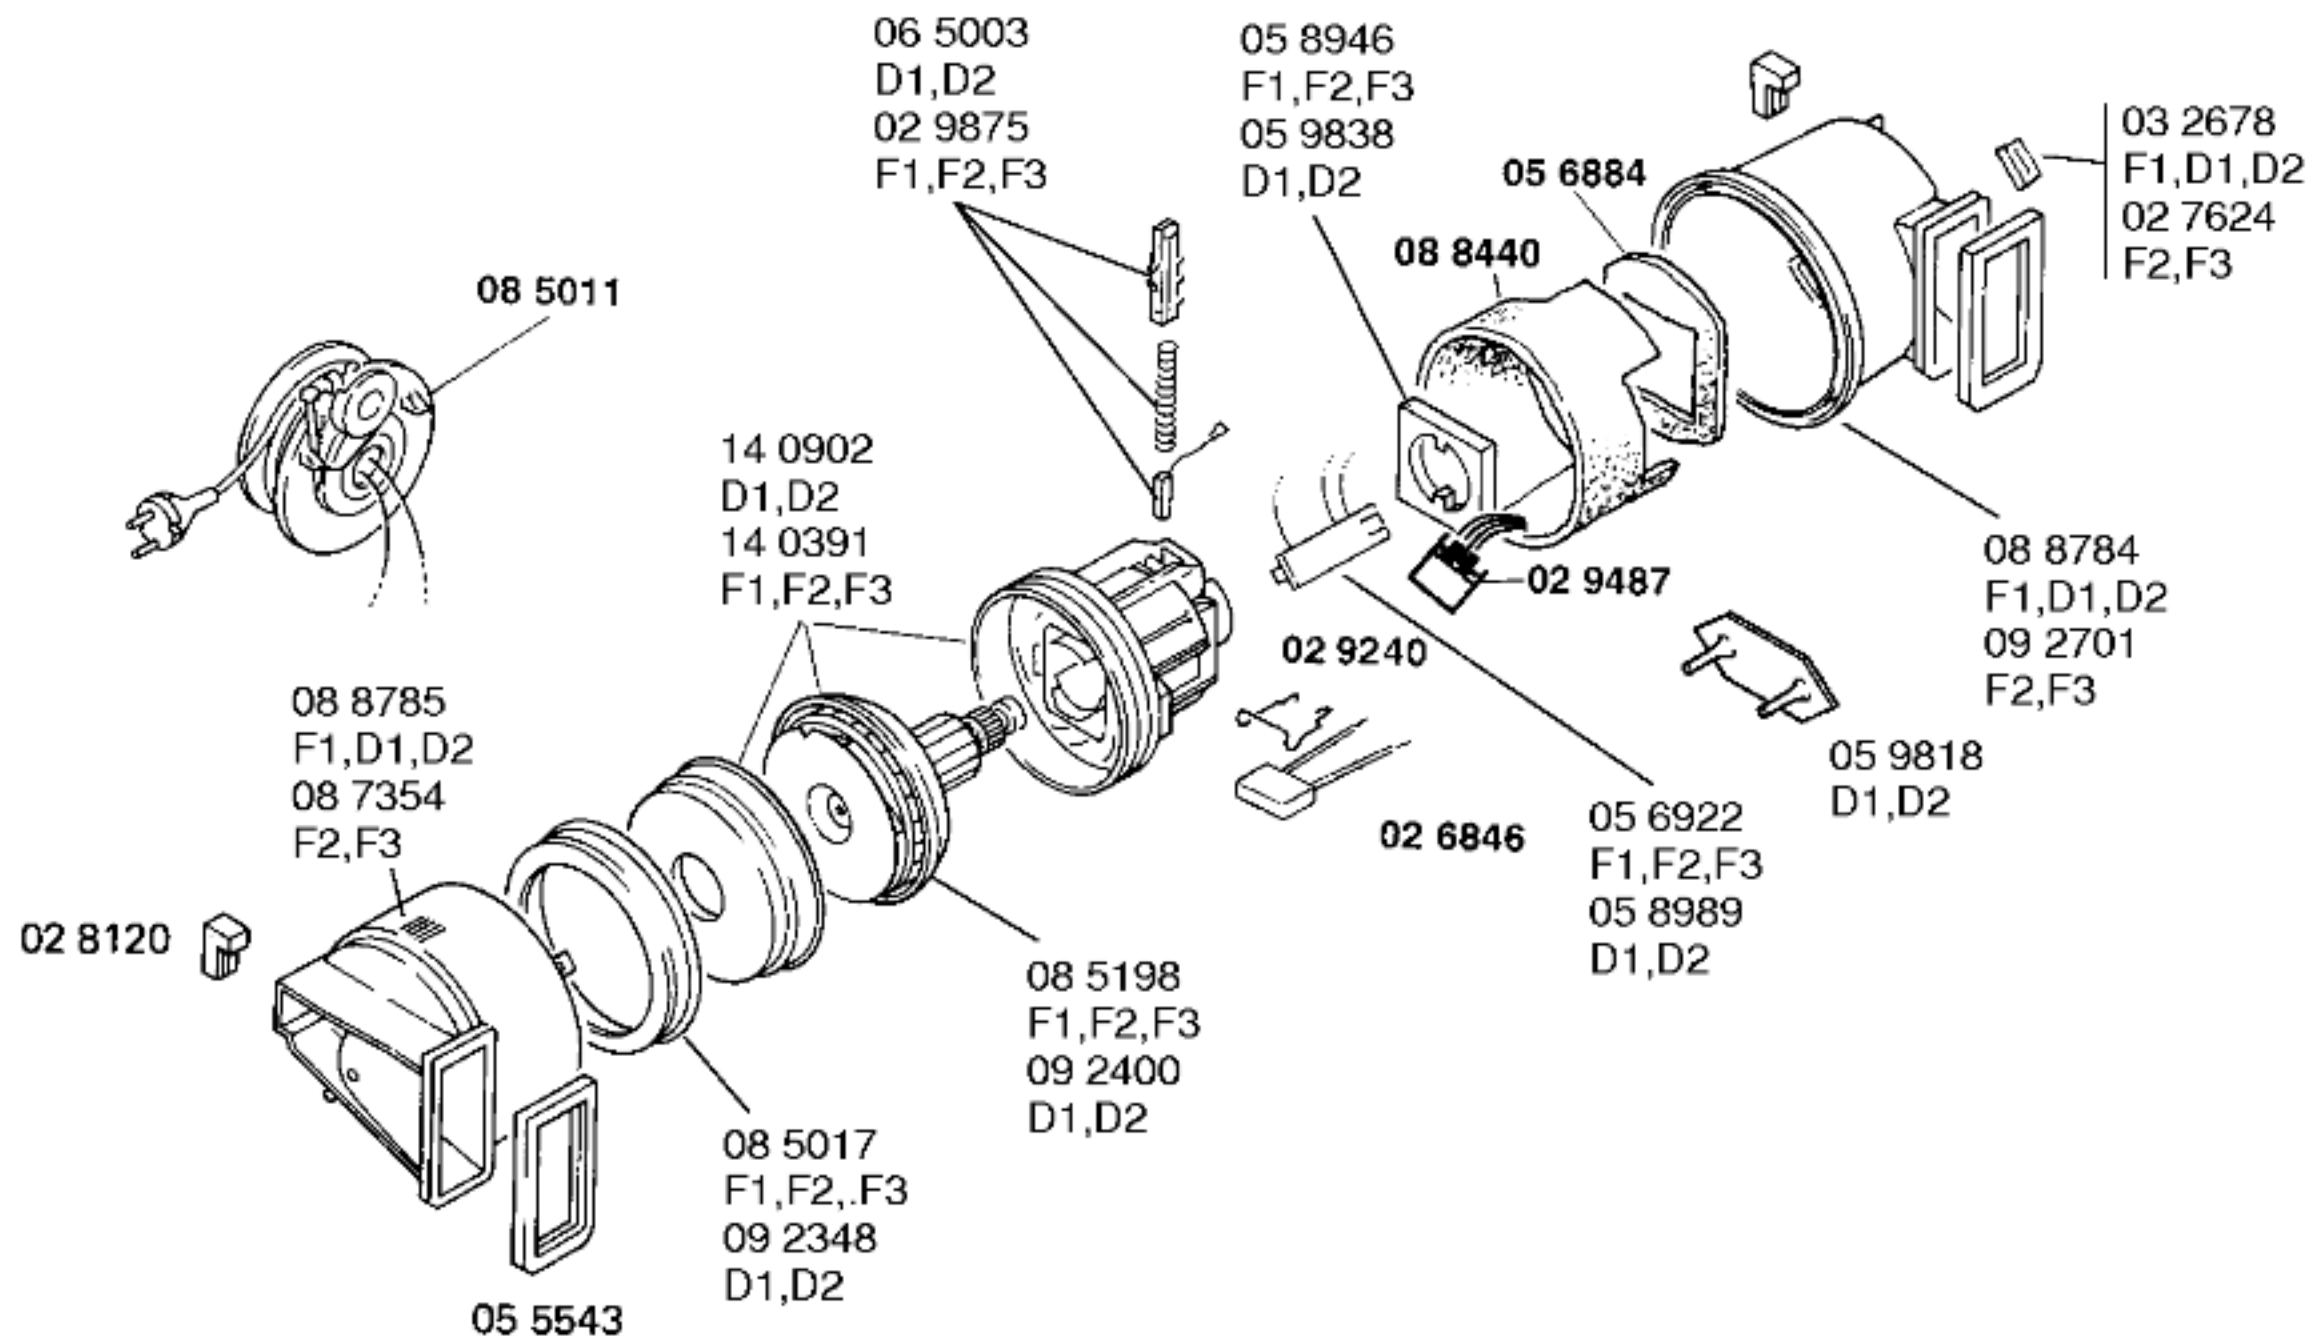



BOSCH

ALPHA 24 – BBS2451FF/03–F1, burg.–rot
ALPHA 24 – BBS2451FF/05–F2, burg.–rot
ALPHA 24 – BBS2455FF/05–F3, burg.–rot

Silence–BBS2435/02–D1, petrol–dunkel
Silence–BBS2435/05–D2, petrol–dunkel

BODENPFLEGEGERÄTE
Bodenstaubsauger

Ident – Nummern – Konstante
3740

