


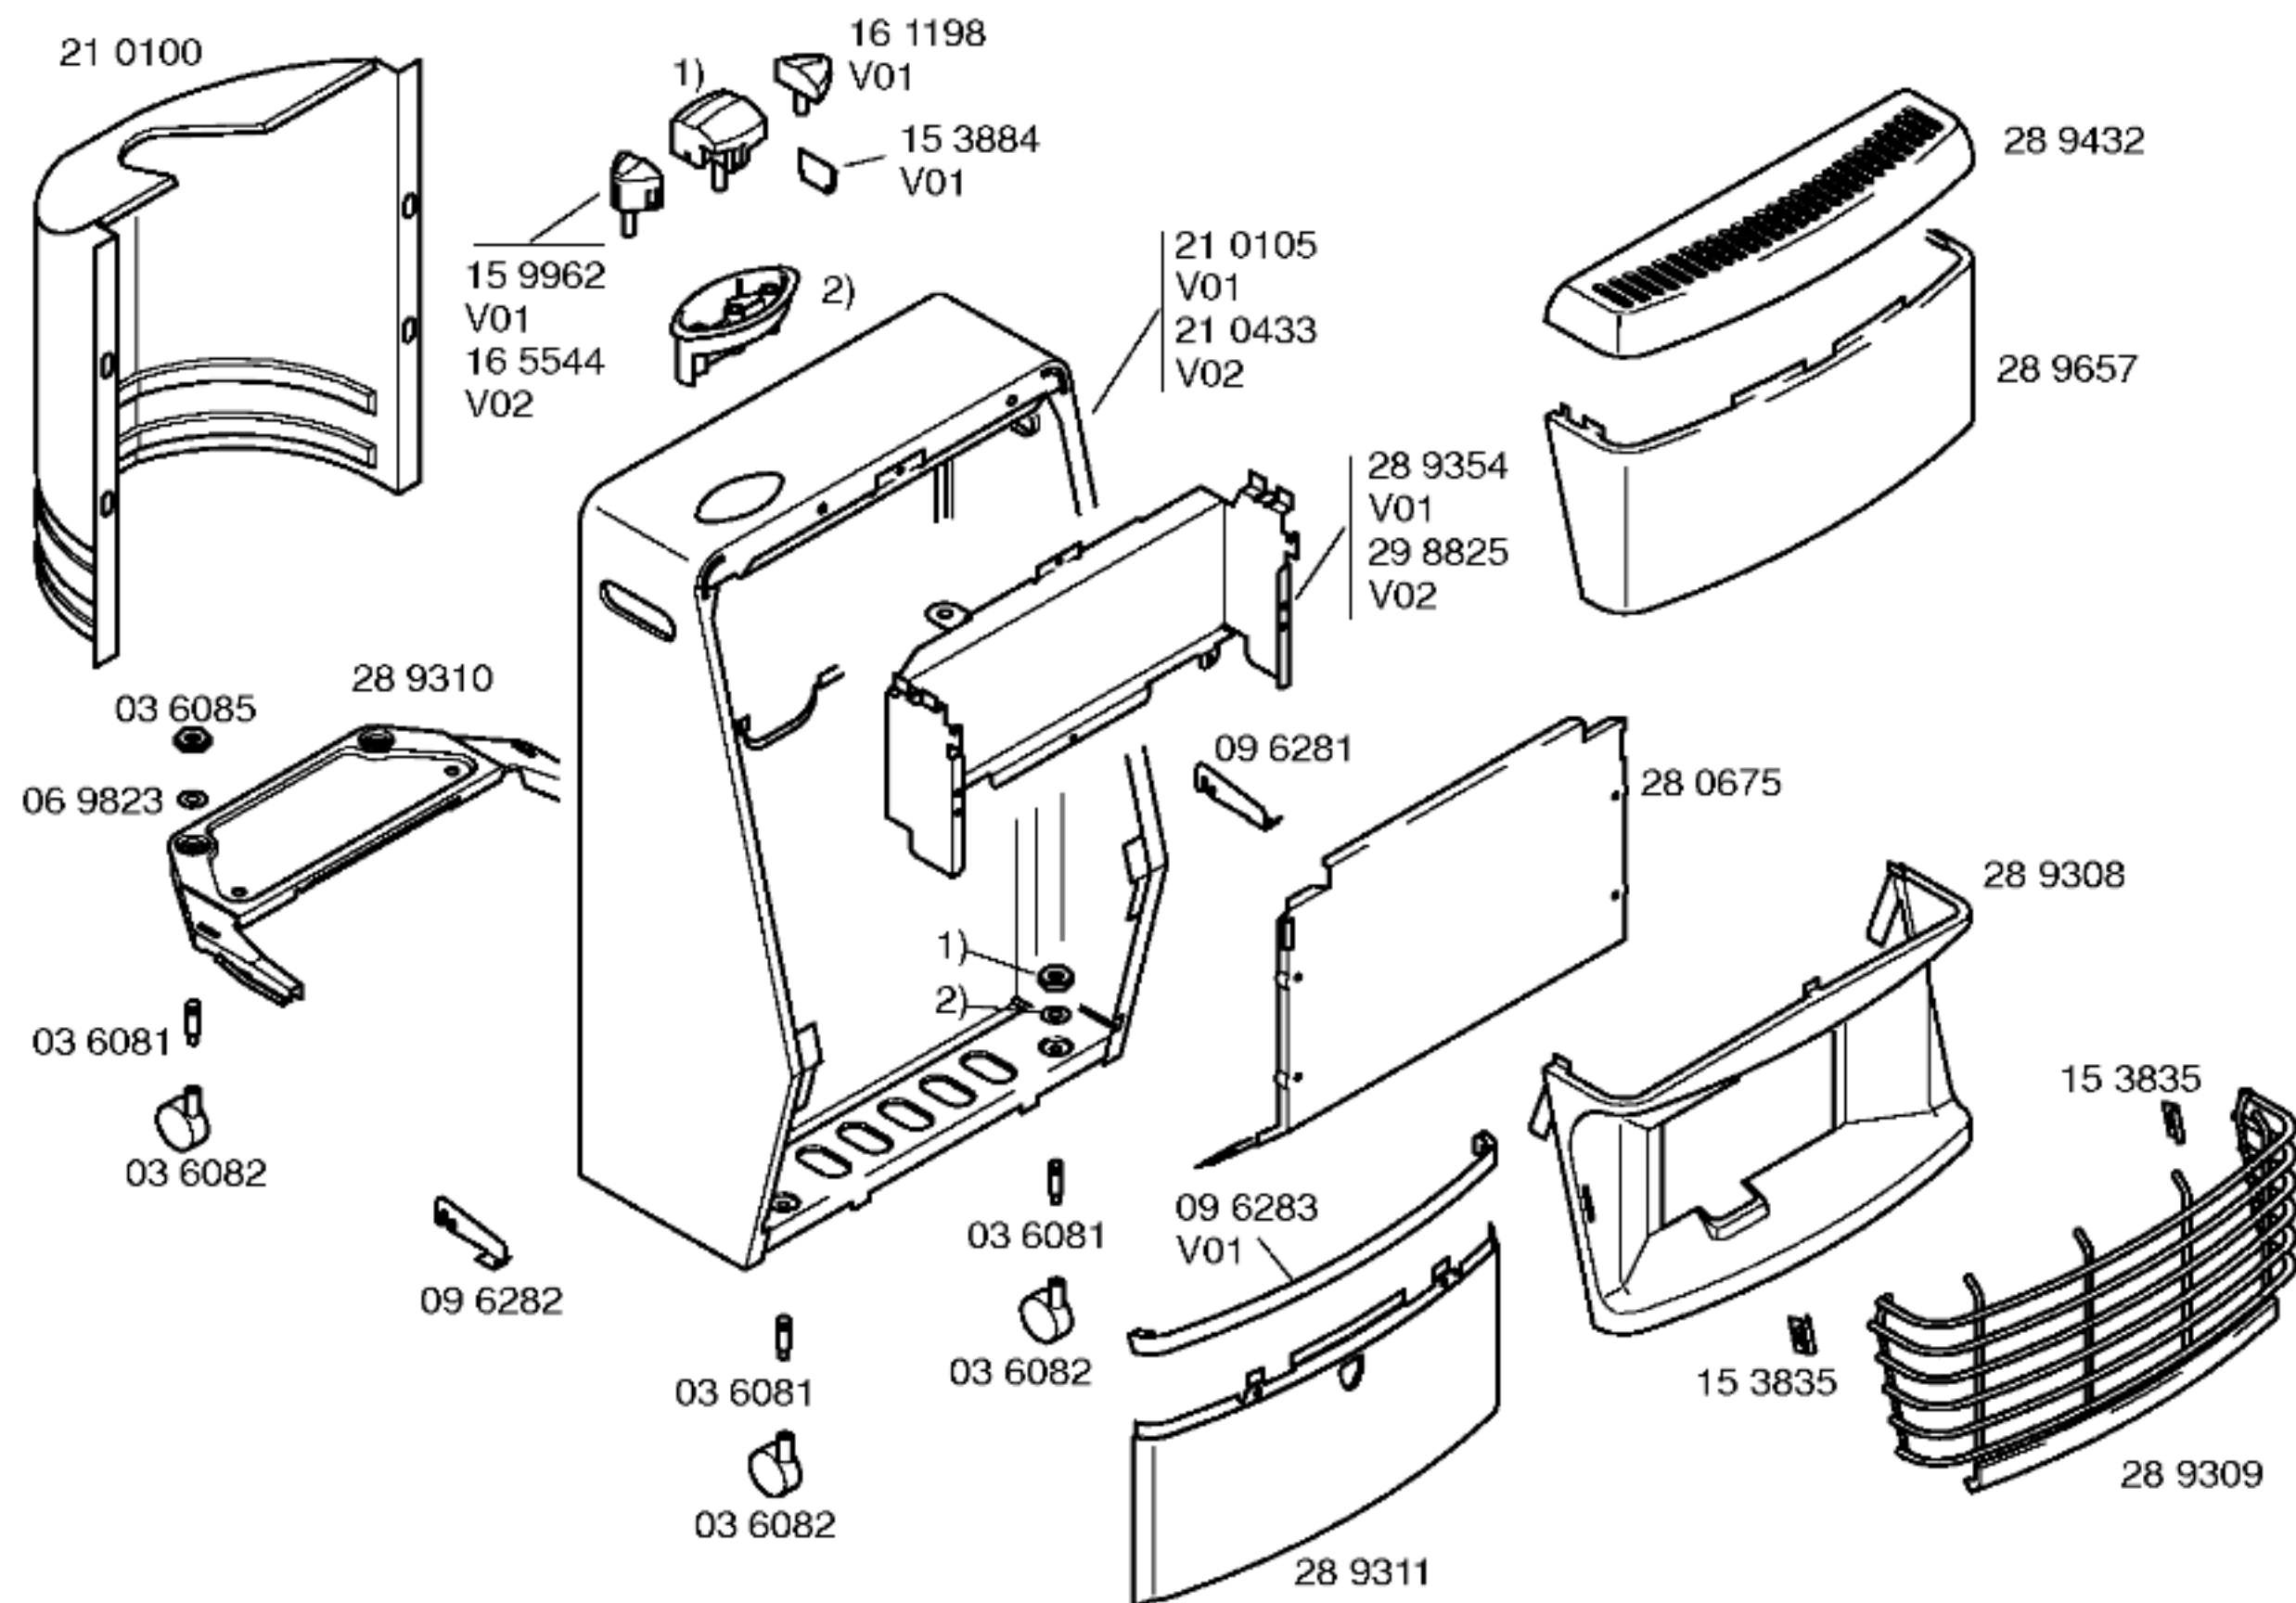

Instrucciones encendido

51 8116

(P)

1) 16 1375

V01

16 5537

V02

2) 15 3837

V01

16 5538

V02

