


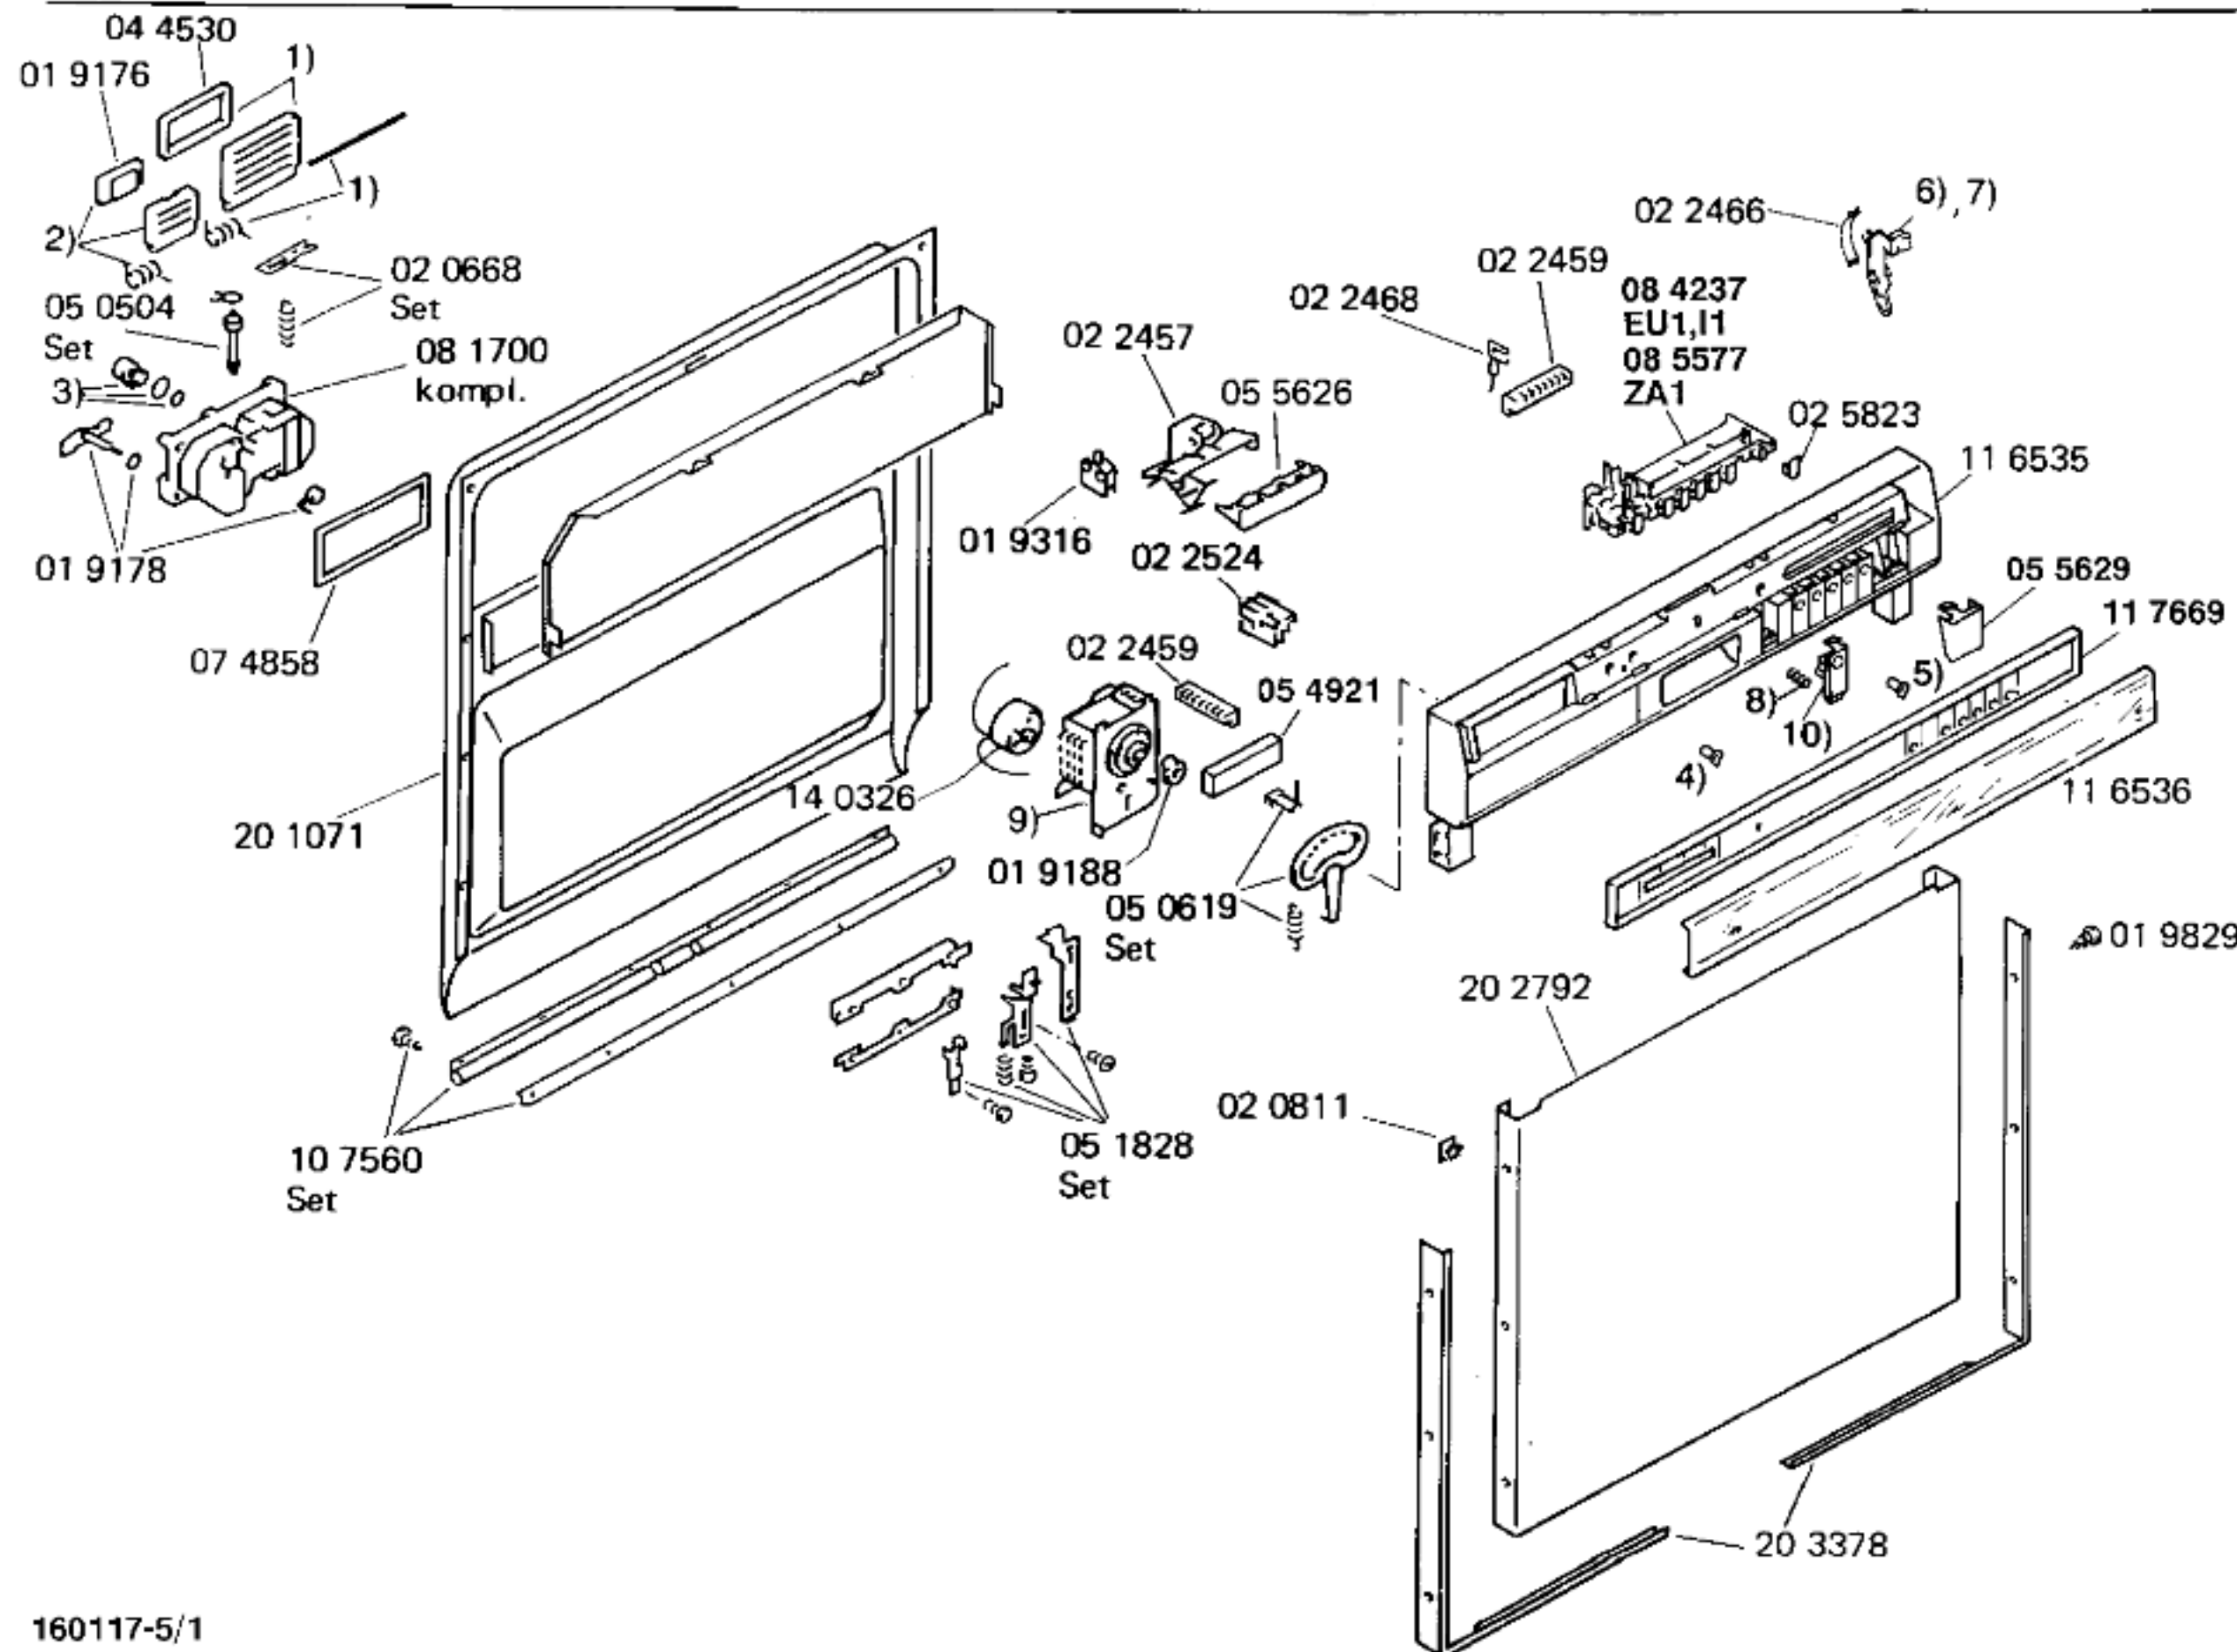

Ident.-Nummern-Konstante
3740

51 3032
Gebrauchsanweisung
(D,GB,F,I,NL,E)
51 2277
Aufstellanleitung

1) **04 2085**
Set

2) **04 2105**
Set

3) **01 9177**
Set

4) **02 5122**

5) **02 5123**


6) **02 5657**
rot

7) **02 5658**
grün


8) **02 5824**


9) **08 5079**

10) **02 8238**

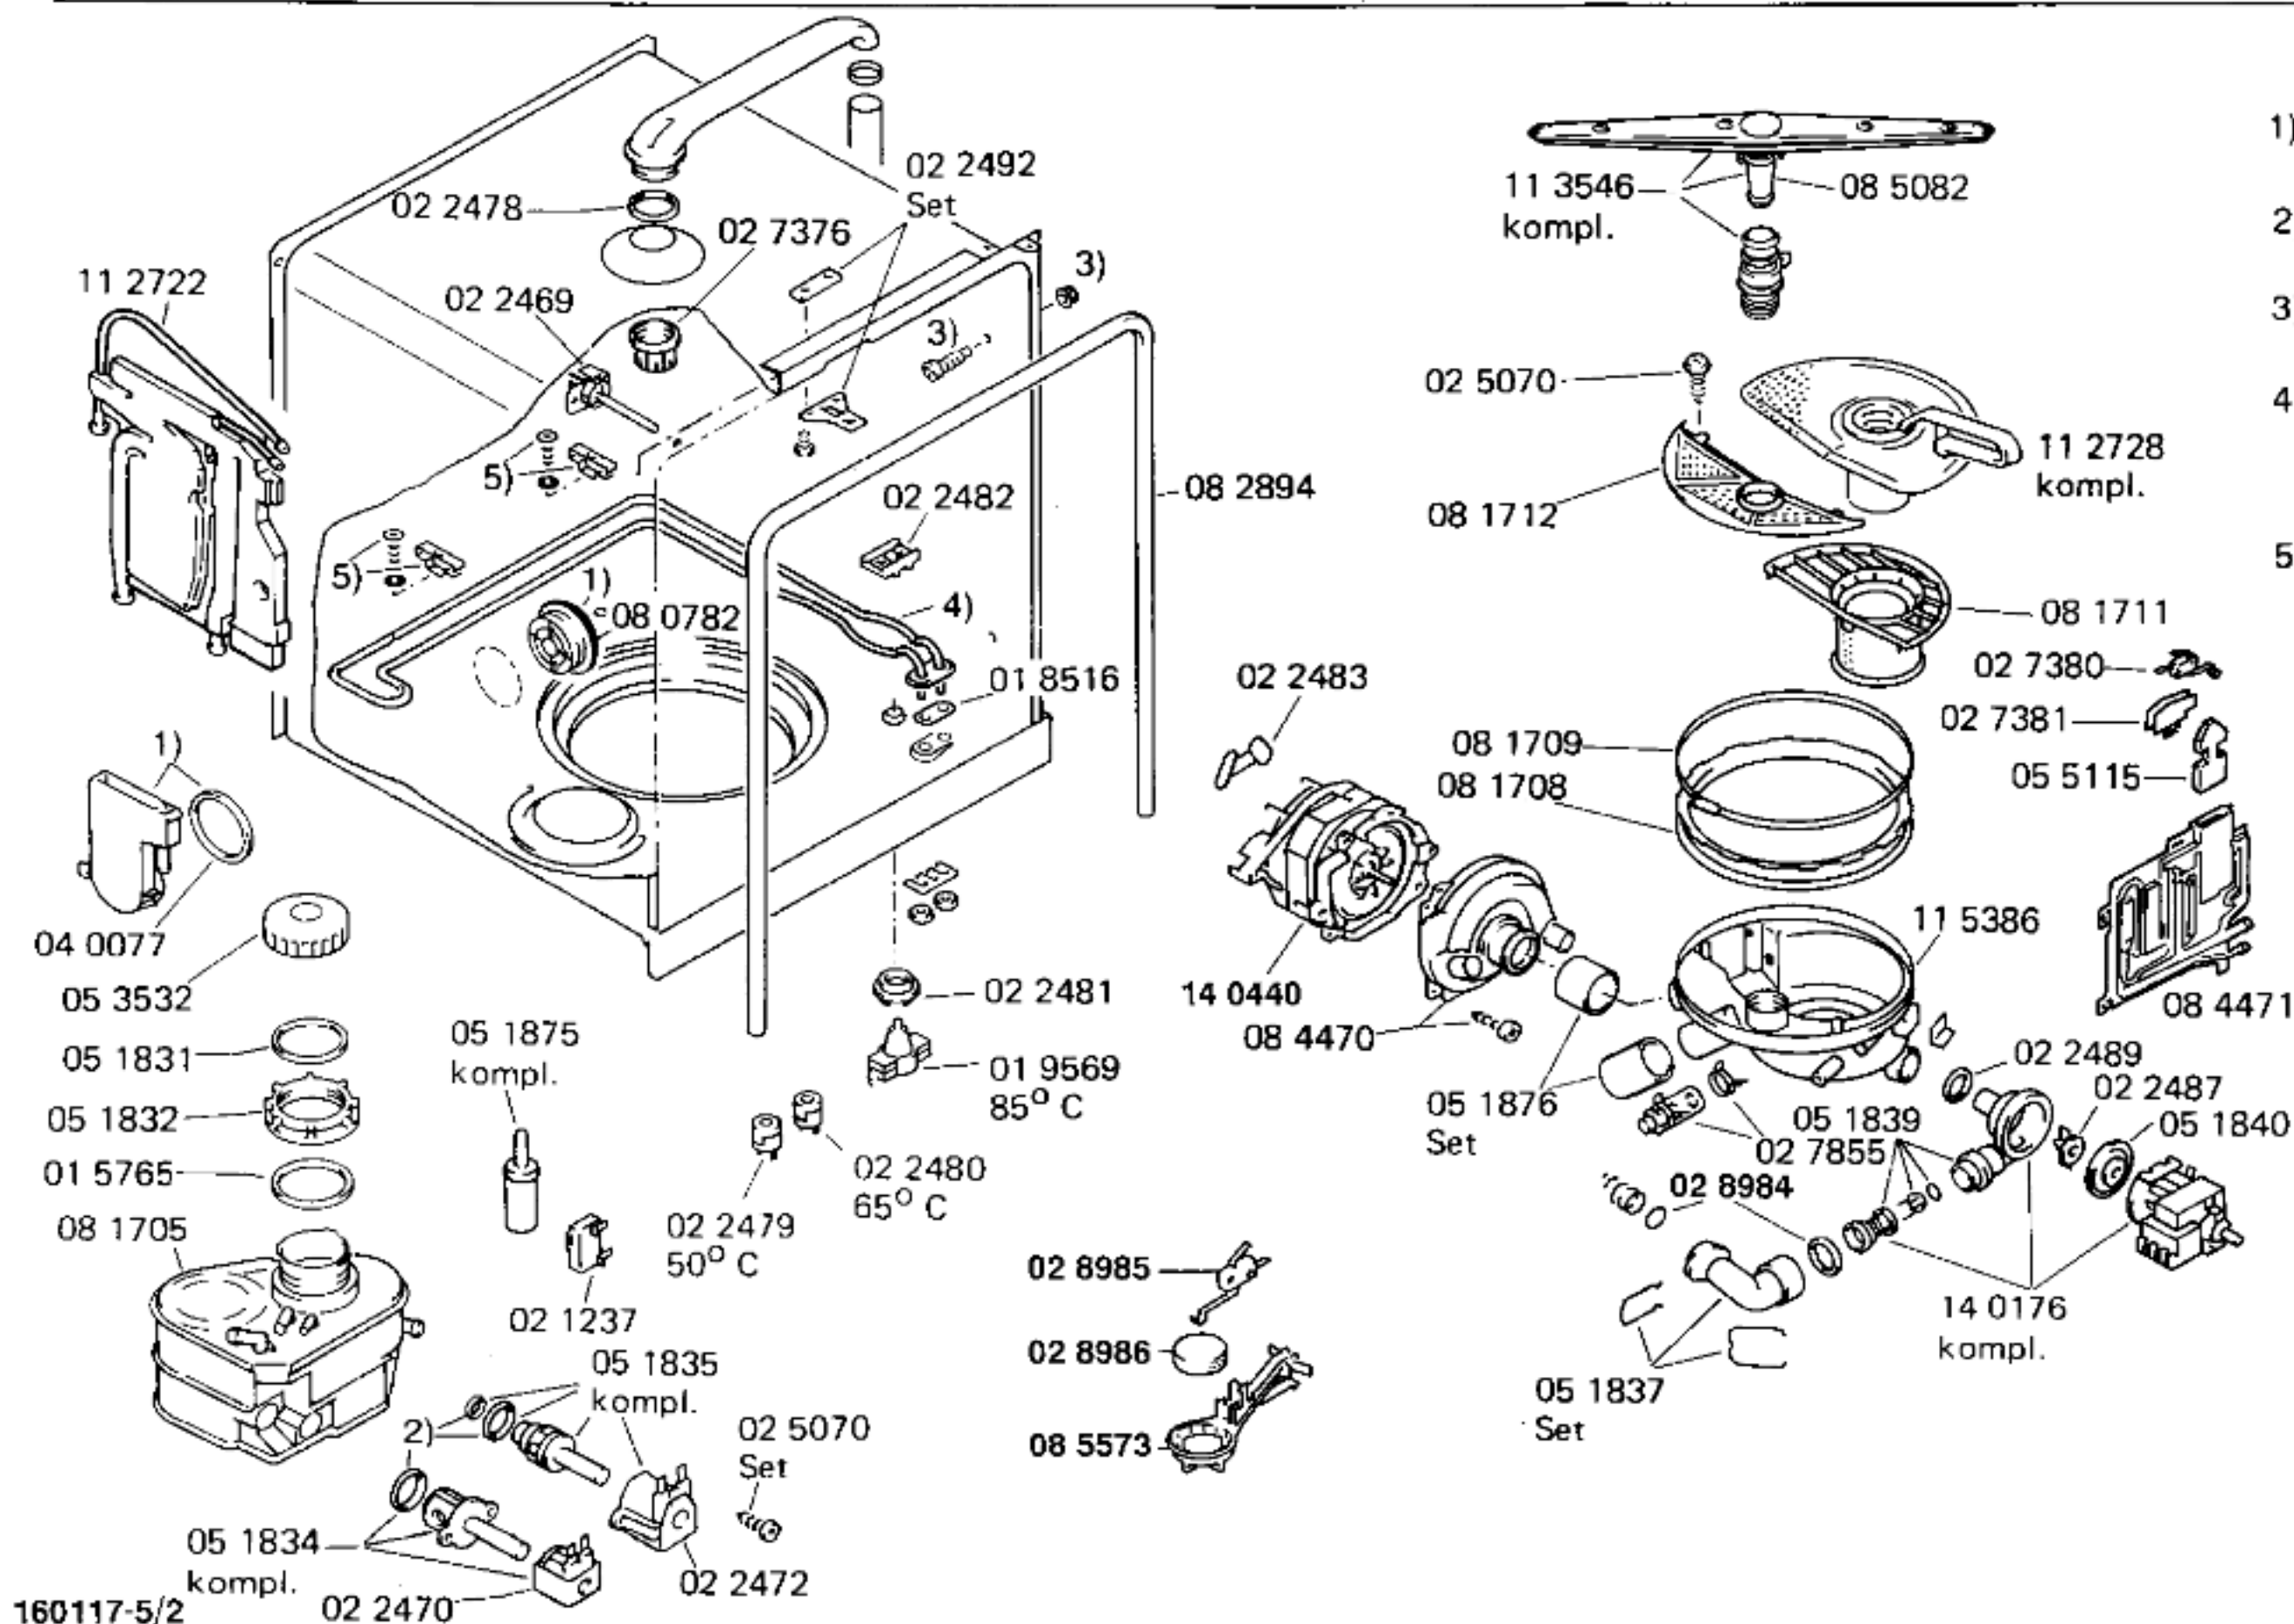

- 1) 08 0781 Set
- 2) 02 5067 Set
- 3) 01 9204 Set
- 4) 20 1073 EU1 ZA1 20 2256 J1
- 5) 05 1838

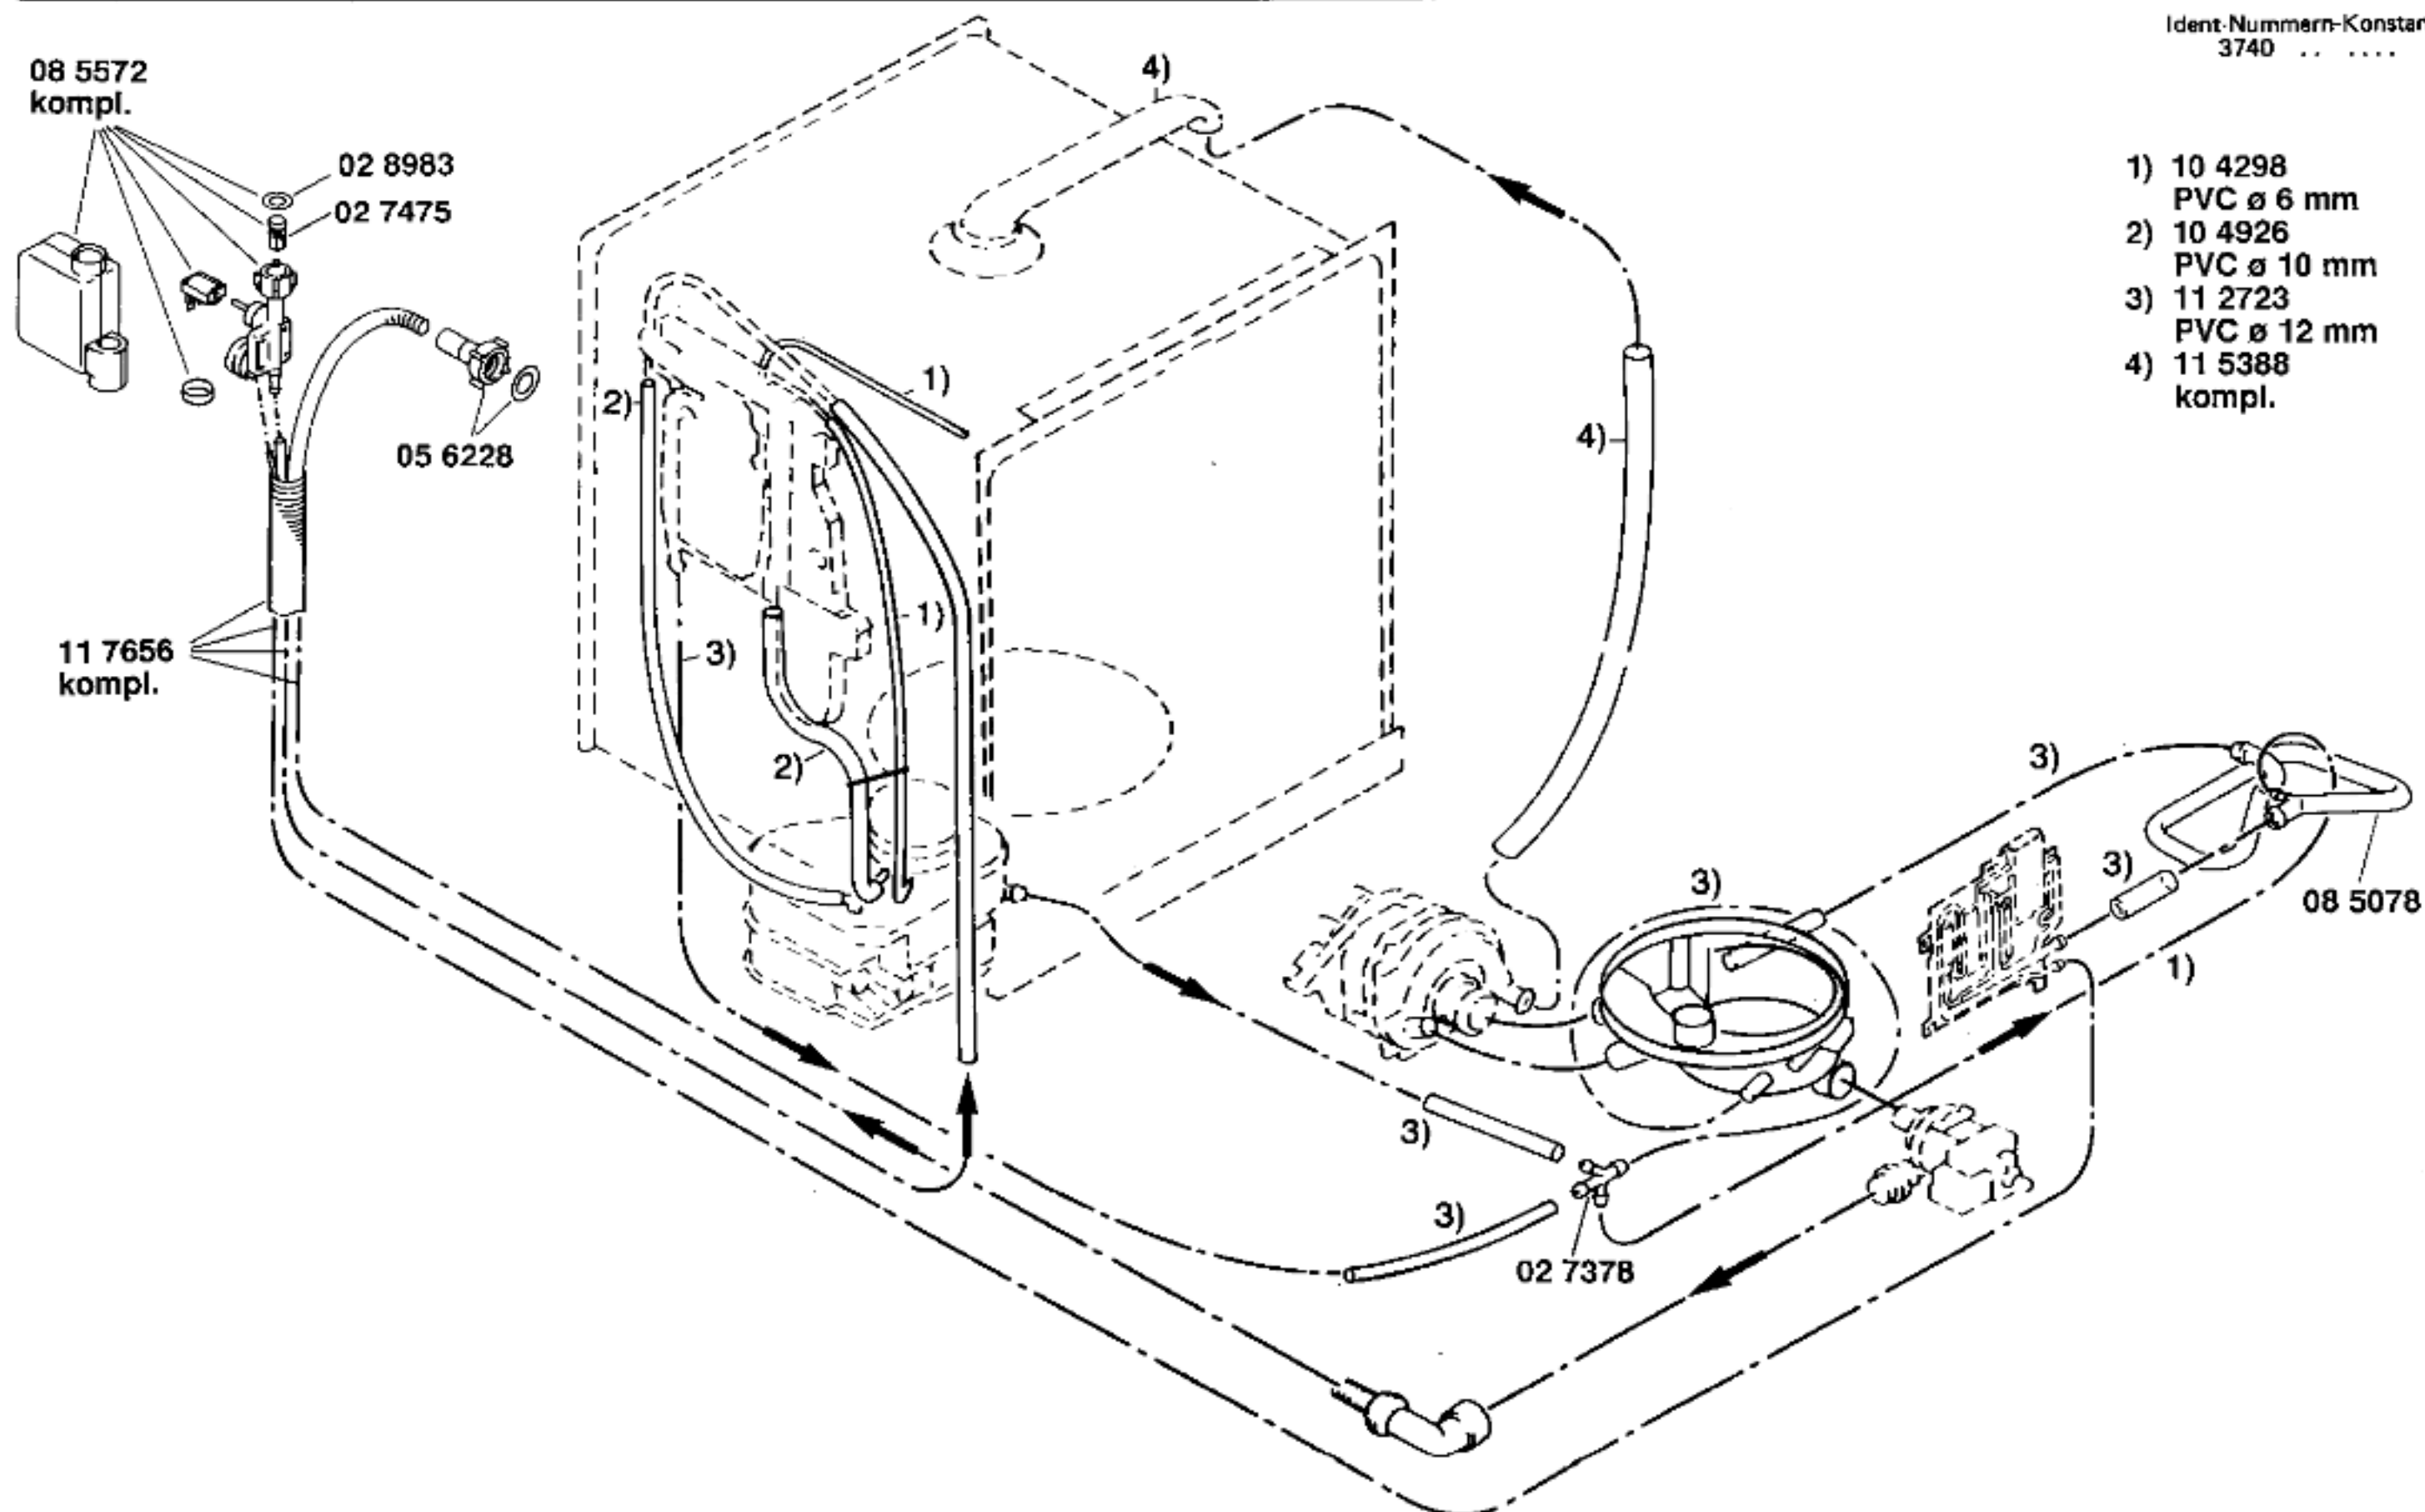

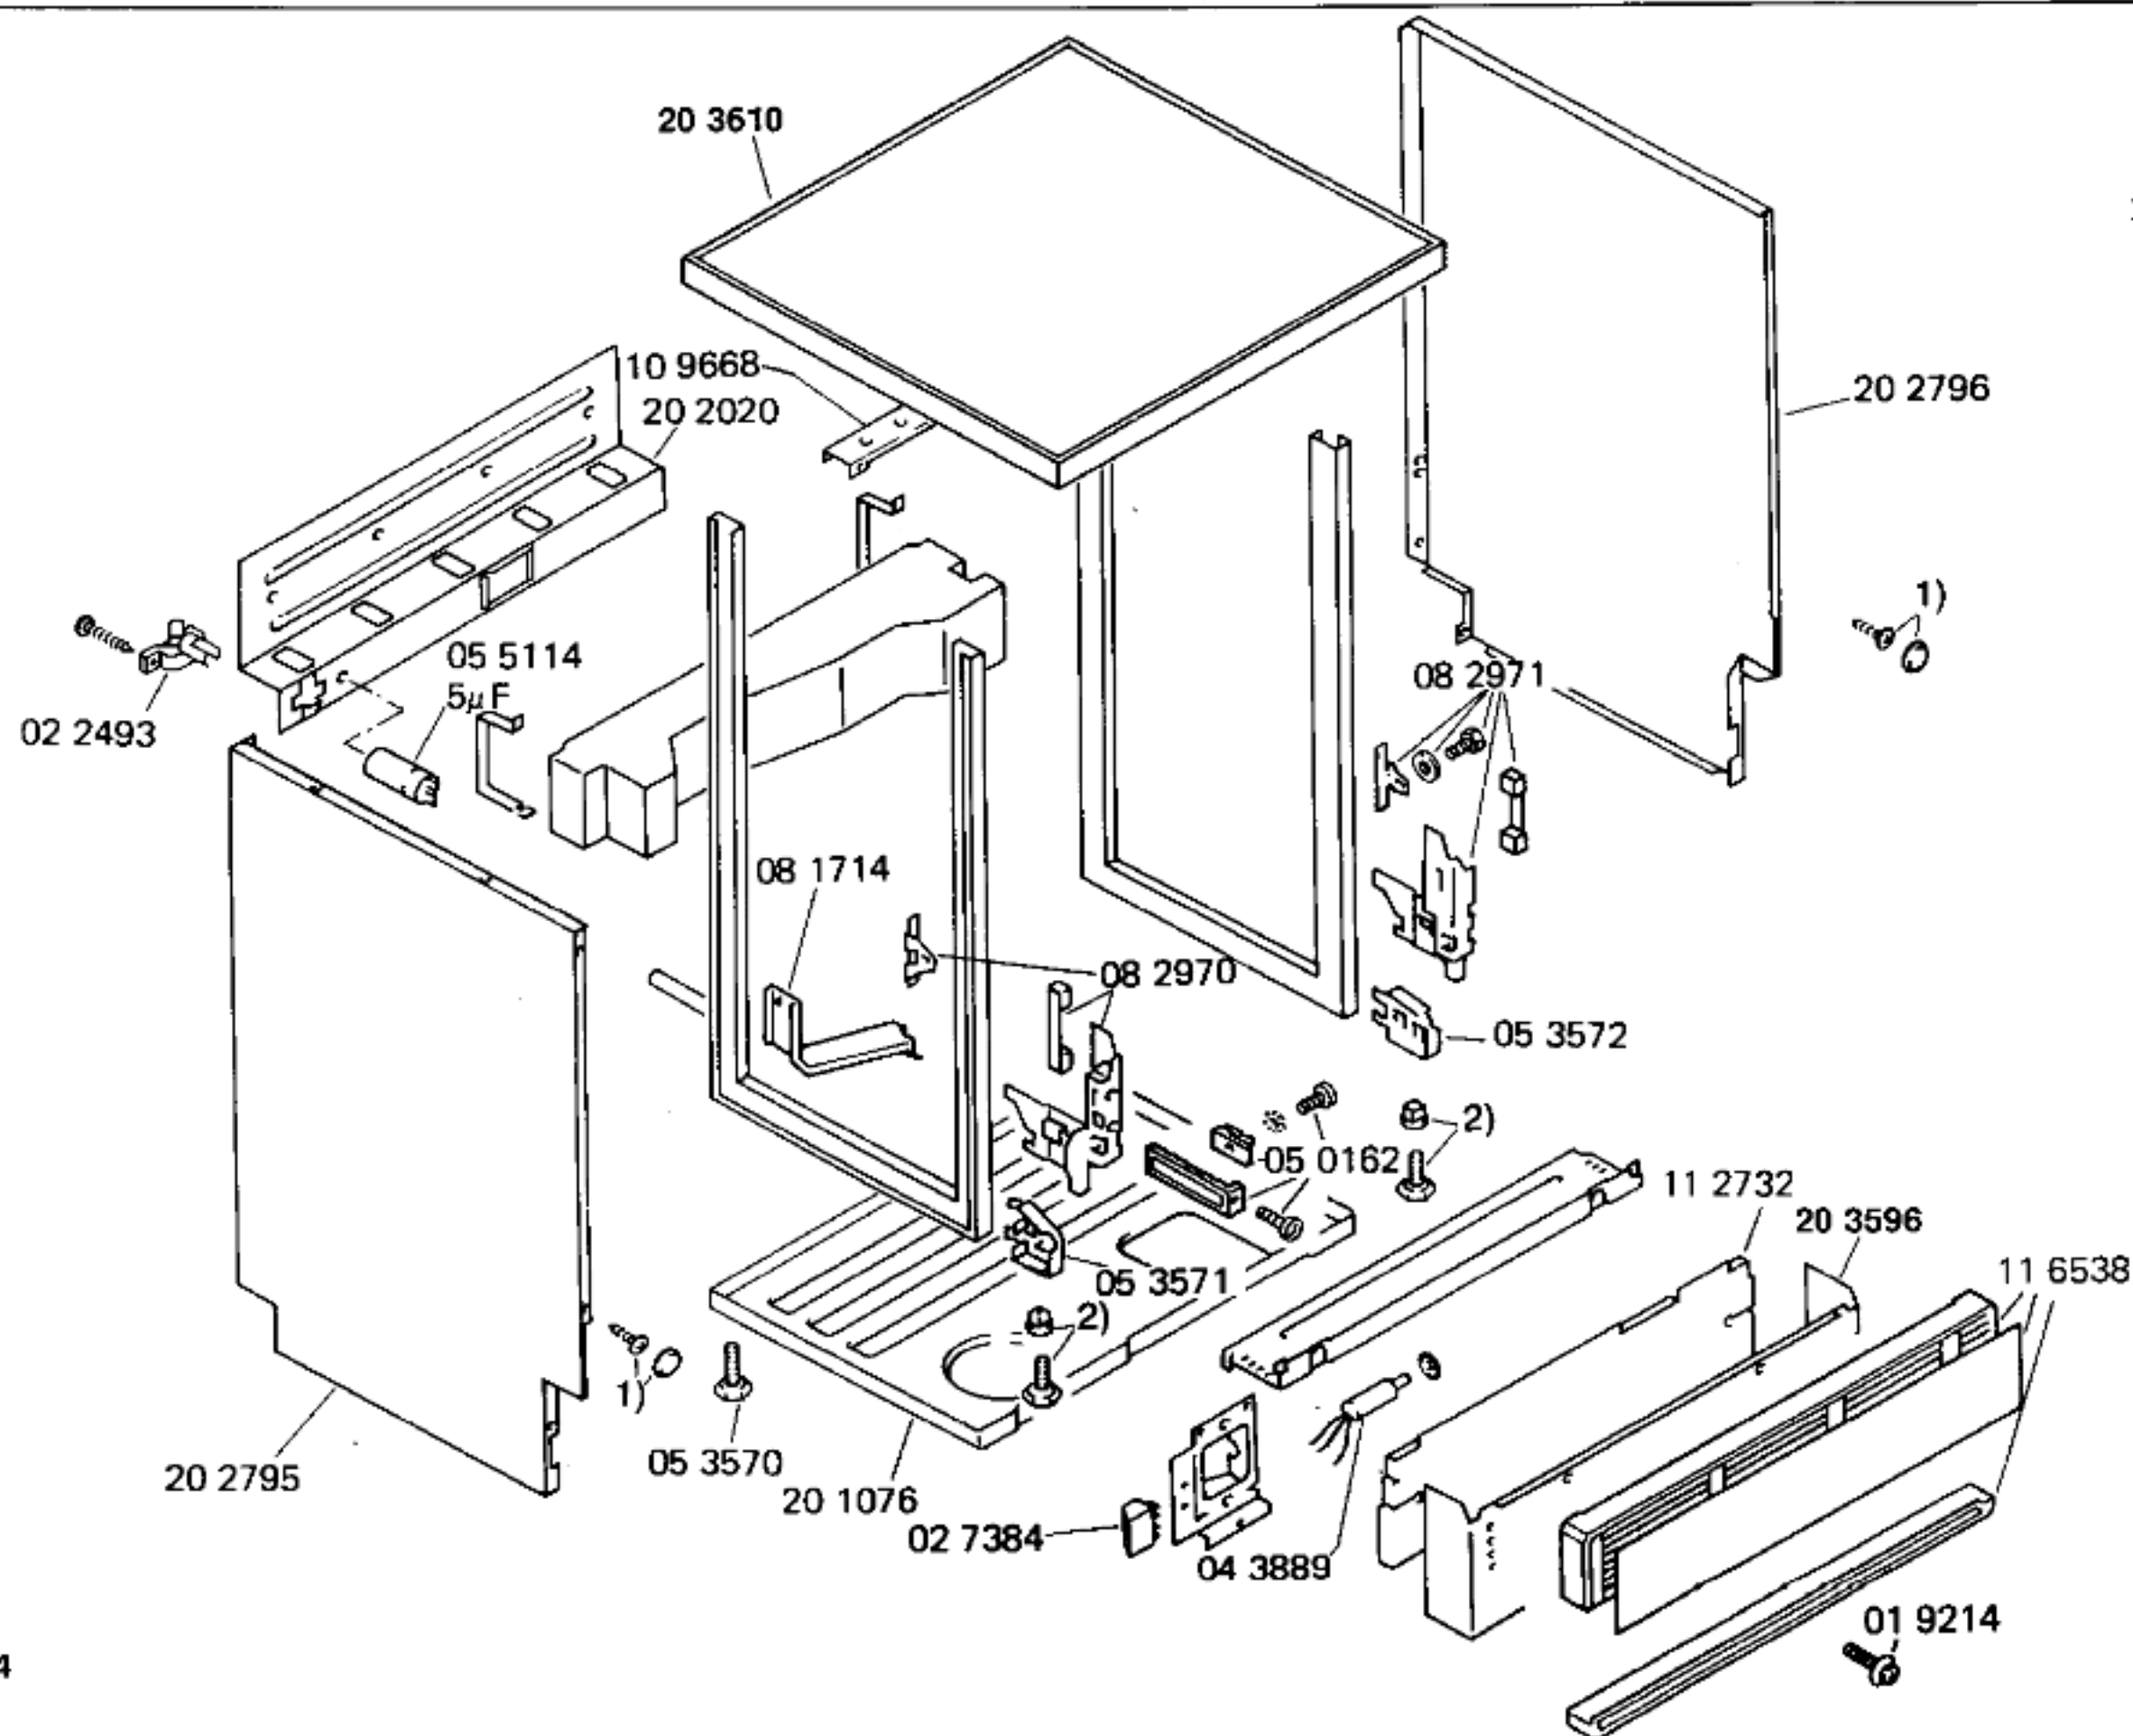


**BOSCH**

S612 - SMS 6120 - 0 730 101 658-EU1
 S612 - SMS 6120L - 0 730 101 663-ZA1
 S612 - SMS 61204 - 0 730 101 662-I1

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident-Nummern-Konstante
 3740

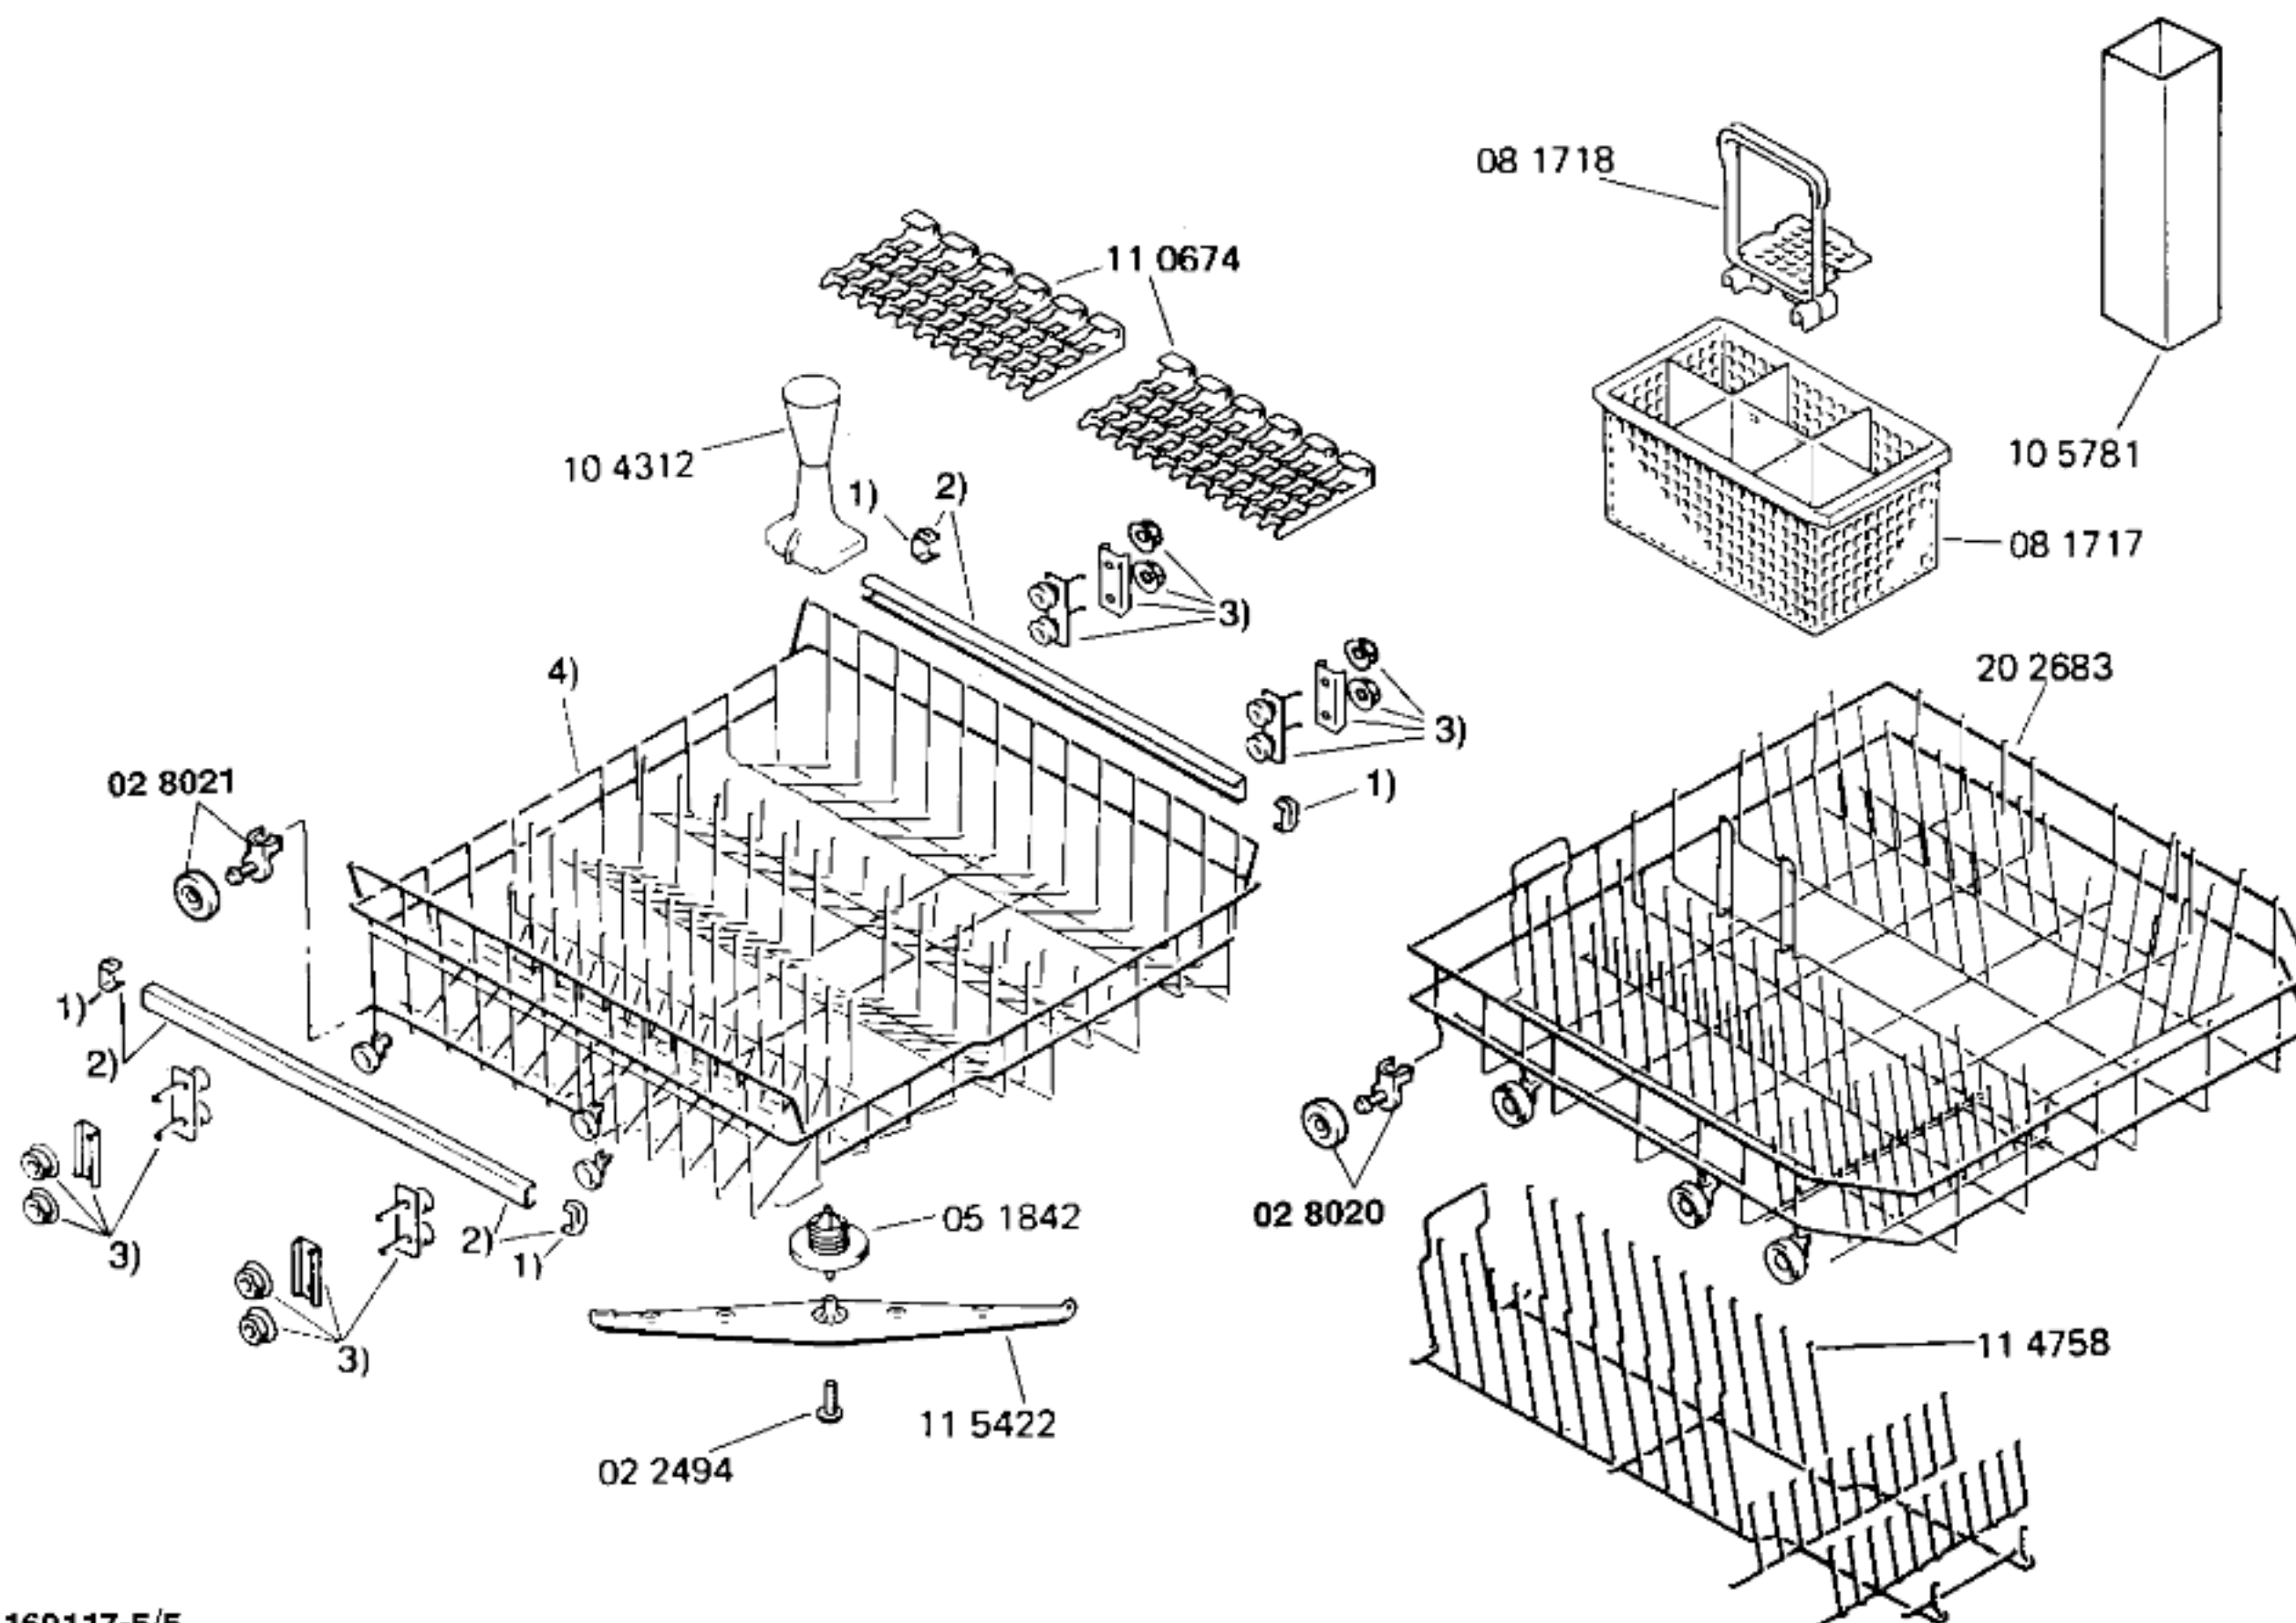

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set
- 4) 20 1970
EU1 ZA1
20 3631
I1