


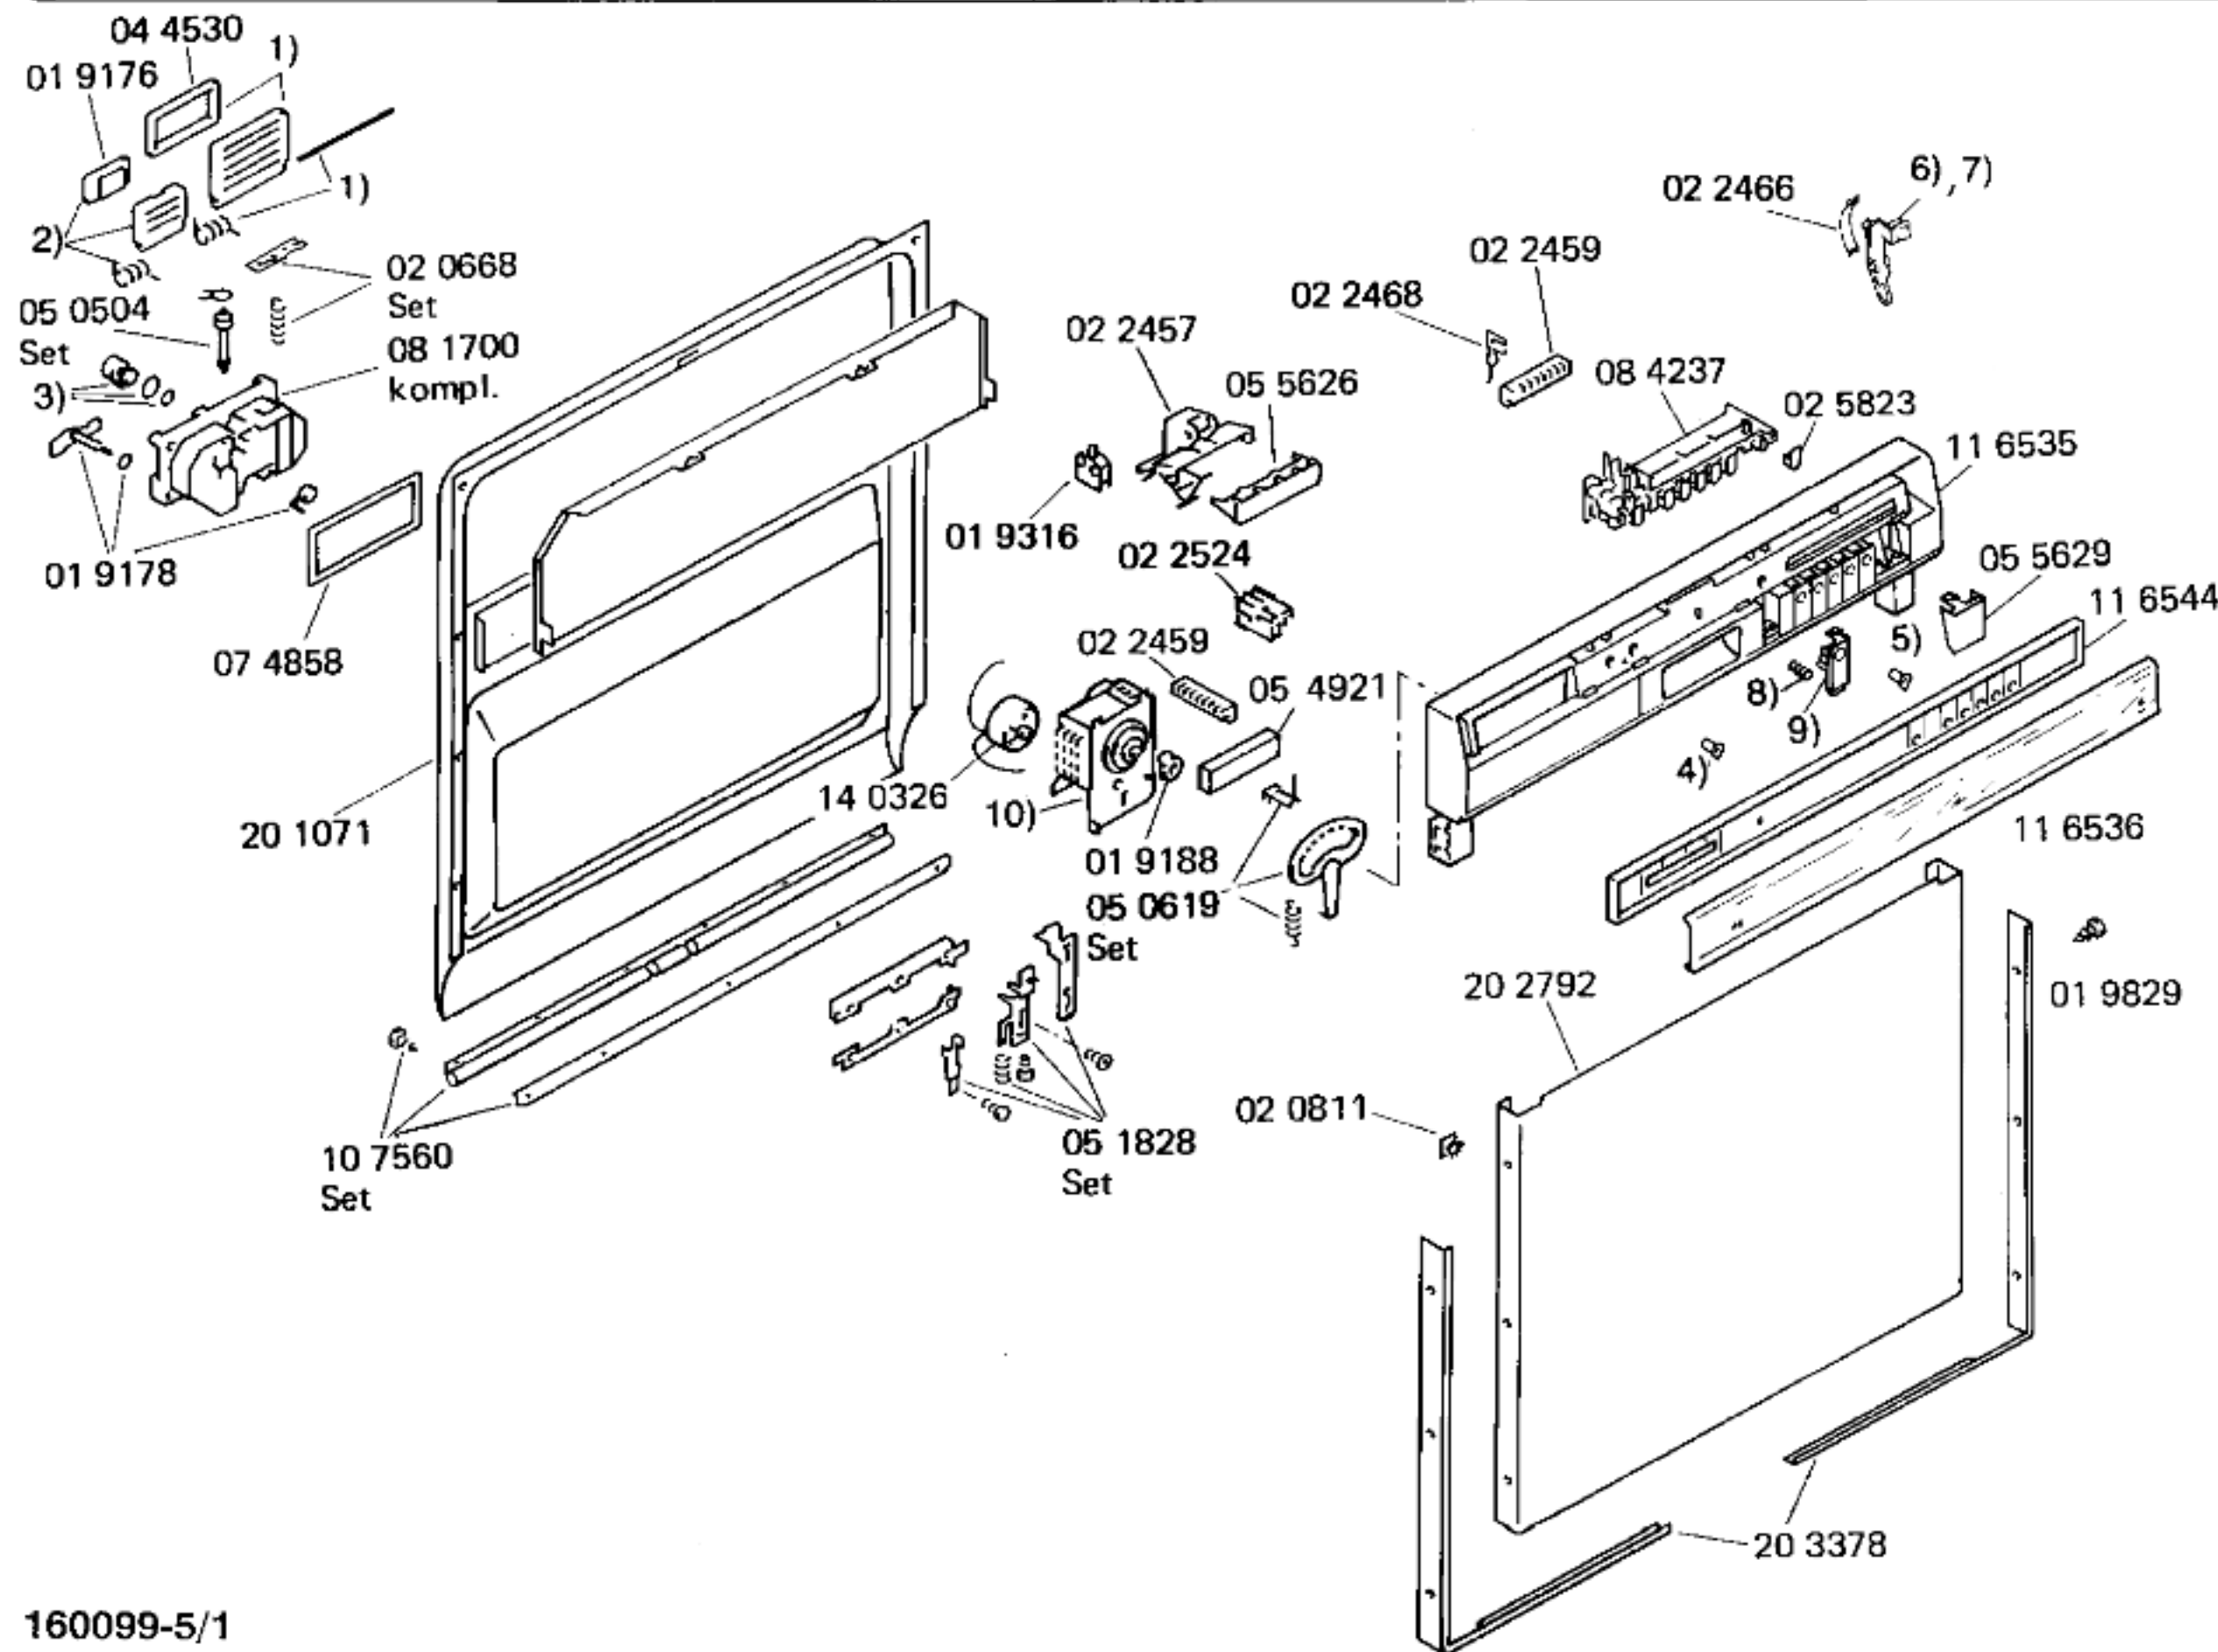

Ident-Nummern-Konstante
3740 ...

Gebrauchsanweisung

51 1375
bis FD 6604
51 2817
ab FD 6605
GB1
(D,GB,F,I,NL,E)
51 3096
GB2
(GB)
51 2277

Aufstellanleitung

1) 04 2085
Set

2) 04 2105
Set

3) 01 9177
Set

4) 02 5122

5) 02 5123

6) 02 5657
rot

7) 02 5658
grün

8) 02 5824

9) 02 8238

10) 08 4059
bis FD 6609
08 5079
ab FD 6610


11) 11 6544
GB1
11 7382
GB2

**BOSCH**

SMS 6100 – 0 730 101 641-GB1
 SMS 610035 – 0 730 101 652-GB2

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident Nummern-Konstante
 3740

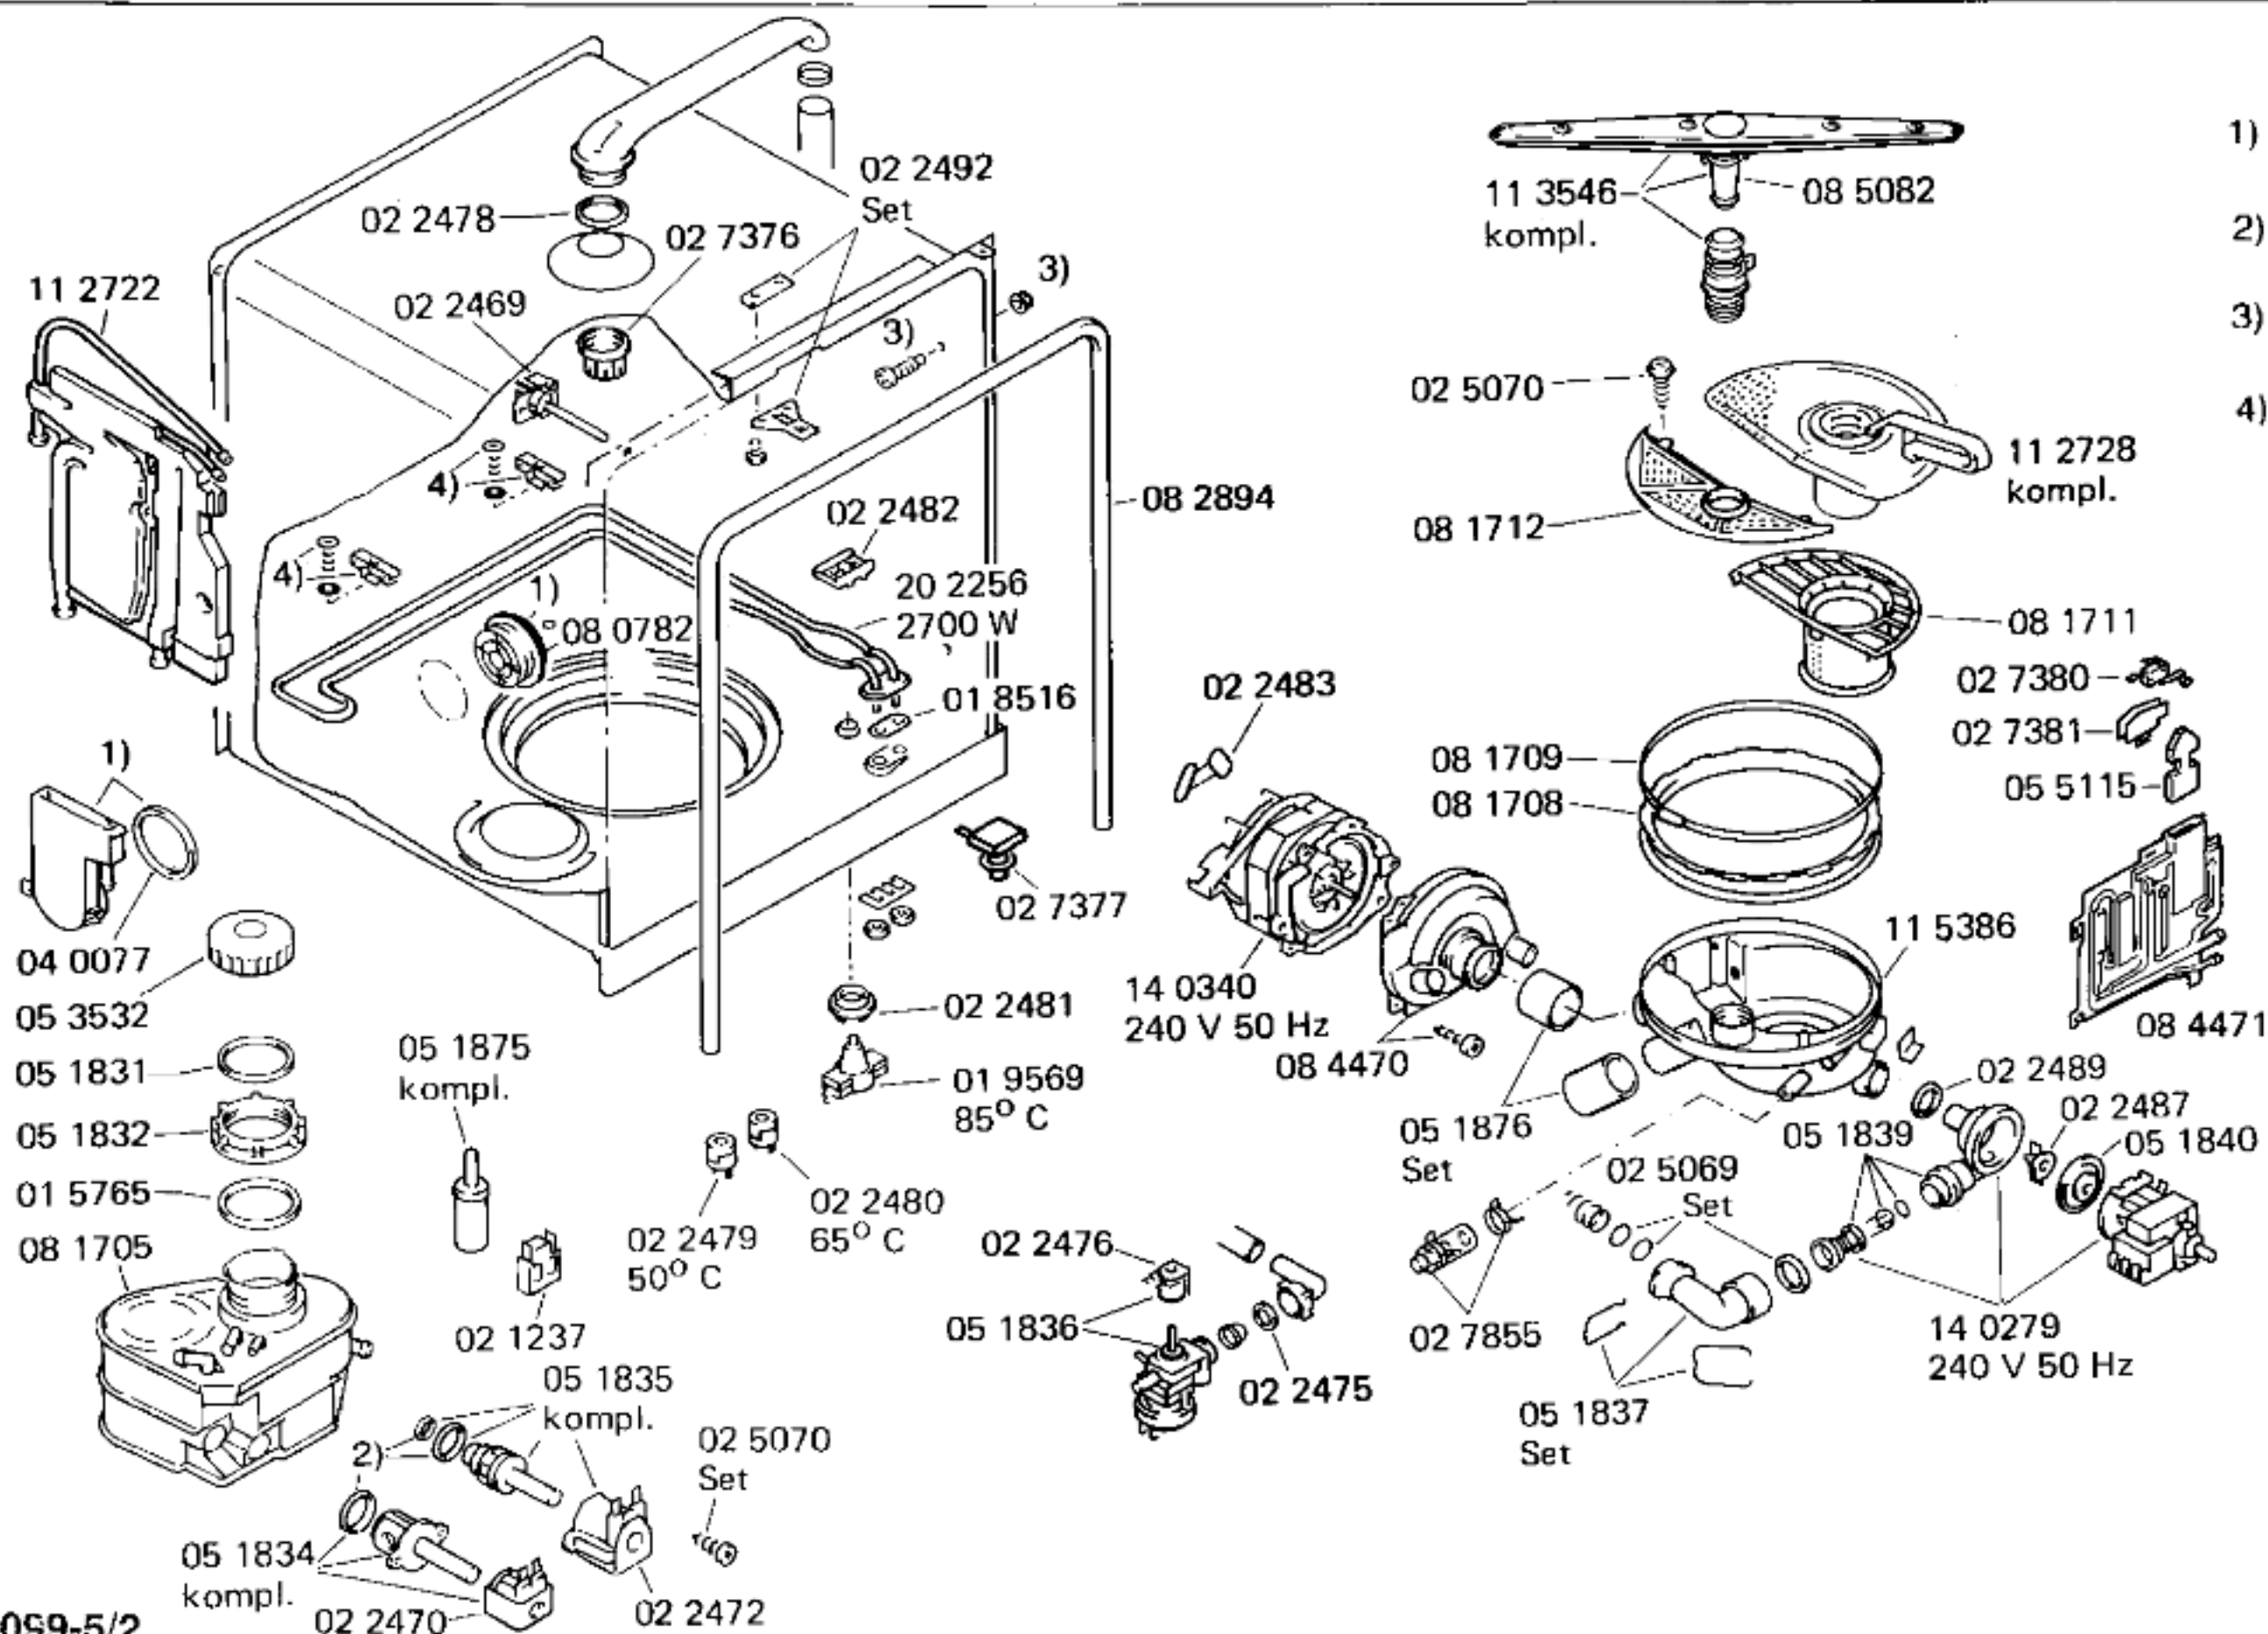



**BOSCH**

SMS 6100 — 0 730 101 641-GB1
 SMS 610035 — 0 730 101 652-GB2

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident-Nummern-Konstante
 3740

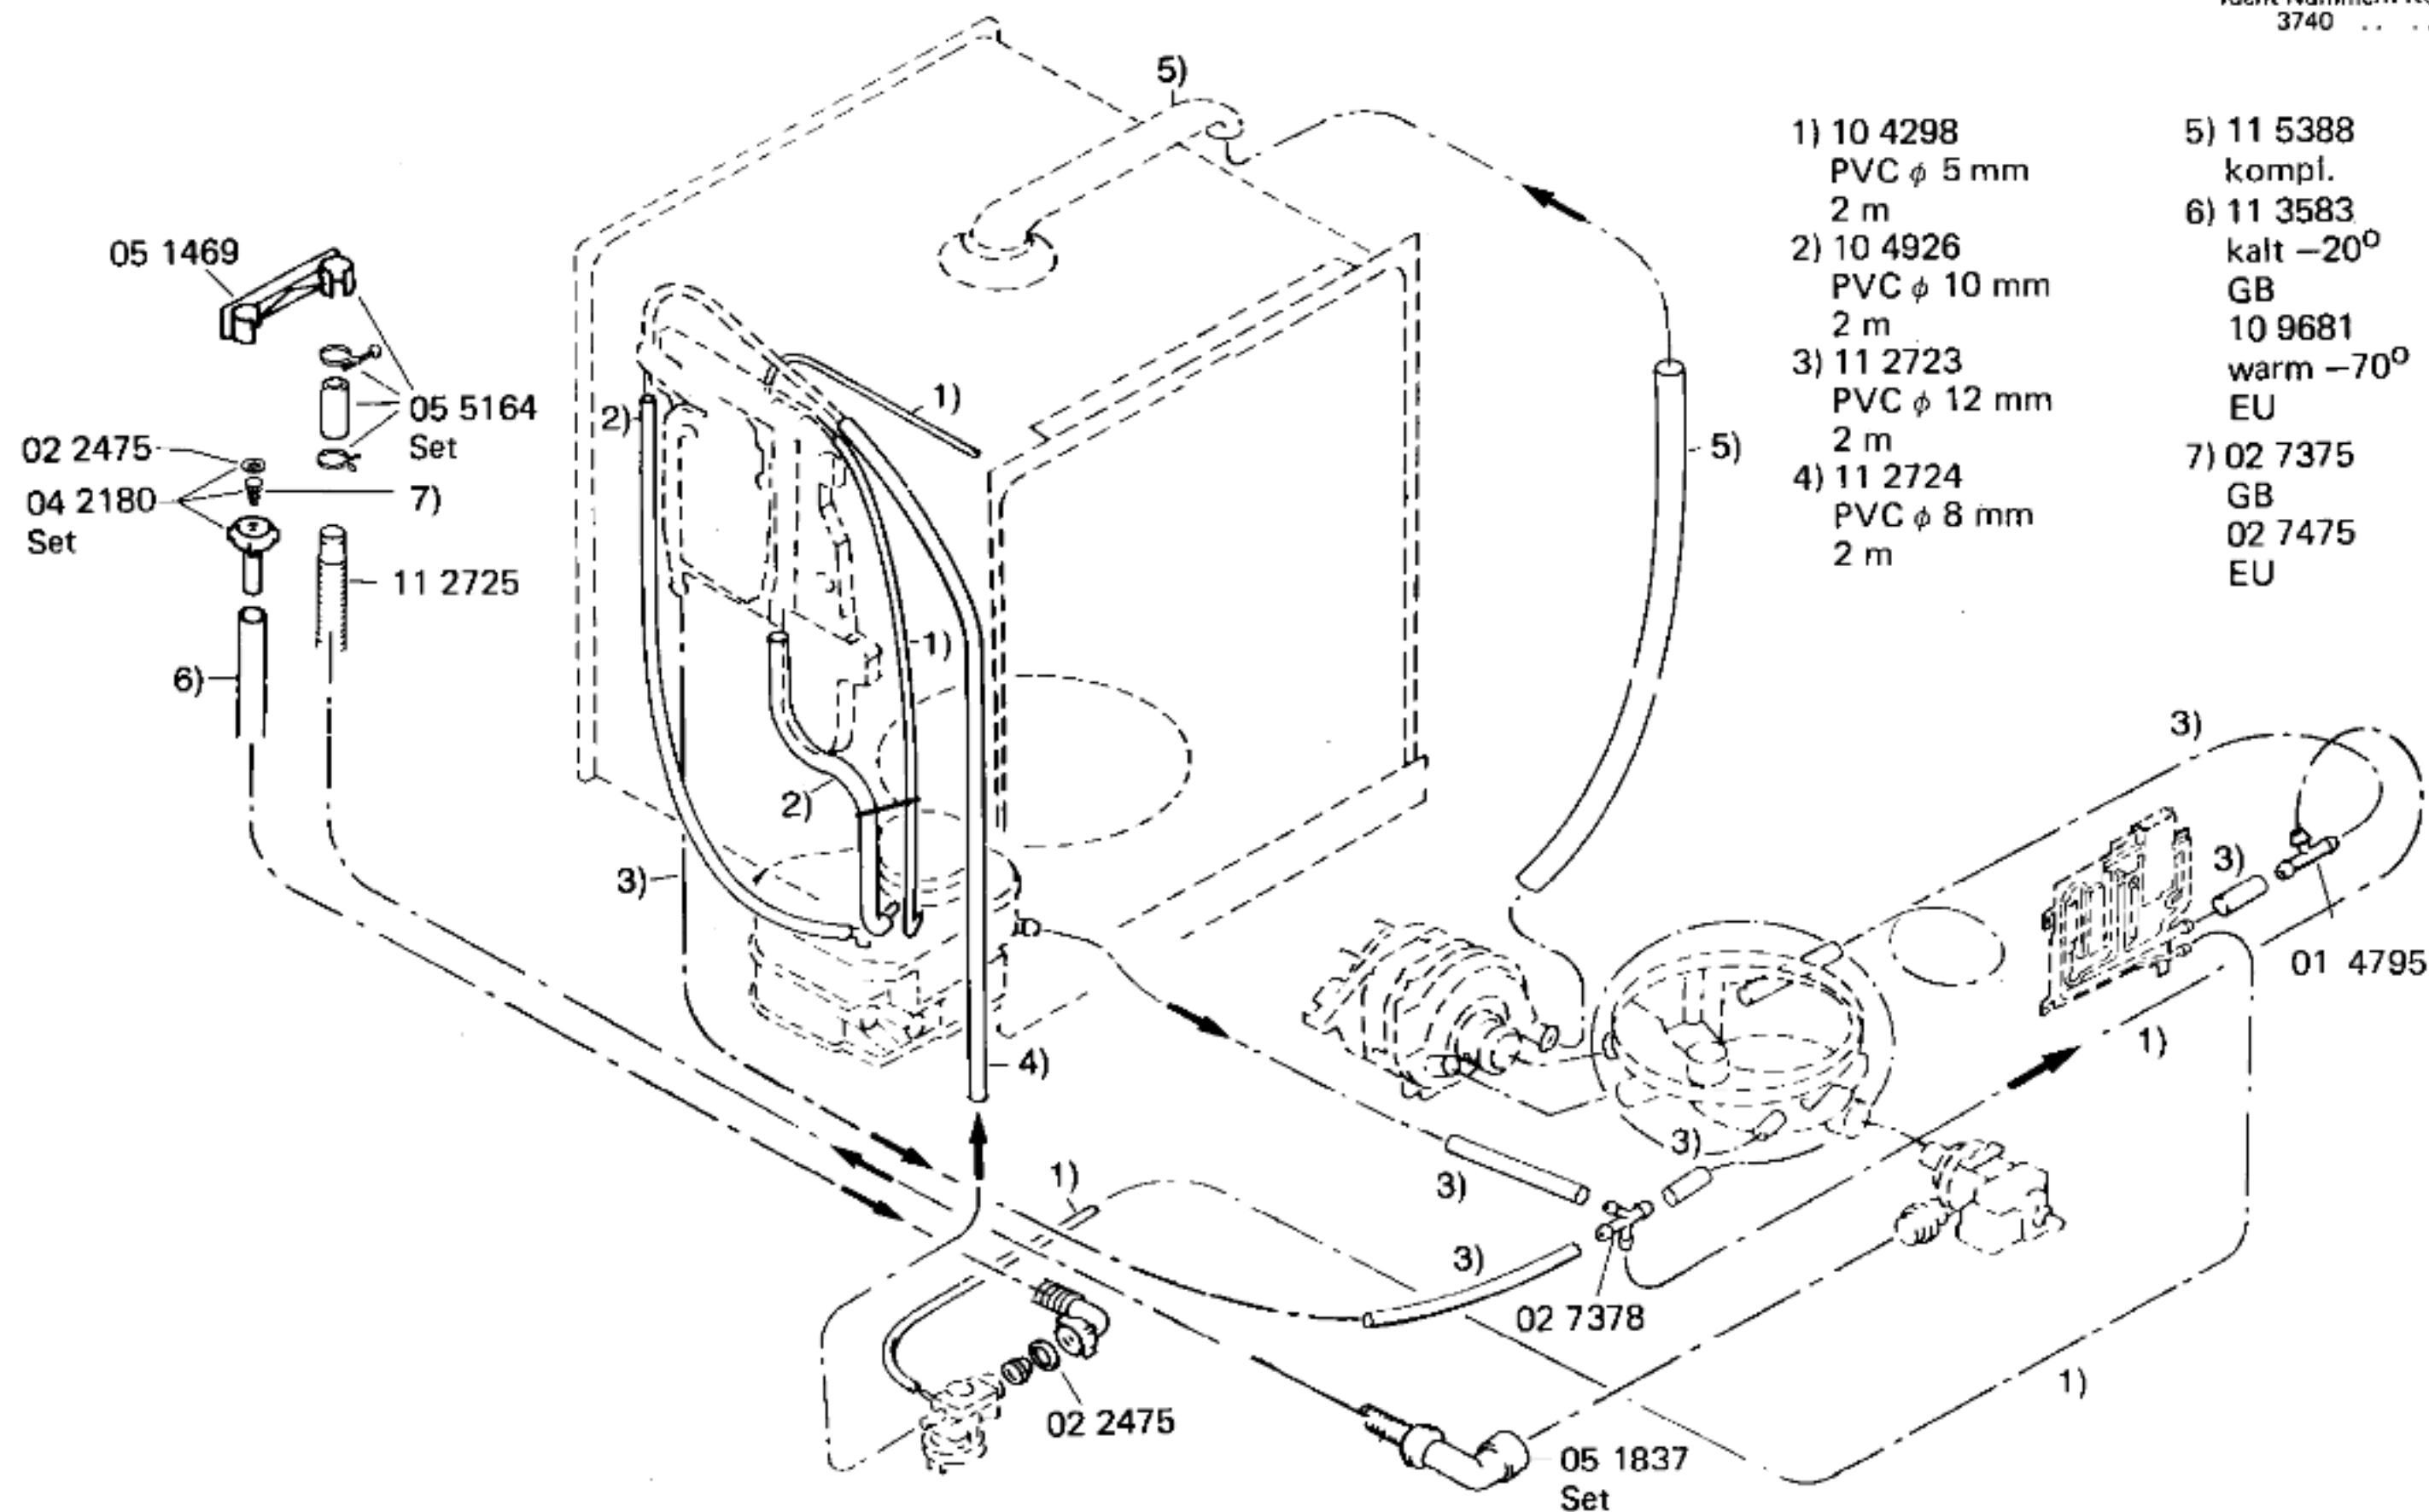

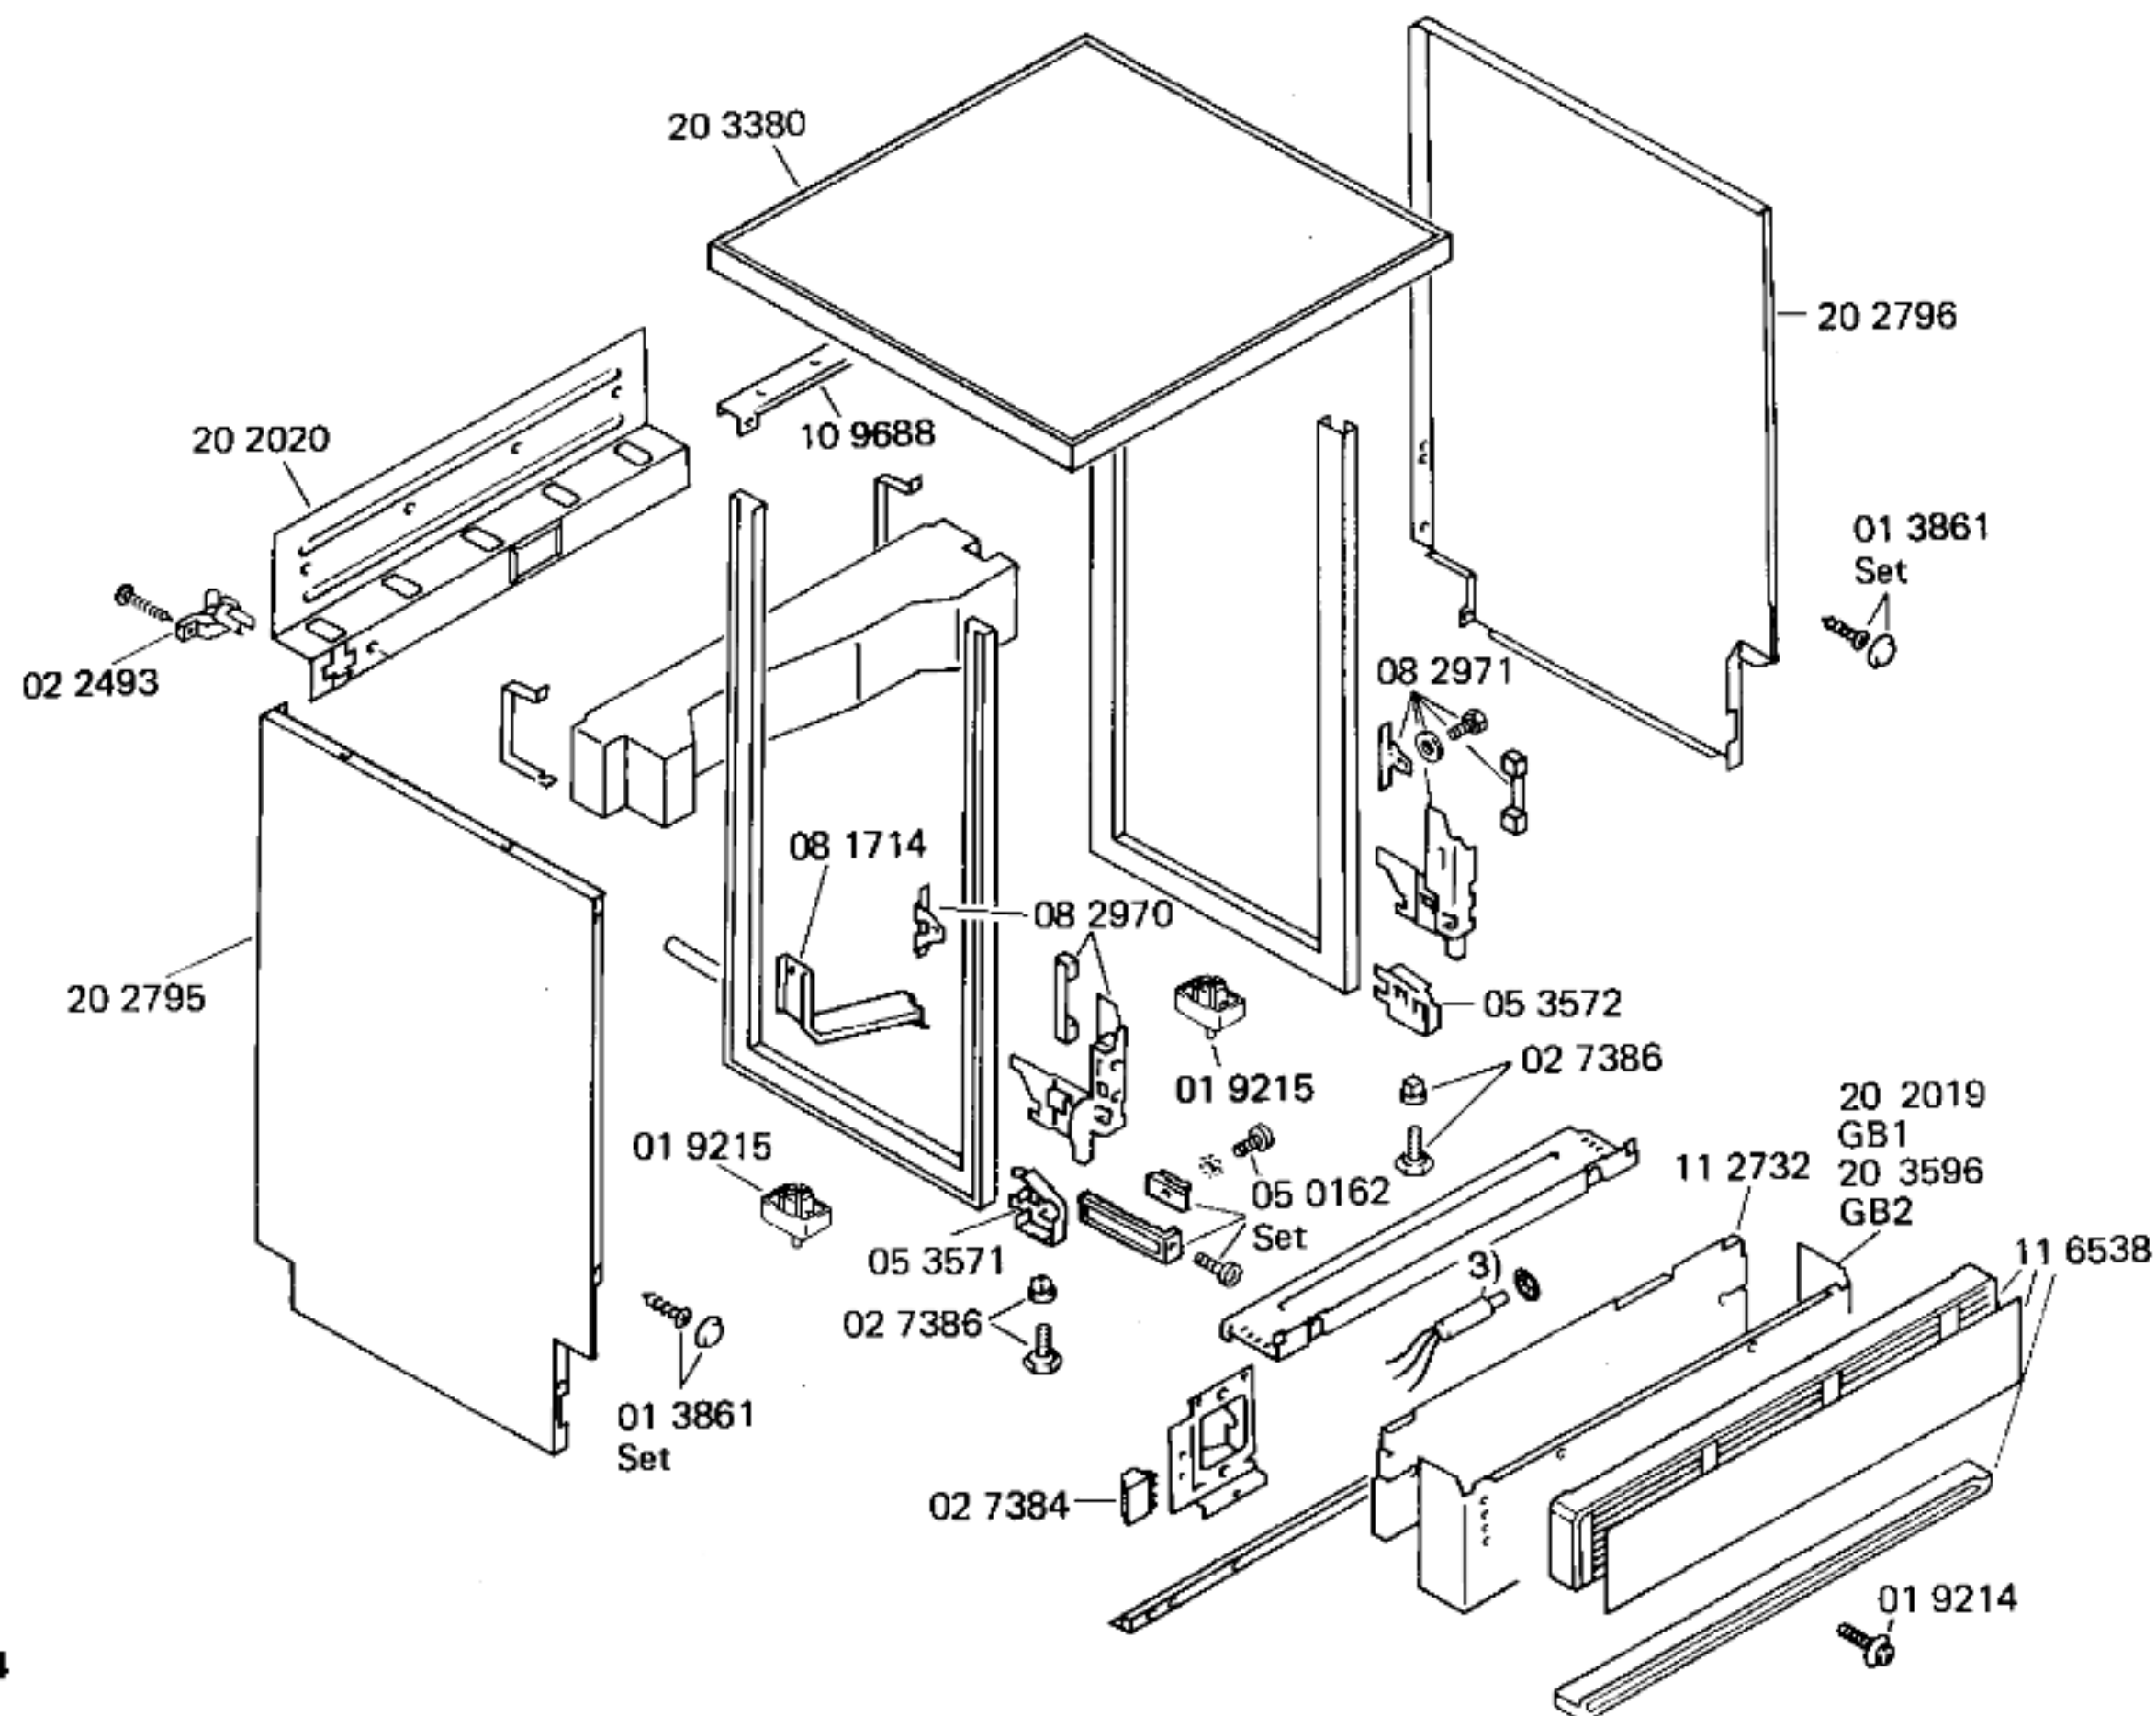


**BOSCH**

SMS 6100 — 0 730 101 641—GB1
SMS 610035 — 0 730 101 652—GB2

GESCHIRRSPÜLGERÄTE
Standgeräte

Ident-Nummern-Konstante
3740

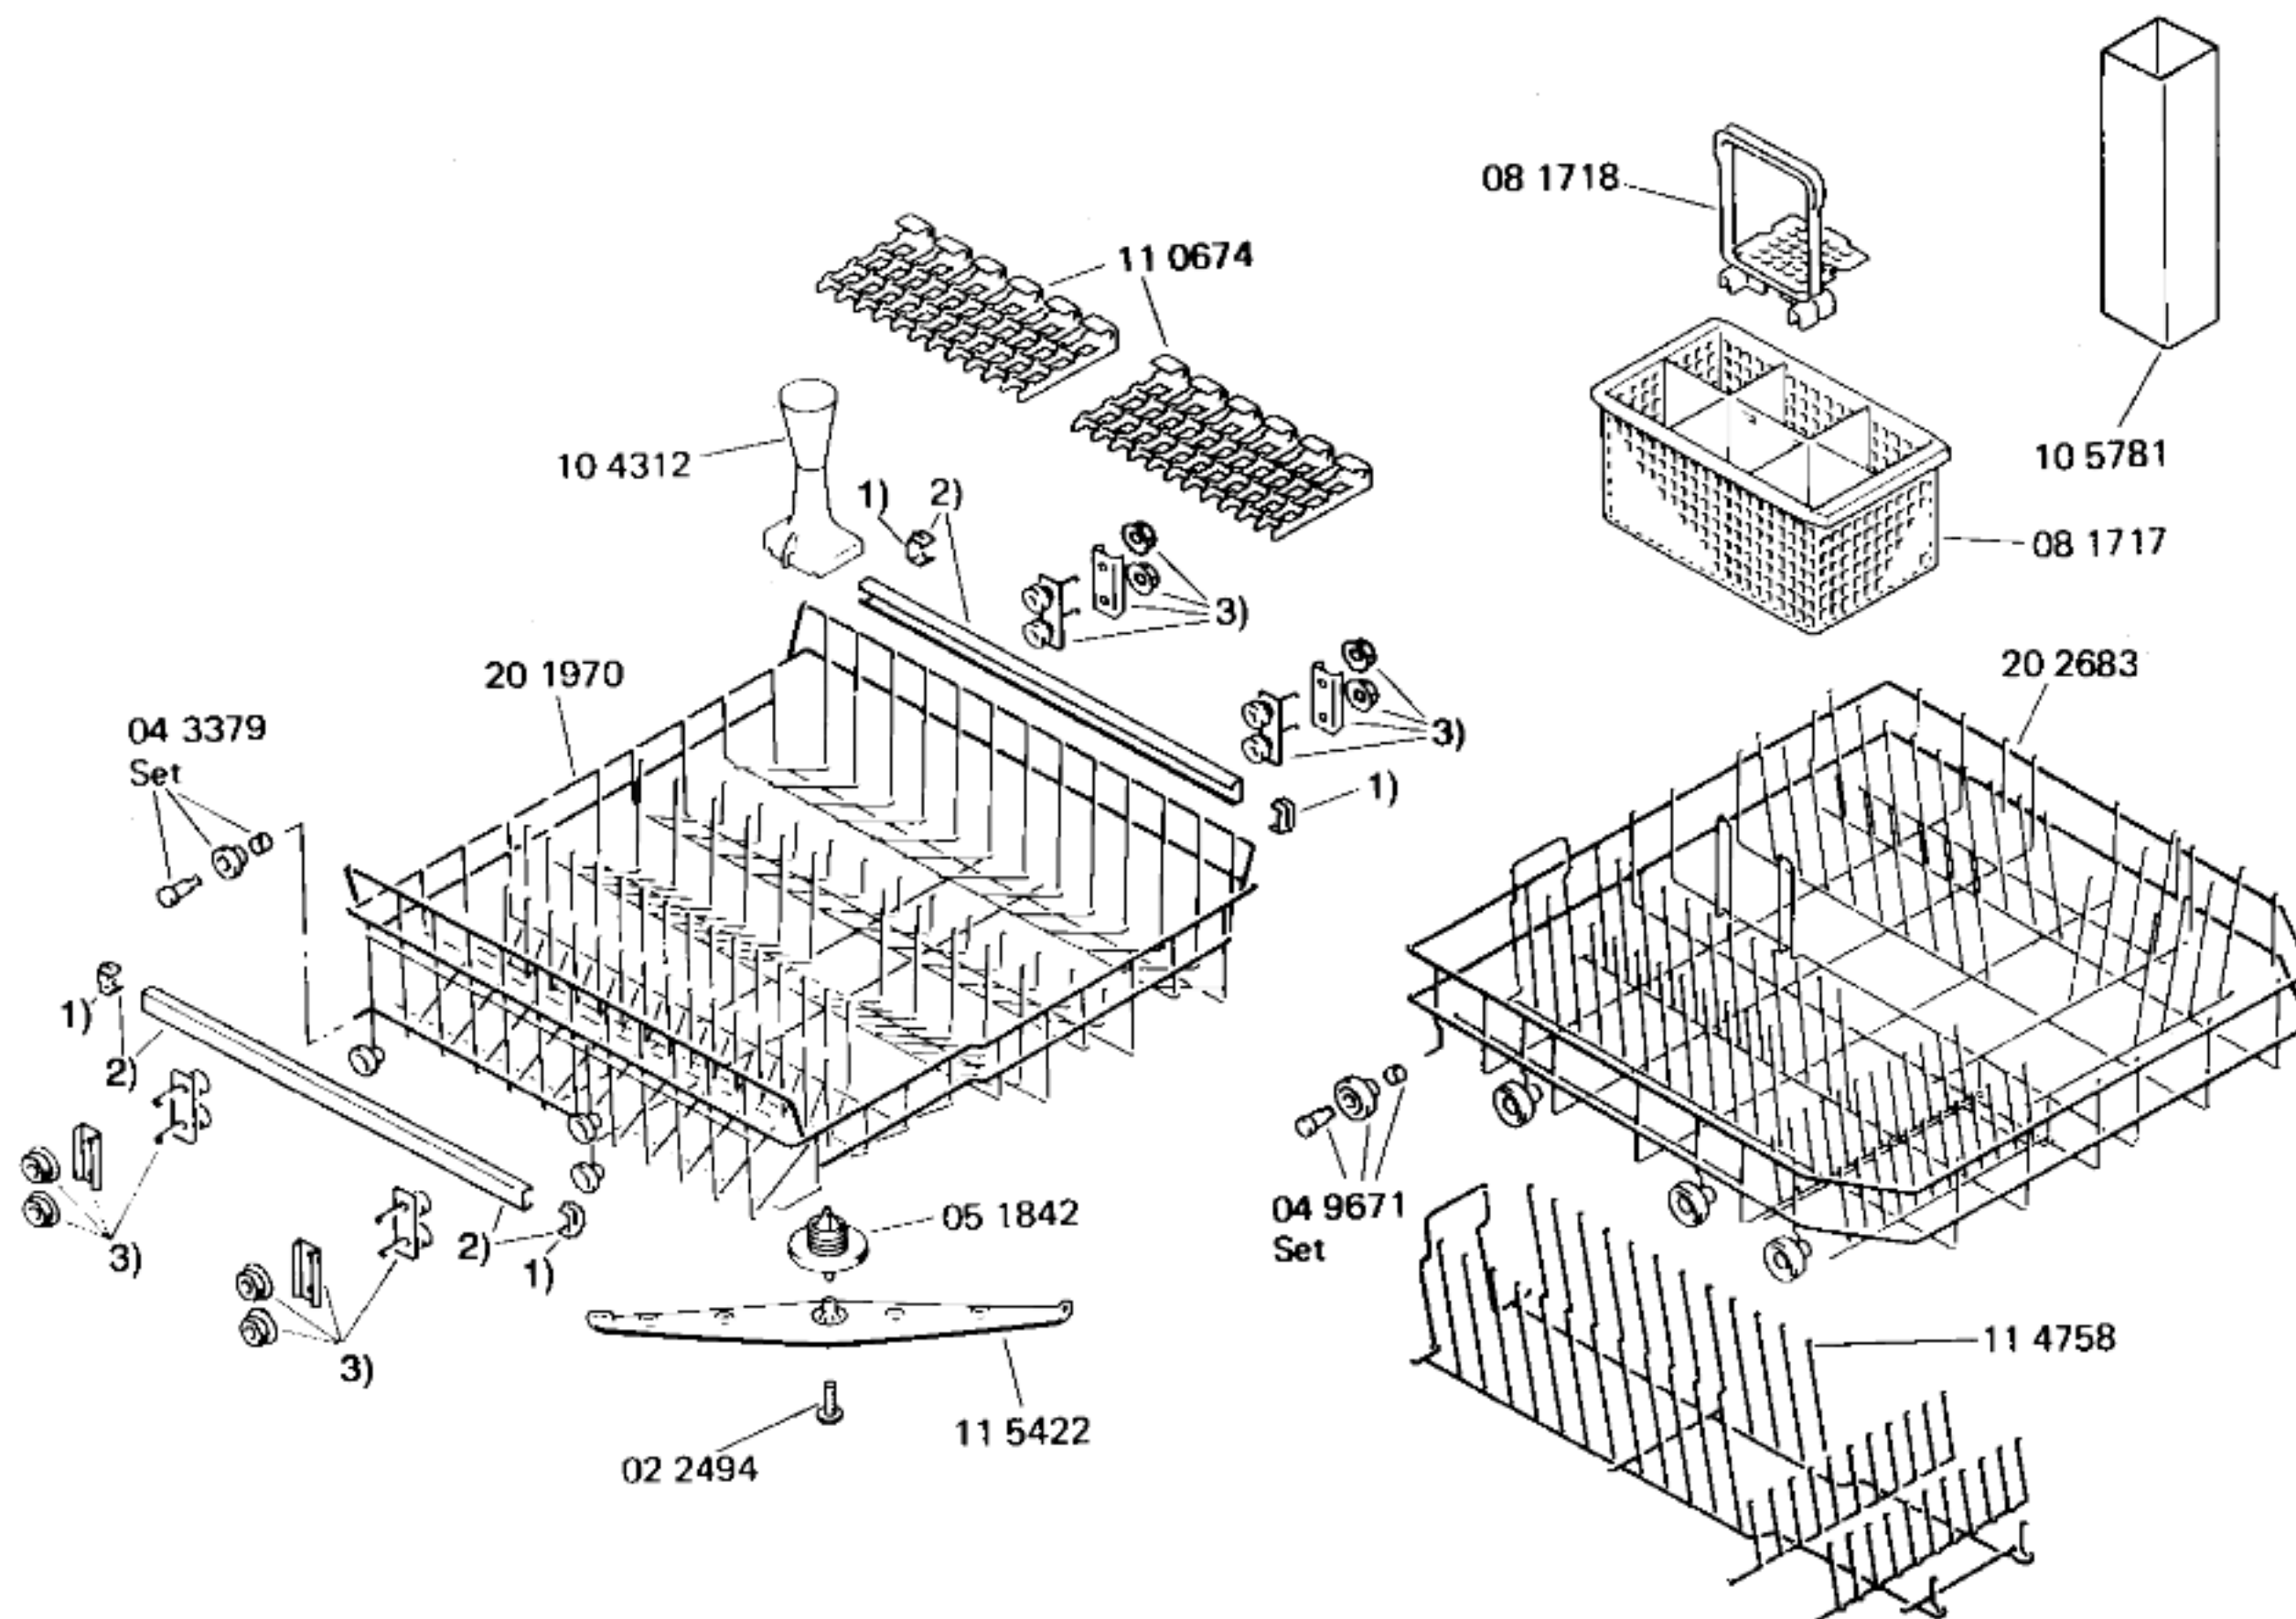

- 1) 01 9202
2) 11 0668
Set
3) 05 1287
Set