


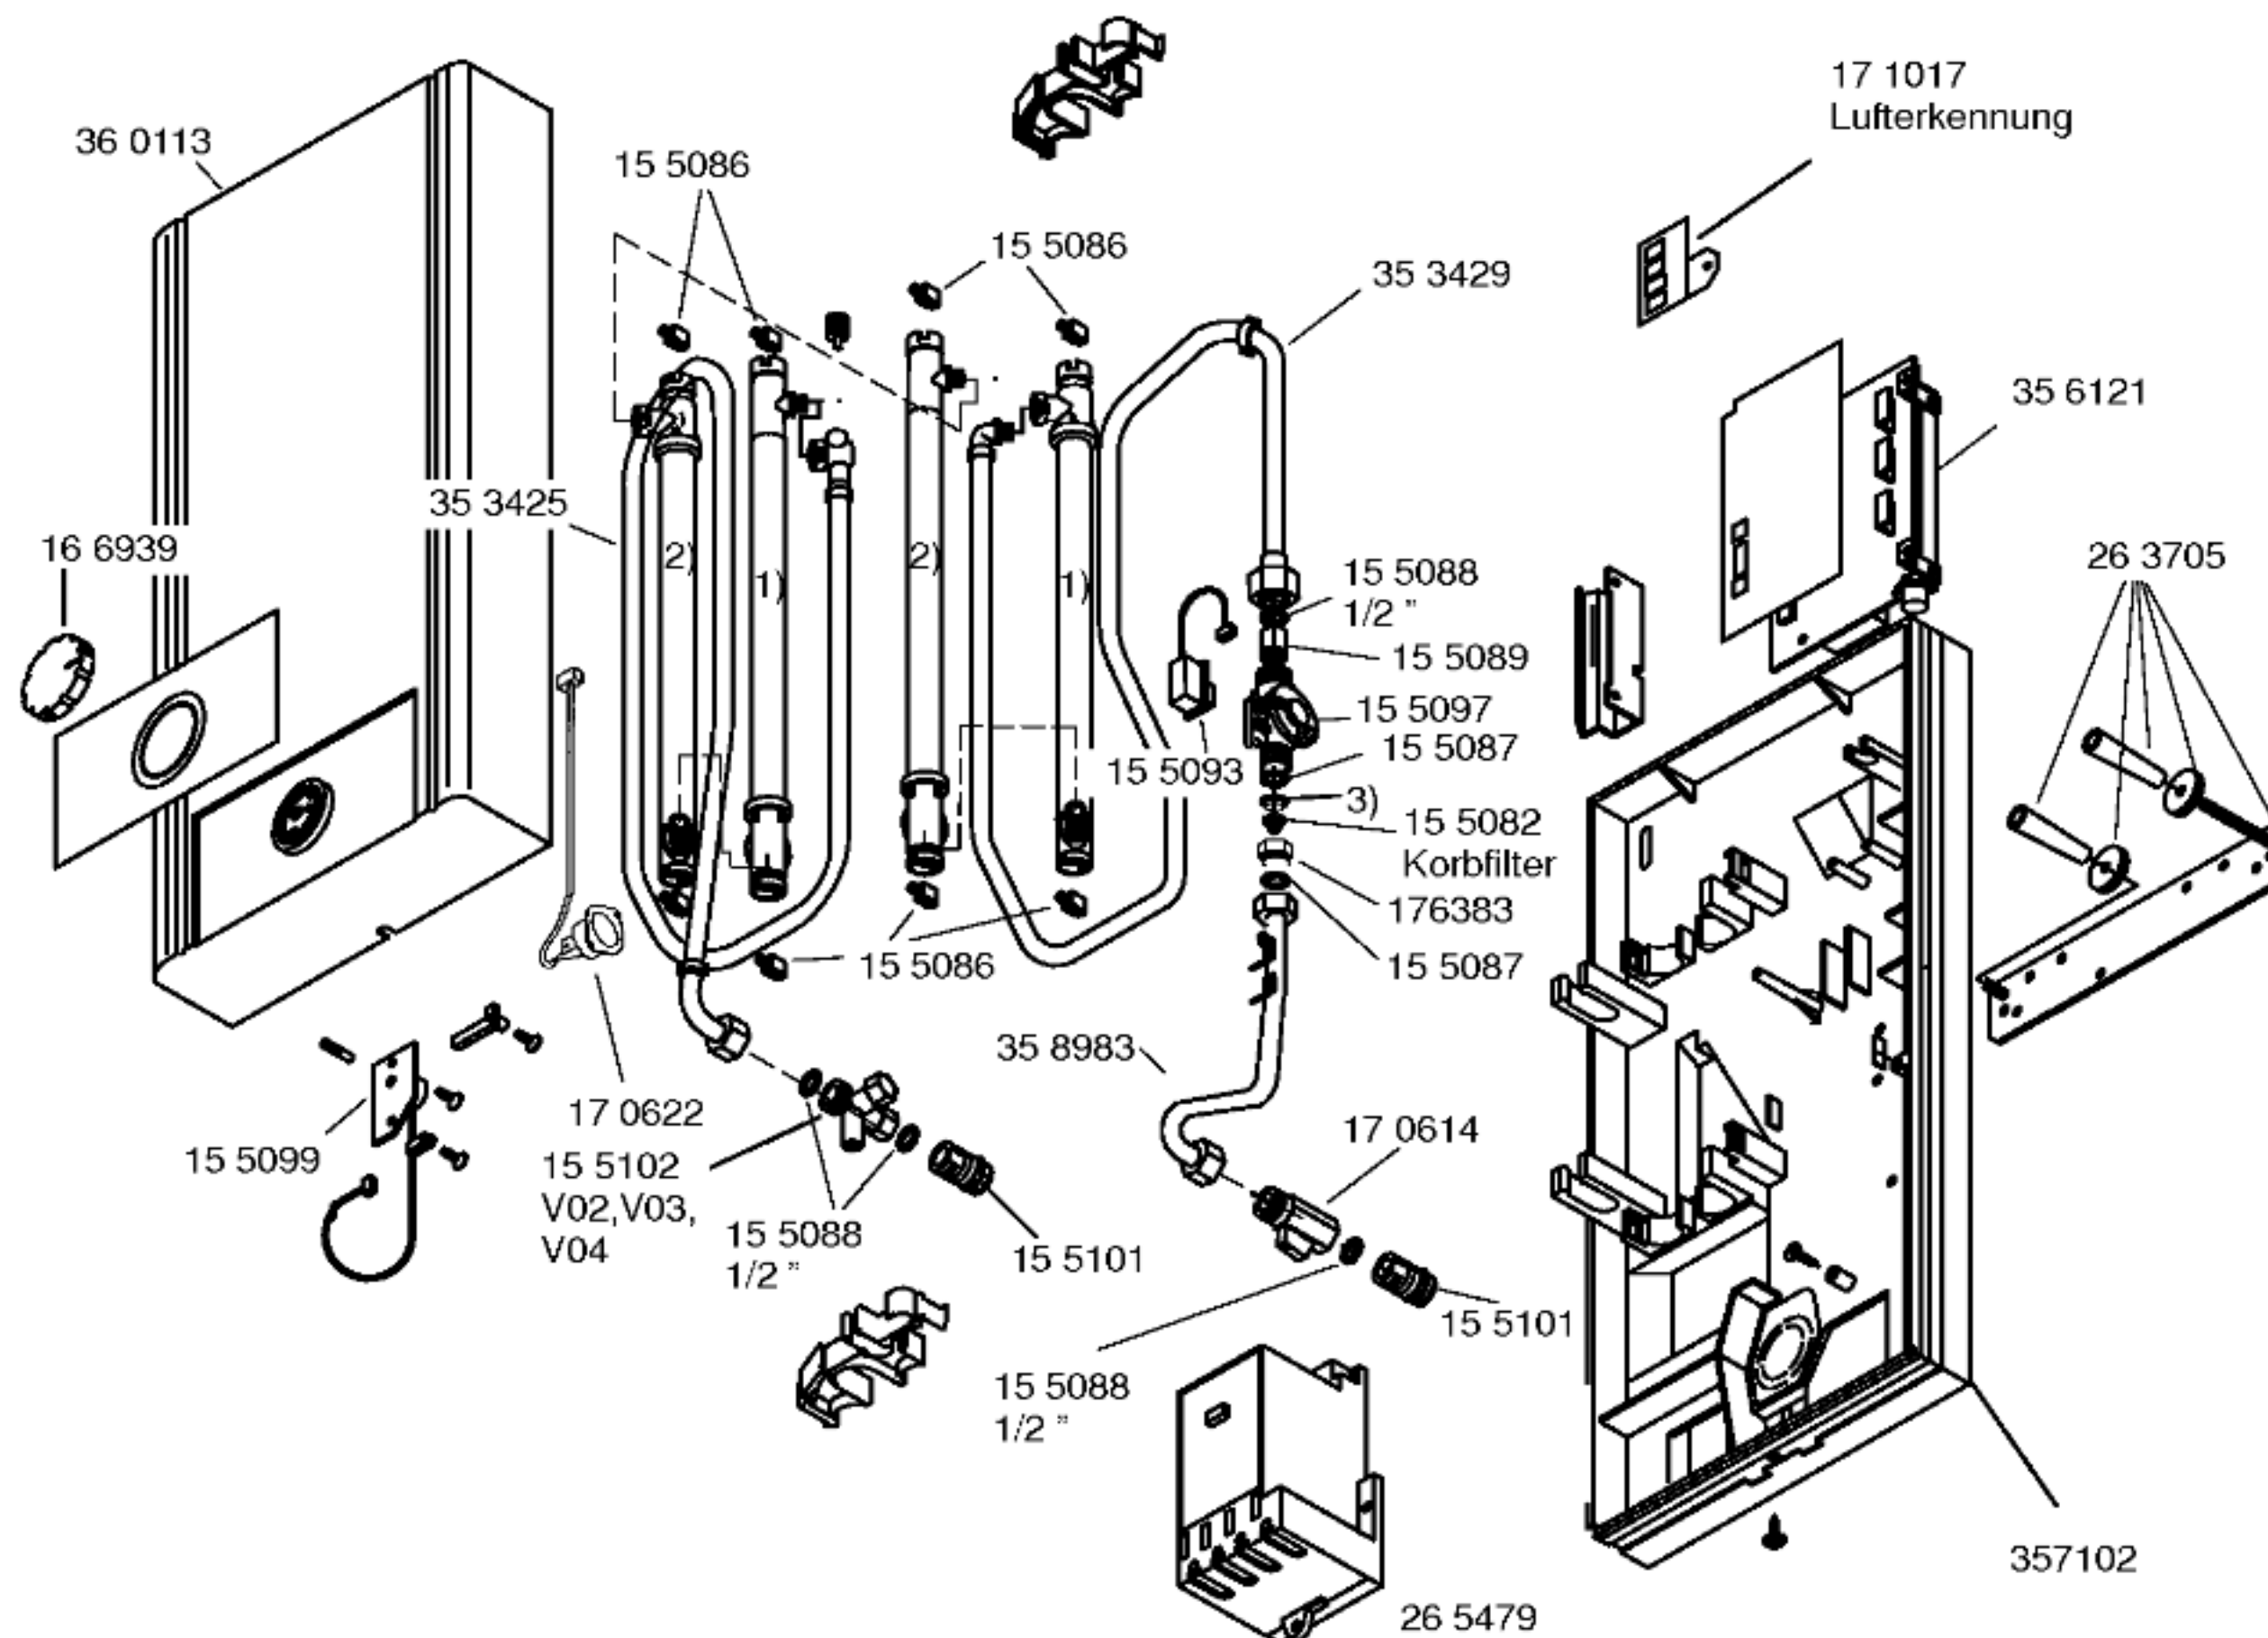

Gebrauchsanleitung
52 0499
(D)

- 1) 29 0337
3KW, V01
29 0338
3,5KW, V02
29 0339
4KW, V03
29 0340
4,5KW, V04
- 2) 29 0341
6KW, V01
29 0342
7KW, V02
29 0343
8KW, V03
29 0344
9KW, V04
- 3) 15 5084
7l/min, V01
16 5874
8l/min, V02
15 5085
9l/min, V03, V04