



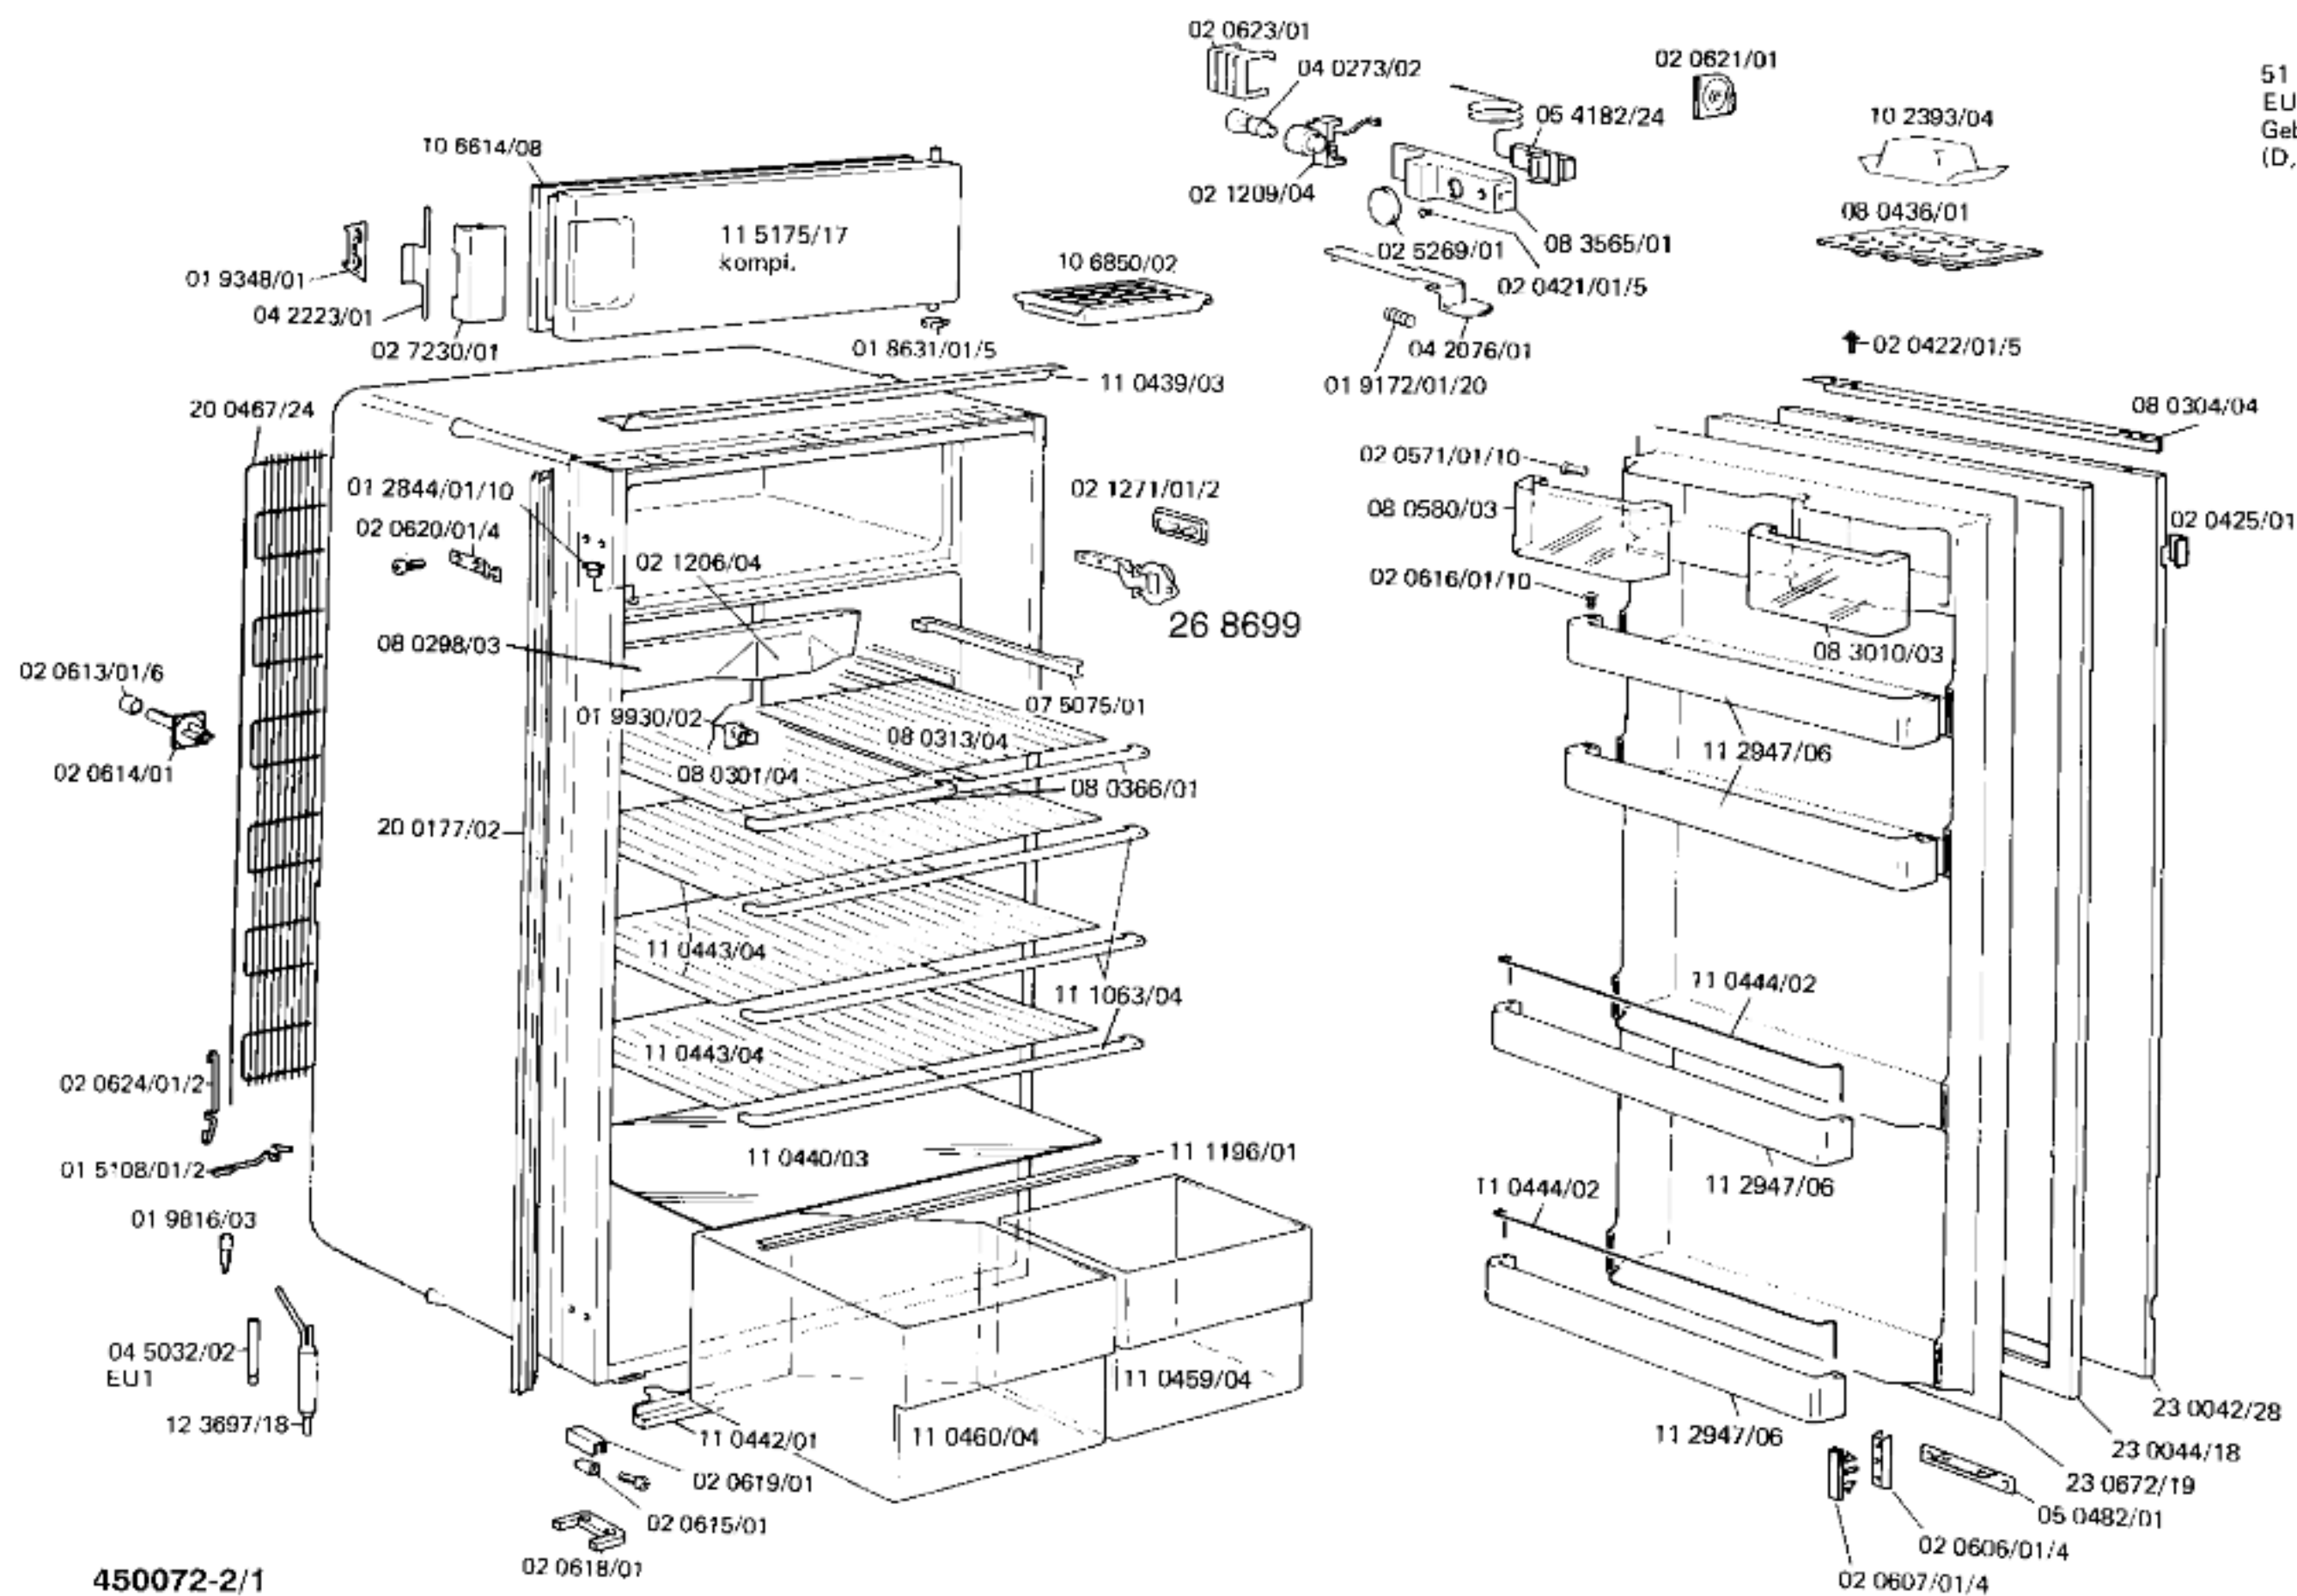

51 1424/00
 EU1, F1
 Gebrauchsanweisung
 (D, GB, F, I, NL, E)

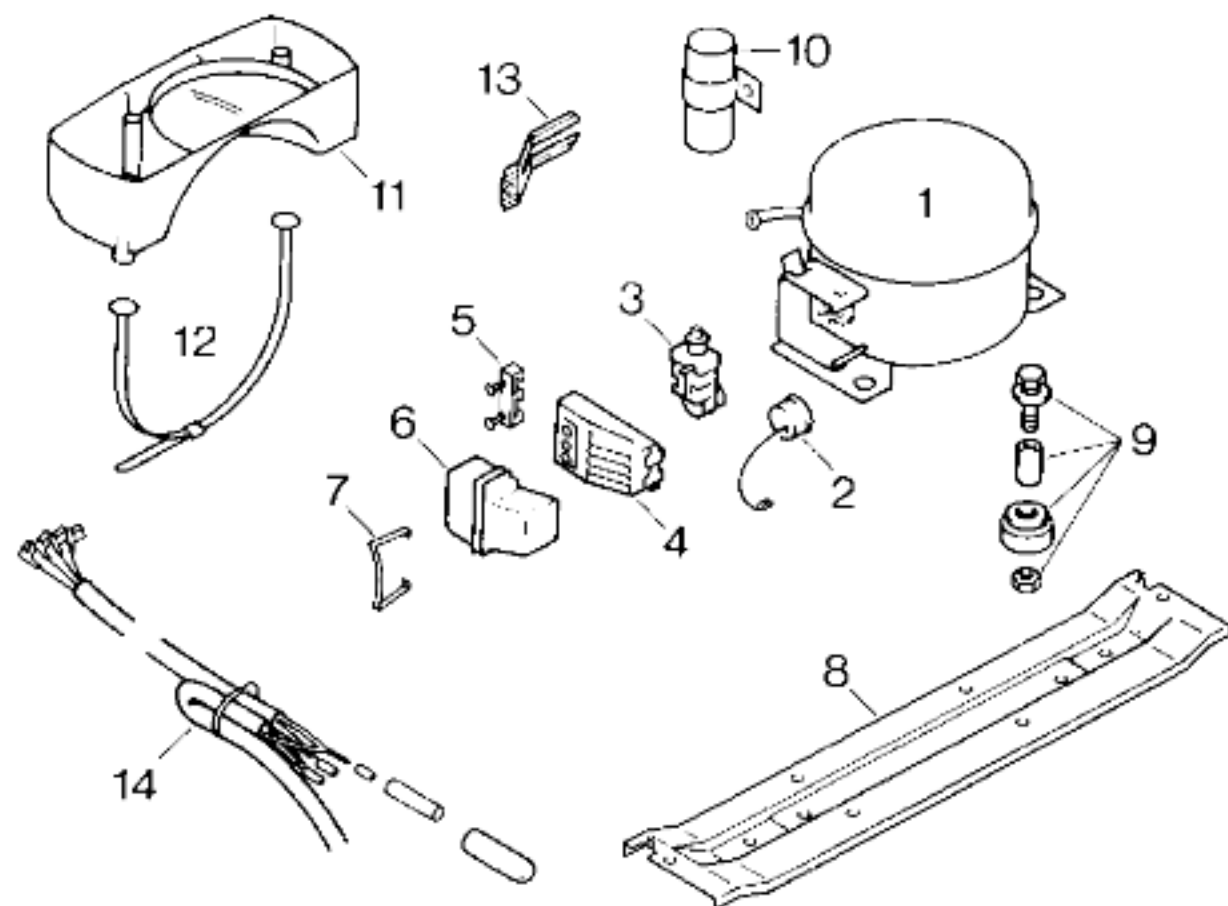

Pos.	EU1,F1,EU2,F2		
1	Danfoss		
2	14 0065/45		
3	02 0108/26		
4			
5	02 1361/04		
6	05 1413/06		
7			
8	11 0437/04		
9	05 0166/05		
10			
11	11 1243/01		
12			
13			
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5 A		
Förderleistung/Delivery/Débit	l/h	920		
Anlaufstrom/Starting current/Cour. de démarrage	A	9		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	15,7	
	Hi/aux	Ω	18,8	
Temp.-Regler/Thermostat		M + J		
Typ/Type		TF 5/		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	+ 4	+ 4	
Valeurs de commutation	„aus“	- 30	- 15	
	(„abtauen“ od.)	„alarm“		
Füllmenge/Fill quantity/Charge	R12	g	140	
Anschlußwert/Conn. load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		