 


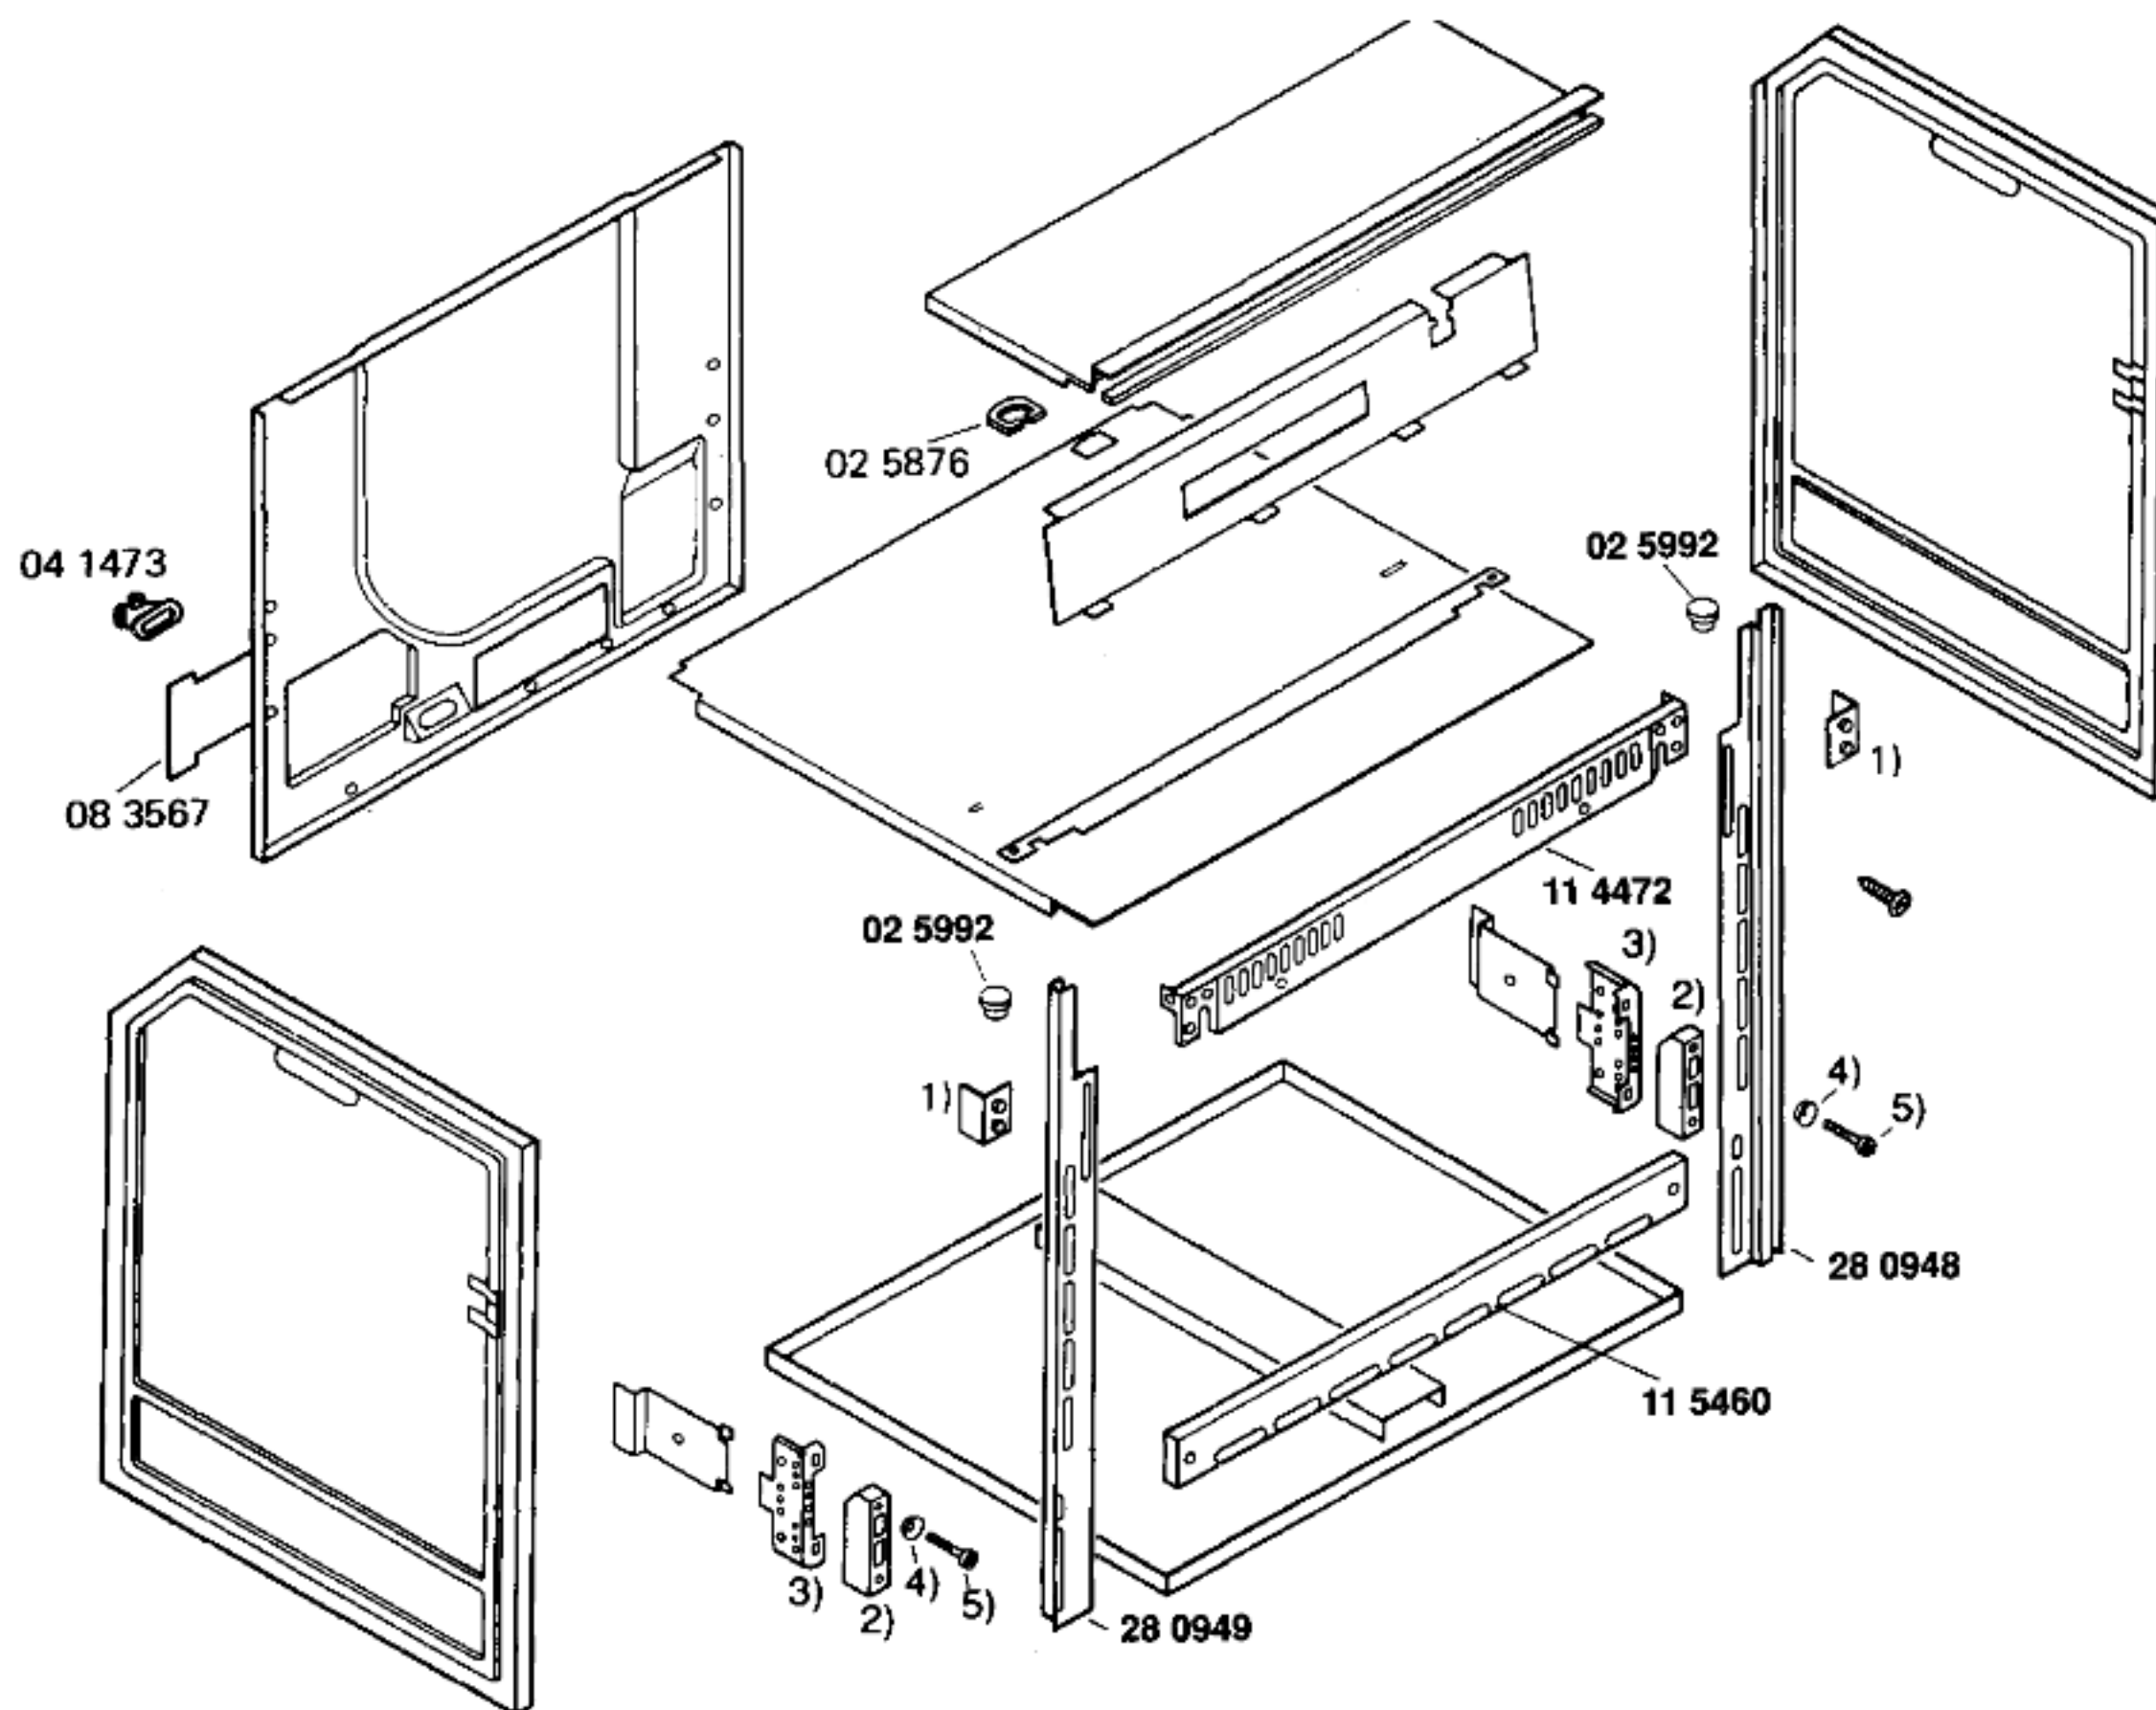

51 5610
Gebrauchsanweisung
(D,F)

- 1) 02 4343
- 2) 05 1477
- 3) 08 3566
- 4) 05 3176
- 5) 02 4002

Zubehör

Back- und
Bratrost normal
Z1400X1

Back- und
Bratrost eng
Z1410X1

Grillpfanne
Z1200X1

 
Email-Backblech
Z1310X1

 
Alu-Backblech
Z1300X1

 
Bratenblech
Z1510X0

Drehspiess-Set
Z1162X0

Brötbackstein
Z1910X0

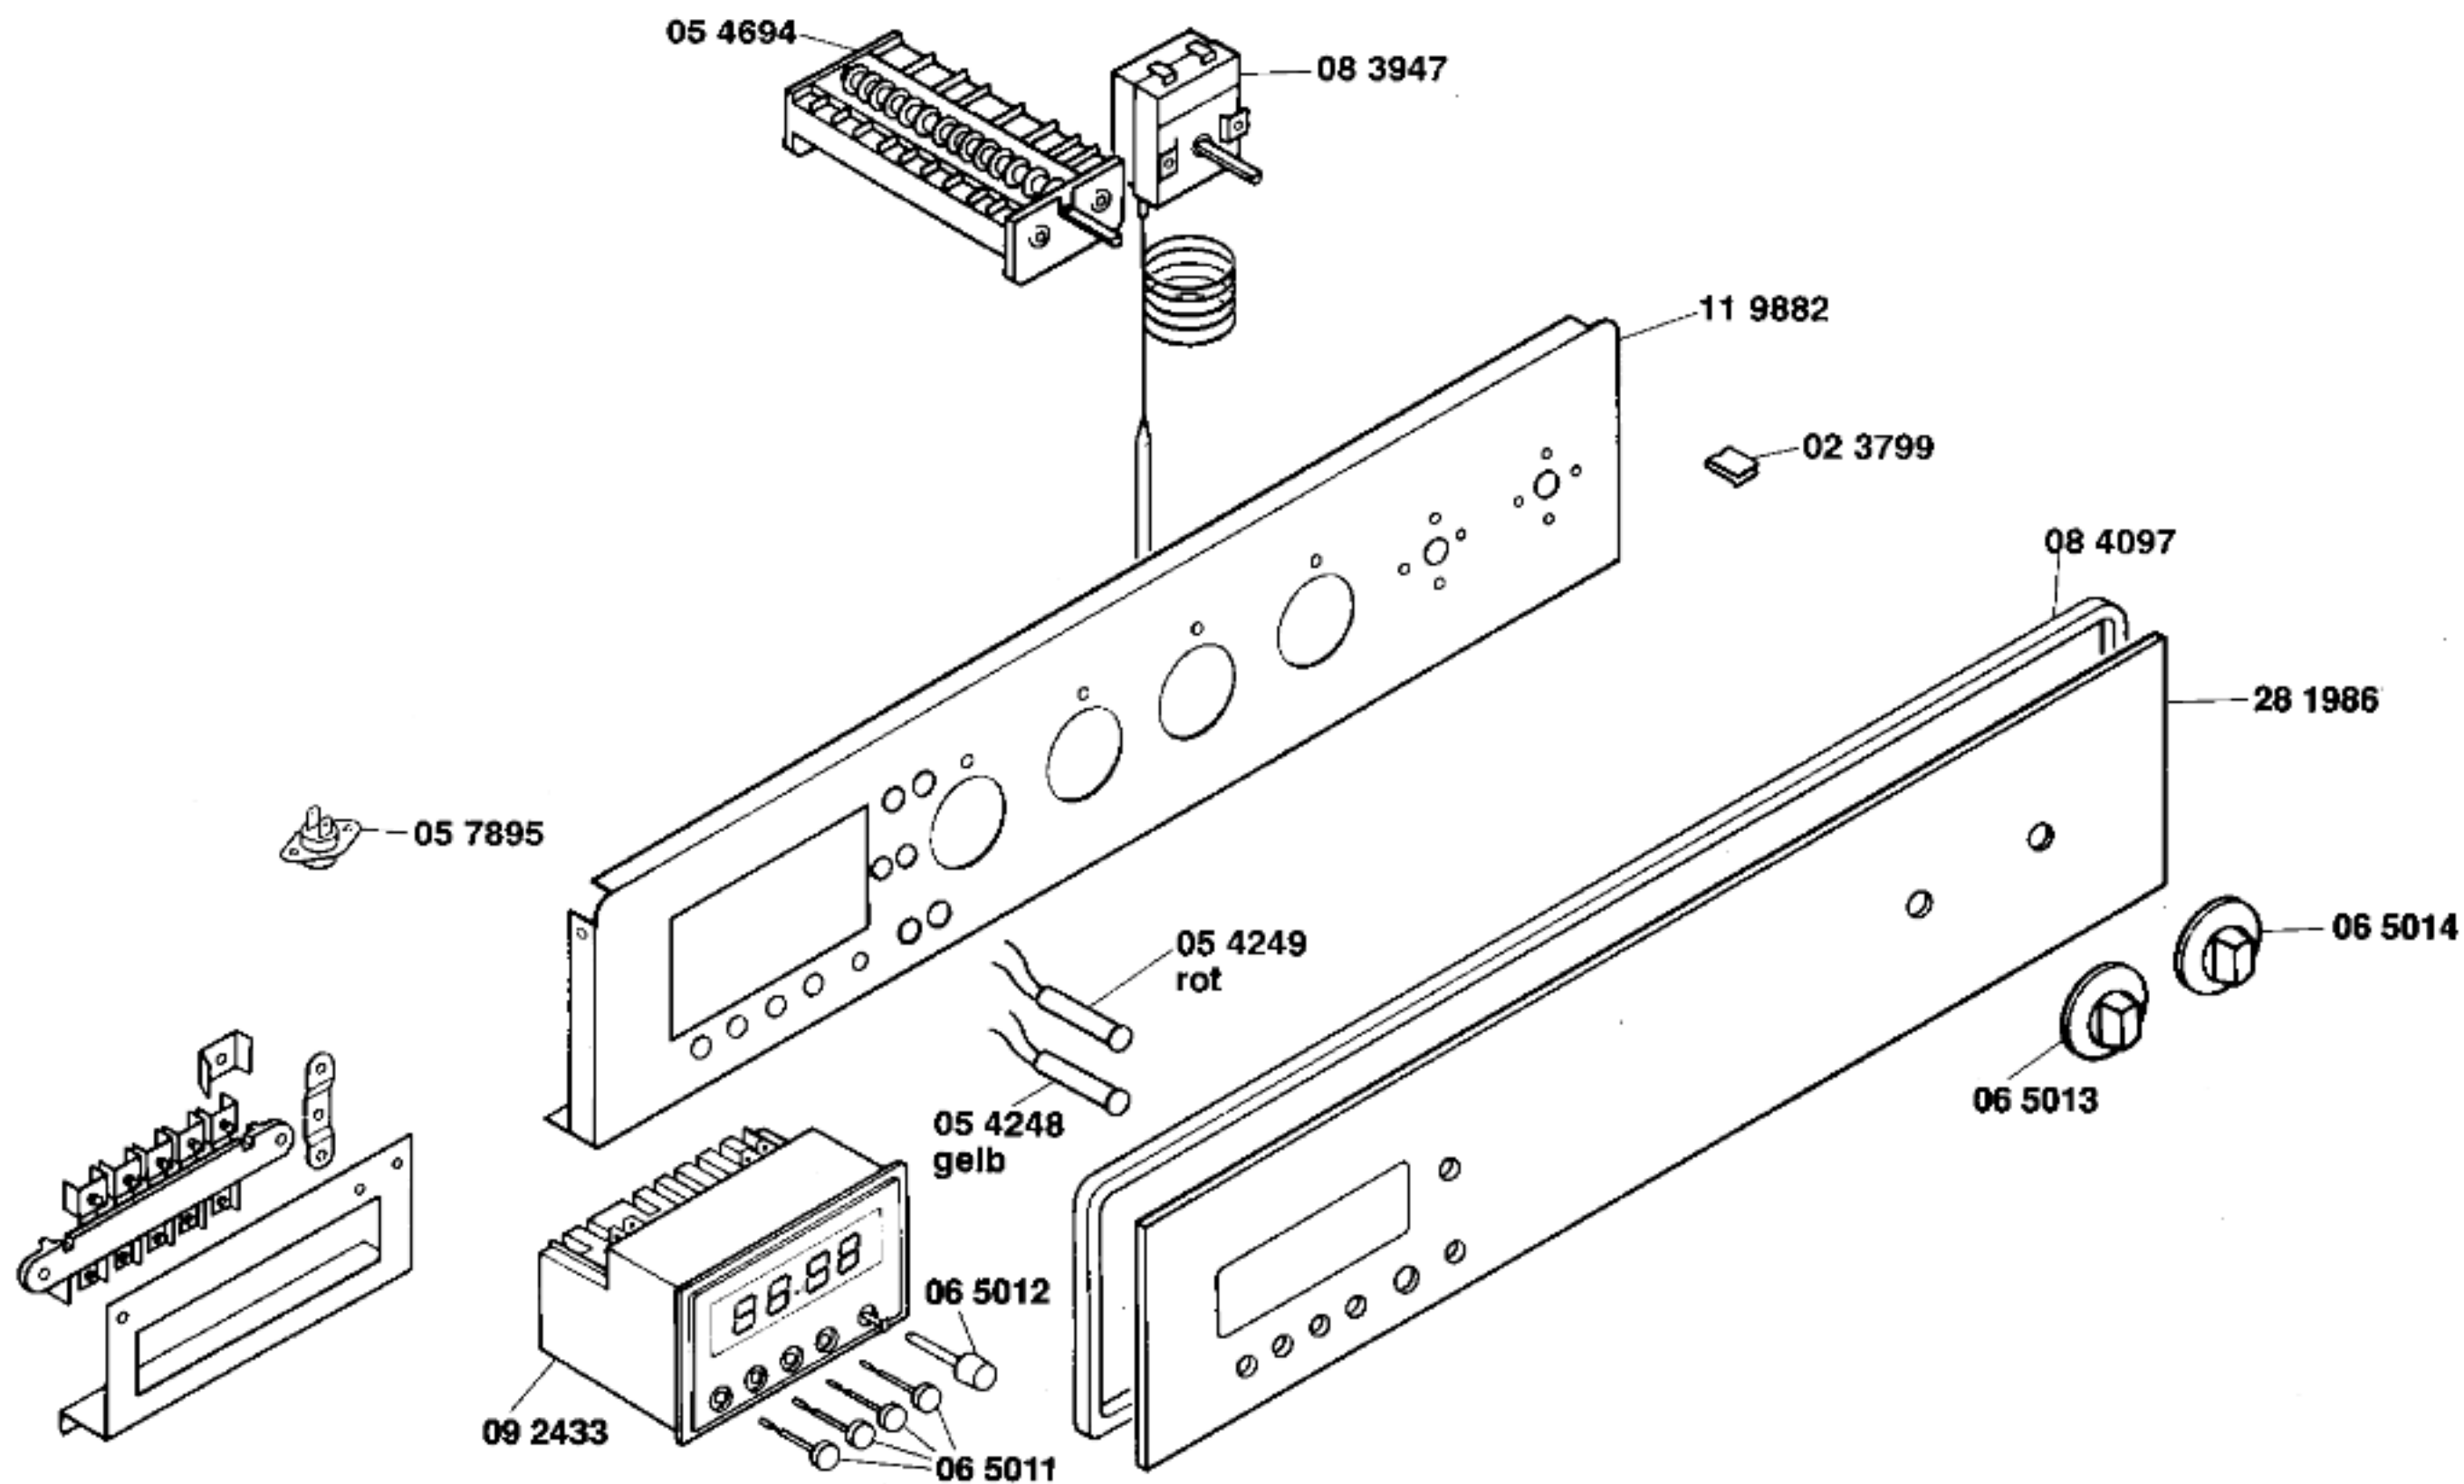

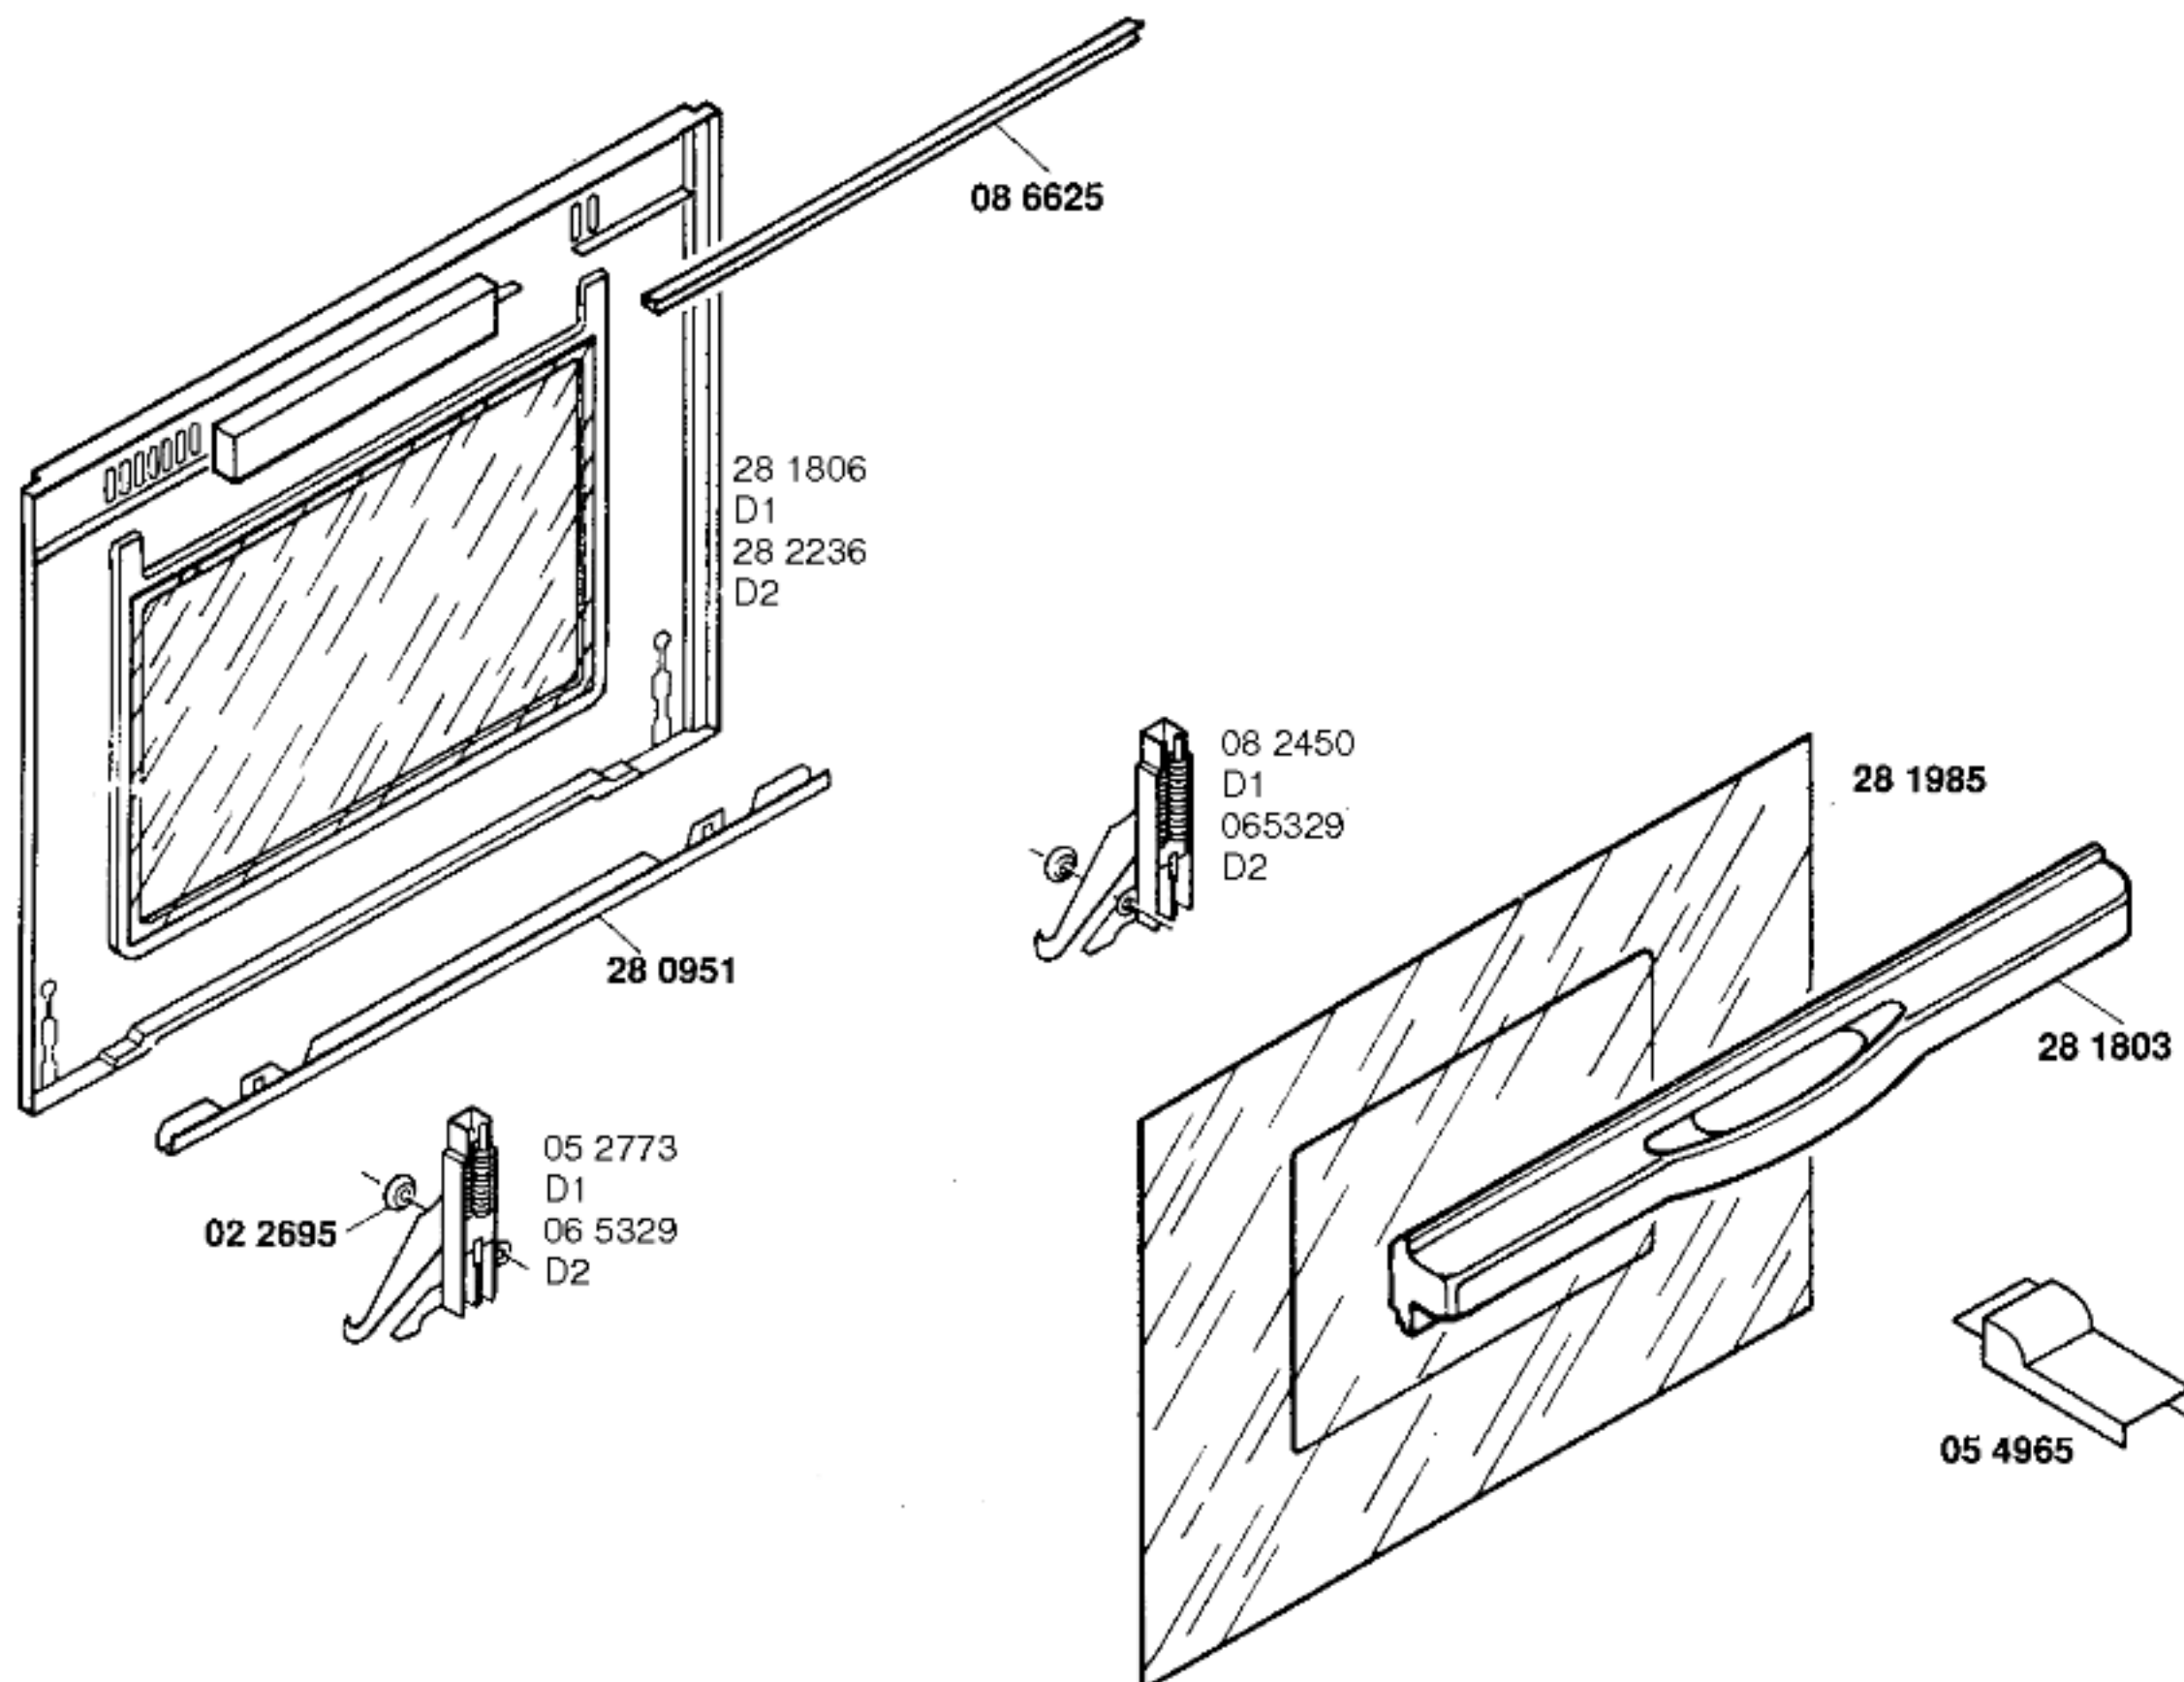

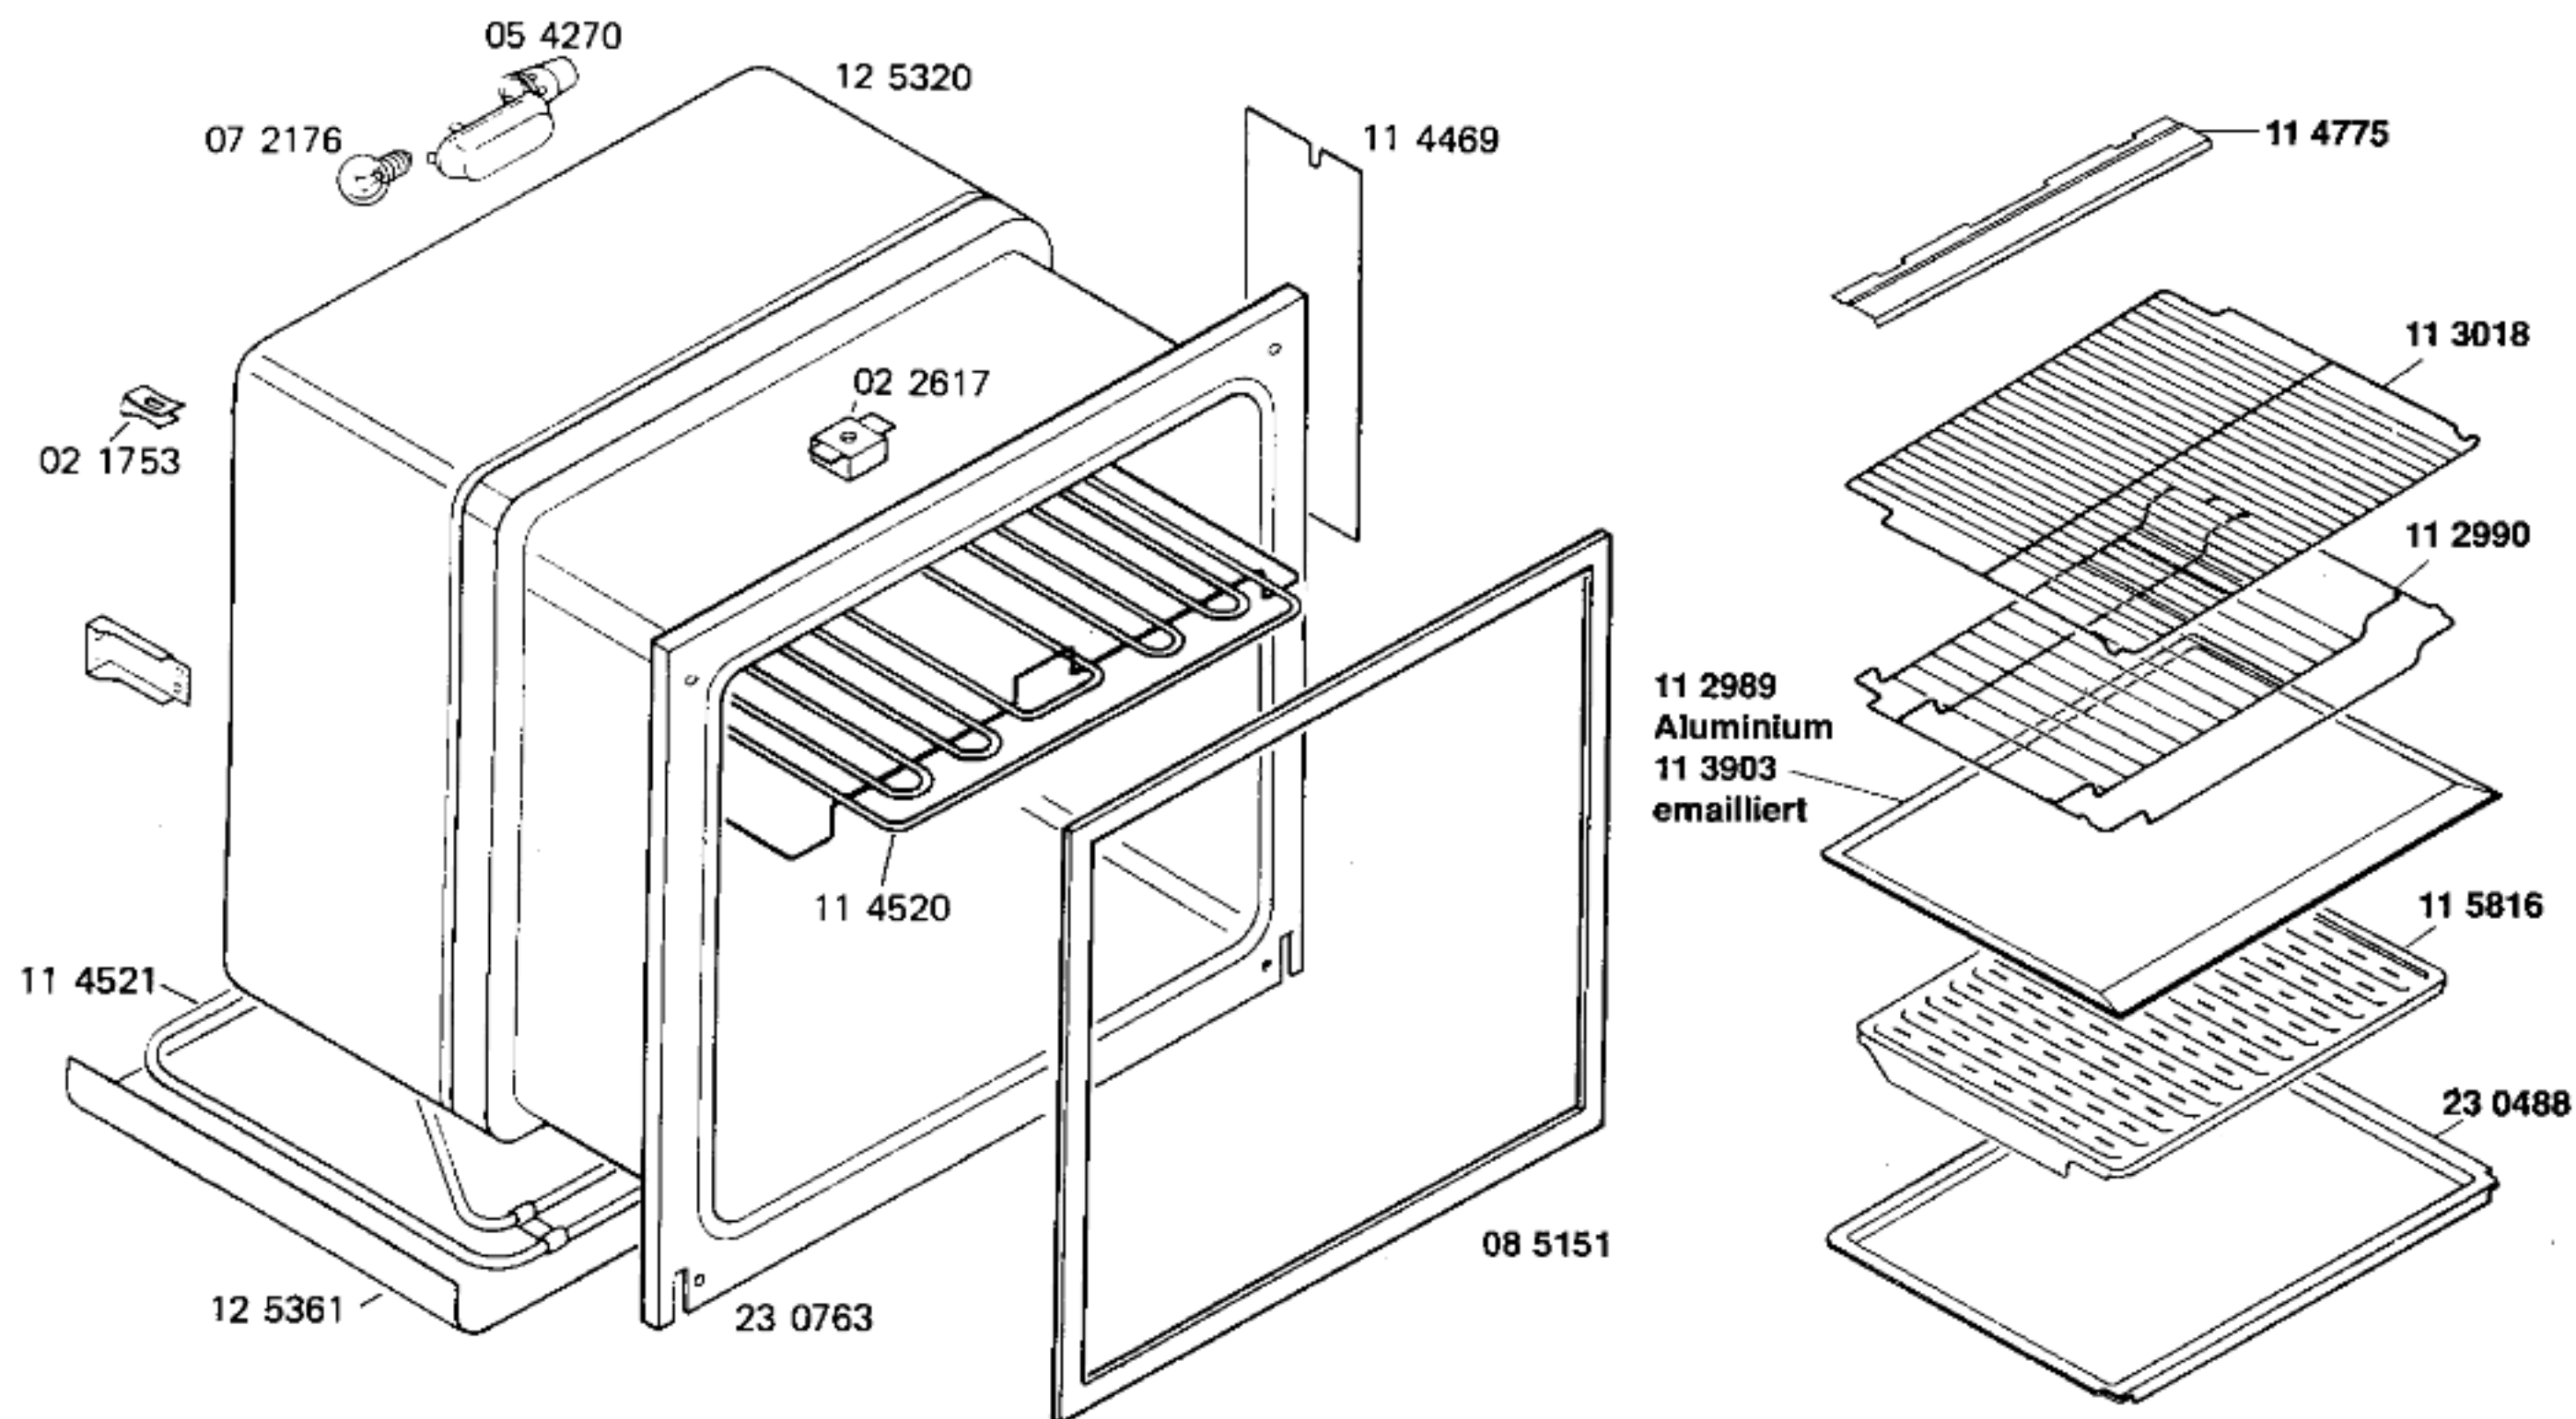

1) 09 5120
Set

