



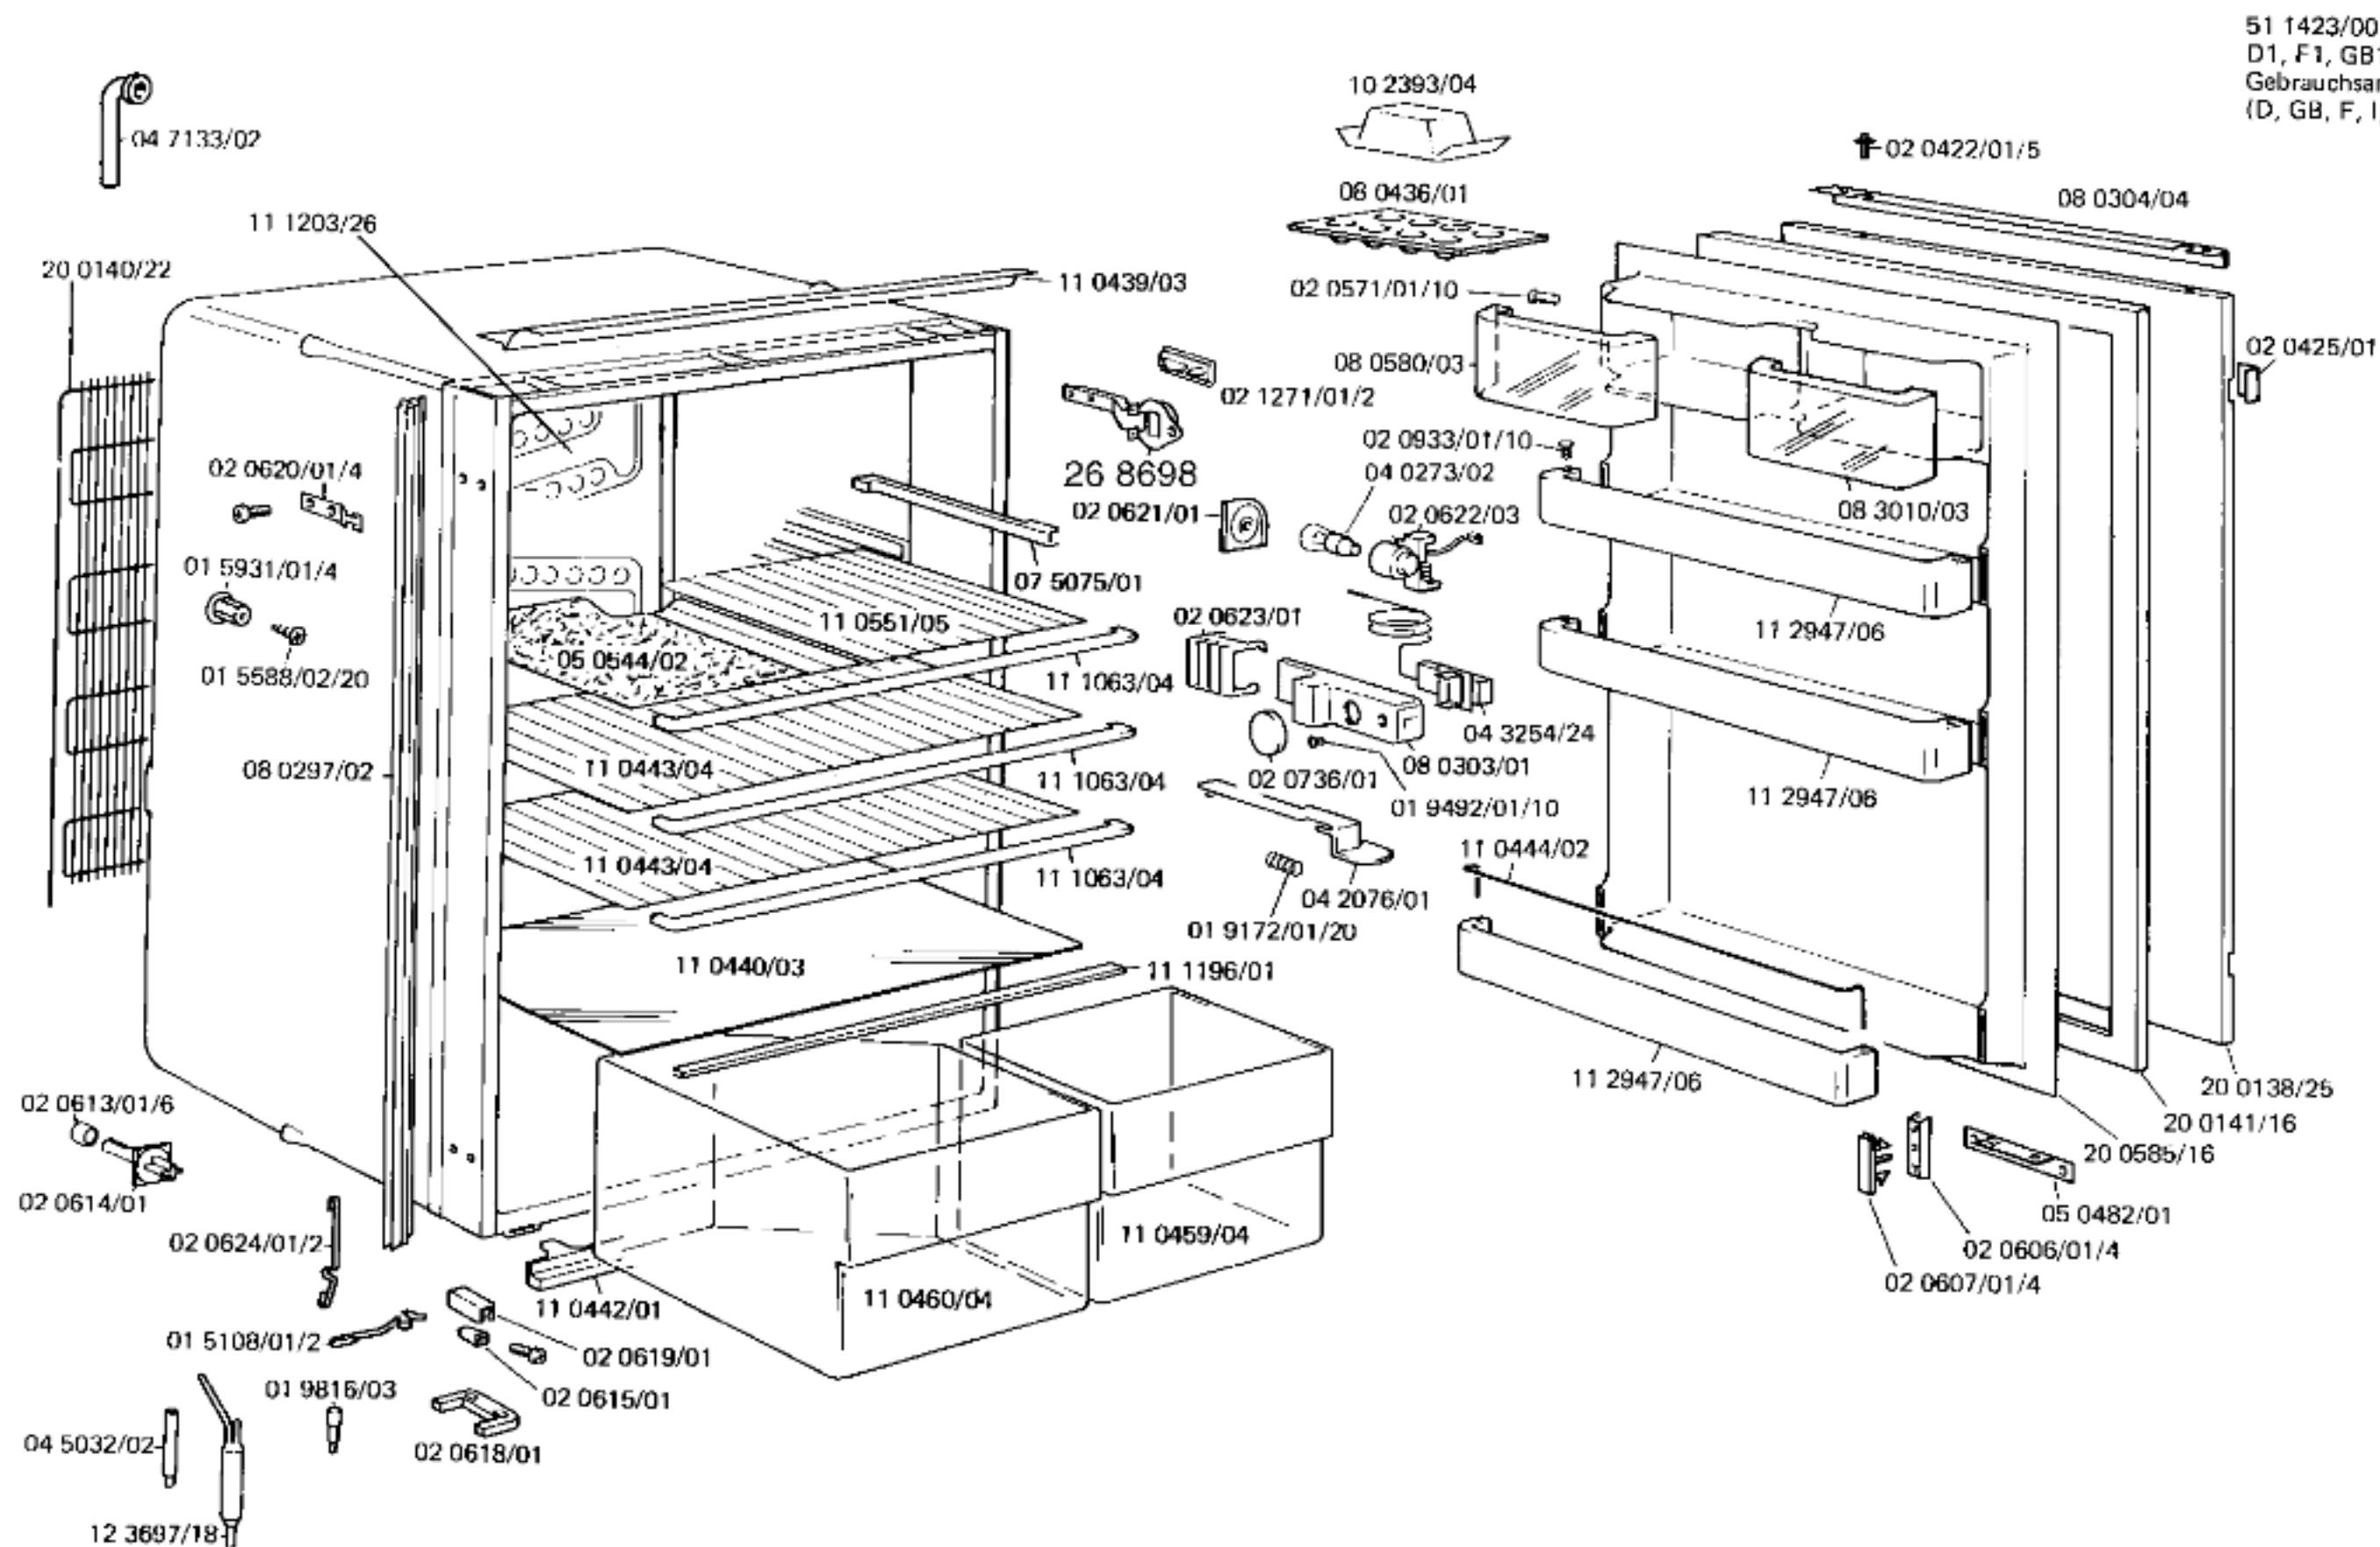

51 1423/00  
D1, F1, GB1  
Gebrauchsanweisung  
(D, GB, F, I, NL, E)

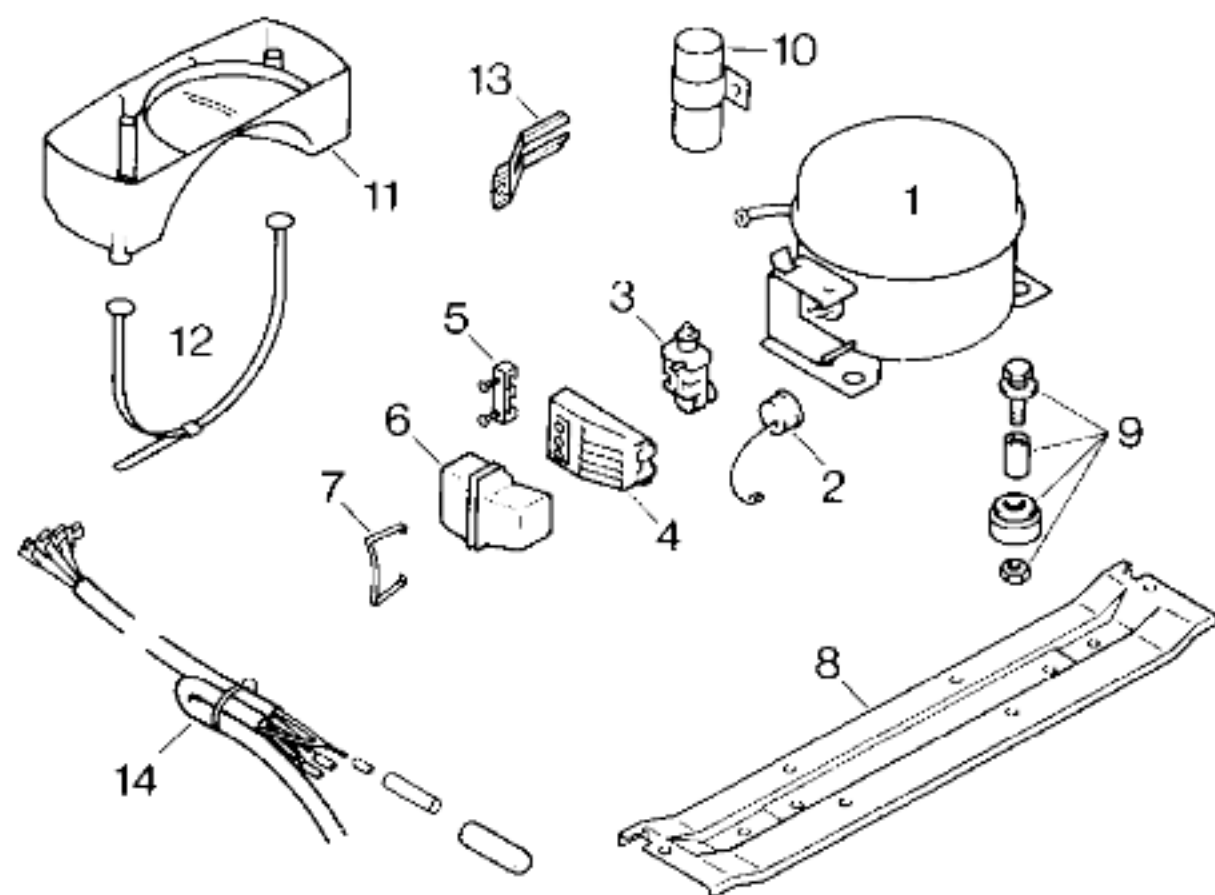

# TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                         |  |                 |      |    |  |  |
|---------------------------------------------------------|--|-----------------|------|----|--|--|
| Verdichter/Compressor/Compresseur                       |  | Danfoss         |      |    |  |  |
| Typ/Type                                                |  | TL 3 A          |      |    |  |  |
| Förderleistung/Delivery/Débit                           |  | l/h             | 576  |    |  |  |
| Anlaufstrom/Starting current/Cour. de démarrage         |  | A               | 7,2  |    |  |  |
| Widerstand/Resistance/Résistance                        |  | Hi/main/prin.   | 31,7 |    |  |  |
|                                                         |  | Hi/aux          | 17,0 |    |  |  |
| Temp.-Regler/Thermostat                                 |  | M + J           |      |    |  |  |
| Typ/Type                                                |  | TF 57           |      |    |  |  |
| Reglerstellung/Position                                 |  | kalt            | warm |    |  |  |
| Schaltwerte/Switching values/<br>Valeurs de commutation |  | „ein“           | + 4  |    |  |  |
|                                                         |  | „aus“           | - 25 |    |  |  |
|                                                         |  | („abtauen“ od.) | - 11 |    |  |  |
| Füllmenge/Fill.quantity/Charge                          |  | R12             | g    | 95 |  |  |
| Anschlußwert/Conn.load/Puiss. connectée                 |  | W               | 90   |    |  |  |
| Heizung/Heater/Chauffage                                |  |                 |      |    |  |  |
| Widerstand/Resistance/Résistance                        |  | Ω               |      |    |  |  |
| Leistung/Power/Puissance                                |  | W               |      |    |  |  |
| Ventilator/Blower/Ventilateur                           |  |                 |      |    |  |  |
| Widerstand/Resistance/Résistance                        |  | Ω               |      |    |  |  |
| Magnetventil/Magnetic valve/Electrovanne                |  |                 |      |    |  |  |
| Widerstand/Resistance/Résistance                        |  | Ω               |      |    |  |  |
| Spannung/Voltage/Tension                                |  | V               |      |    |  |  |

| Pos. | D1, F1, GB1 |  |  |  |
|------|-------------|--|--|--|
|      | Danfoss     |  |  |  |
| 1    | 14 0080/44  |  |  |  |
| 2    |             |  |  |  |
| 3    | 02 0108/27  |  |  |  |
| 4    |             |  |  |  |
| 5    | 02 1361/04  |  |  |  |
| 6    | 05 1413/06  |  |  |  |
| 7    |             |  |  |  |
| 8    | 11 0437/04  |  |  |  |
| 9    | 05 0166/05  |  |  |  |
| 10   |             |  |  |  |
| 11   | 11 1243/01  |  |  |  |
| 12   |             |  |  |  |
| 13   |             |  |  |  |
| 14   |             |  |  |  |