




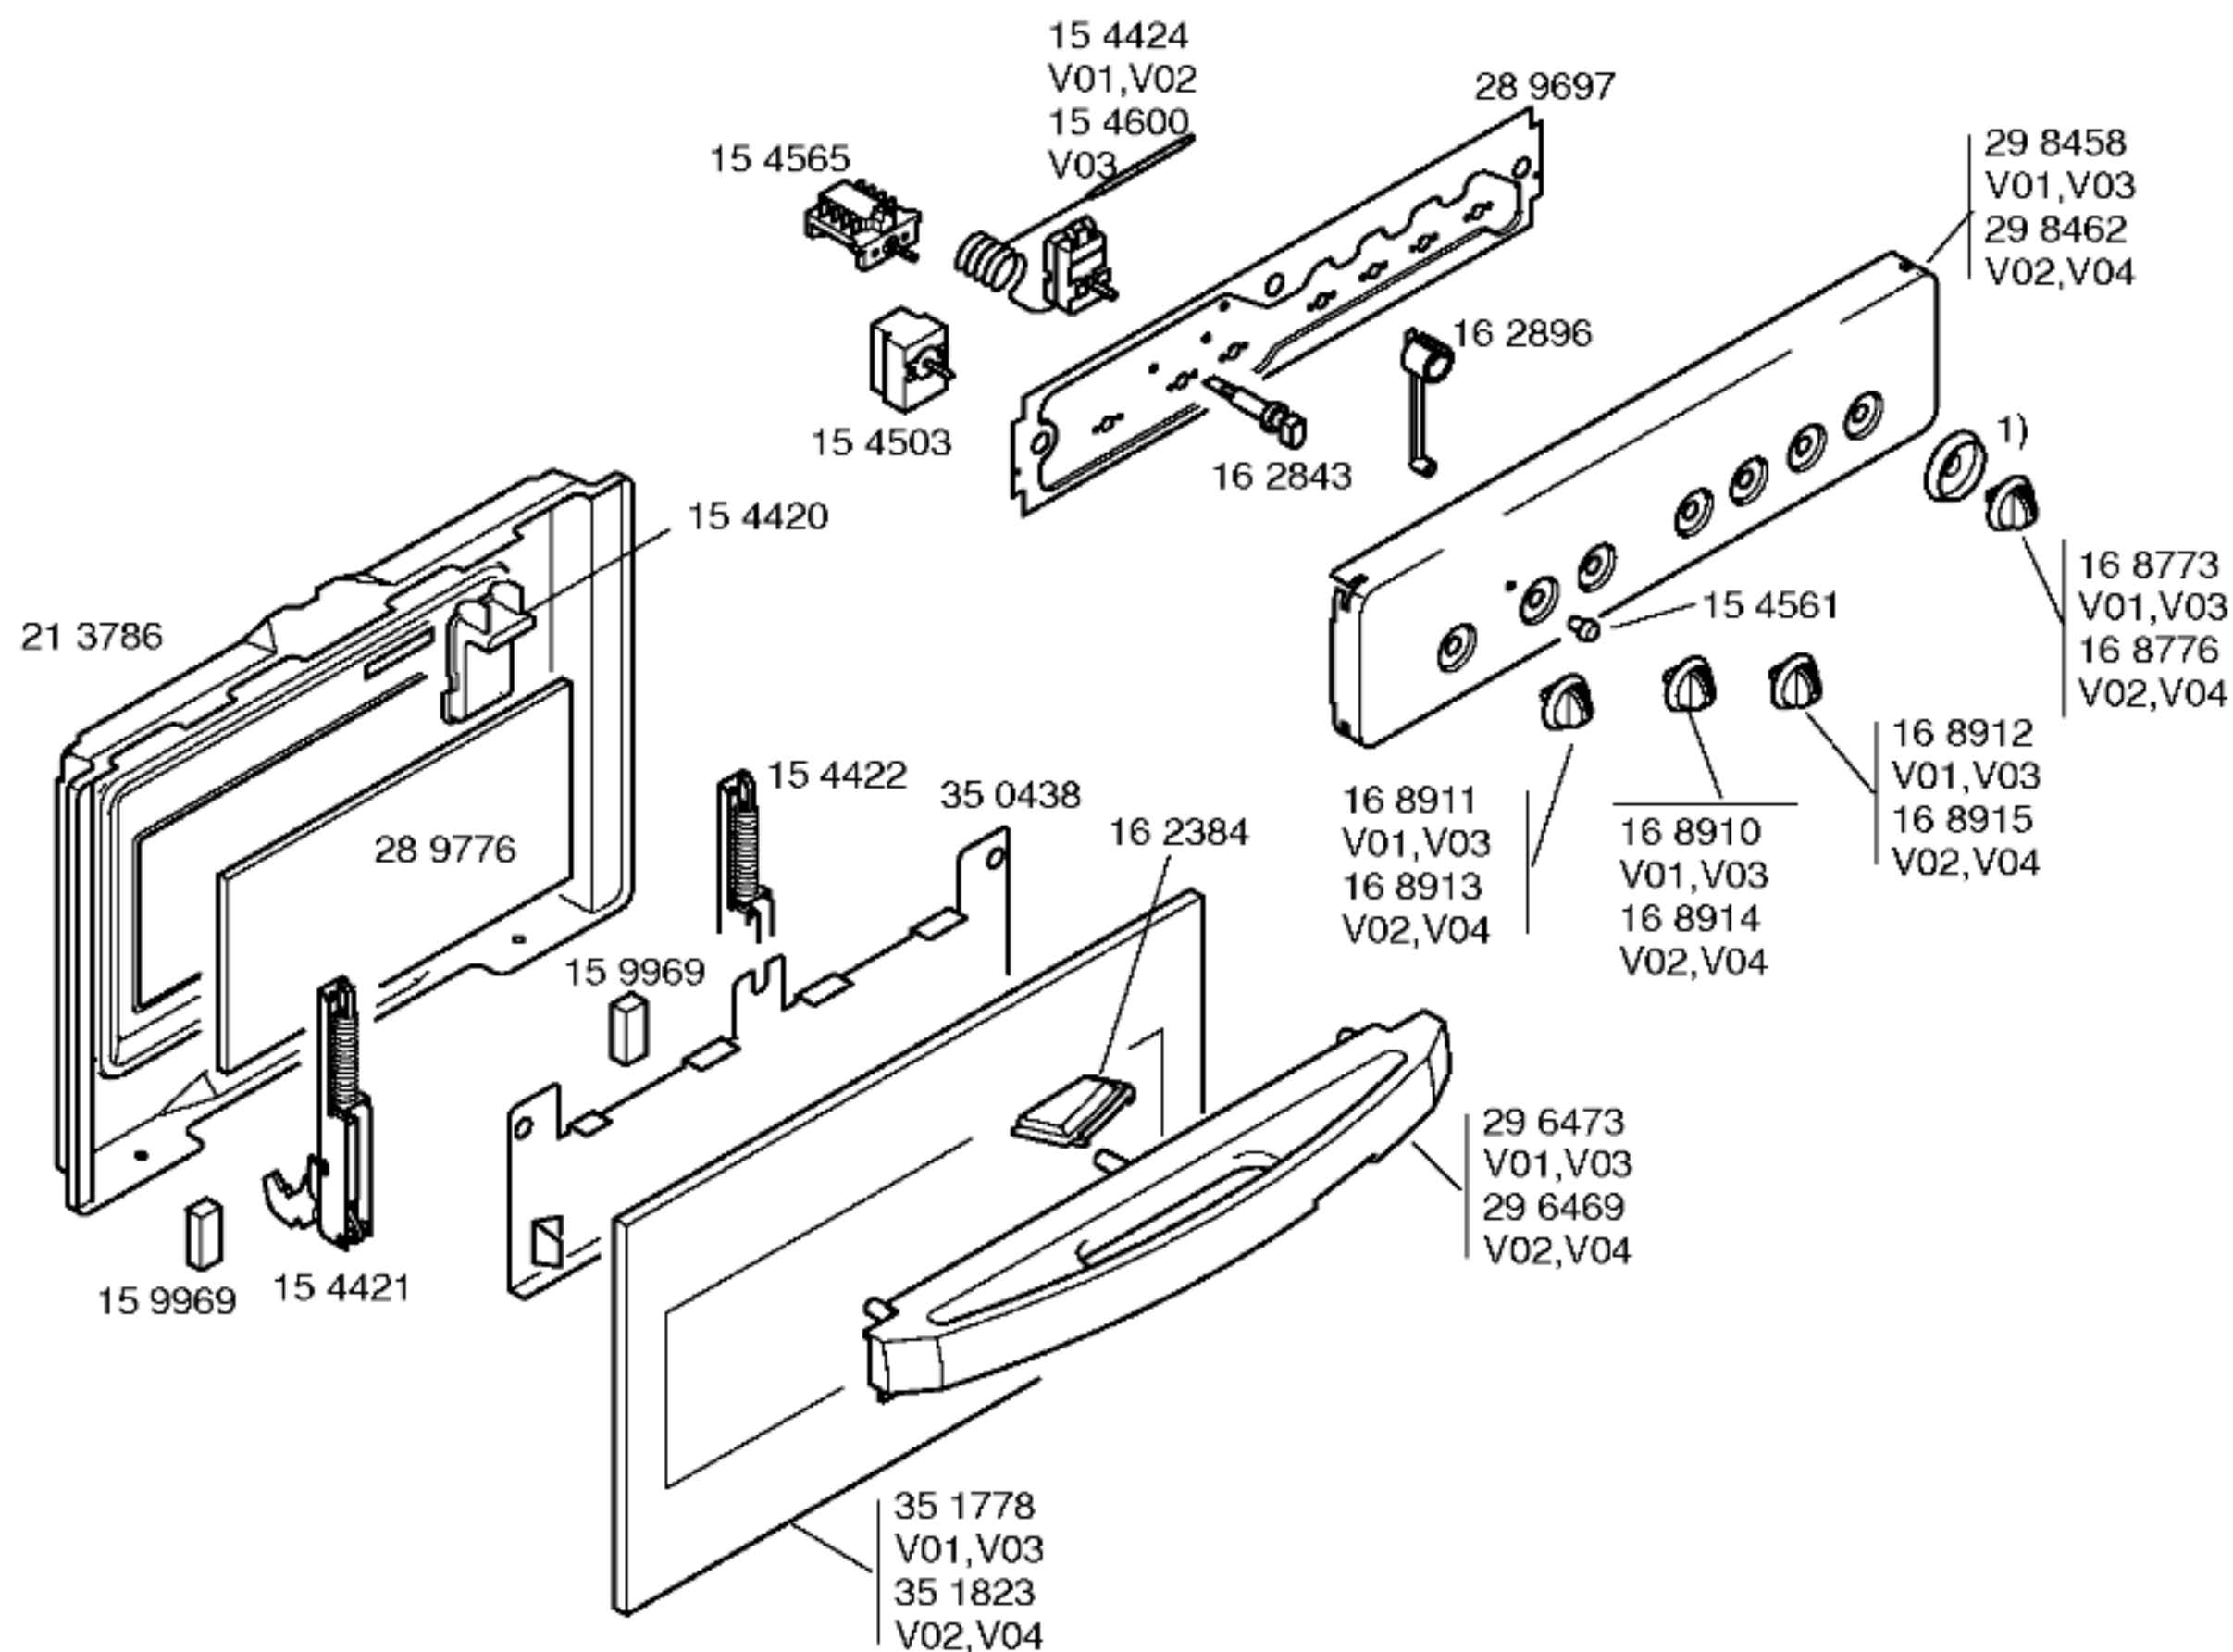

Libro de instrucciones
51 9919
(E,F,I,P,NL)
Instrucciones de montaje
51 9827
(E,F,GB,P,NL)
1) 16 3364
V01,Gas,V03
16 3365
V01,Electrico,V03
16 3371
V02,Gas,V04
16 3368
V02,Electrico,V04

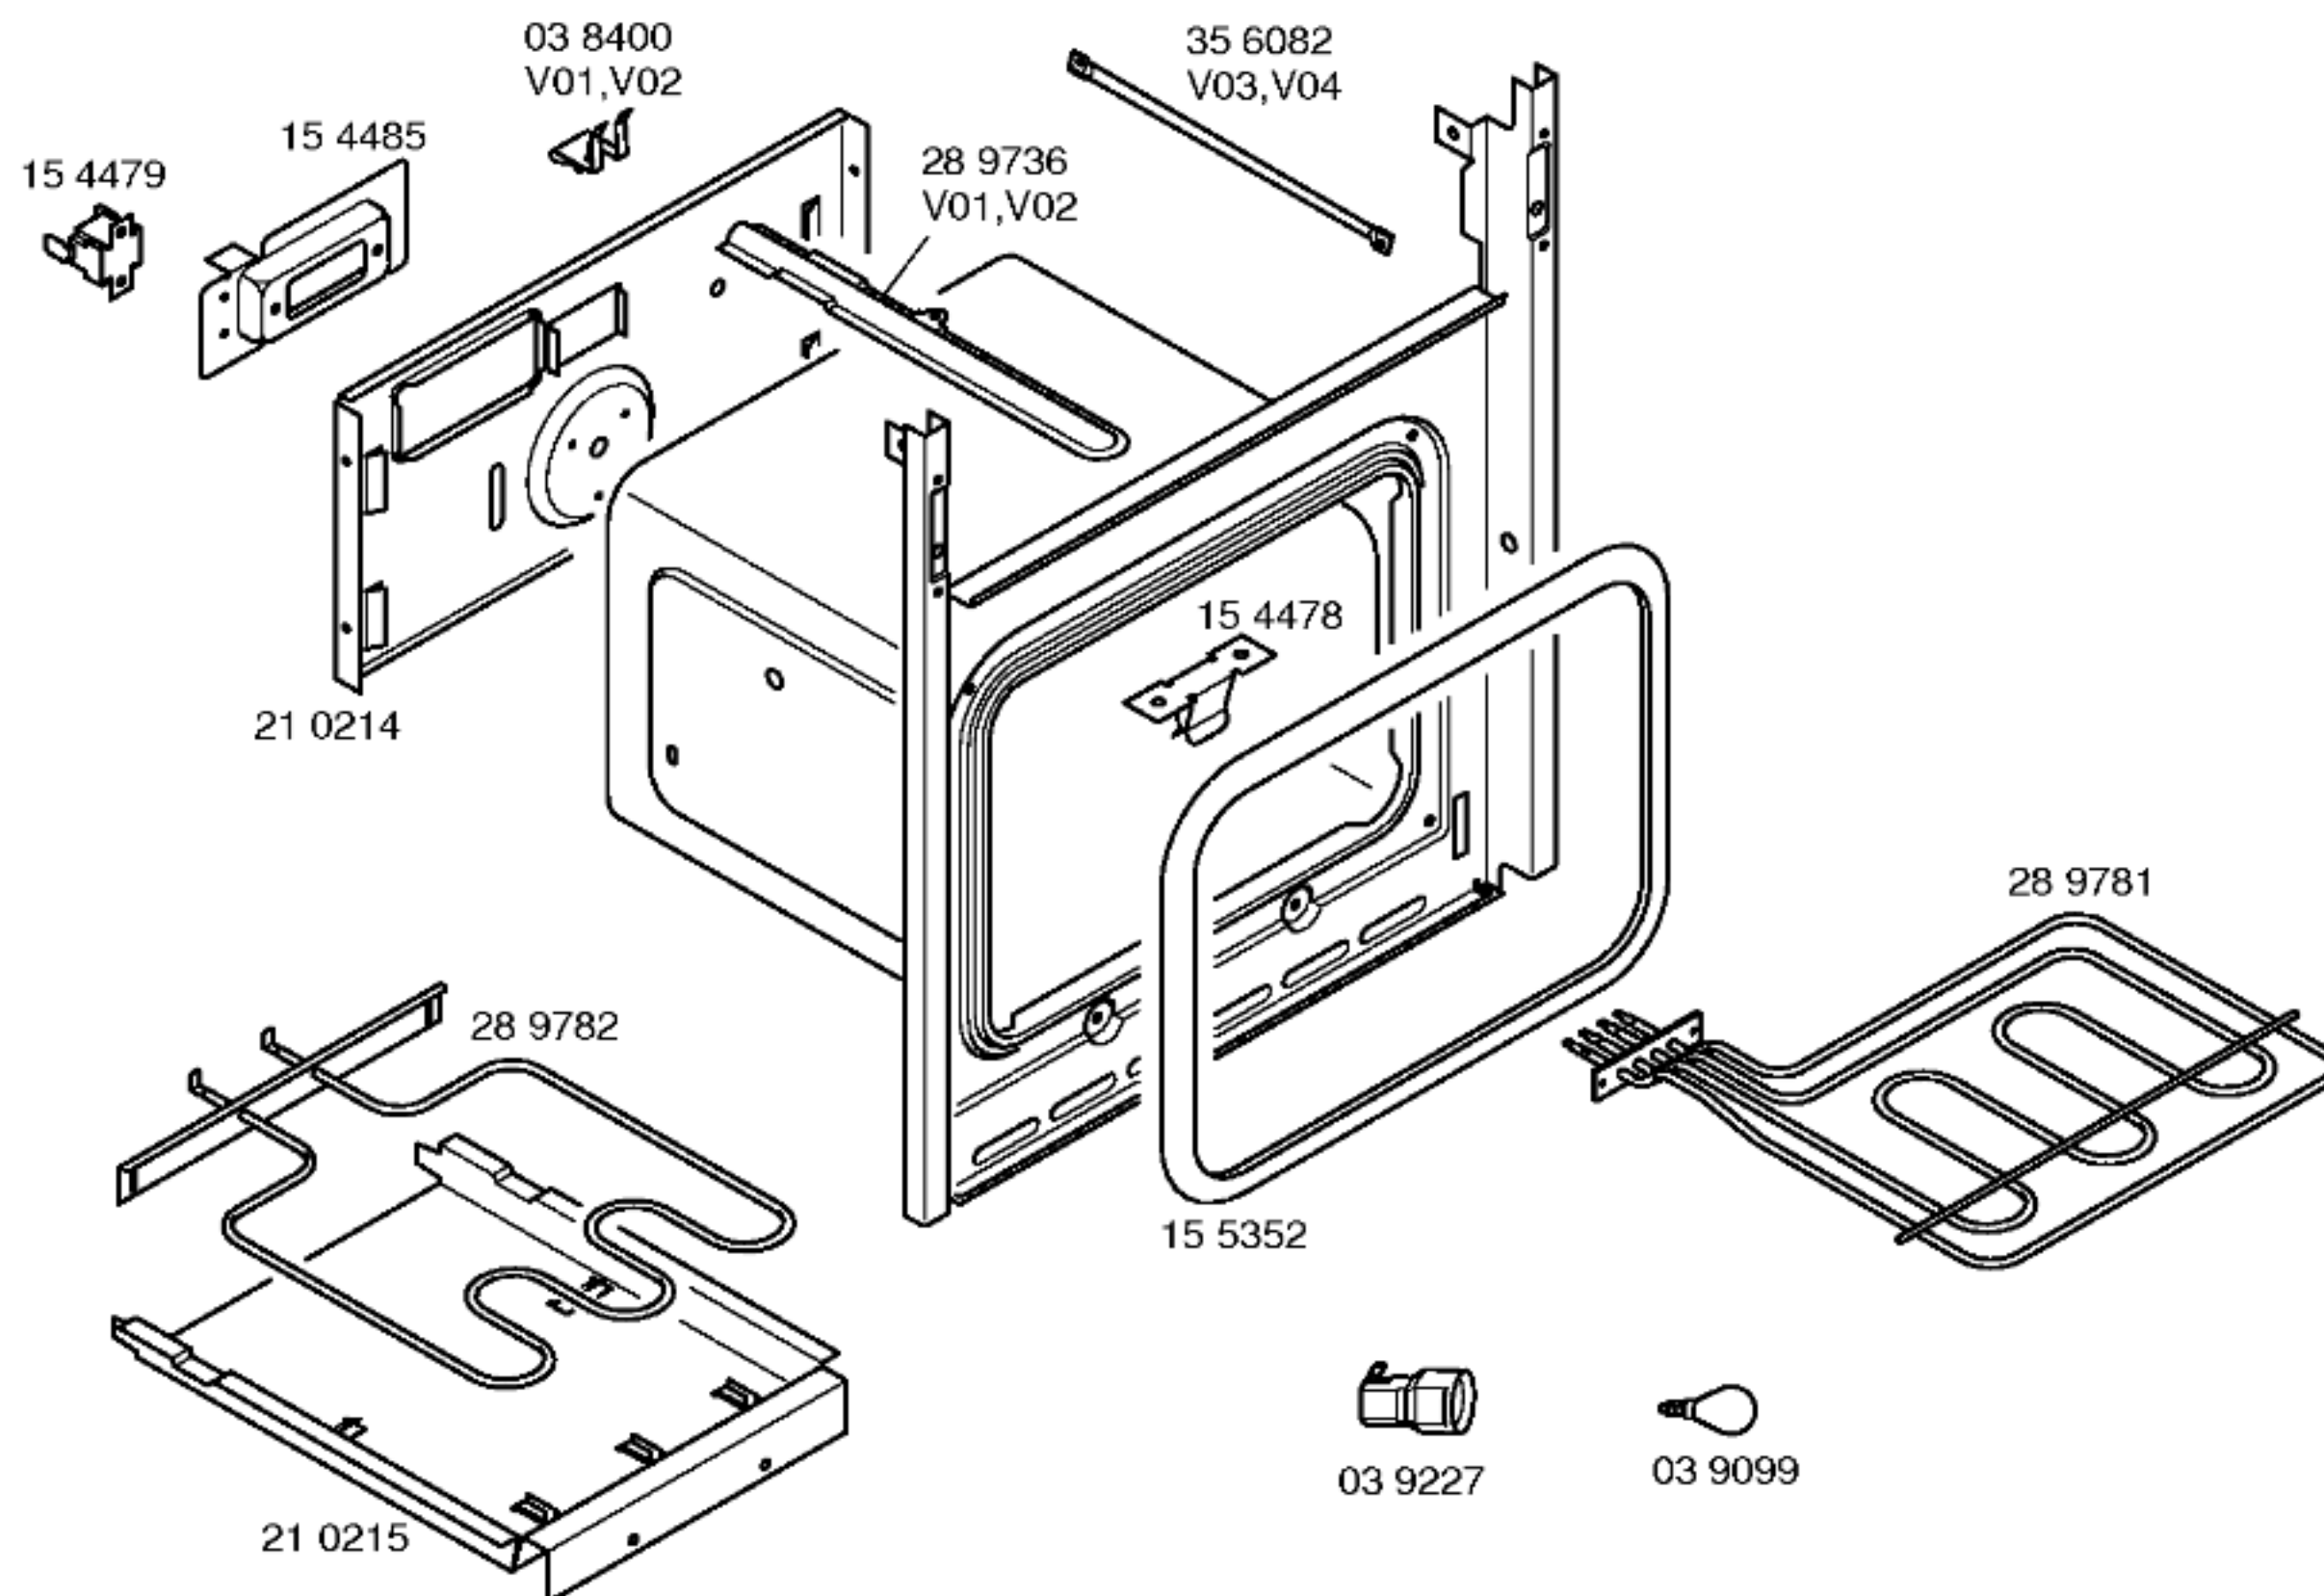


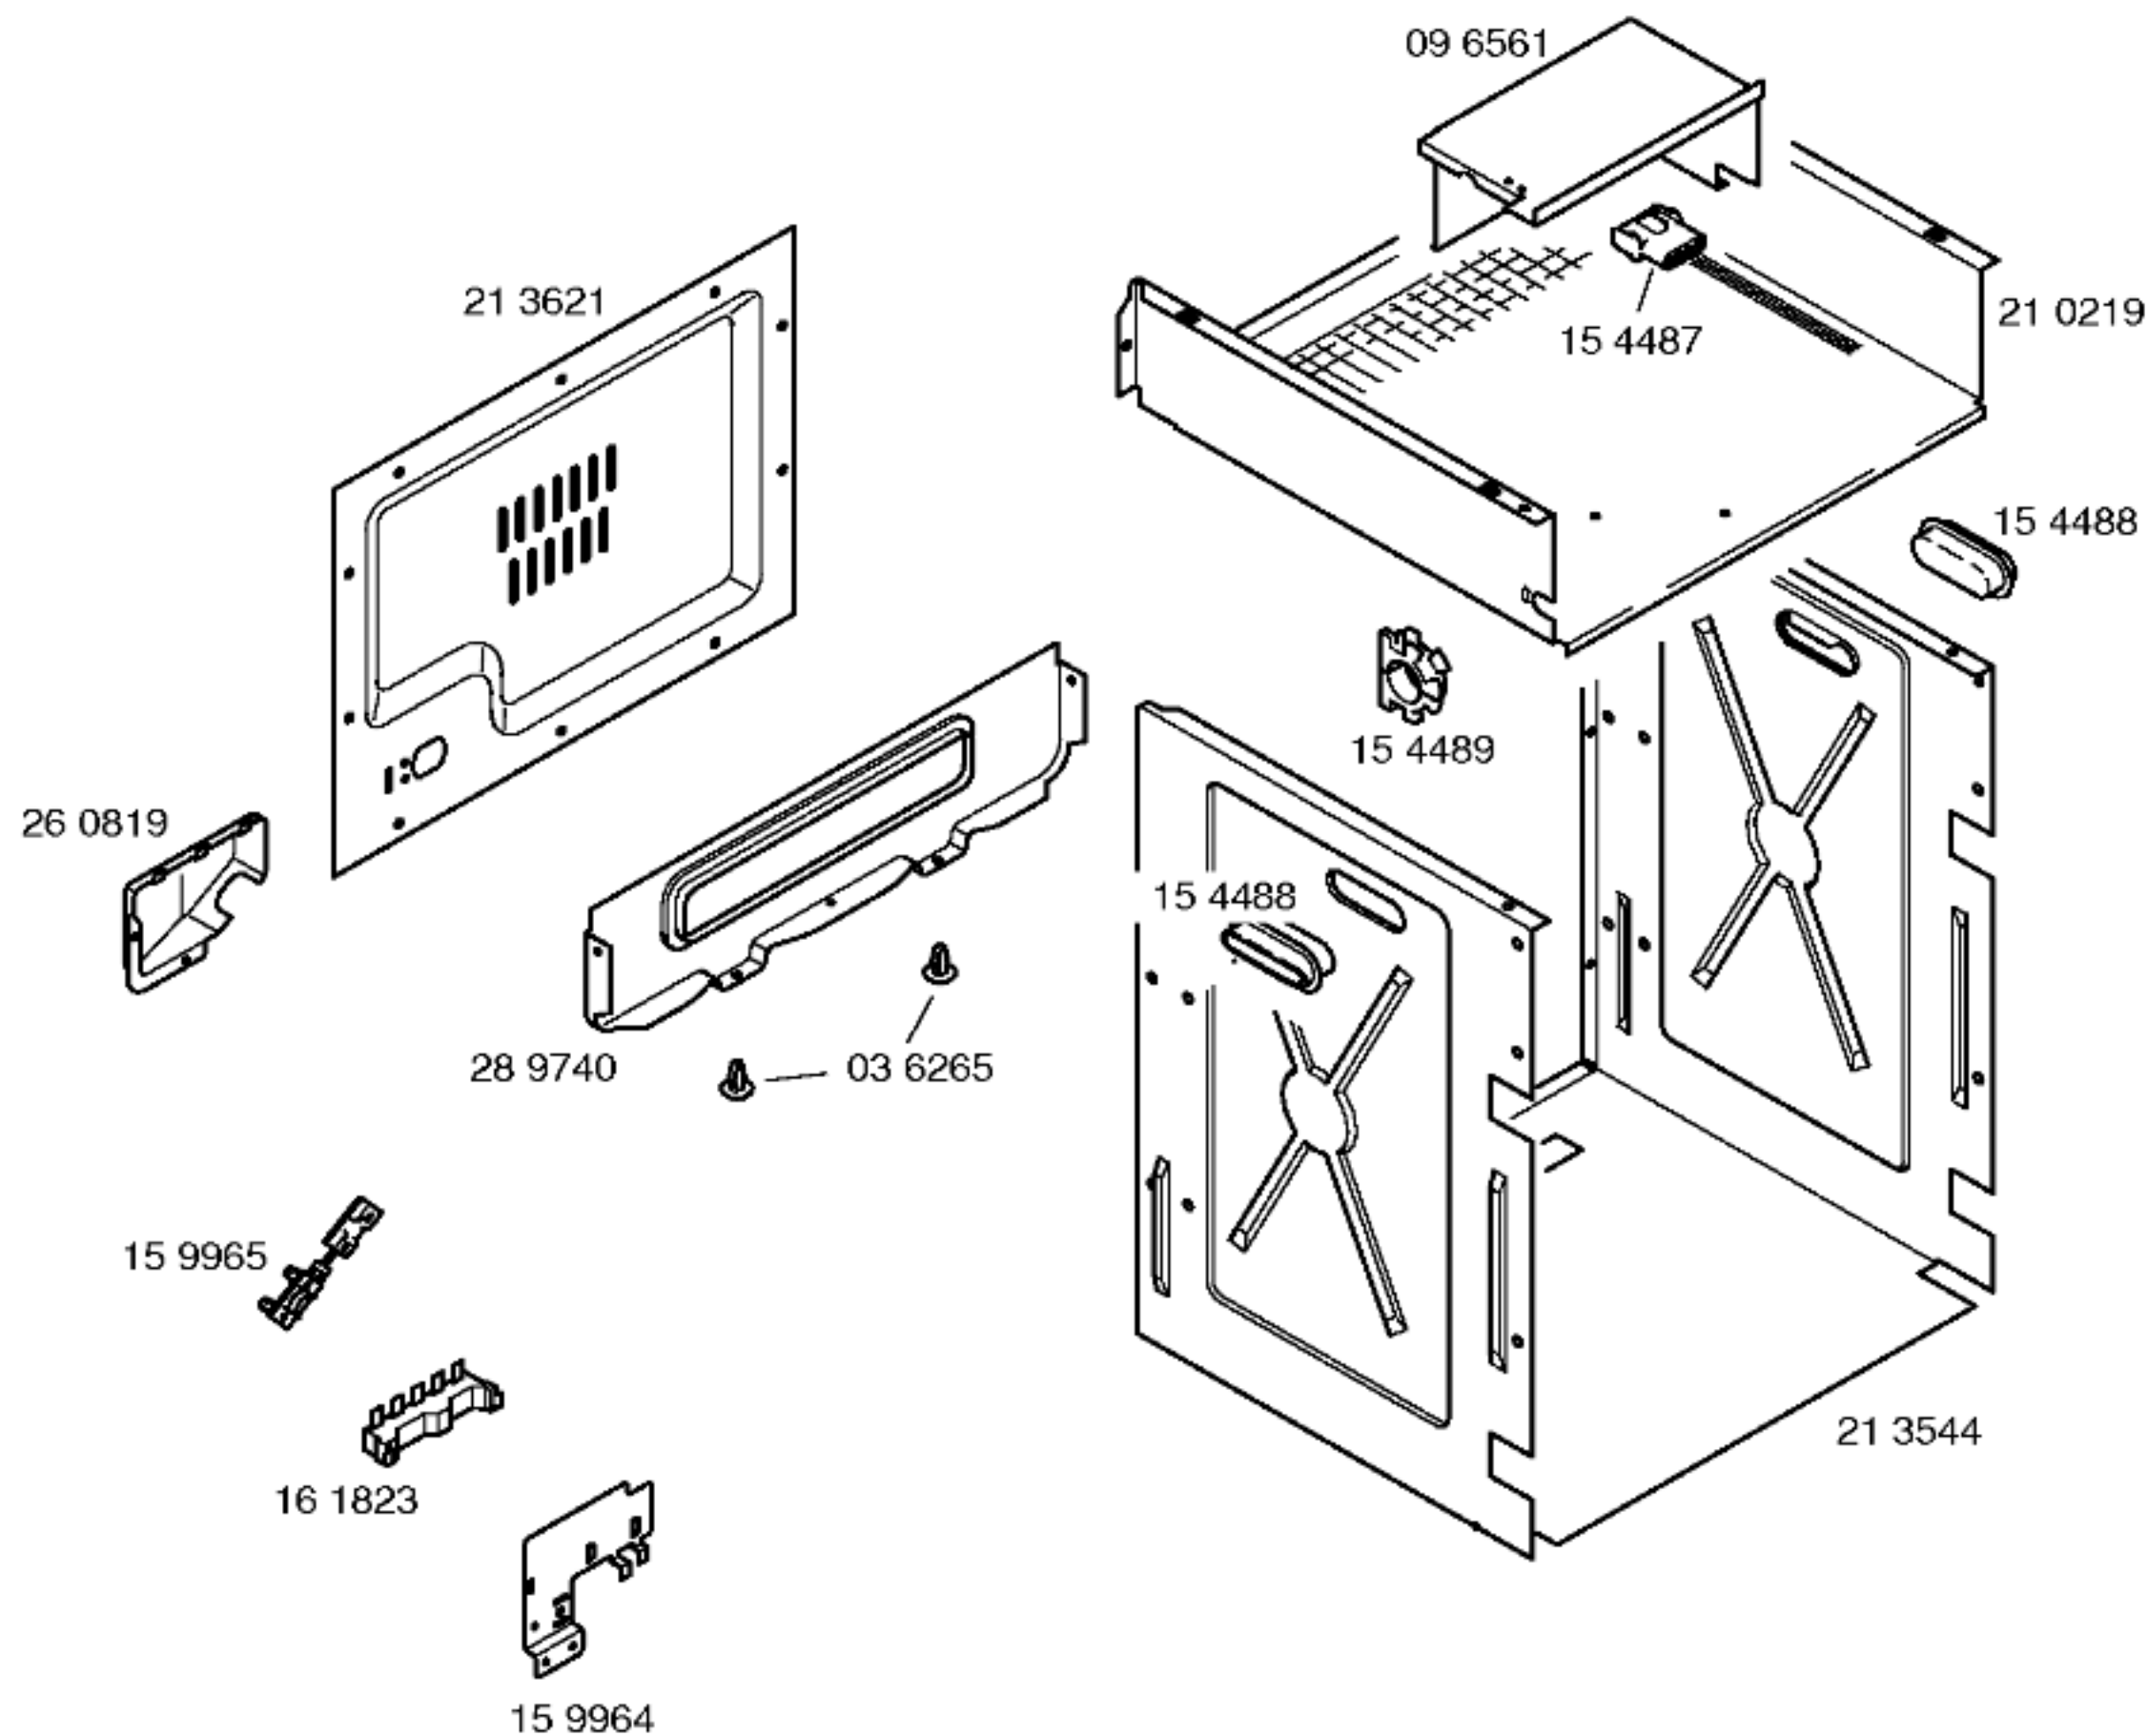


26 3075



21 0264

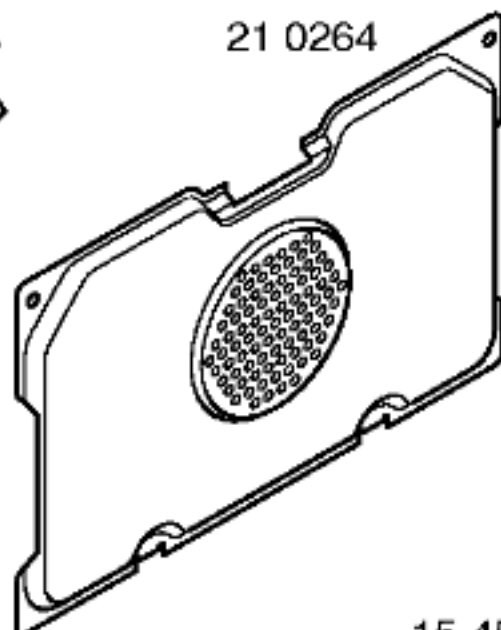


15 4509

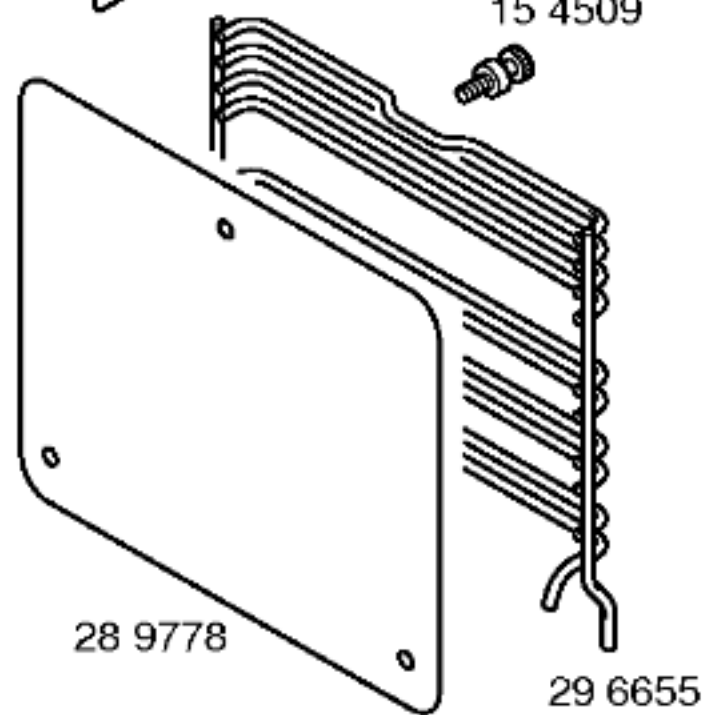

28 9778

29 6655

15 4509

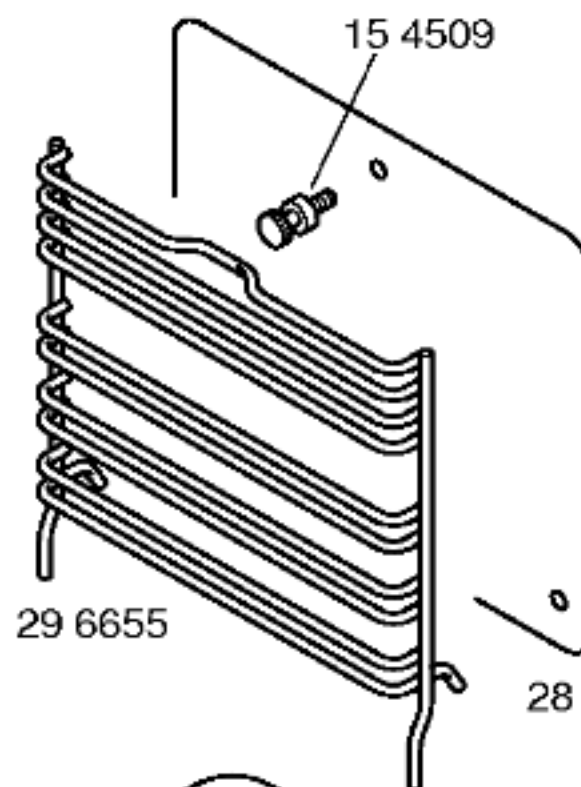

29 6655

28 9778

29 8890

28 9738

29 8881

