



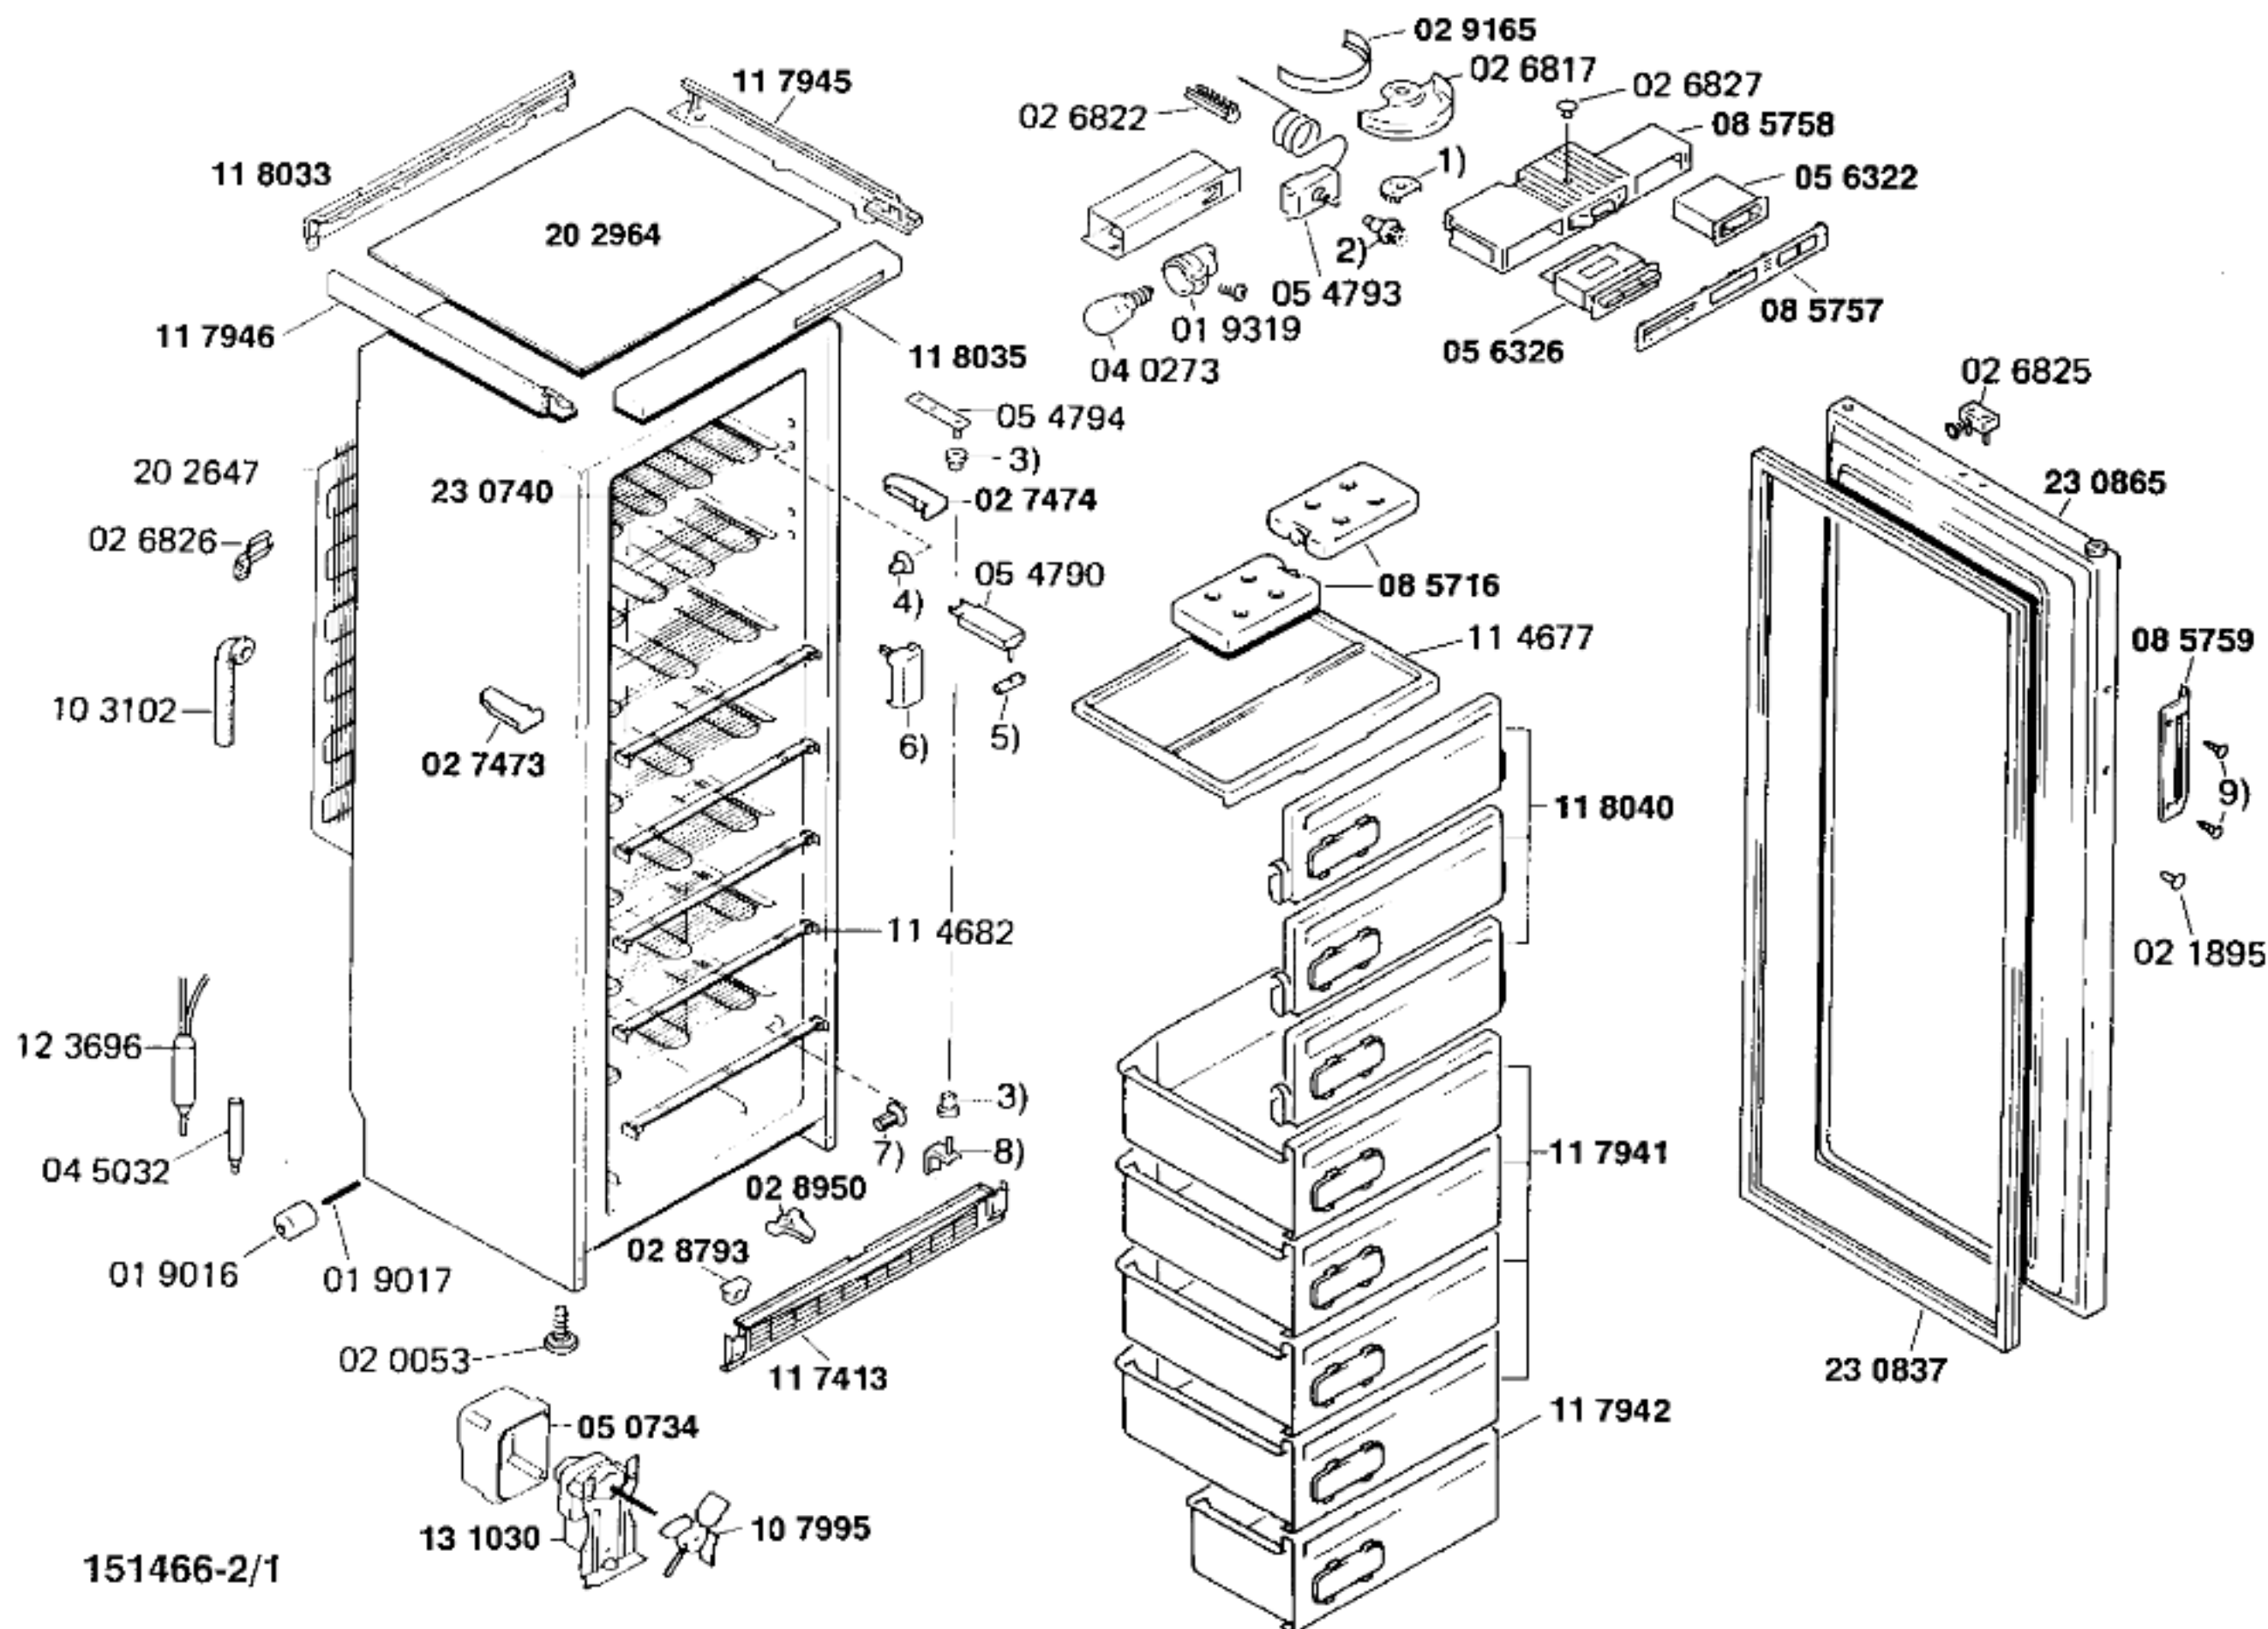

51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815
- 6) 02 6823
- 7) 01 8901
- 8) 05 4795
- 9) 01 9830

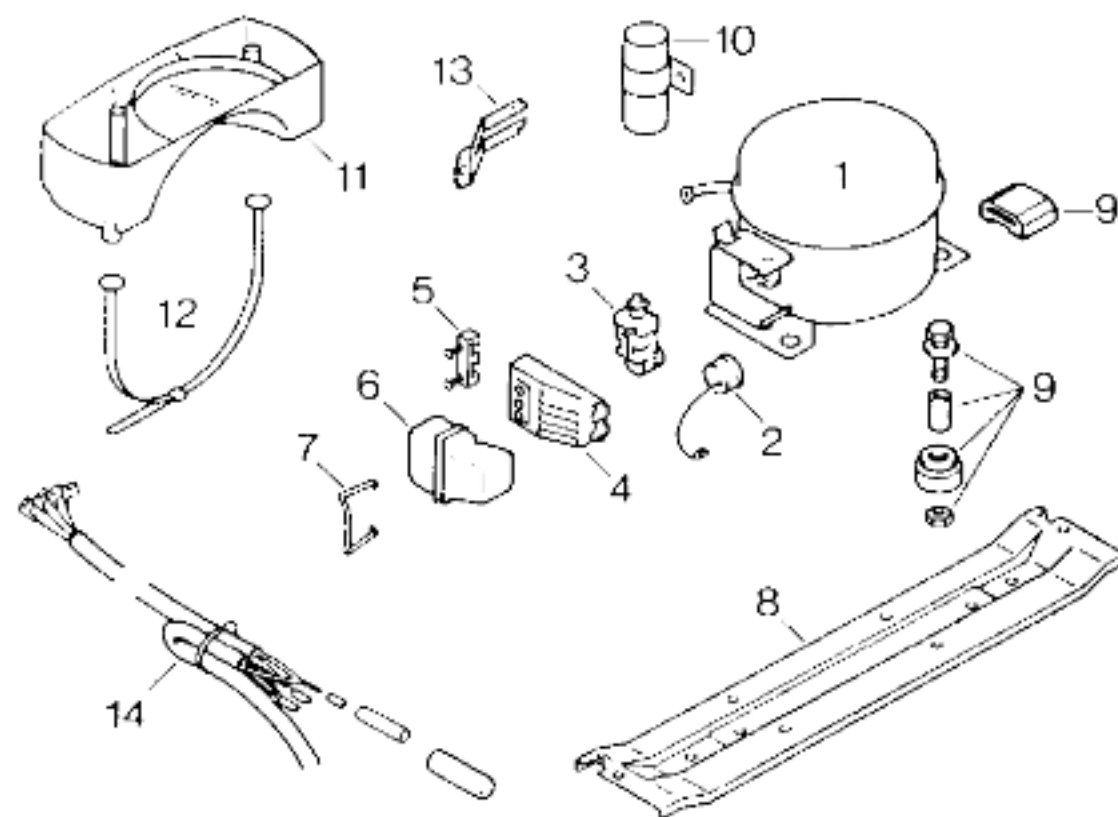

Pos.	EU1,F1	EU2		
	Aspera	Danfoss		
1	14 0363	14 0427		
2	02 6559			
3	02 2342	02 0108		
4	05 1748			
5		02 1361		
6	05 1746	05 1413		
7	02 2339			
8				
9	05 0166			
10				
11				
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Danfoss		
Typ/Type		BY 1118 A	FR 10 A		
Förderleistung/Delivery/Débit		l/h	1596	1629	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,94	11,4	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	37,34	10,7	
		Hi/aux Ω		13,0	
Temp.-Regler/Thermostat			Danfoss		
Typ/Type			077 B 2054		
Reglerstellung/Position			kalt	warm	
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	- 24	- 16	
Valeurs de commutation		„aus“	- 34	- 24	
		(„abtauen“ od.)	„alarm“	- 19	- 12
Füllmenge/Fill.quantity/Charge		R12 g	220		
Anschlußwert/Conn.load/Puiss. connectée		W	170		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			