


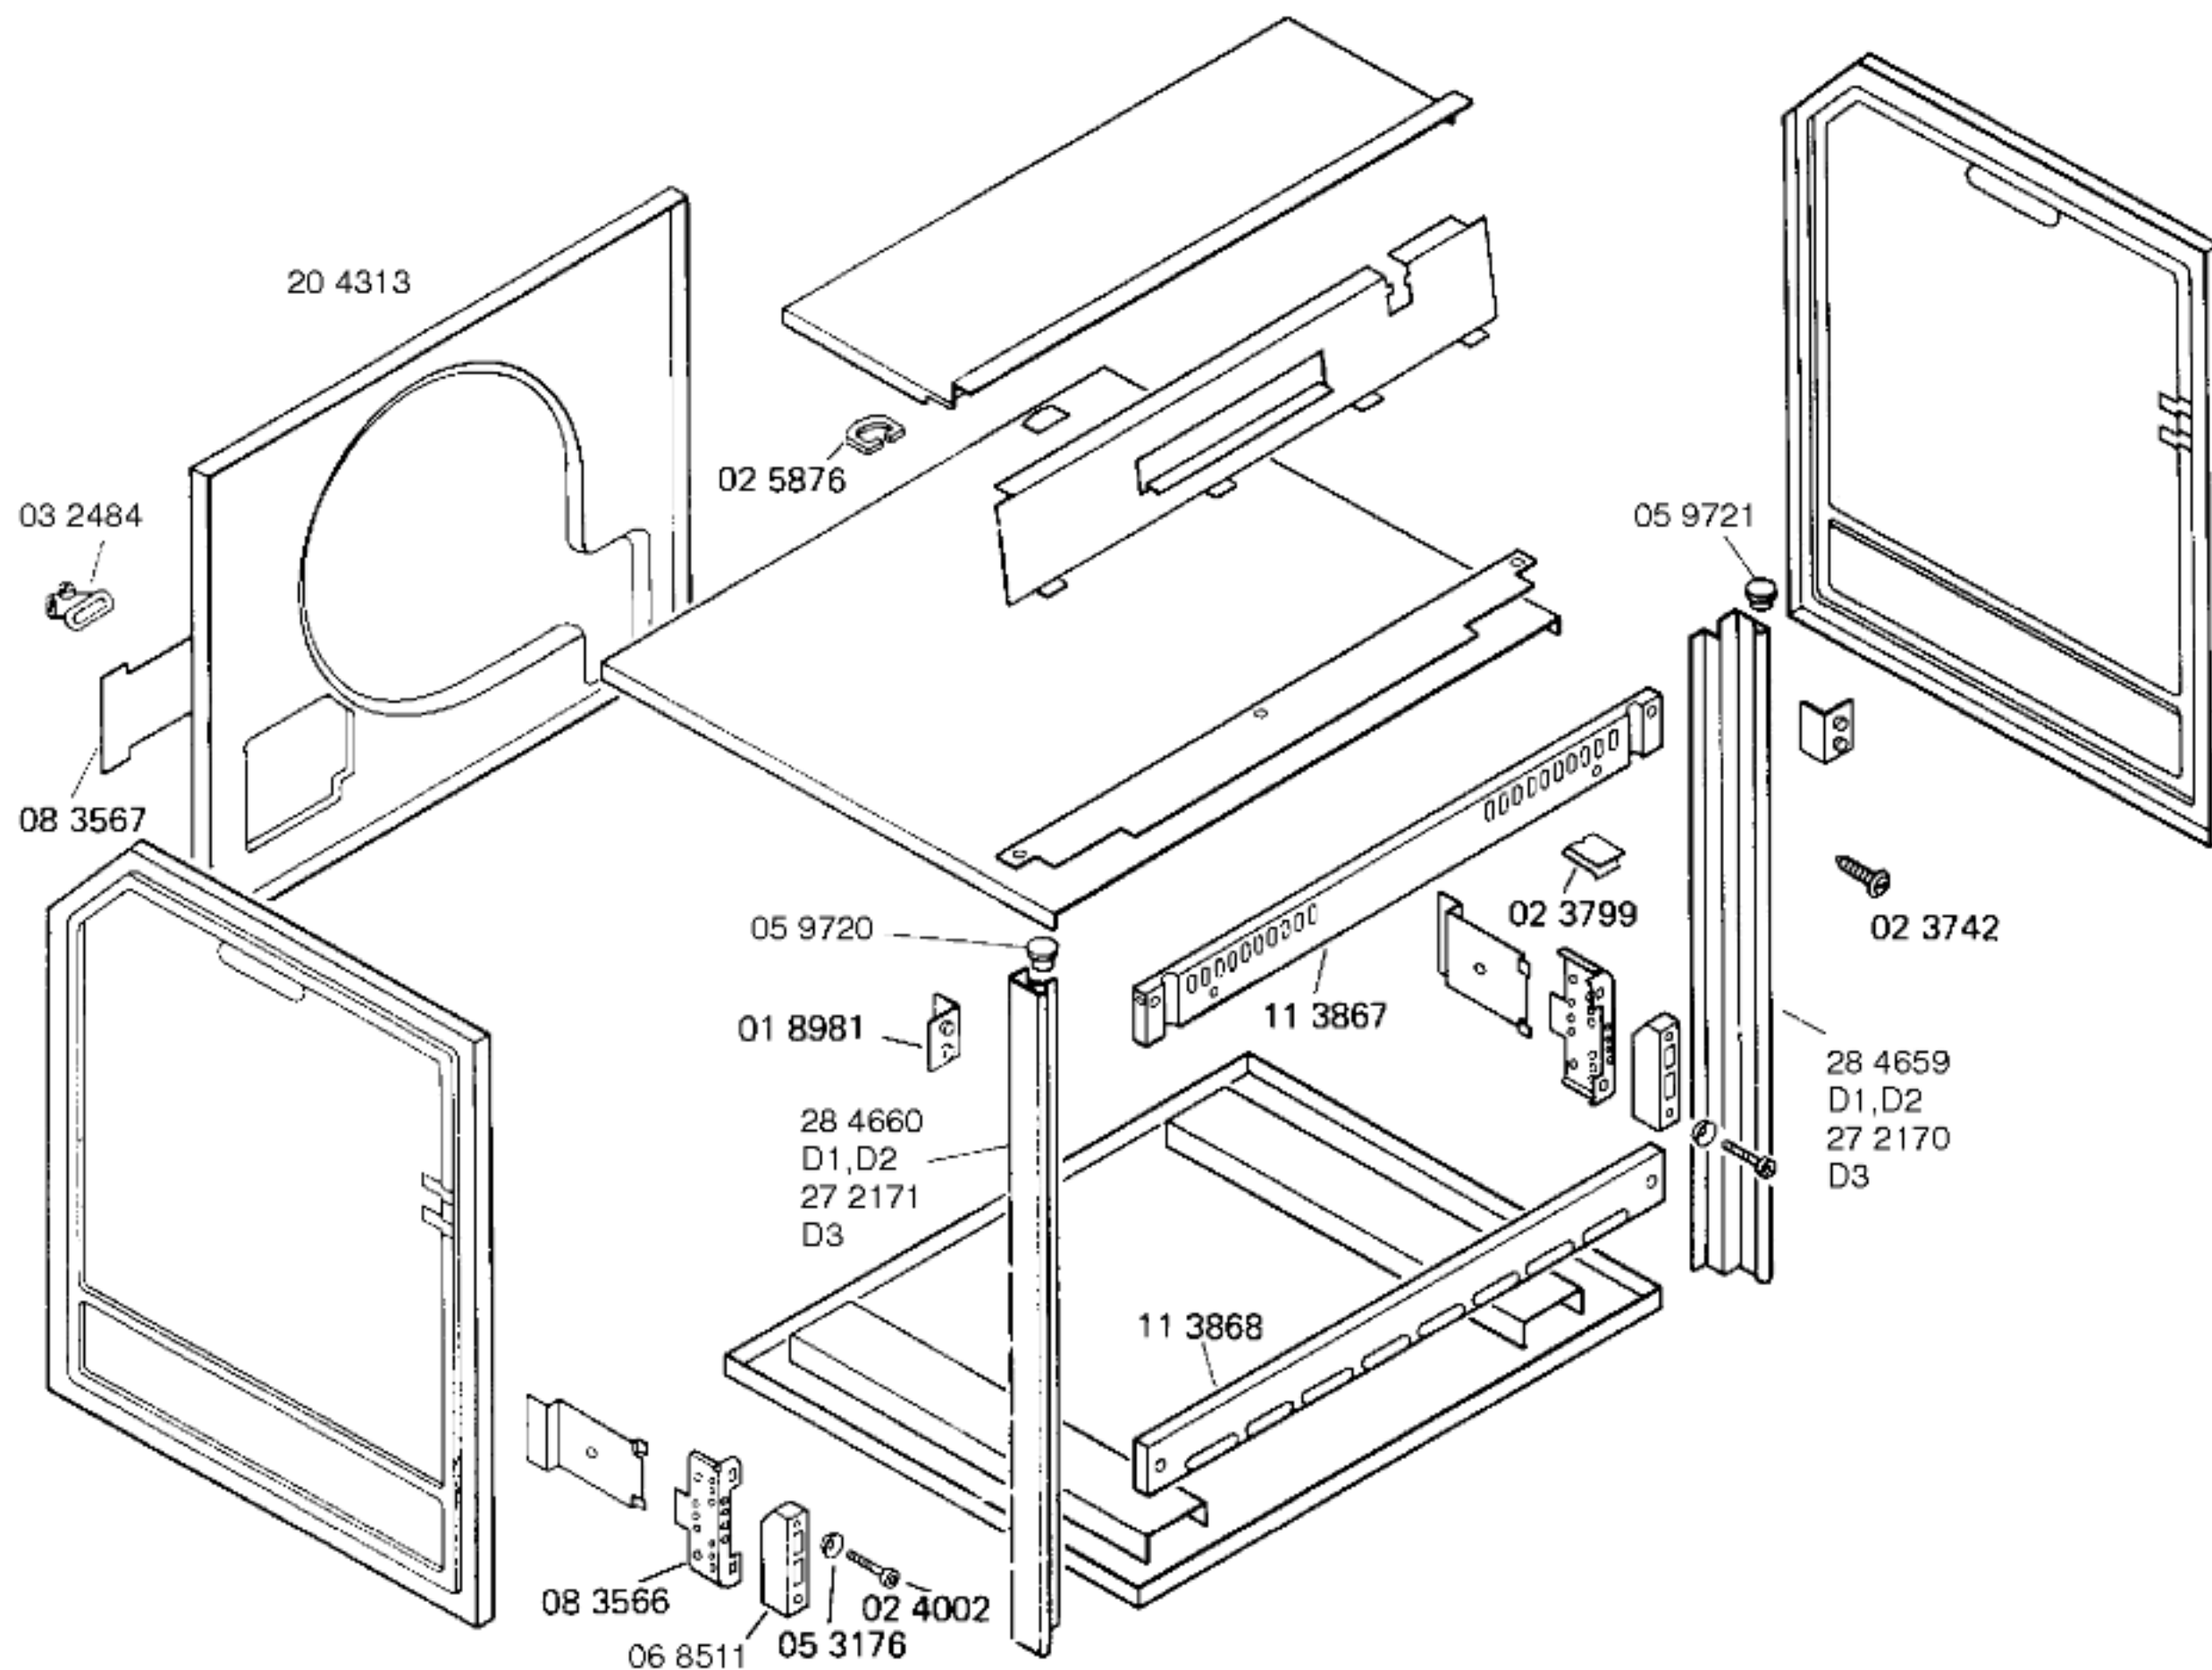

Gebrauchsanweisung  
51 6756  
(D,GB,F,NL,I,E,GR)

51 2001  
Tips und Rezepte

**Zubehör**

**Back- und  
Bratrost normal**  
Z1400X1


**Back- und  
Bratrost eng**  
Z1410X1


**Grillpfanne**  
Z1200X1


**Email-Backblech**  
Z1310X1




**Alu-Backblech**  
Z1300X1

**Bratenblech**  
Z1510X0

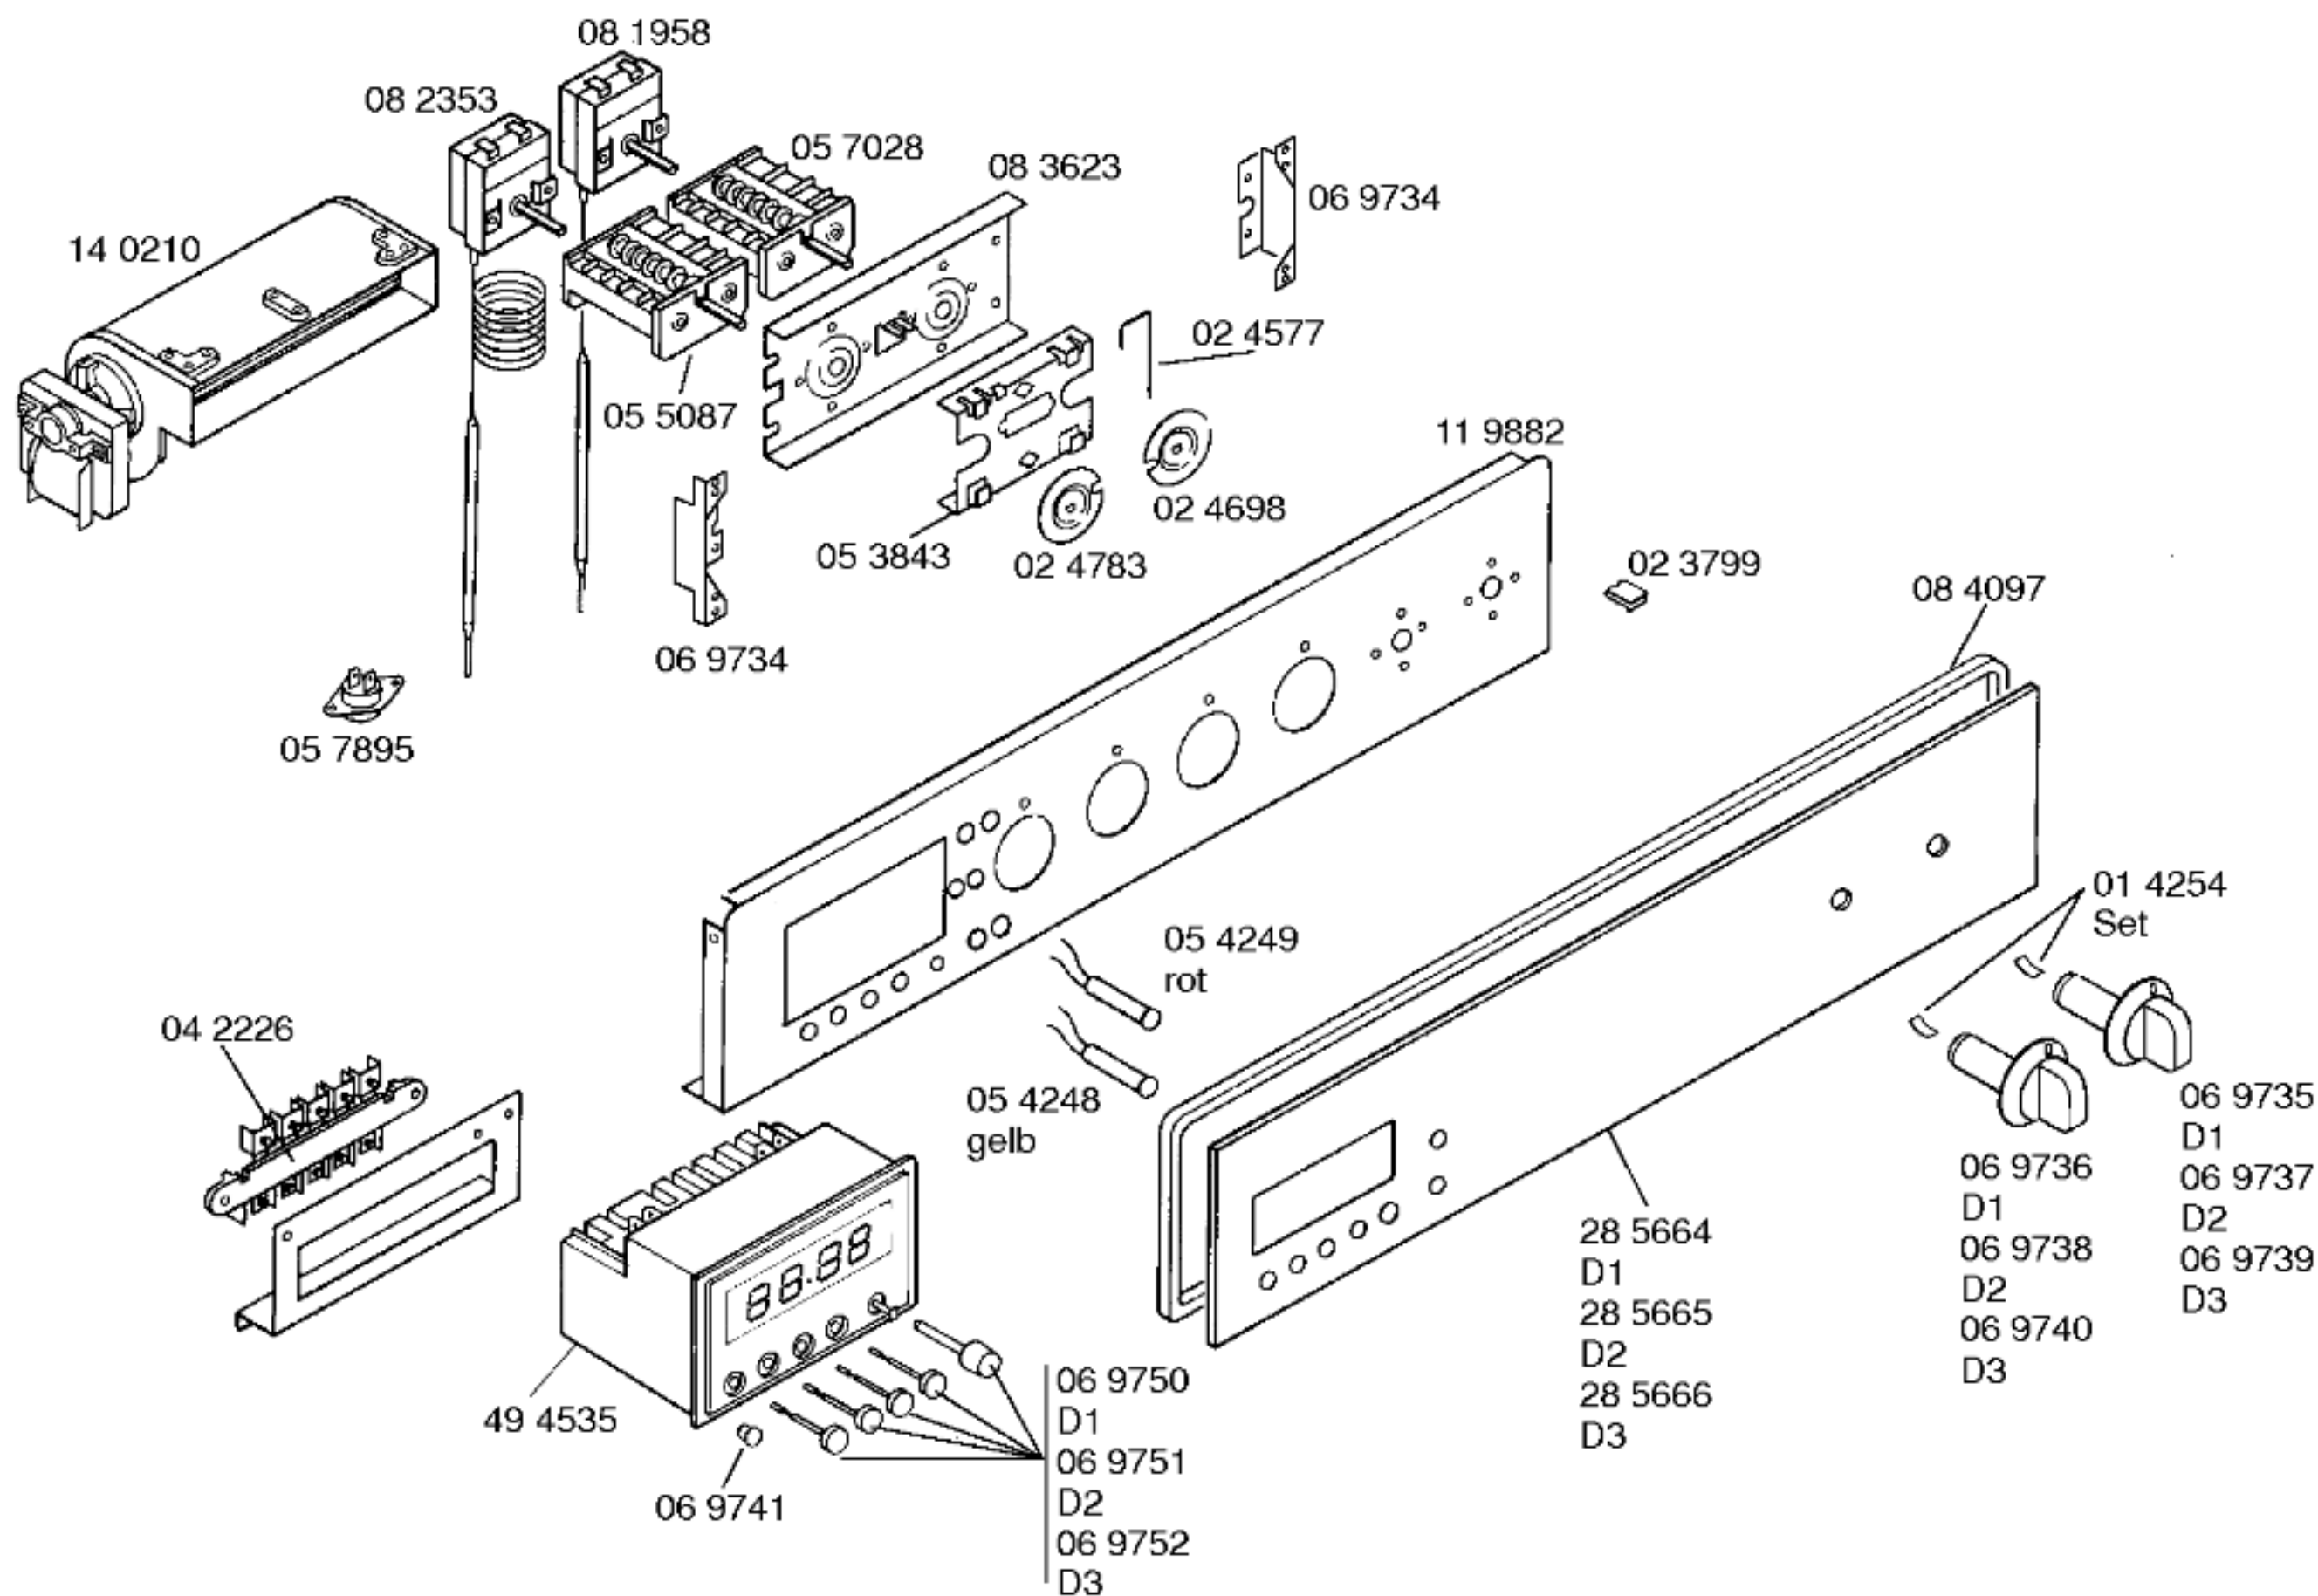

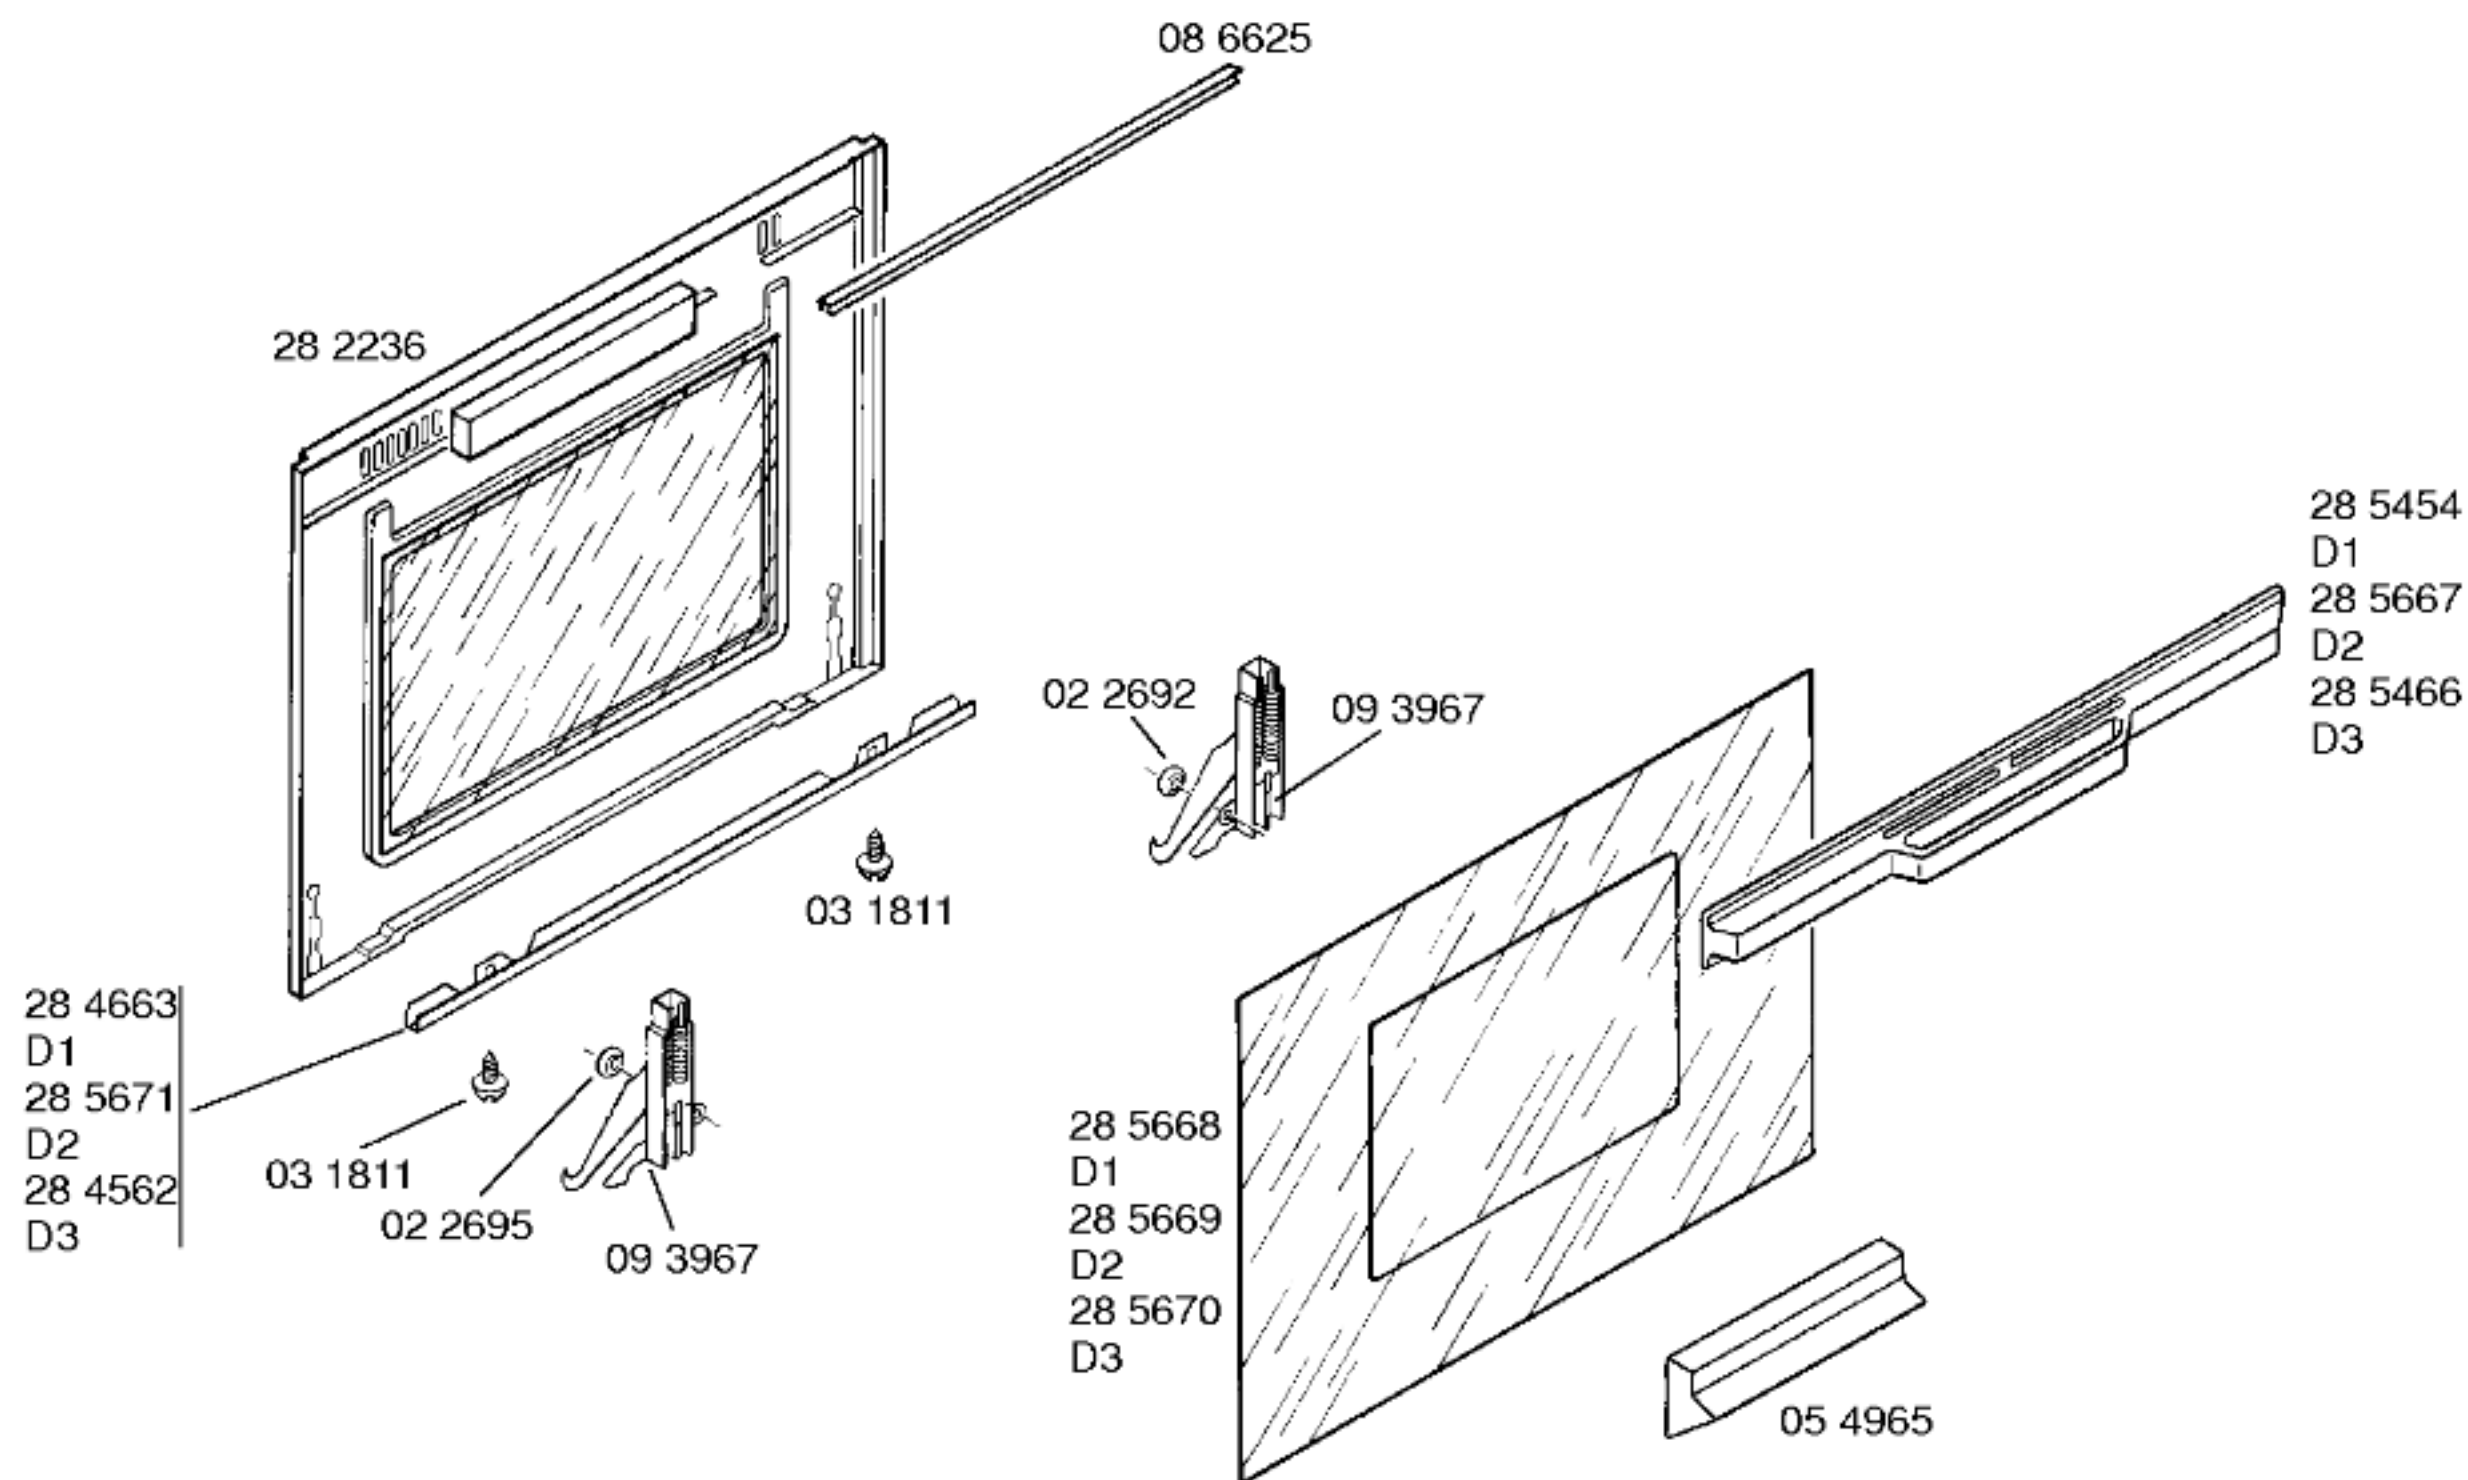

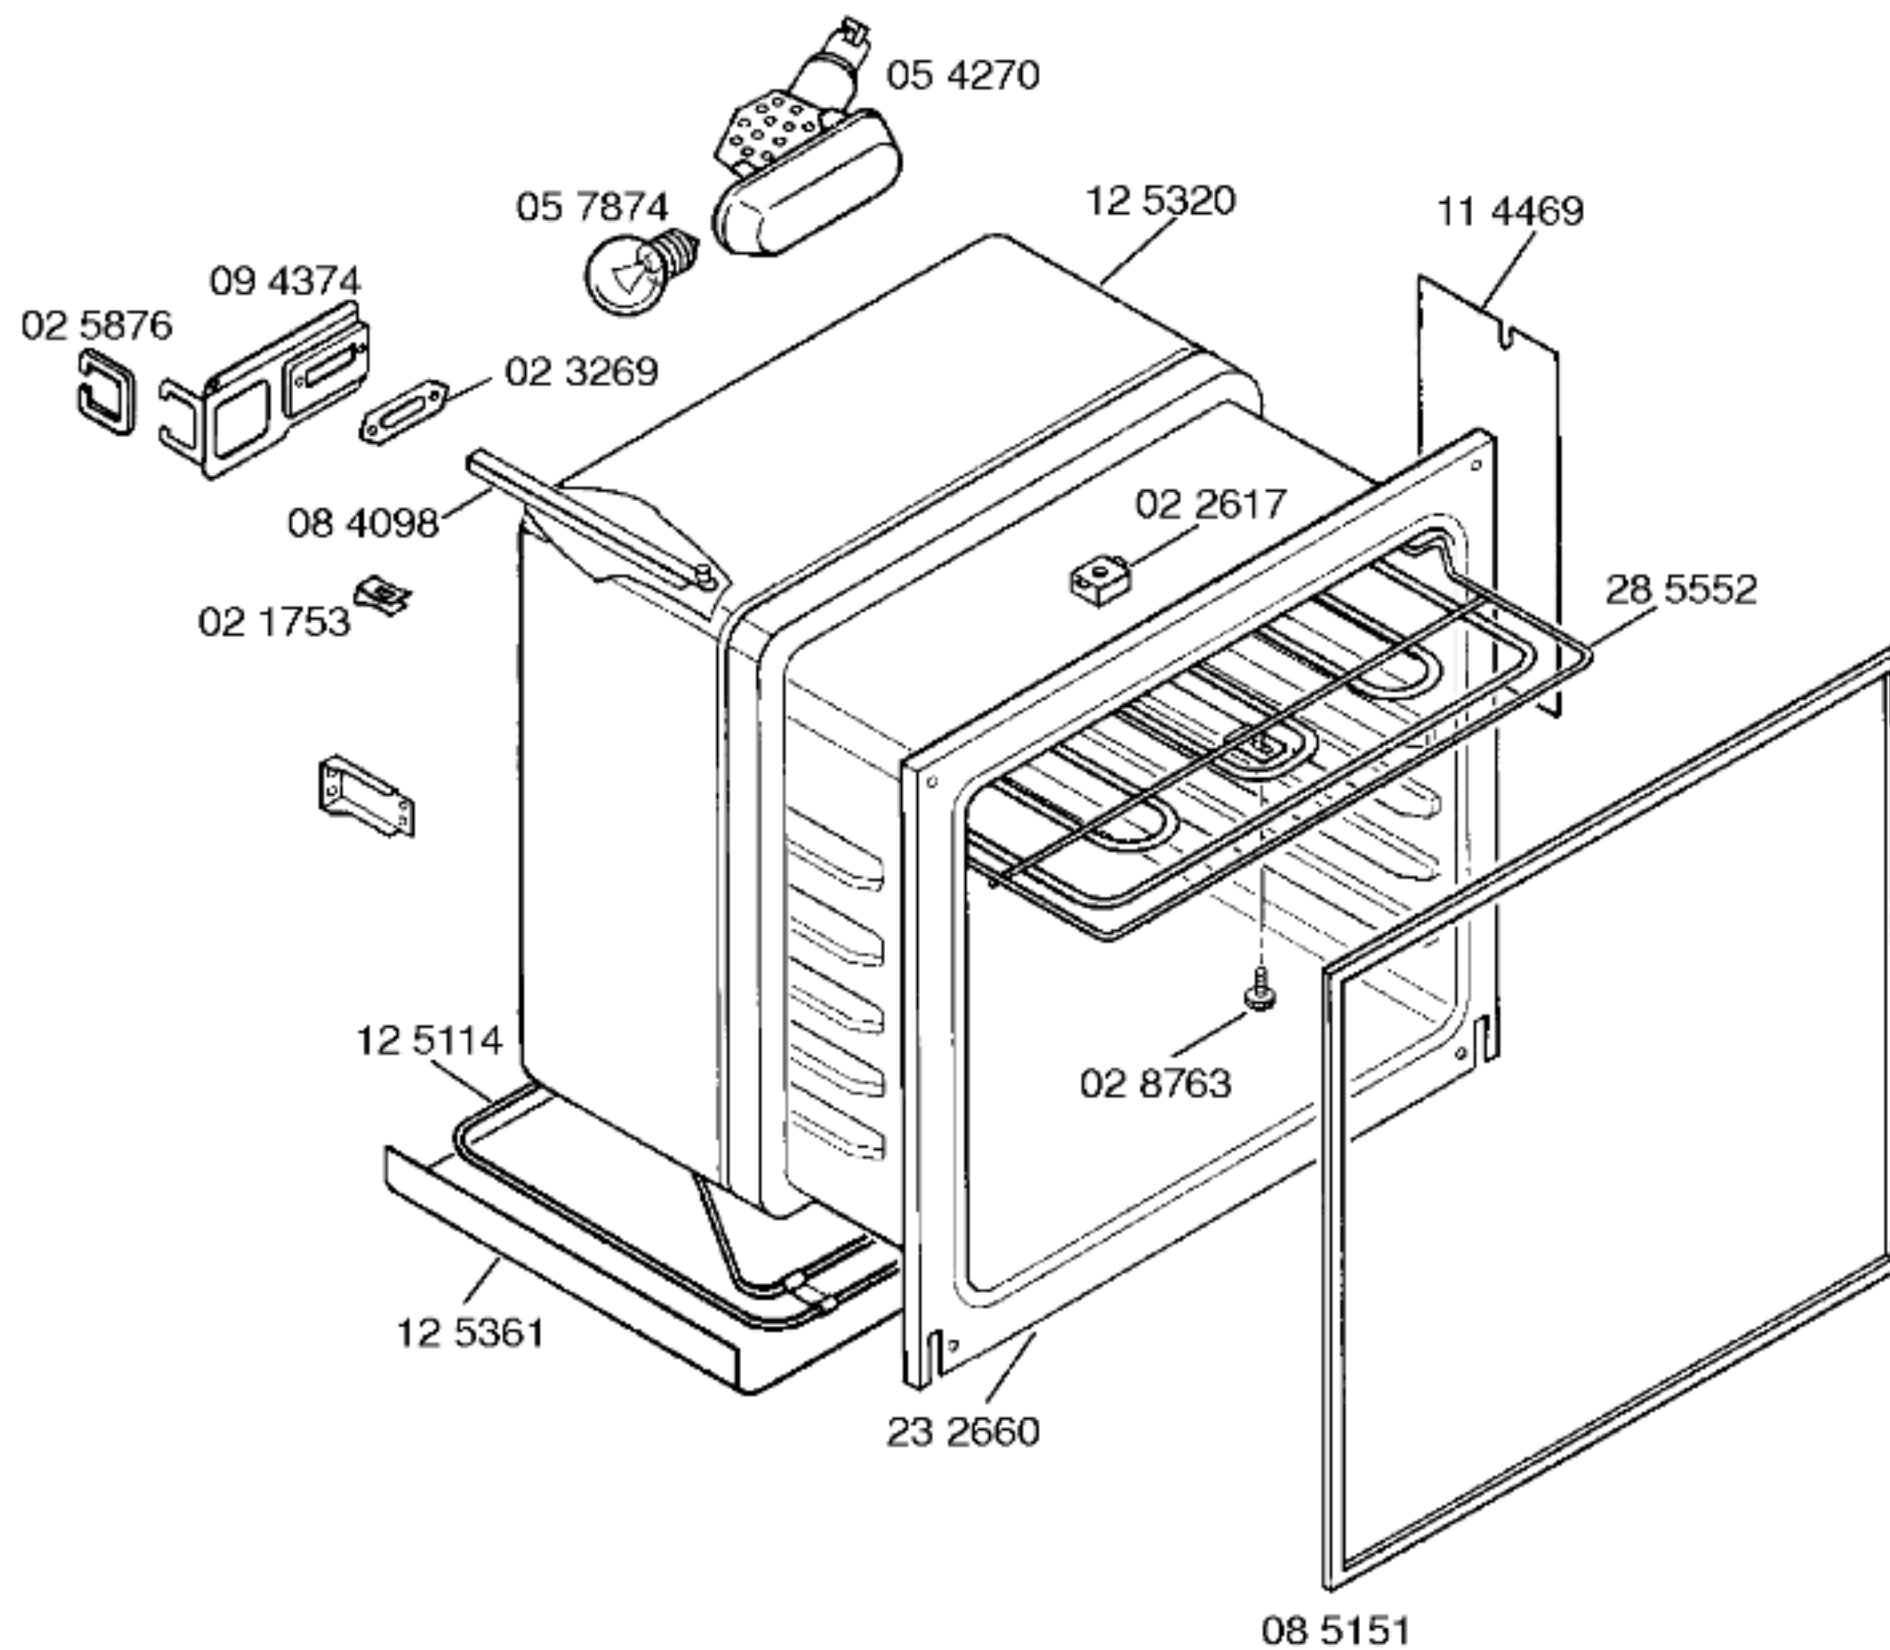

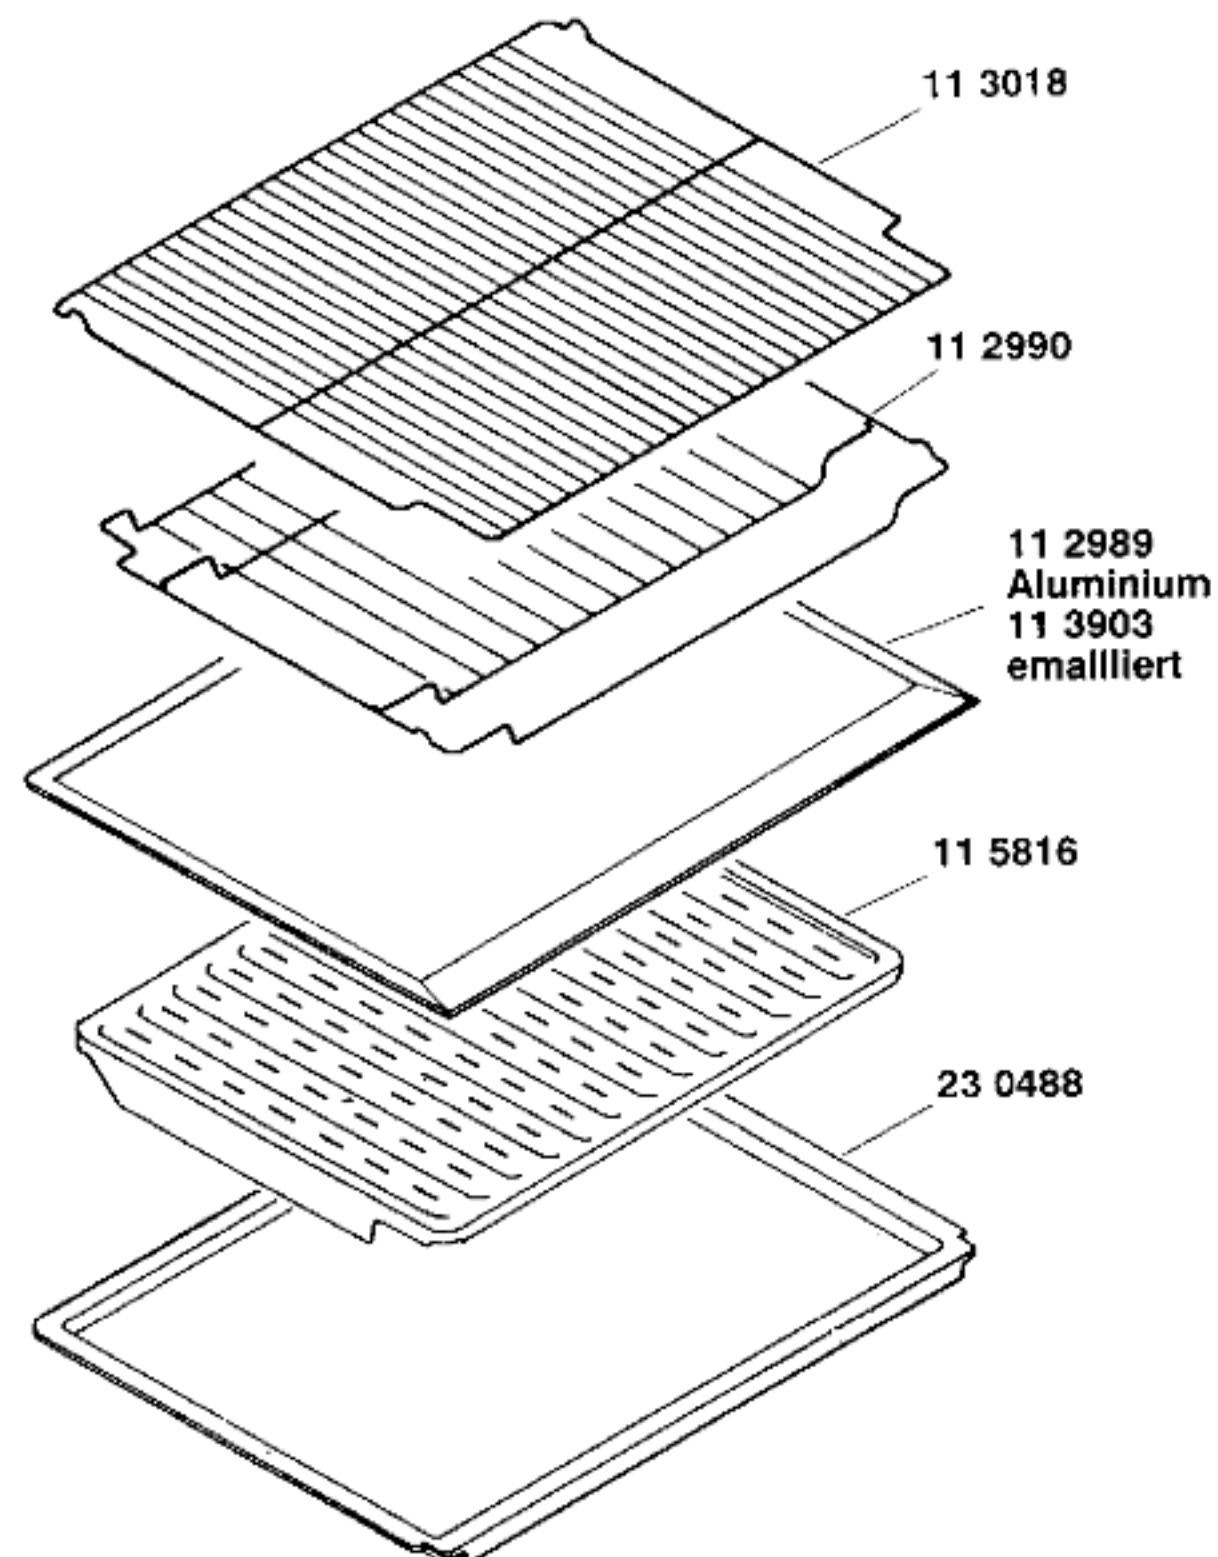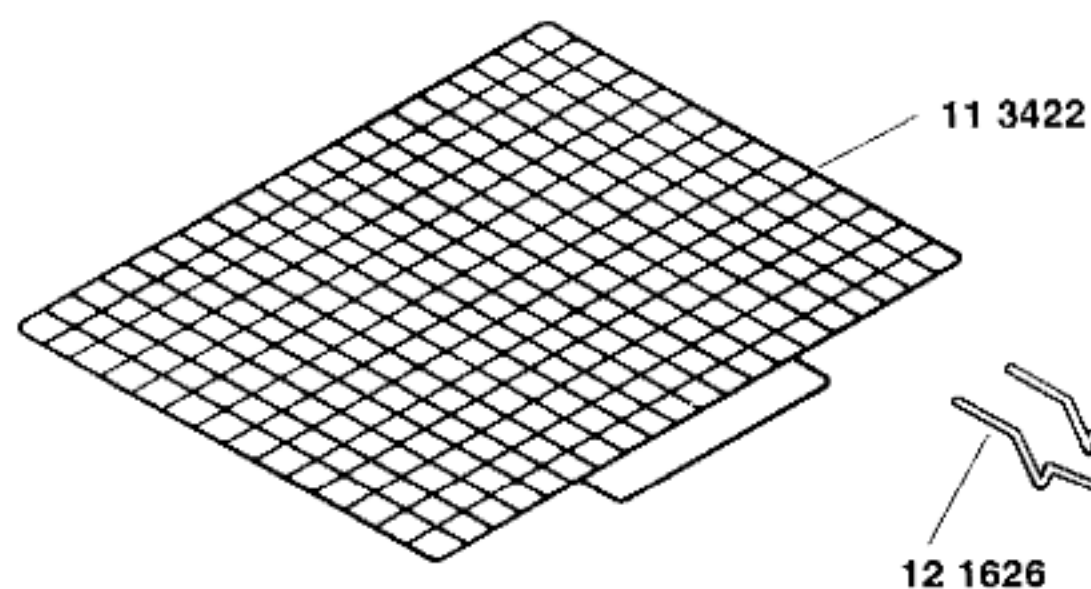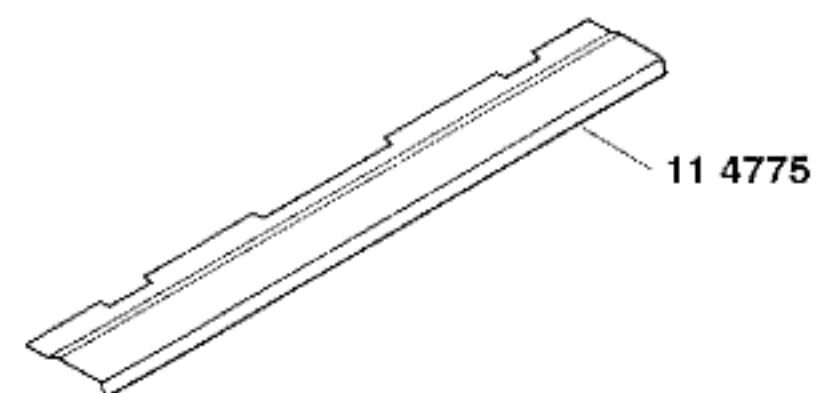

1) 08 4701  
 kompl.

