


**BOSCH**

MUM 6122 – 0 710 014 723–D1
MUM 6122 – 0 710 014 732–EXP.1

KLEINE HAUSGERÄTE
Küchenmaschinen


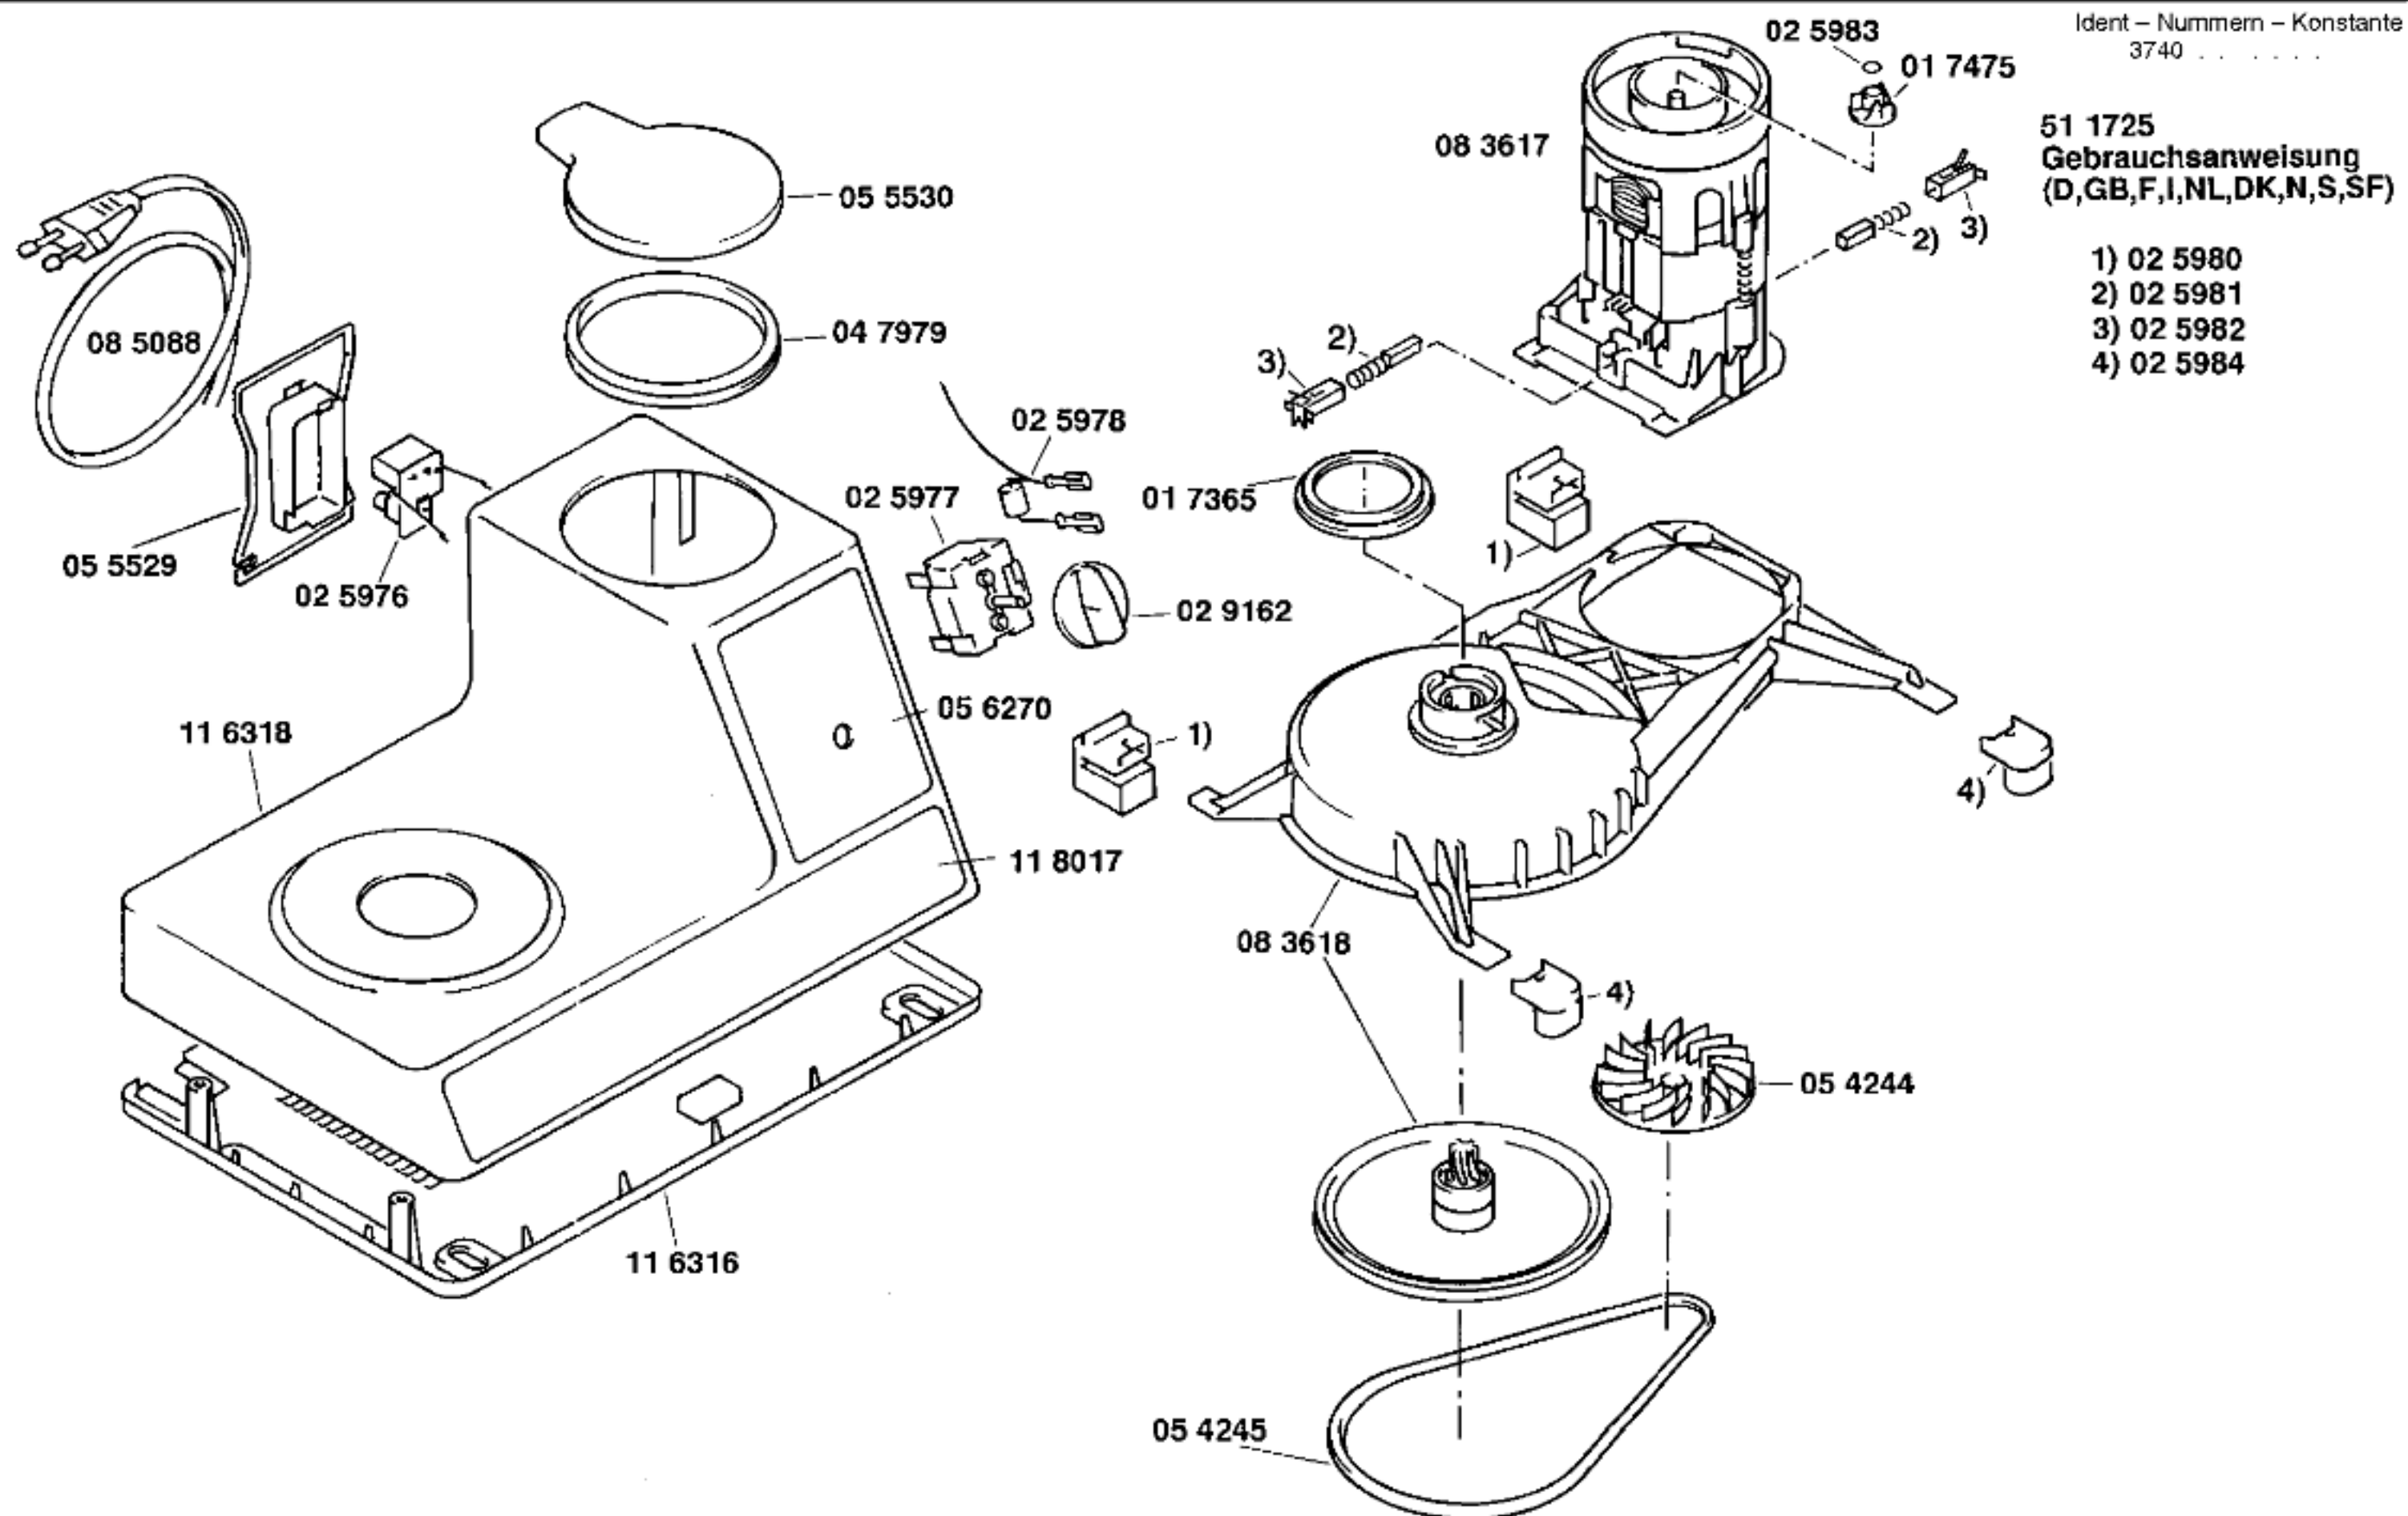


**BOSCH**

MUM 6122 – 0 710 014 723–D1
MUM 6122 – 0 710 014 732–EXP.1

KLEINE HAUSGERÄTE
Küchenmaschinen

Ident – Nummern – Konstante
3740

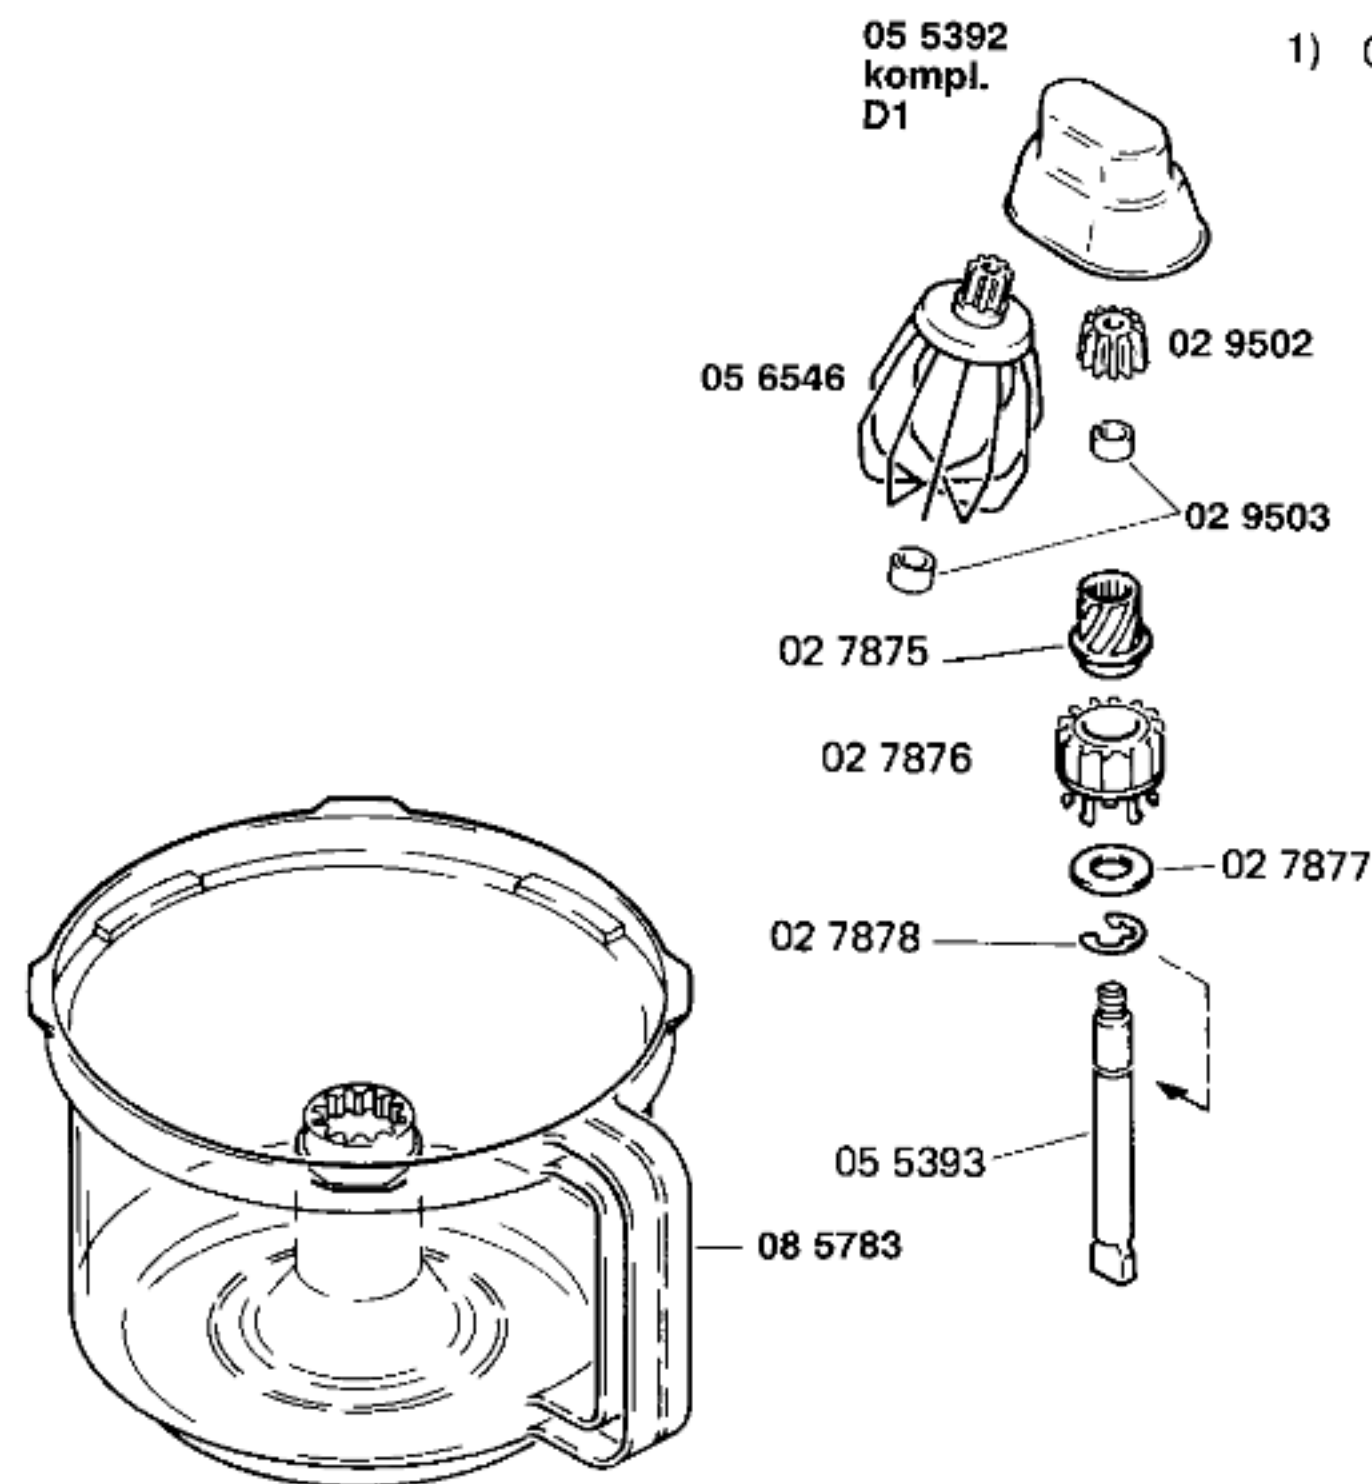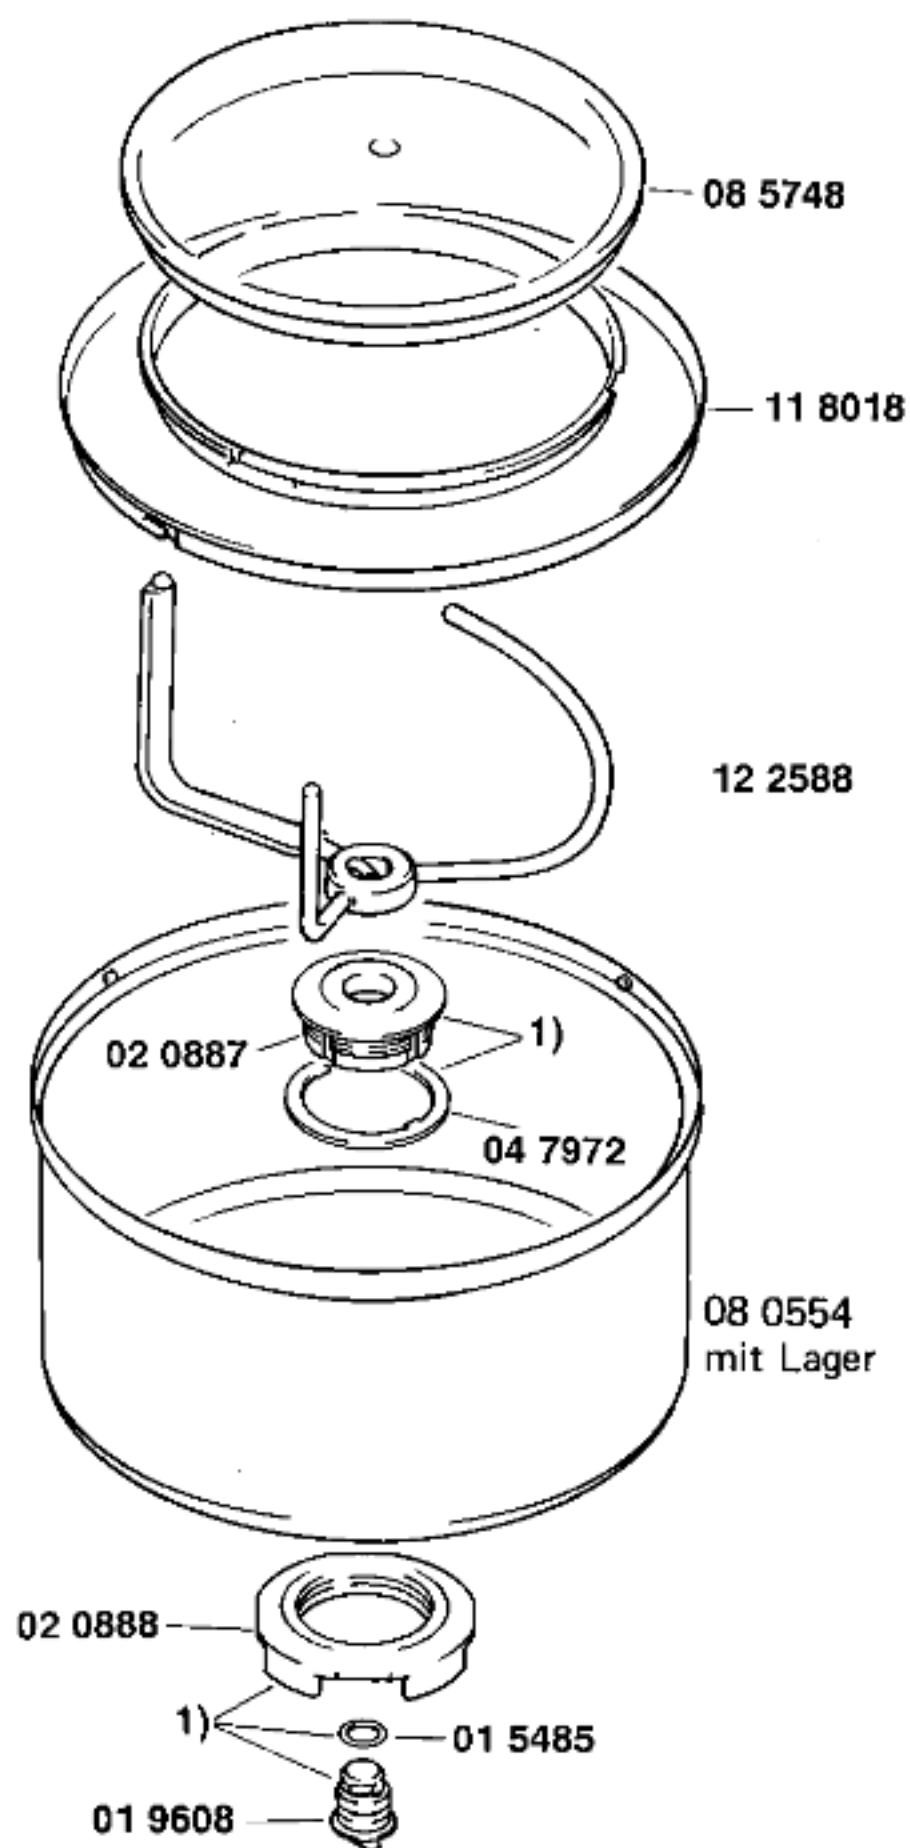

**BOSCH**

MUM 6122 – 0 710 014 723–D1
MUM 6122 – 0 710 014 732–EXP.1

KLEINE HAUSGERÄTE
Küchenmaschinen

Ident – Nummern – Konstante
3740

