

**BOSCH**

BOSCH V 721 — 0 722 044 315—GB1
 — 0 722 044 335—D1
 — 0 722 044 336—F1
 — 0 722 044 339—CH1

BOSCH V 721 — 0 722 044 371—CH2
 — 0 722 044 372—N1

WASCHGERÄTE
 Waschvollautomaten


Ident-Nummern-Konstante
 3740

Aufstellanweisungen

51 0648/00
 D1
 51 0893/00
 F1
 51 1298/00
 GB1
 51 0982/00
 N1
 51 0943/00
 CH1
 51 1487/00
 CH2

Gebrauchsanweisung

51 1299/00
 (D)
 51 1300/00
 (F)
 51 1301/00
 (GB)
 51 1488/00
 (N)

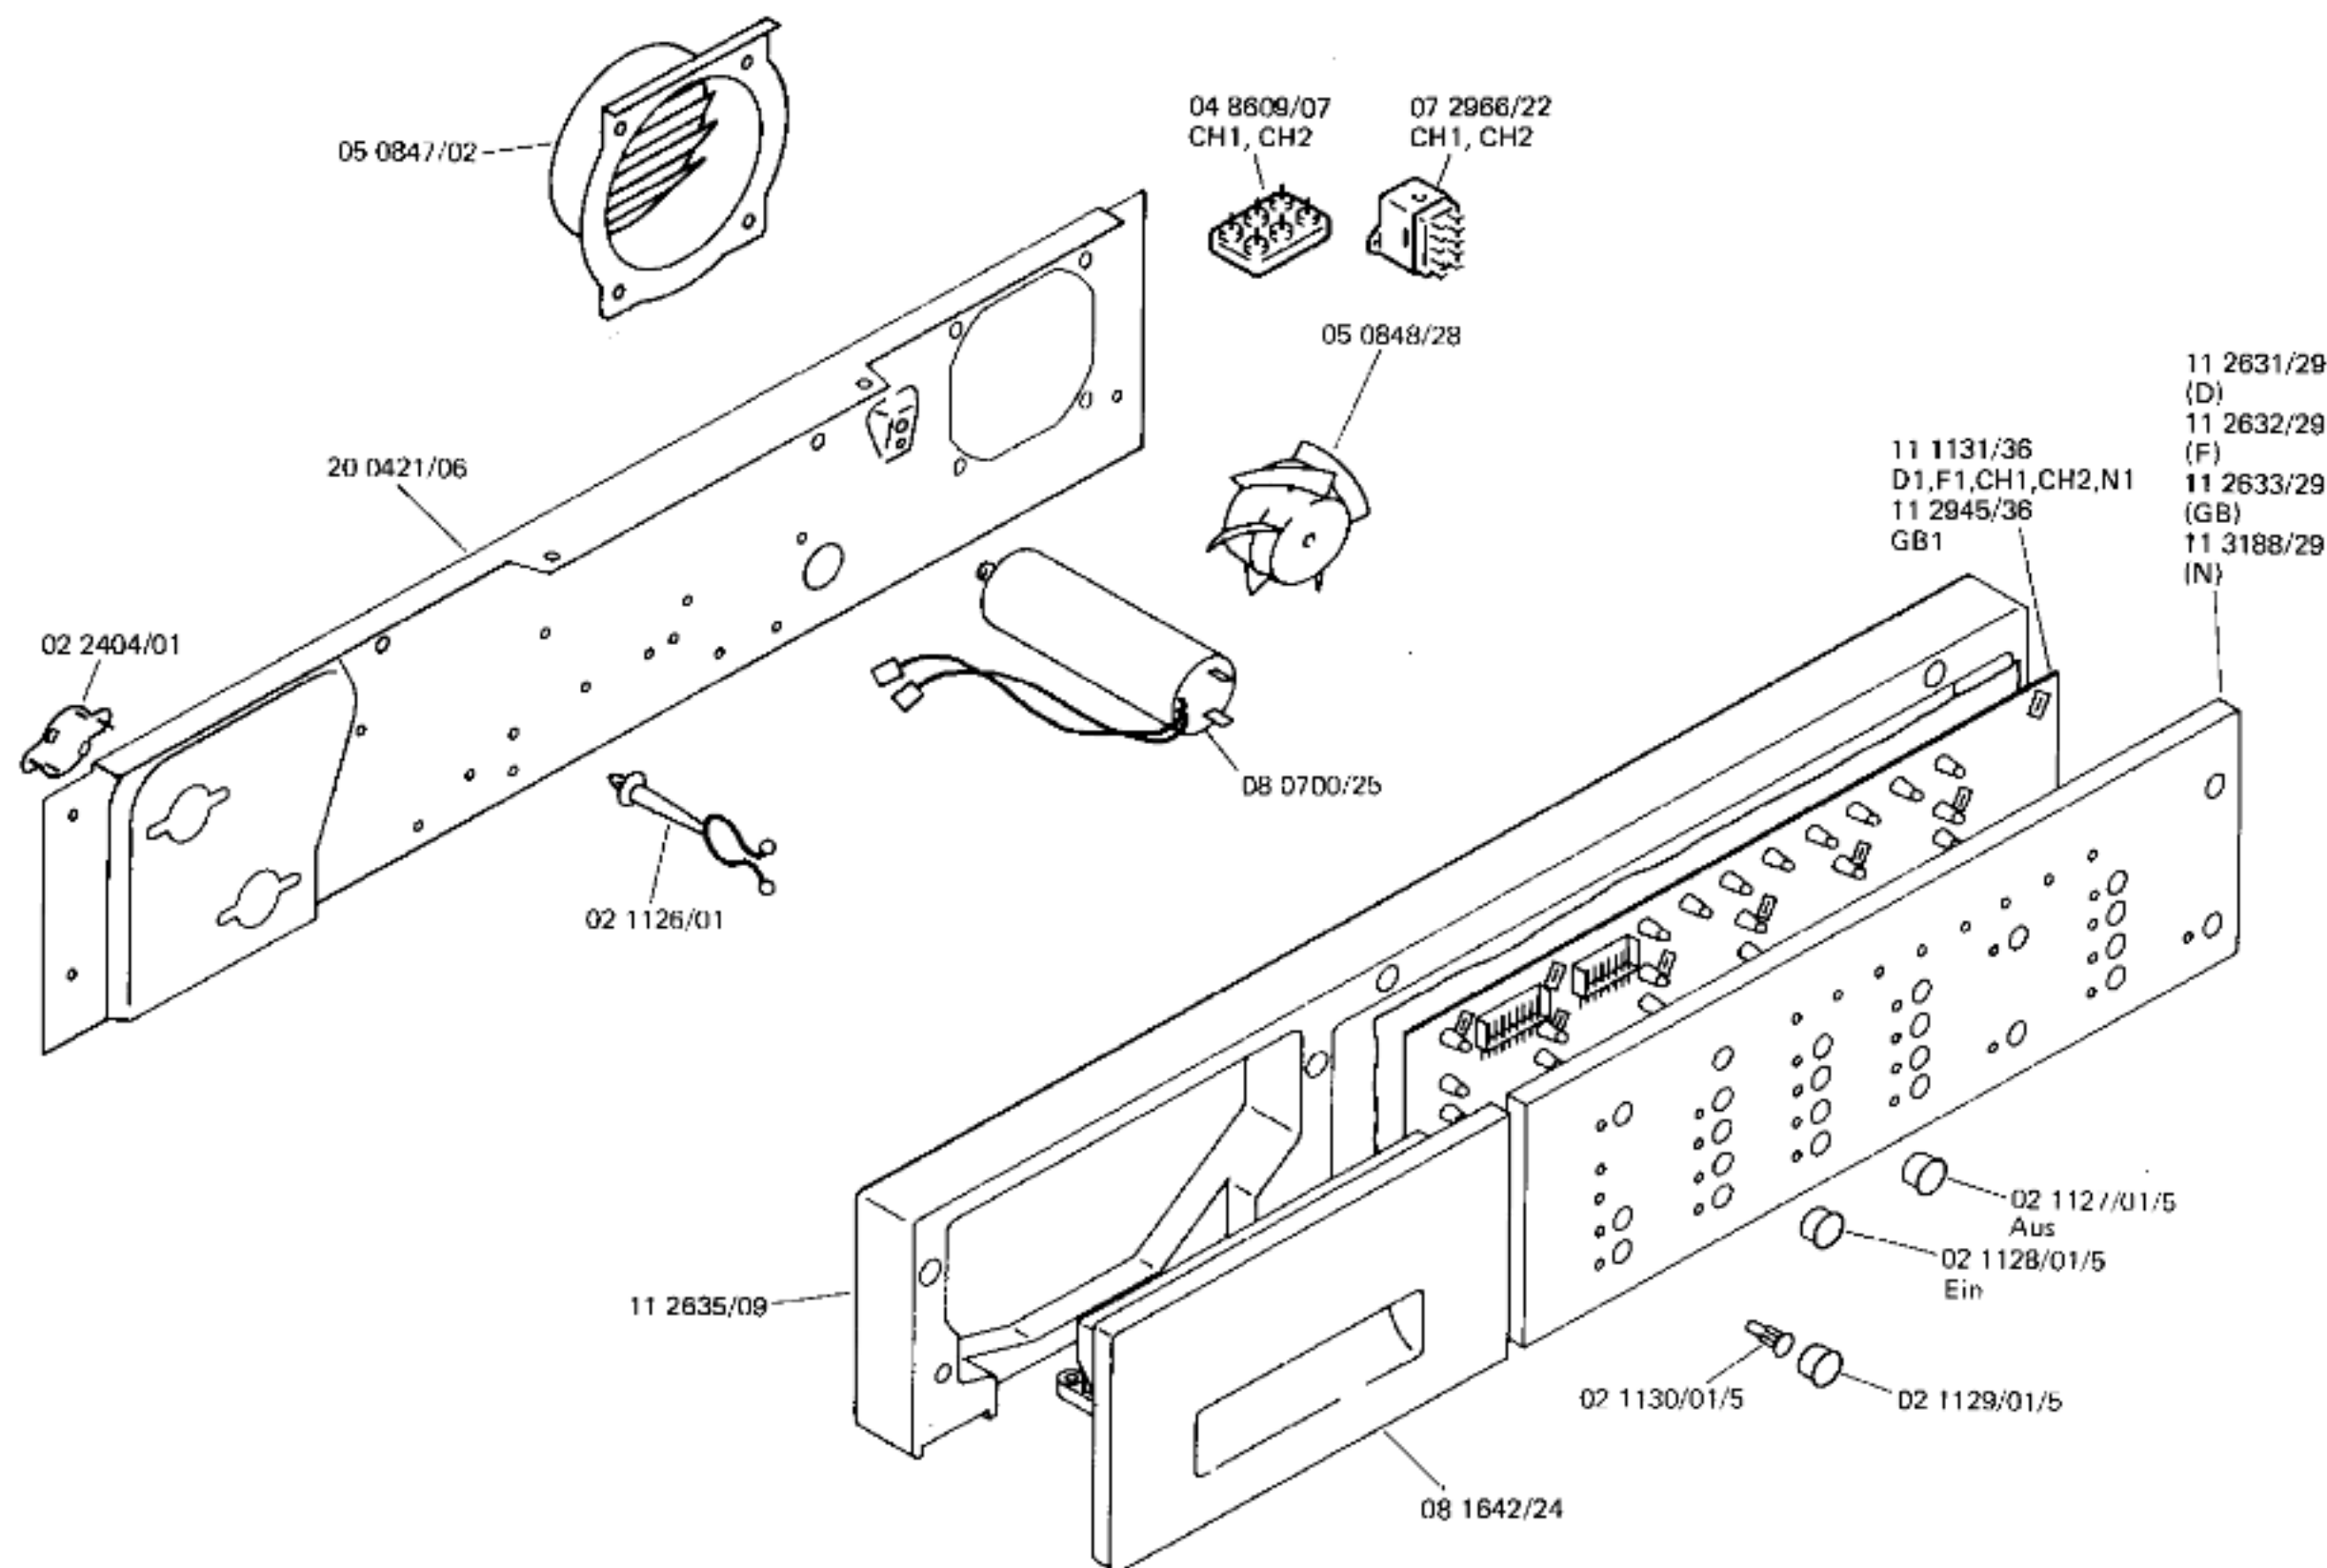


**BOSCH**



BOSCH V 721 - 0 722 044 315-GB1
- 0 722 044 335-D1
- 0 722 044 336-F1
- 0 722 044 339-CH1


BOSCH V 721 - 0 722 044 371-CH2
- 0 722 044 372-N1

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

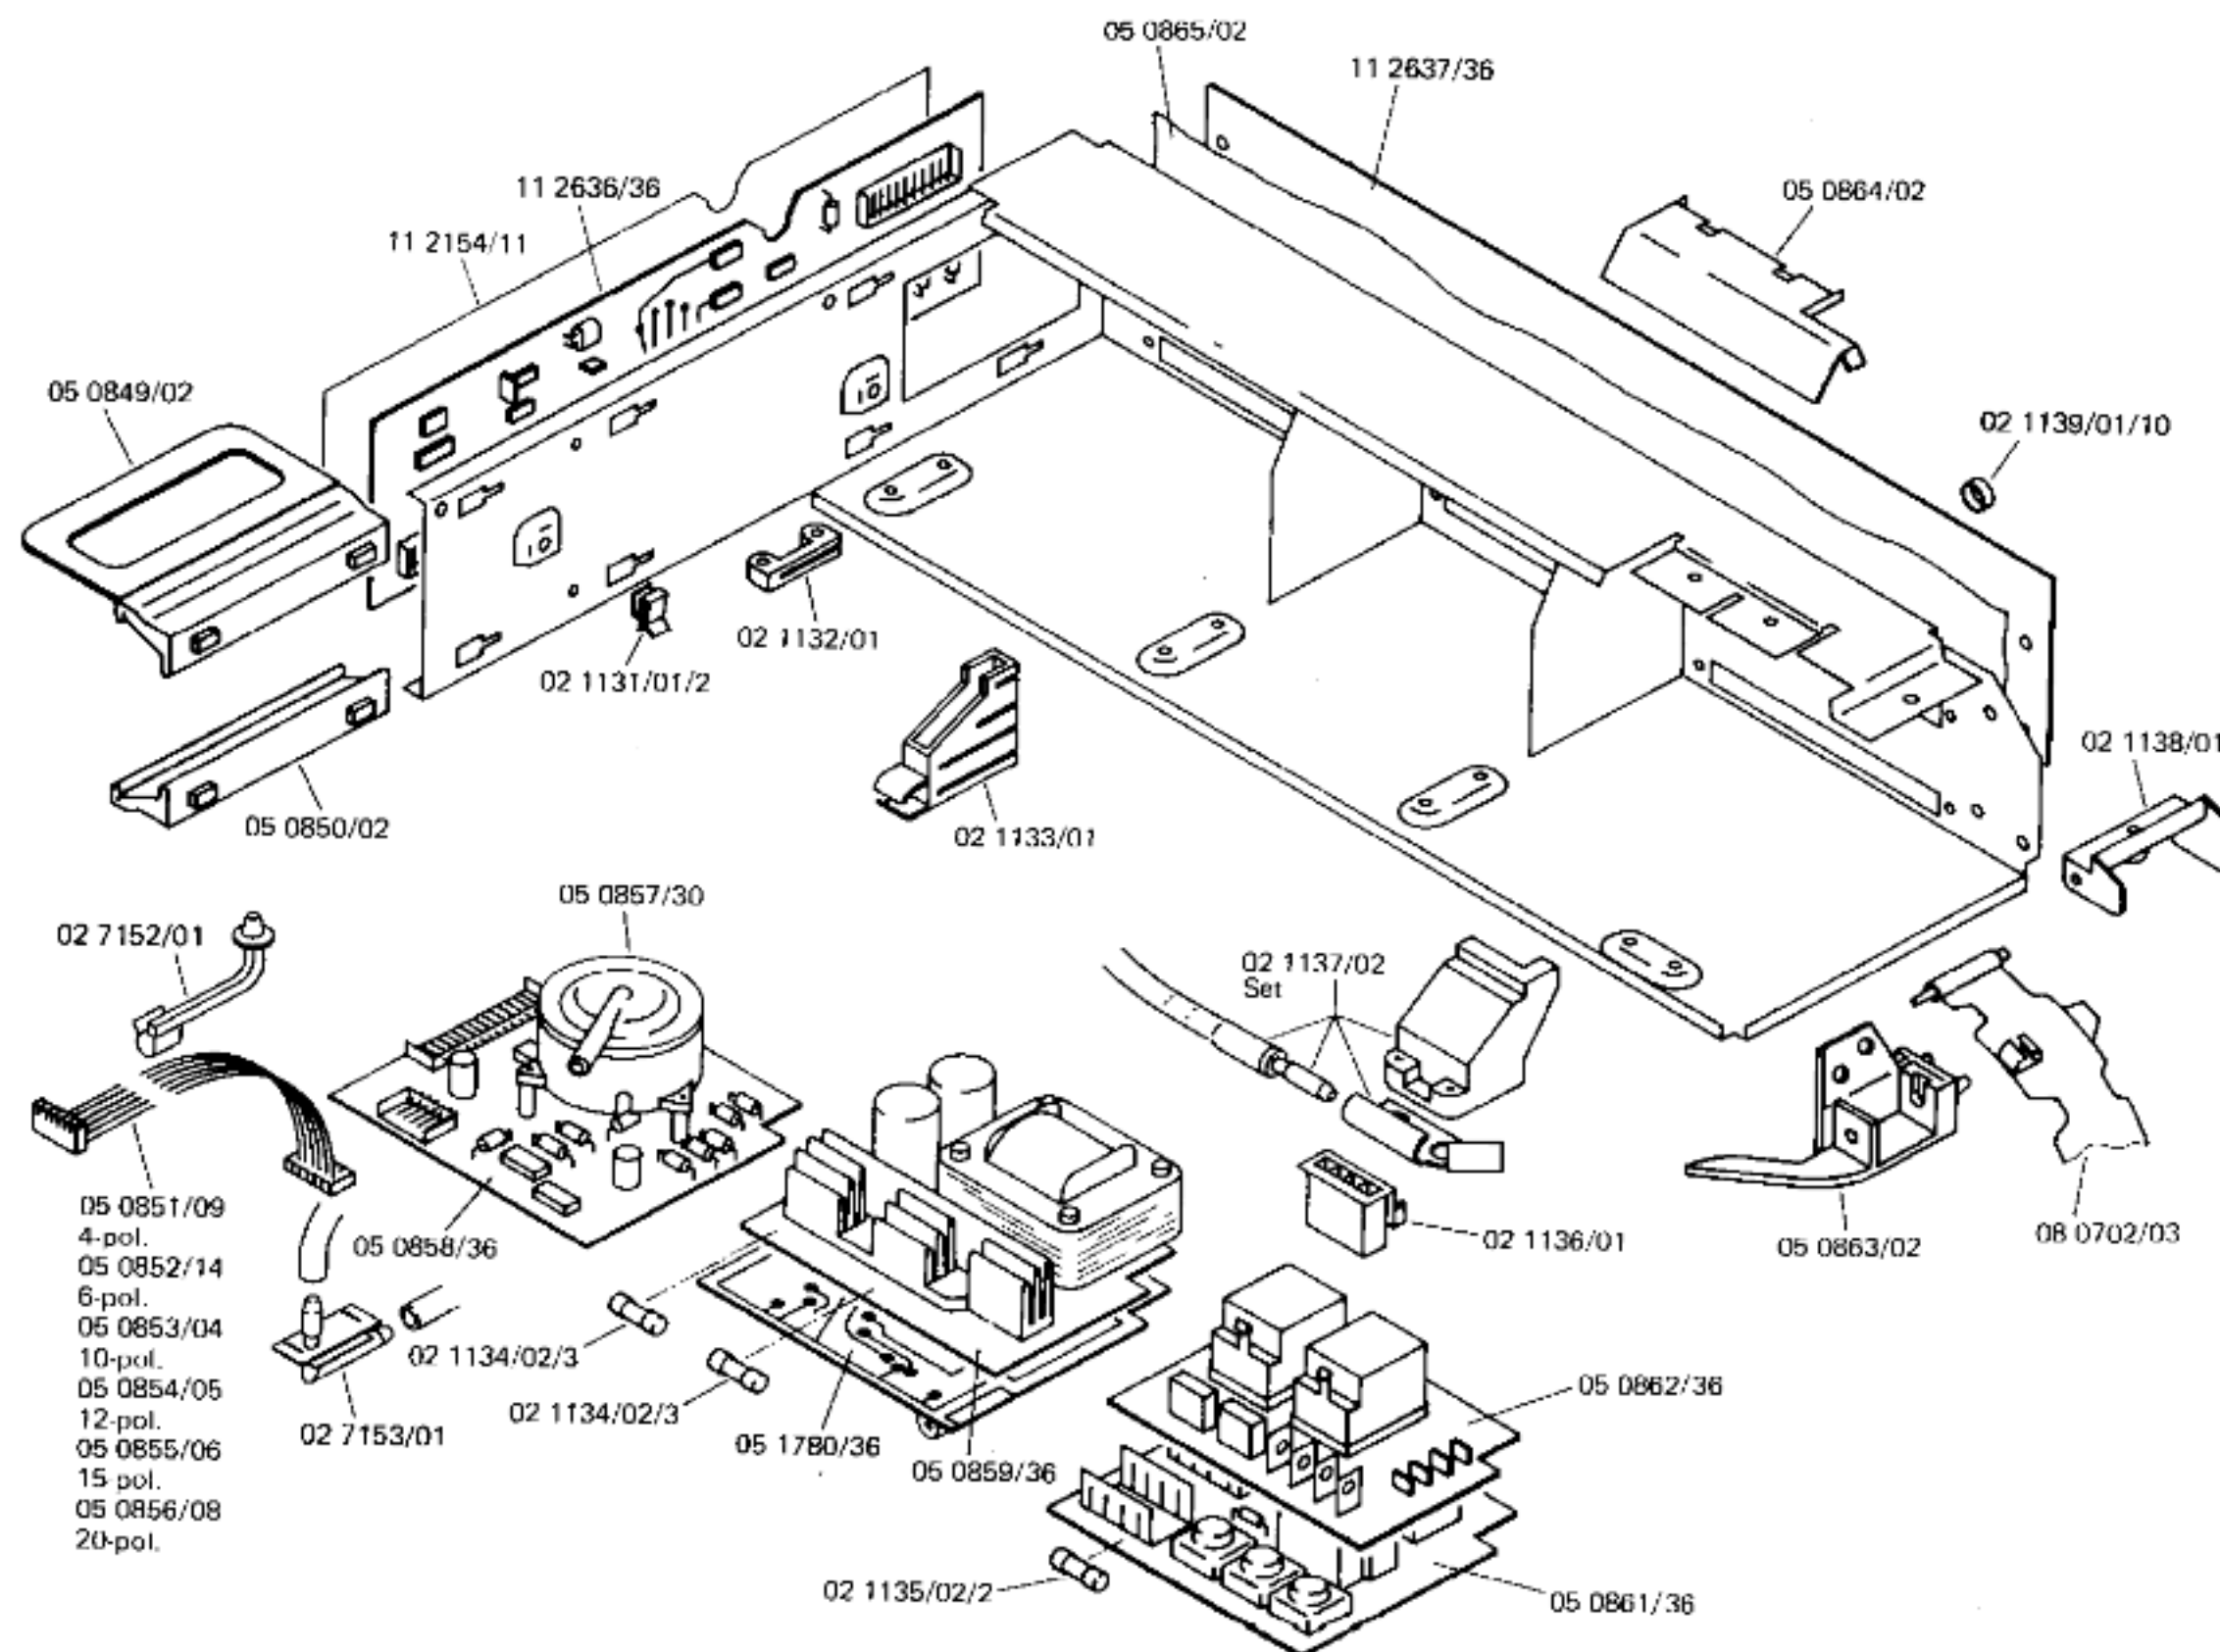

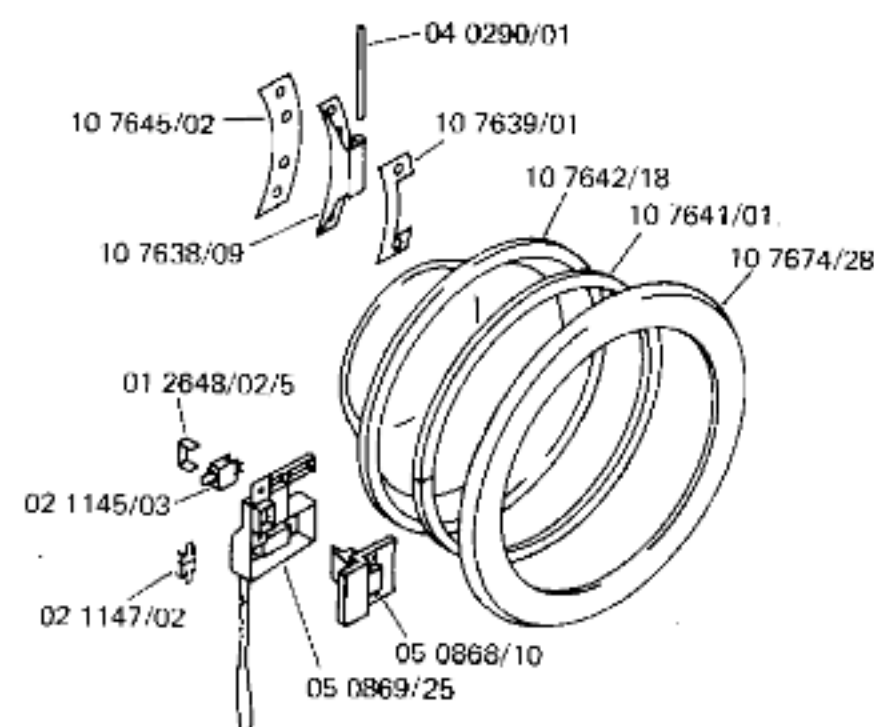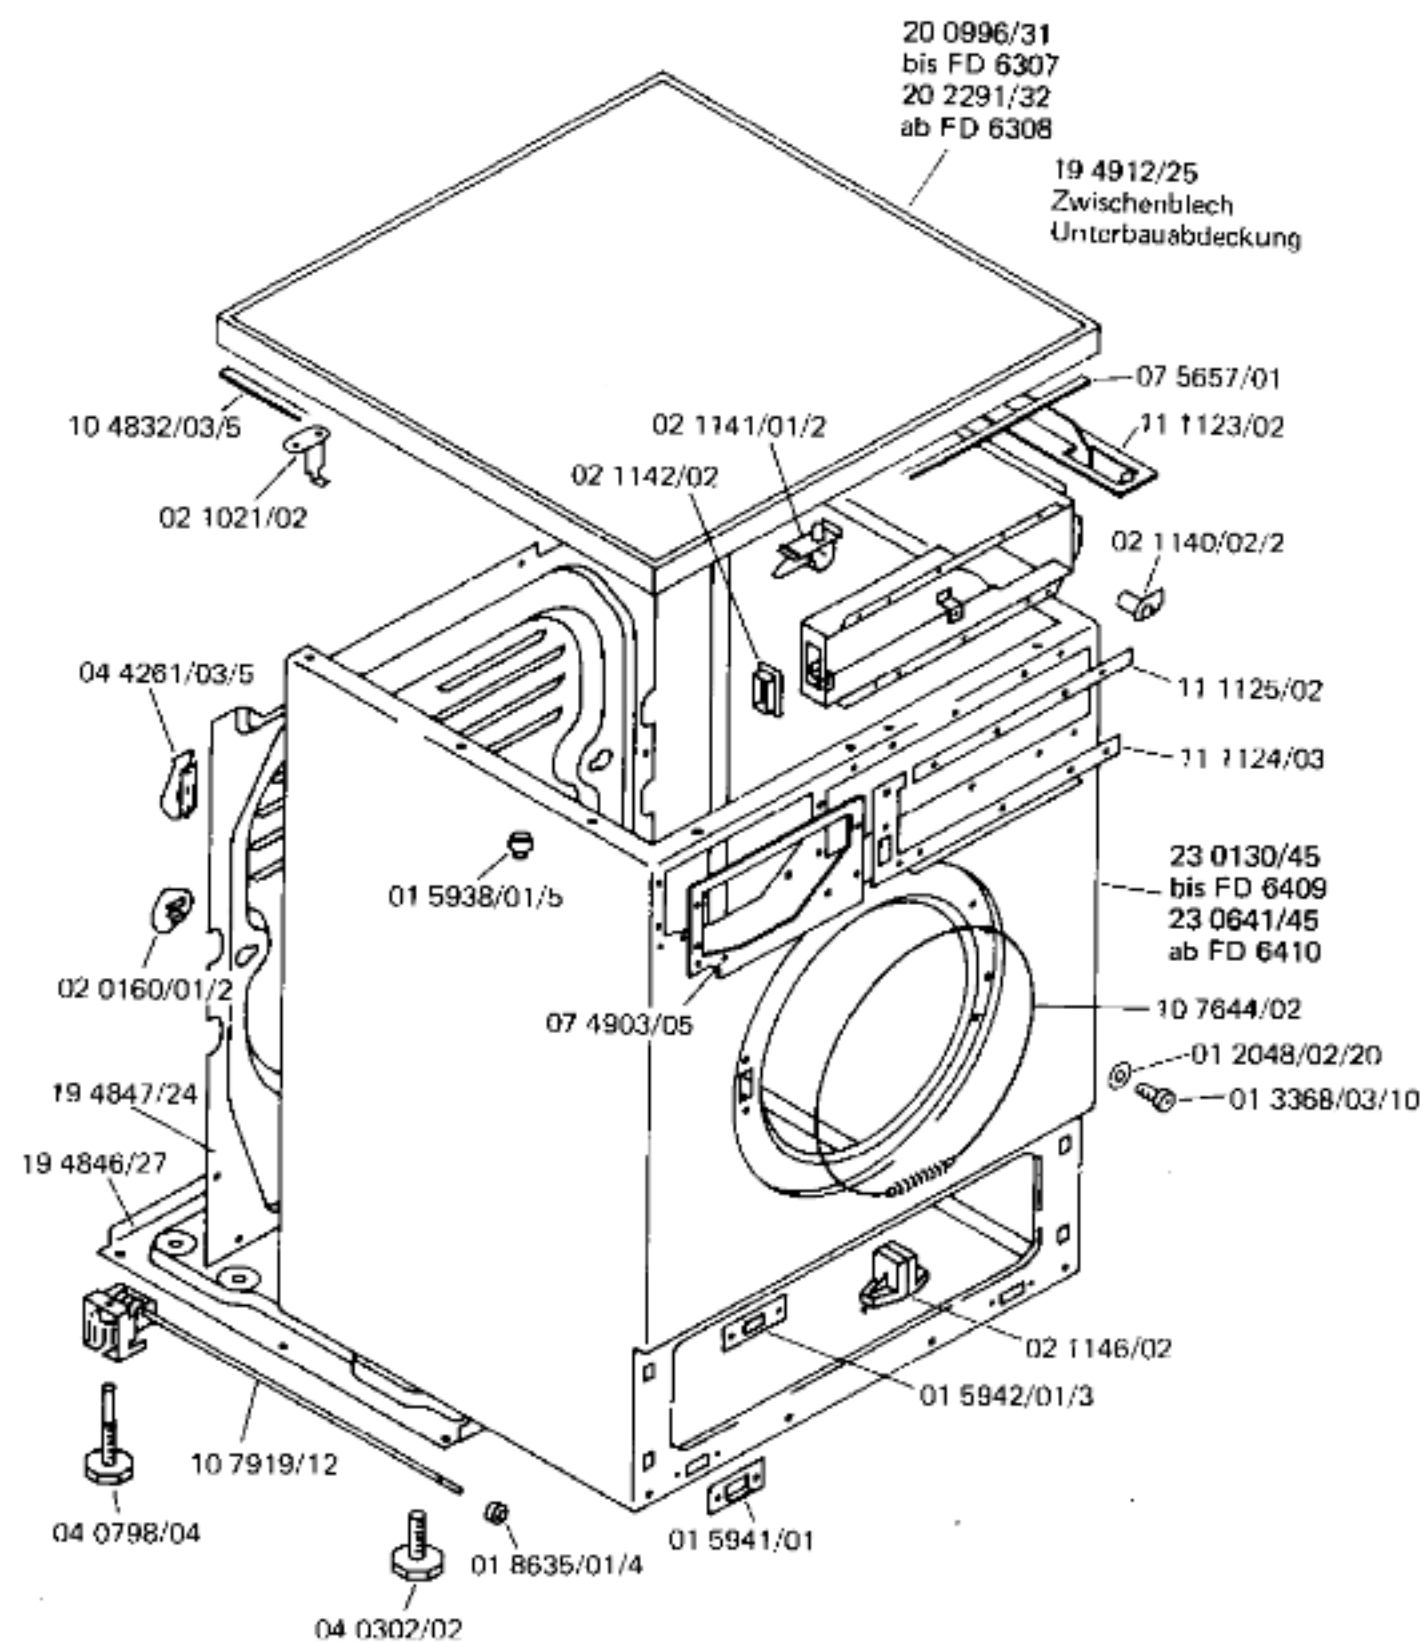

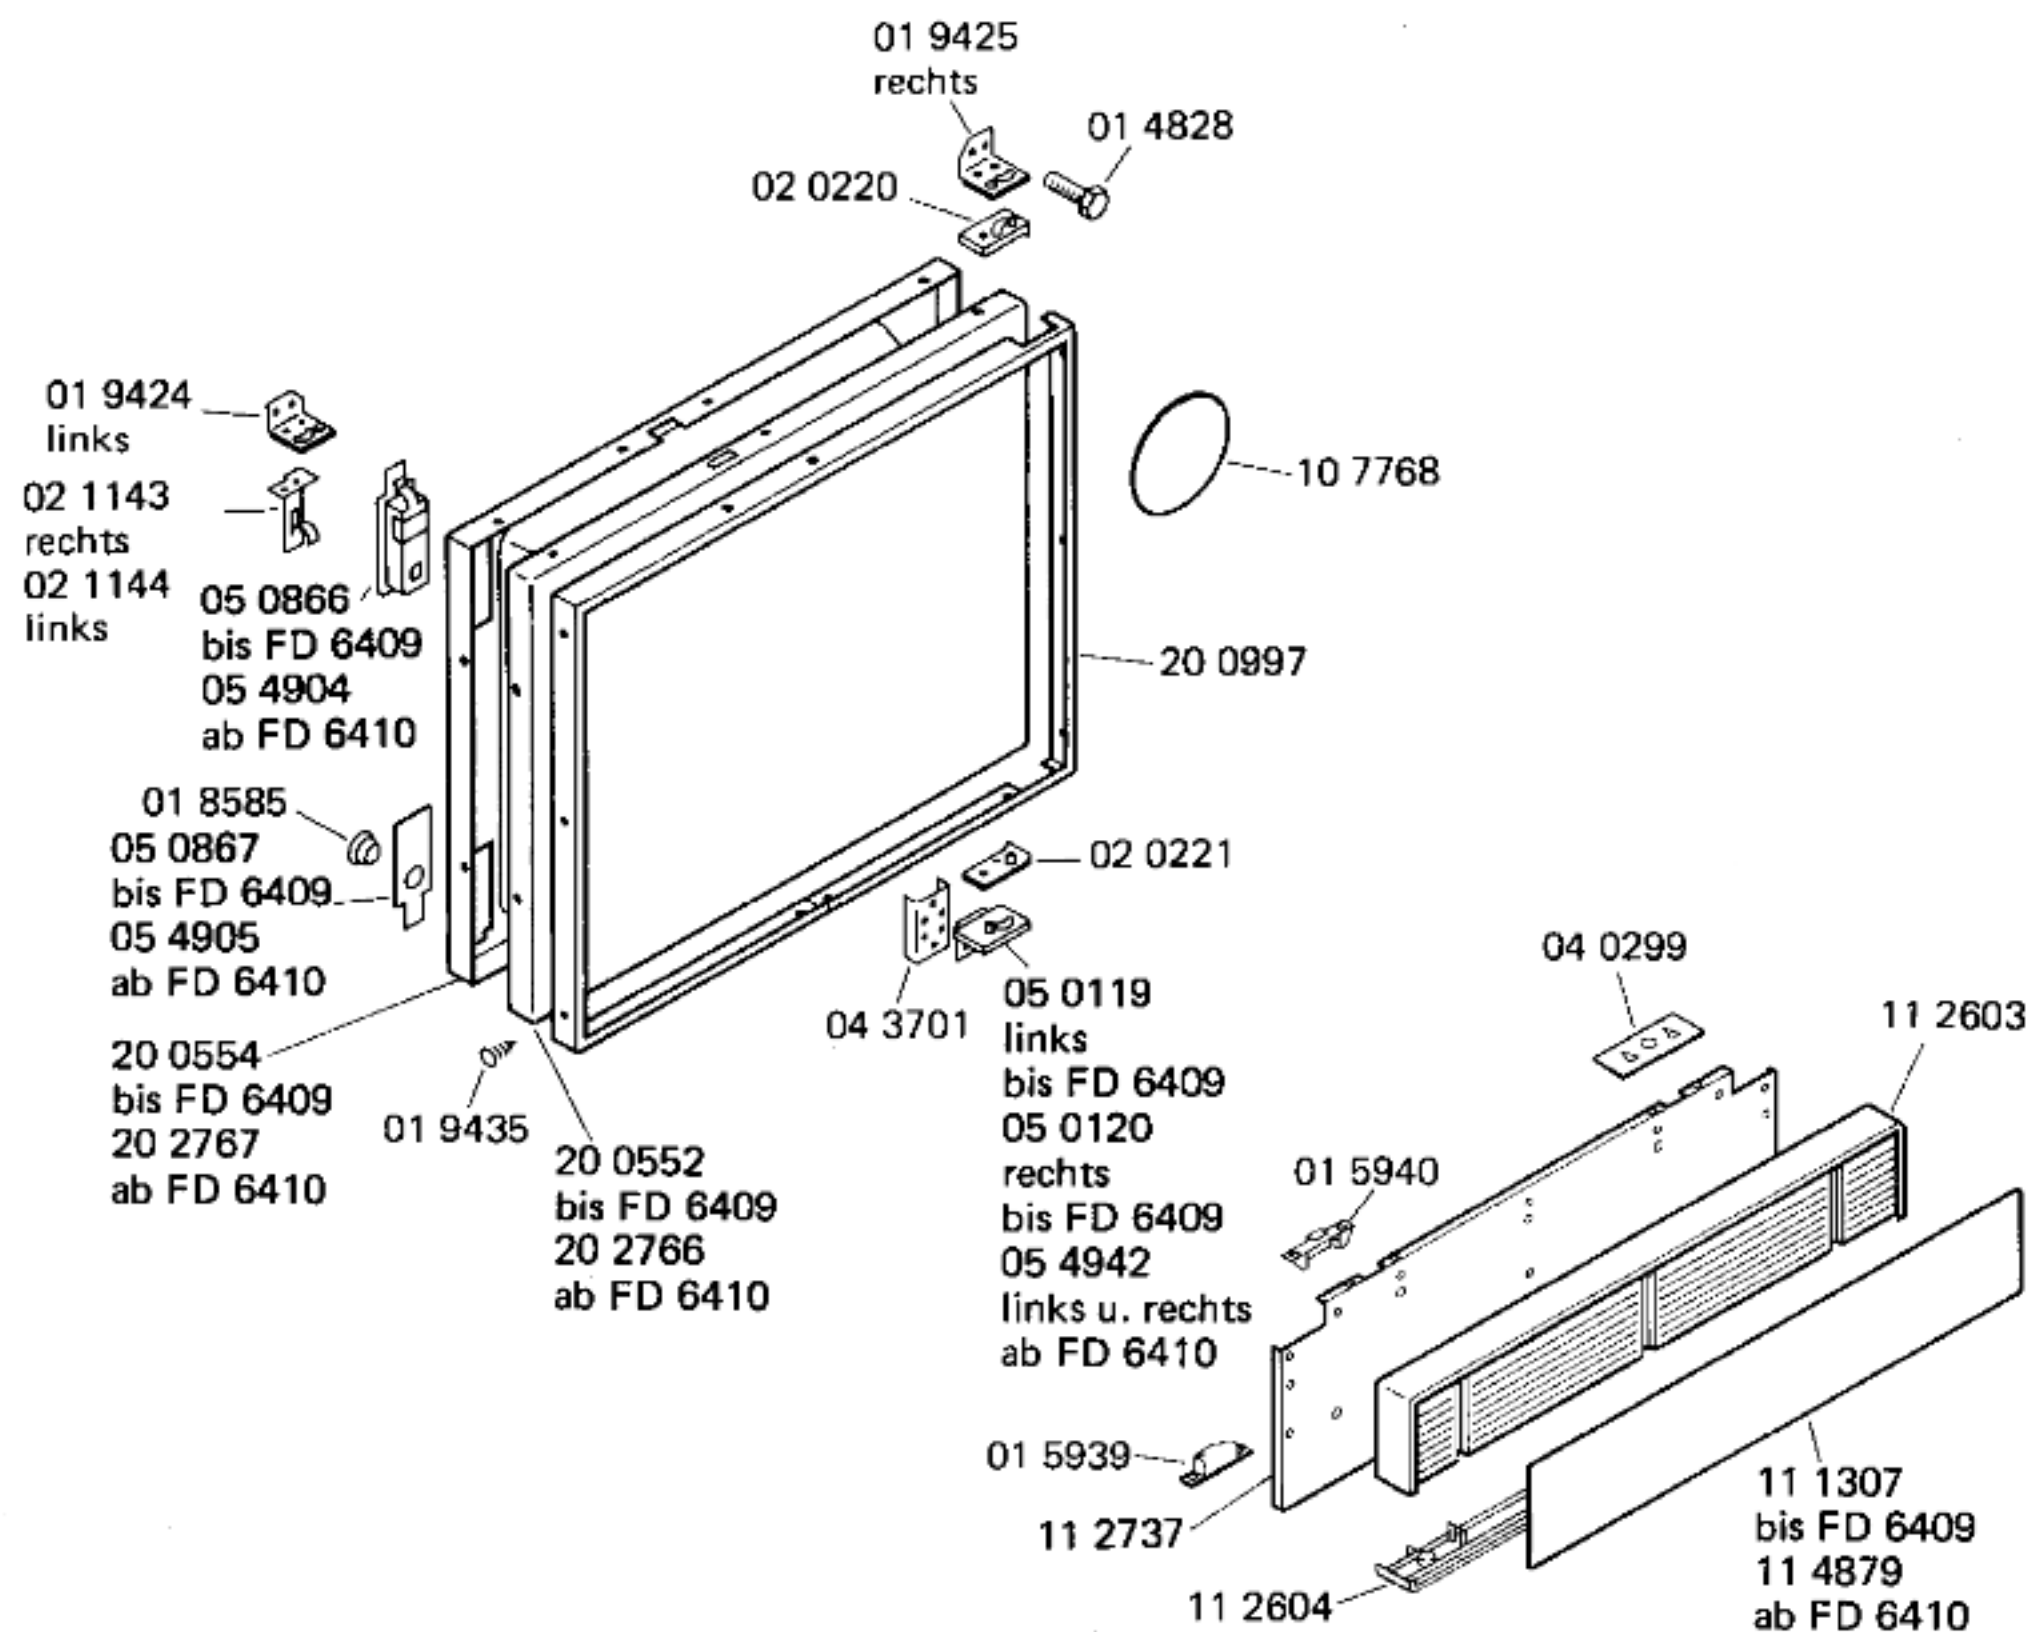

**BOSCH**

BOSCH V 721 – 0 722 044 315–GB1
 – 0 722 044 335–D1
 – 0 722 044 336–F1
 – 0 722 044 339–CH1

BOSCH V 721 – 0 722 044 371–CH2
 – 0 722 044 372–N1

WASCHGERÄTE
 Waschvollautomaten

Ident-Nummern-Konstante
 3/40

