


**BOSCH**

S712 - SMS 7120 - 0 730 100 639-EU1
 S712 - SMS 71204 - 0 730 100 642-I1


GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident-Nummern-Konstante
 3740

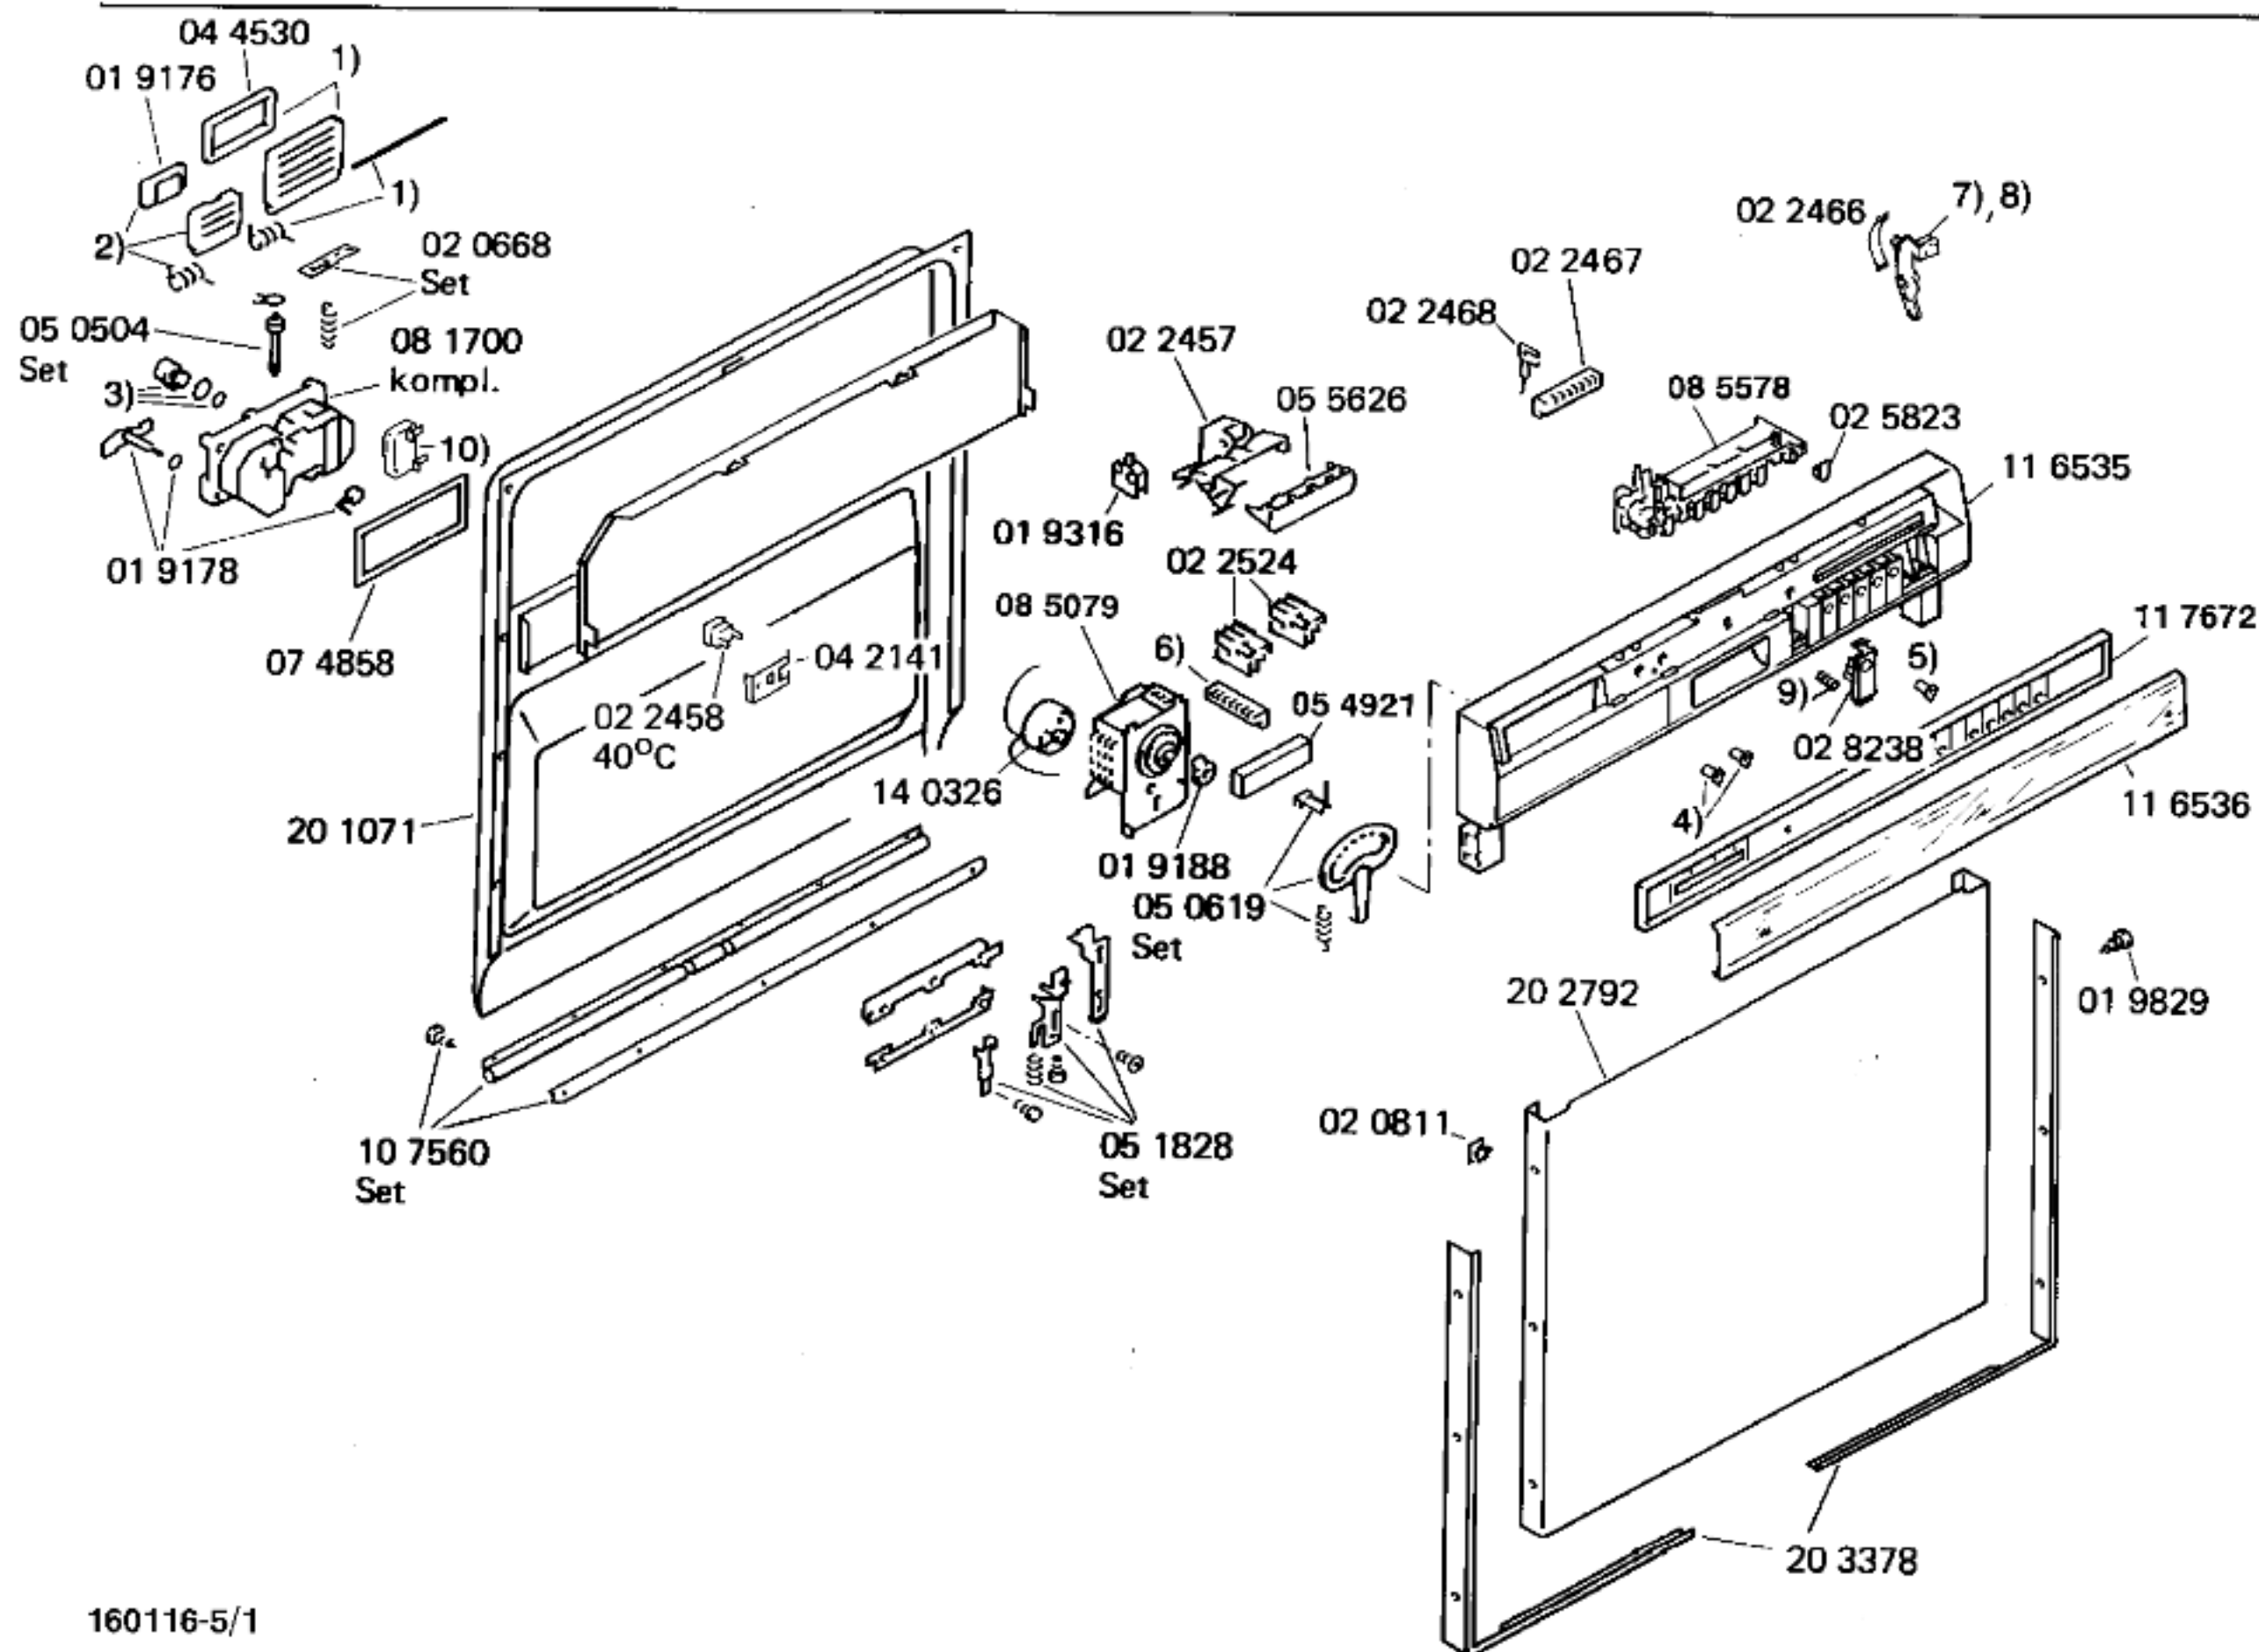

51 3033
 EU1,I1
 Gebrauchsanweisung
 (D,GB,F,I,NL)
 51 2277
 Aufstellanleitung


- 1) 04 2085 Set
- 2) 04 2105 Set
- 3) 01 9177 Set
- 4) 02 5122
- 5) 02 5123
- 6) 02 2459
- 7) 02 5657 rot
- 8) 02 5658 grün
- 9) 02 5824
- 10) 02 1237

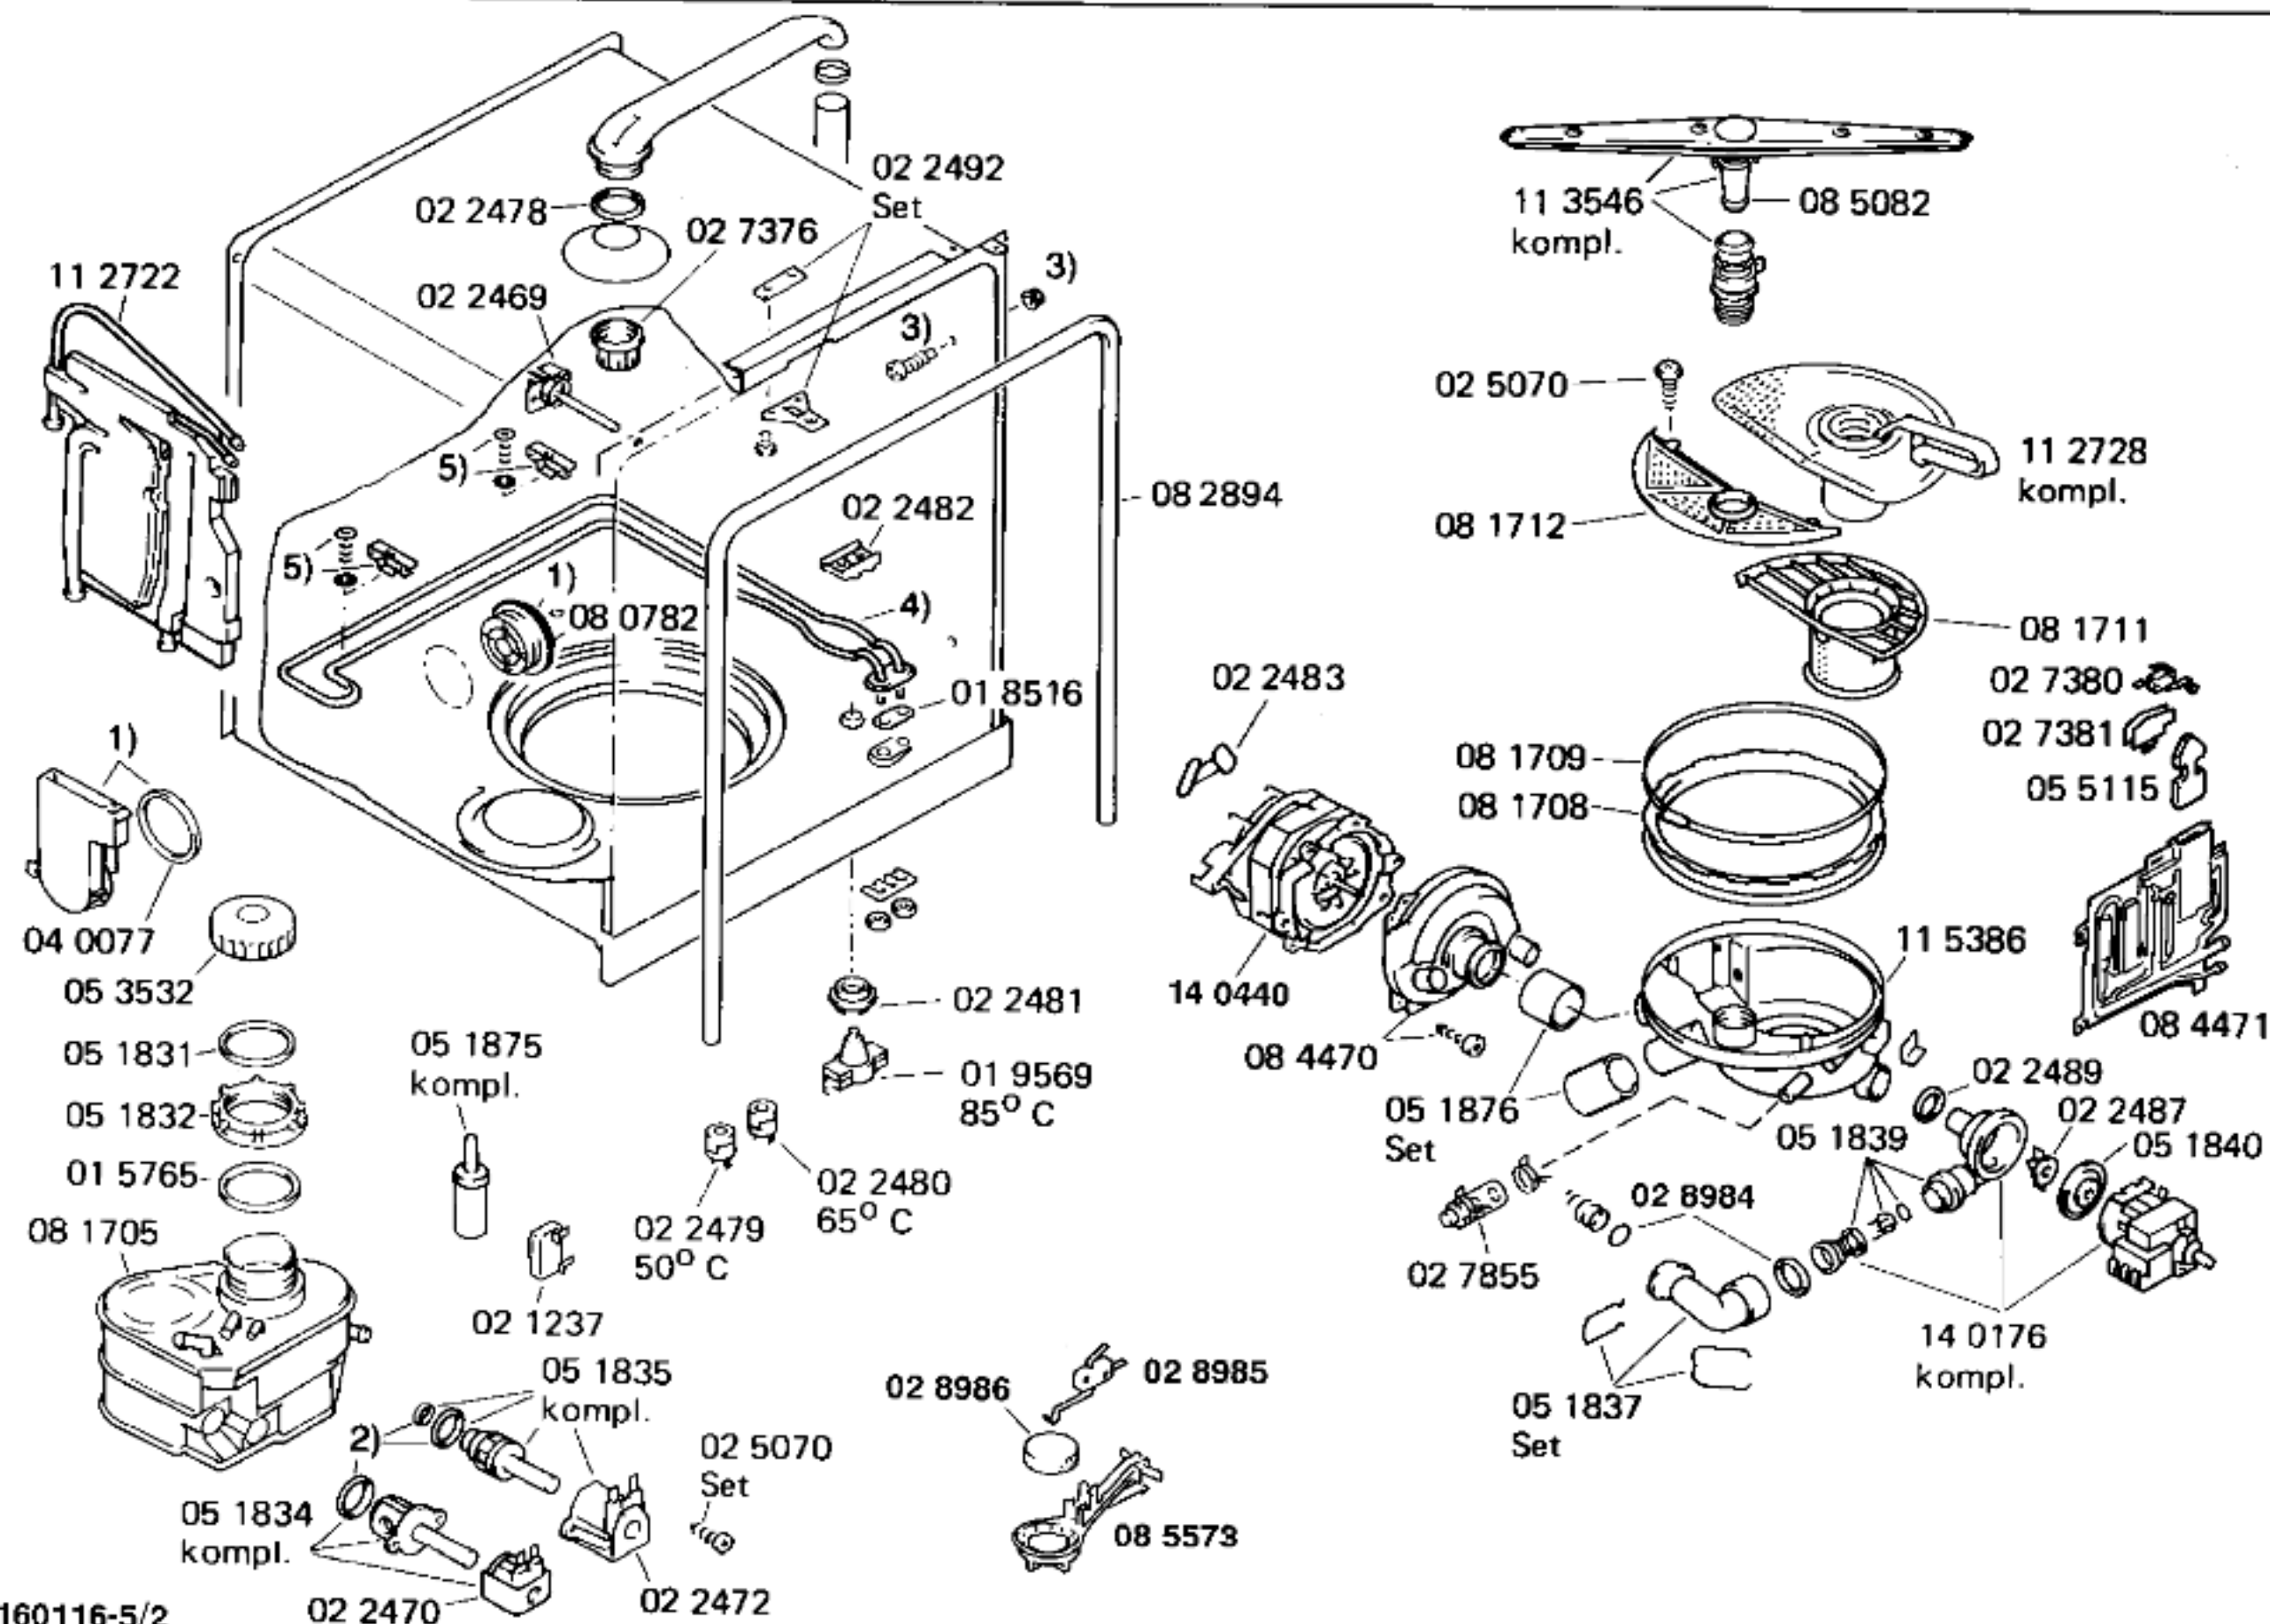

Ident-Nummern-Konstante
3740


- 1) 08 0781
Set
- 2) 02 5067
Set
- 3) 01 9204
Set
- 4) 20 1073
EU1
20 2256
I1
- 5) 05 1838

Ident-Nummern-Konstante
3740

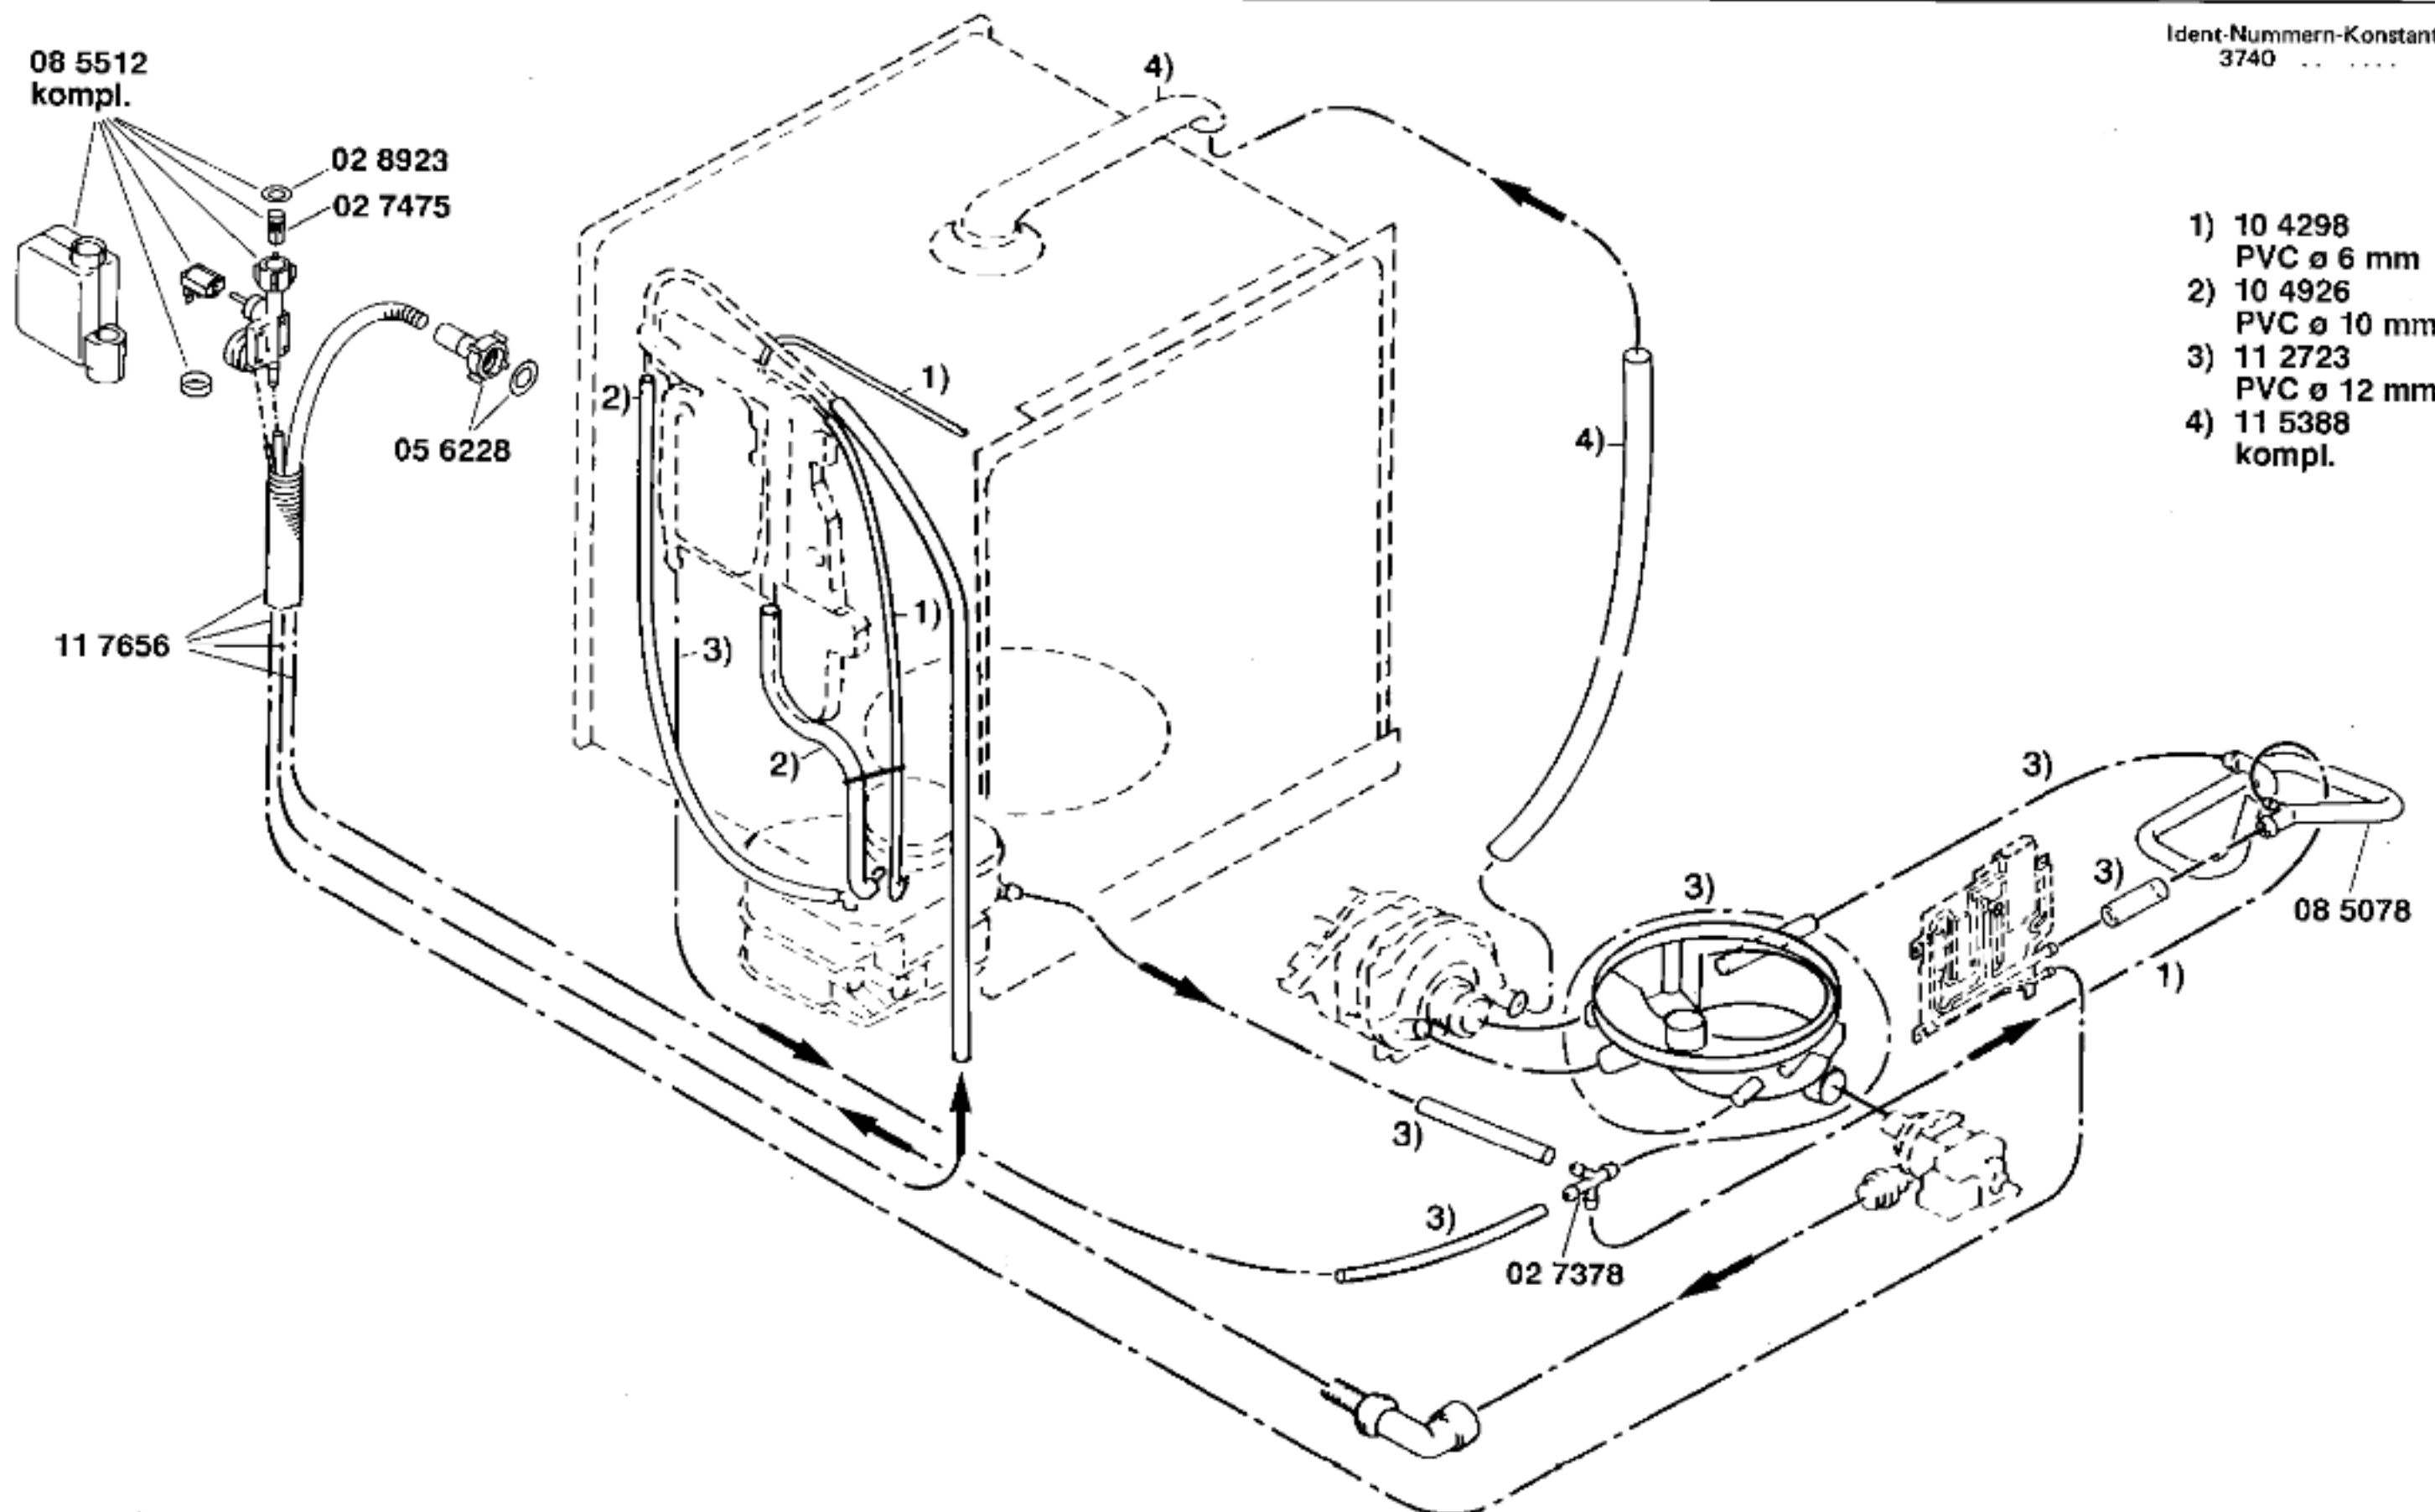

Ident-Nummern-Konstante
3740

1) 01 3861
2) 02 7386

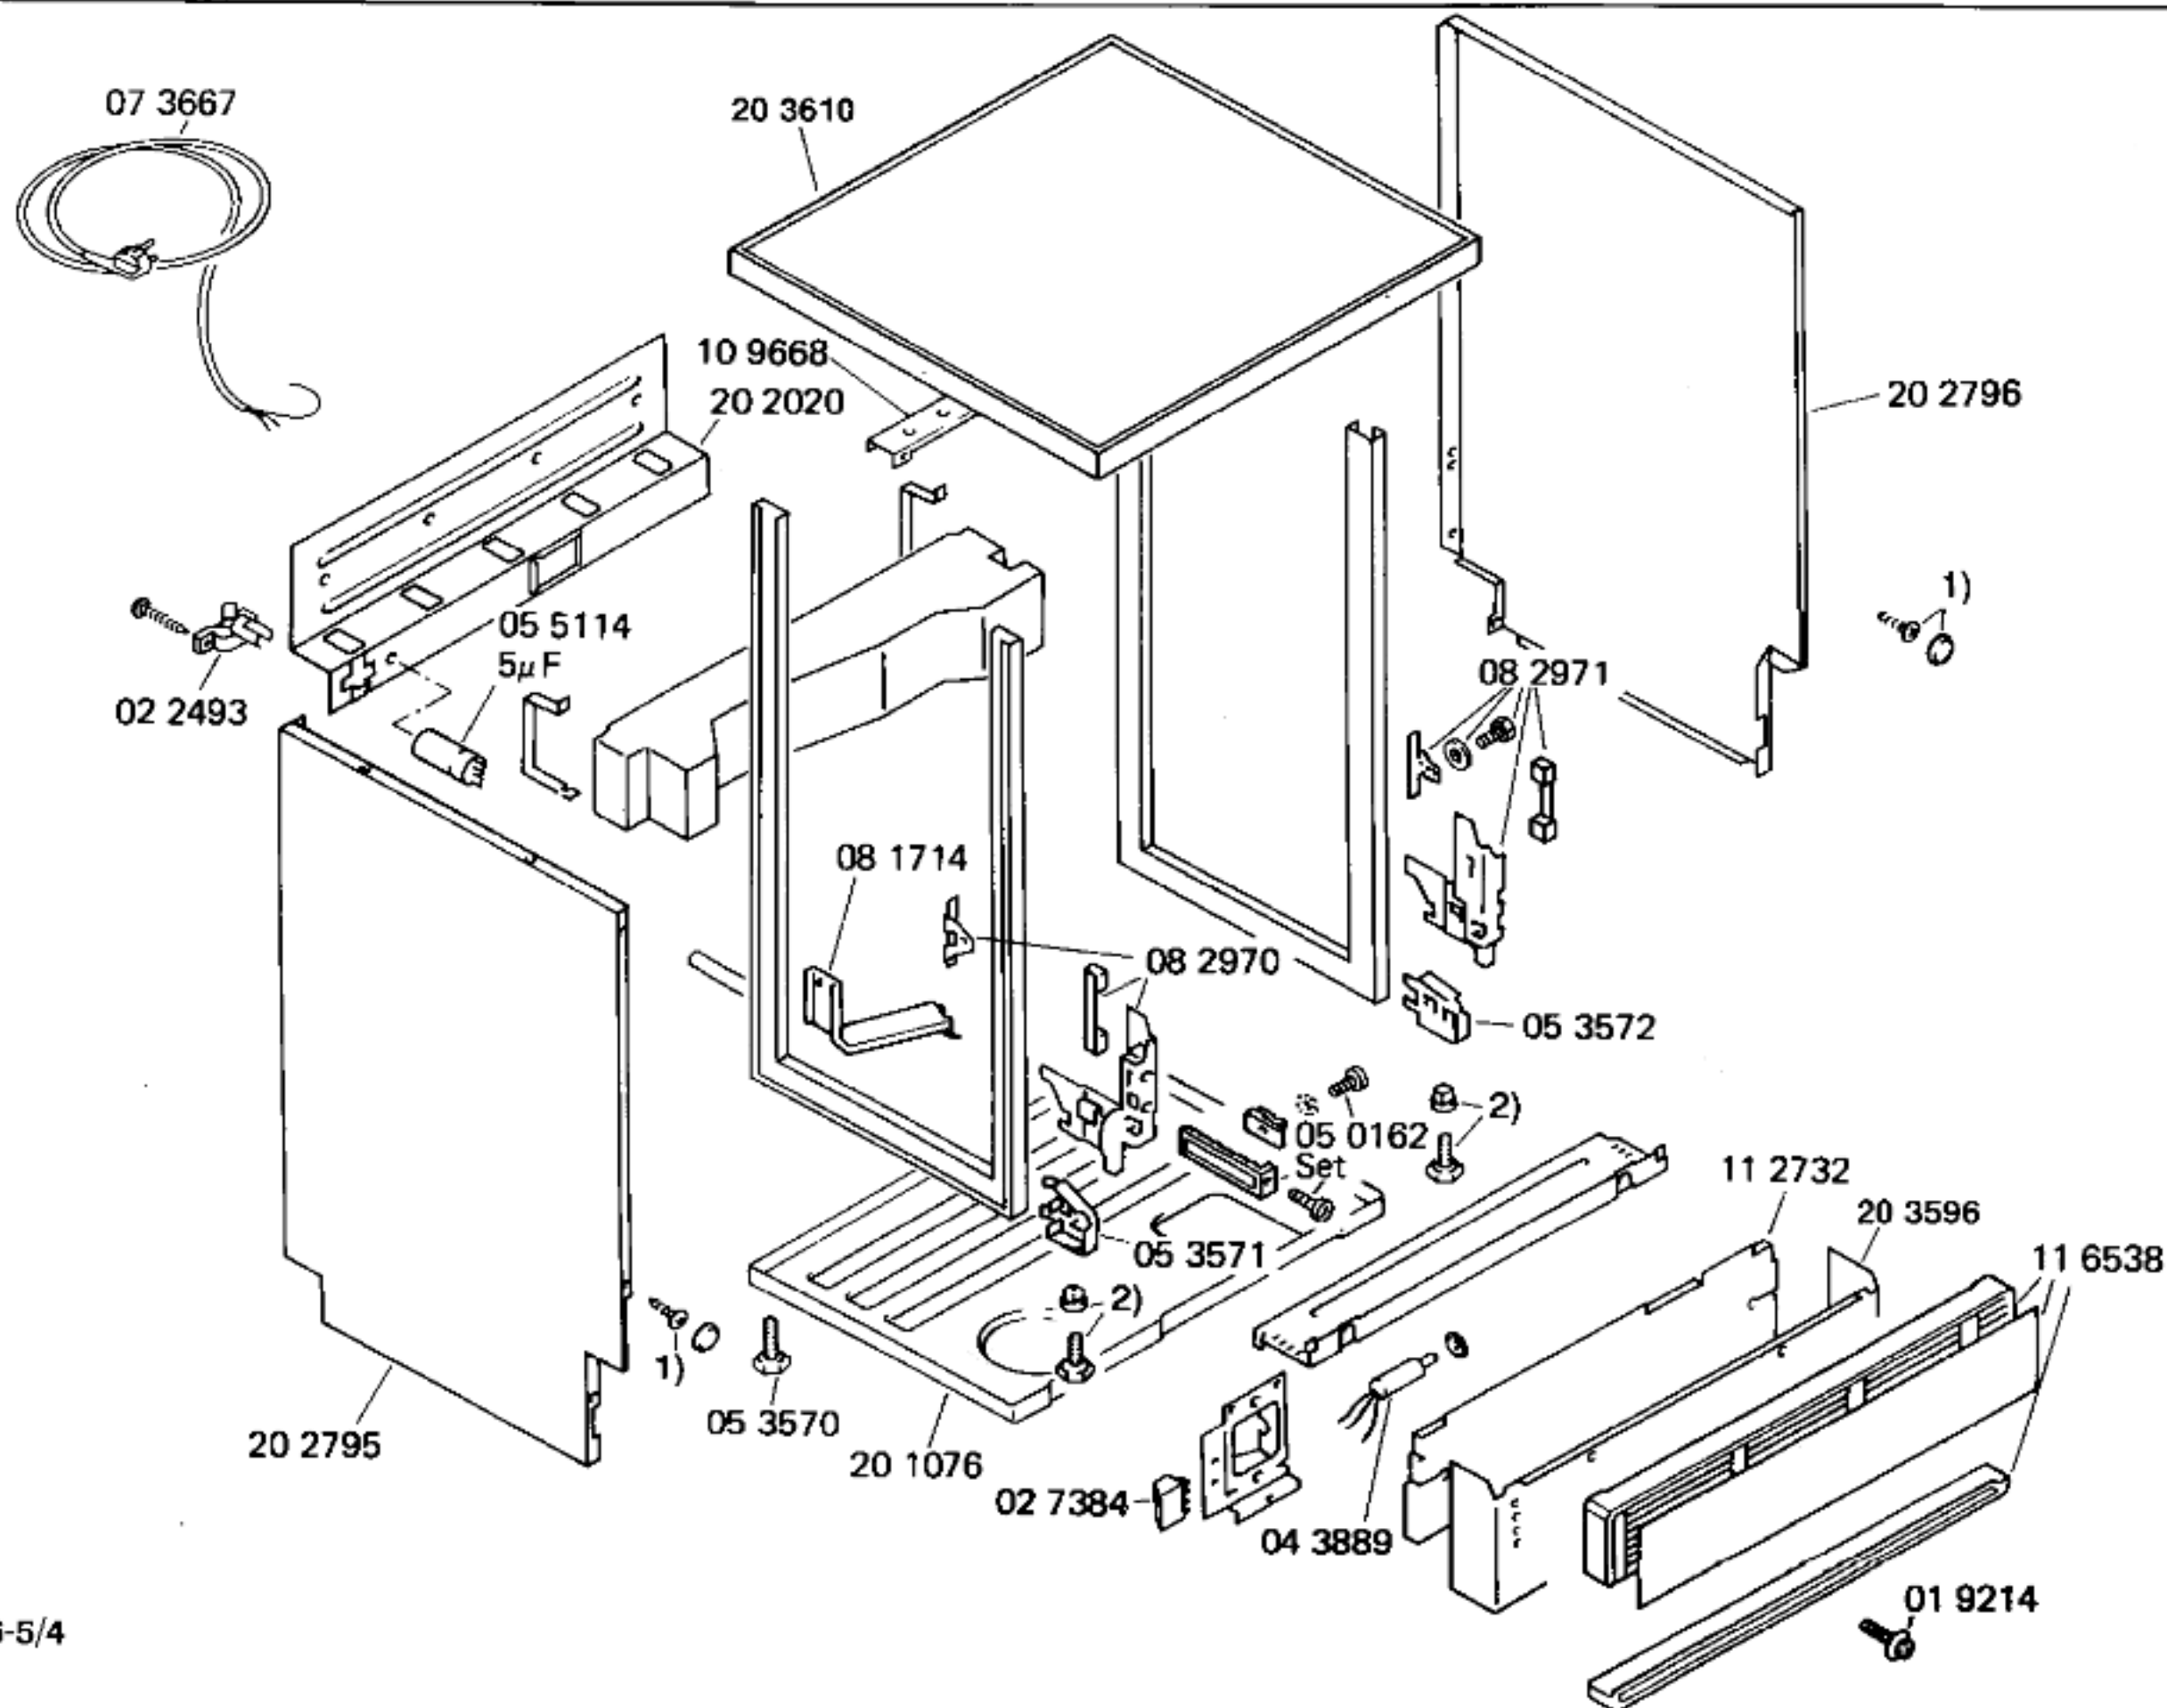


**BOSCH**

S712 - SMS 7120 - 0 730 100 639-EU1
 S712 - SMS 71204 - 0 730 100 642-I1

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident-Nummern-Konstante
 3740

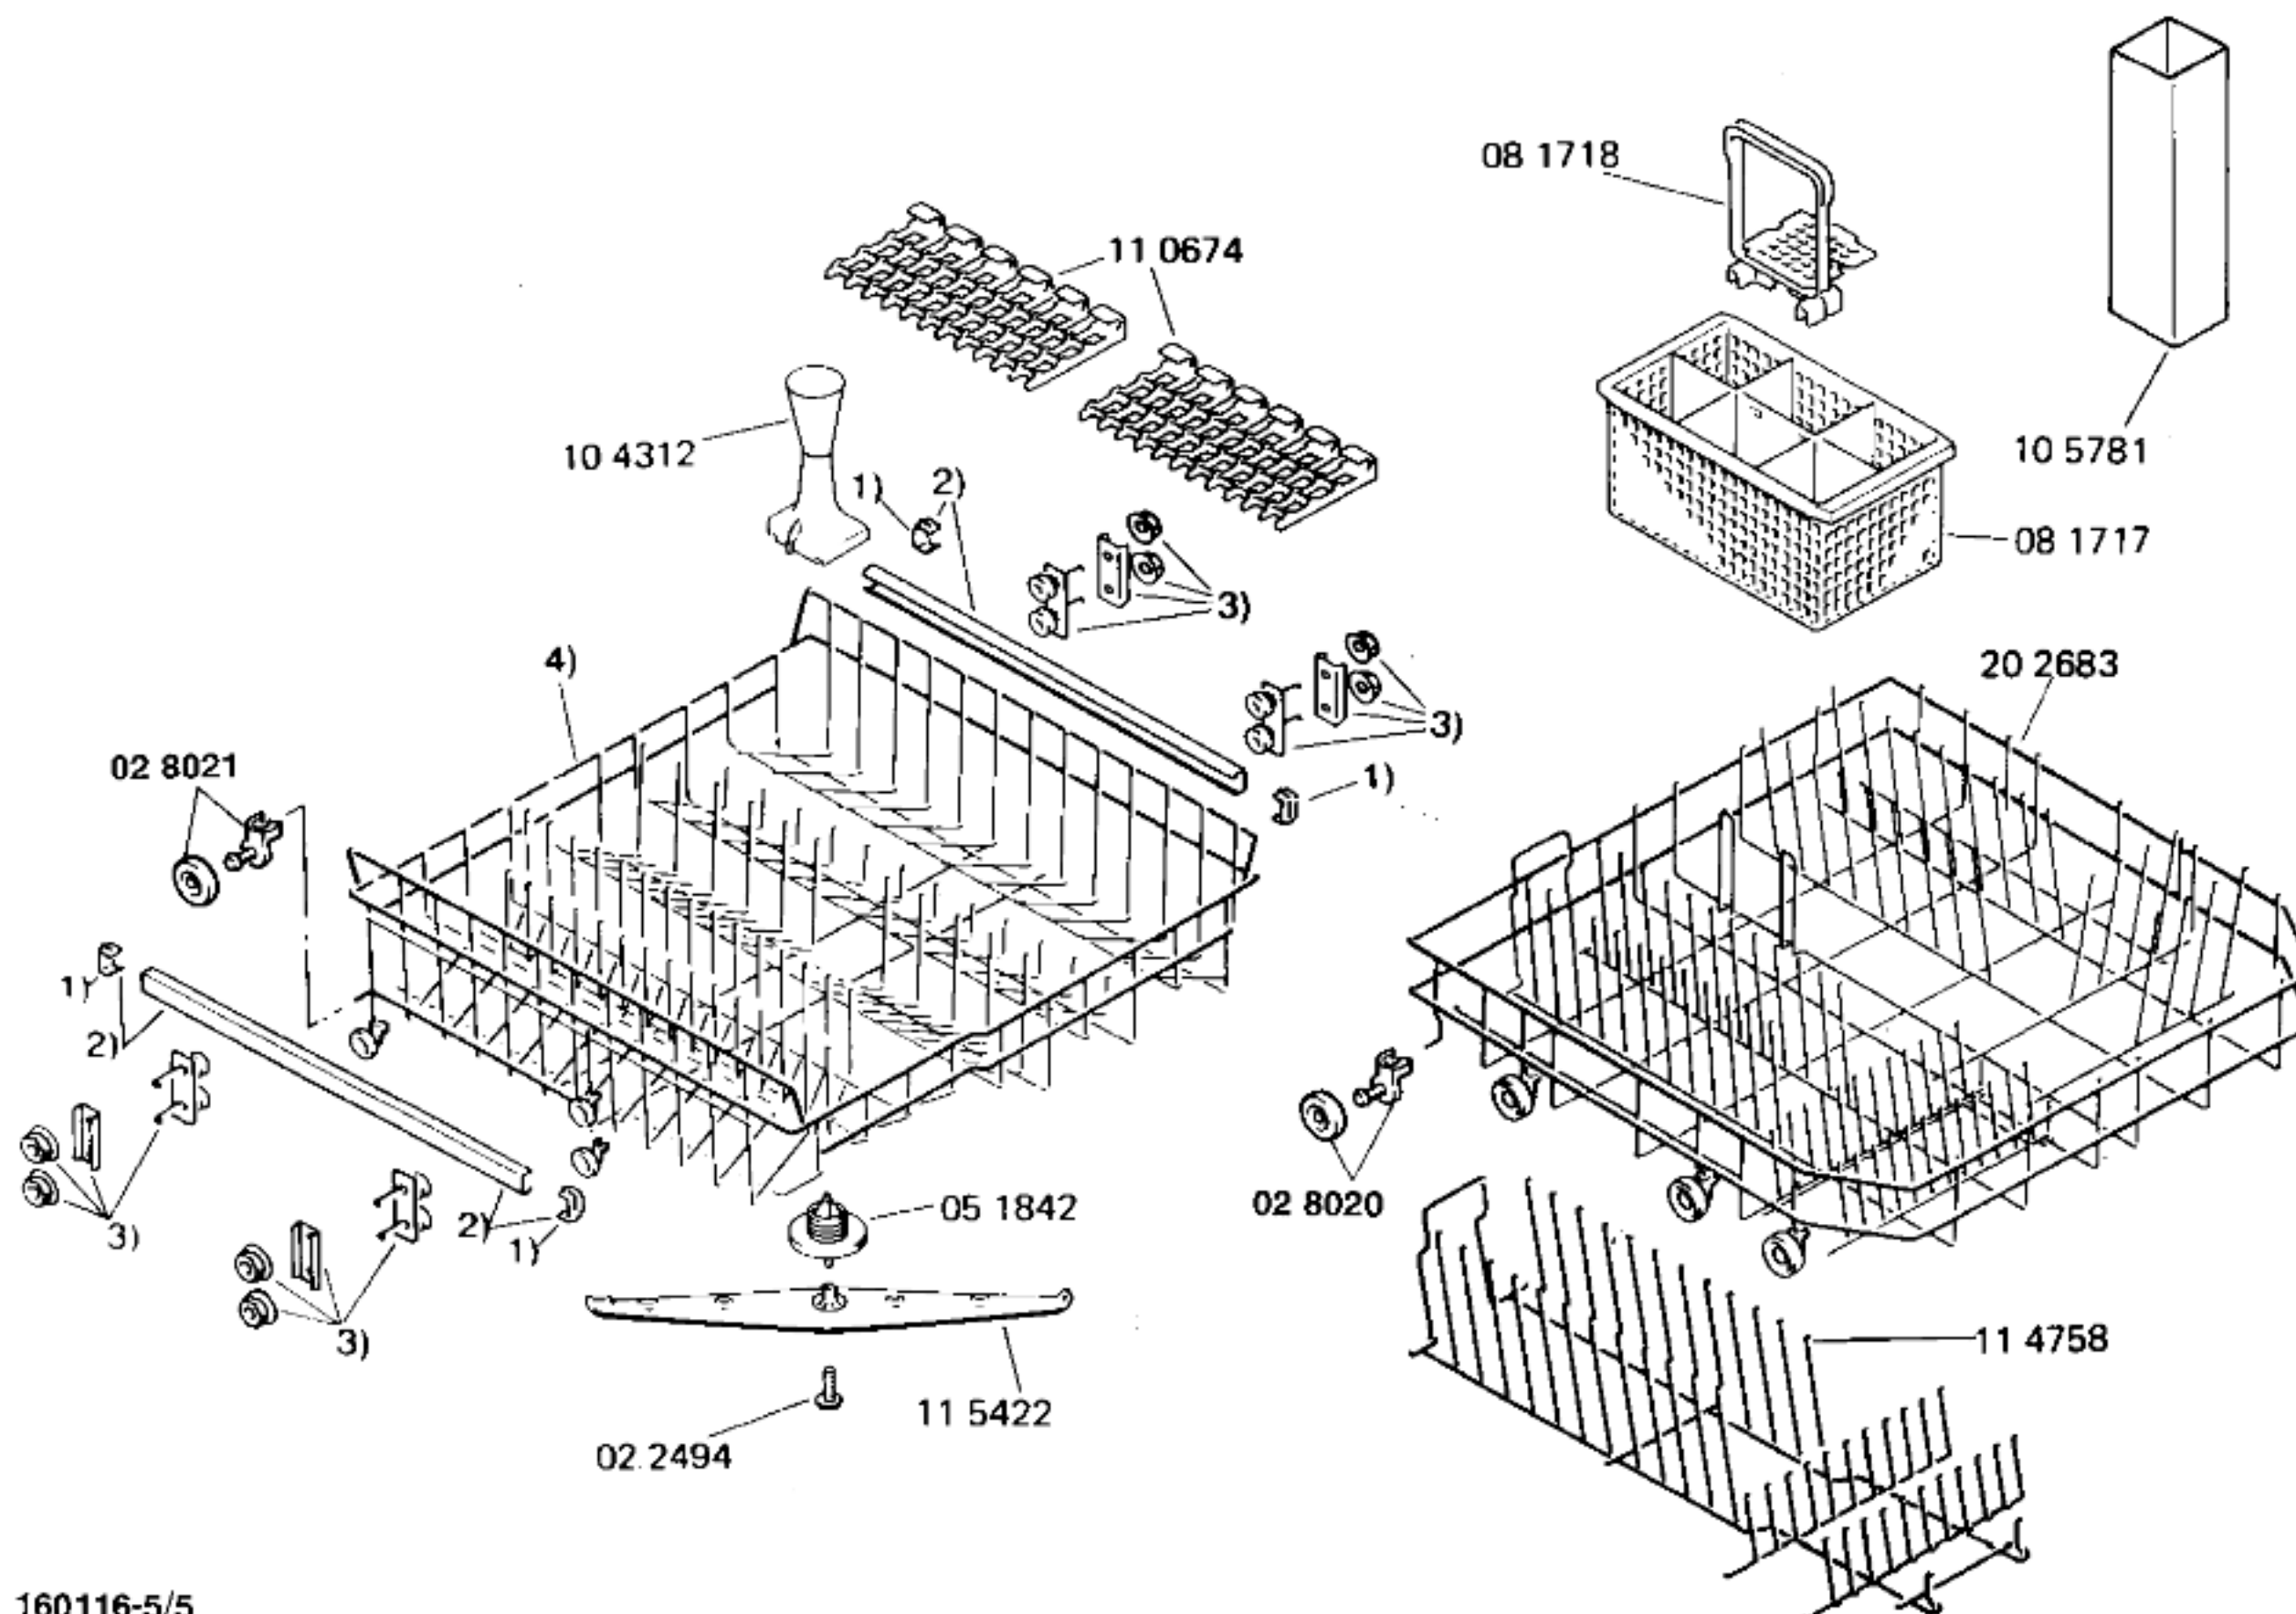

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set
- 4) 20 1970
EU1
20 3631
I1