


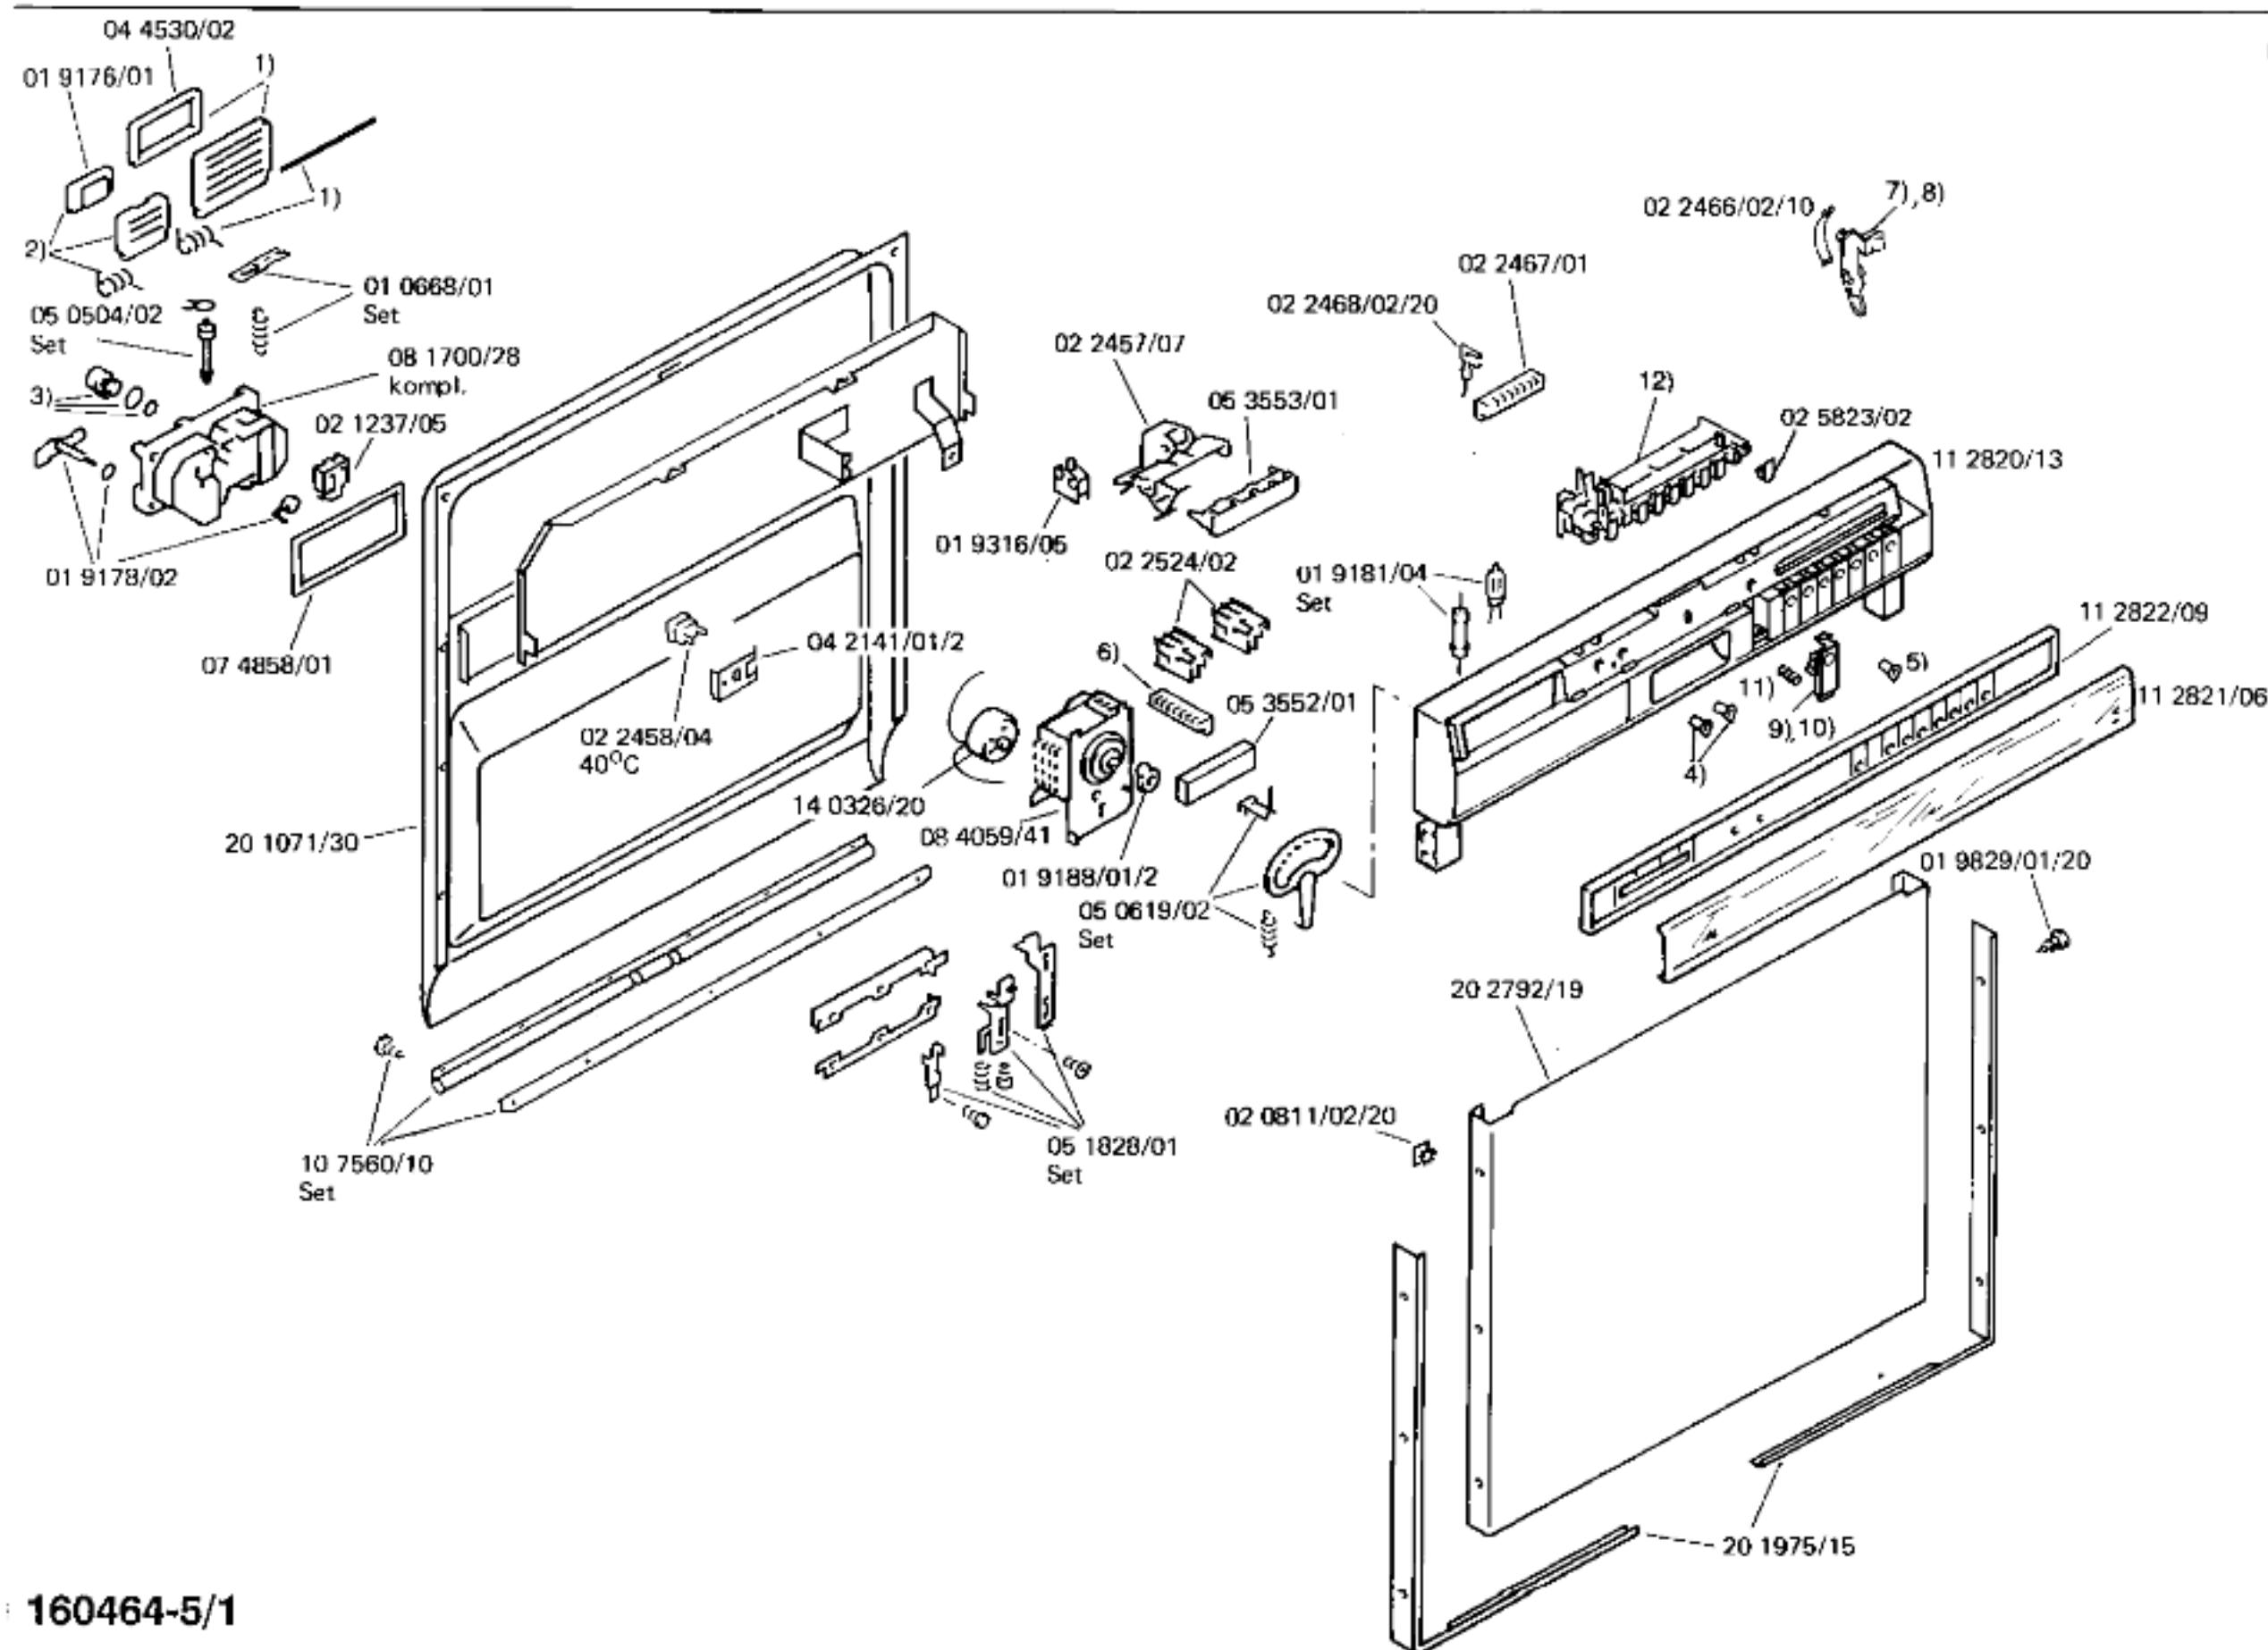


Ident-Nummern-Konstante
3740


- 51 1373/00
EU1, I1
Gebrauchsanweisung
(D,GB,F,I,DK)
51 2277/00
Aufstellanleitung
- 1) 04 2085/04
Set
- 2) 04 2105/03
Set
- 3) 01 9177/02
Set
- 4) 02 5122/01/4
- 5) 02 5123/01/2
- 6) 02 2459/01
- 7) 02 5657/01
rot
- 8) 02 5658/01
grün
- 9) 02 5125/01/3
Taste hell
- 10) 02 5126/03/1
Taste dunkel
- 11) 02 5824/01/3
- 12) 08 1703/22
bis FD 6504
08 4238/21
ab FD 6505


**BOSCH**

SMS 7100 — 0 730 100 623—EU1

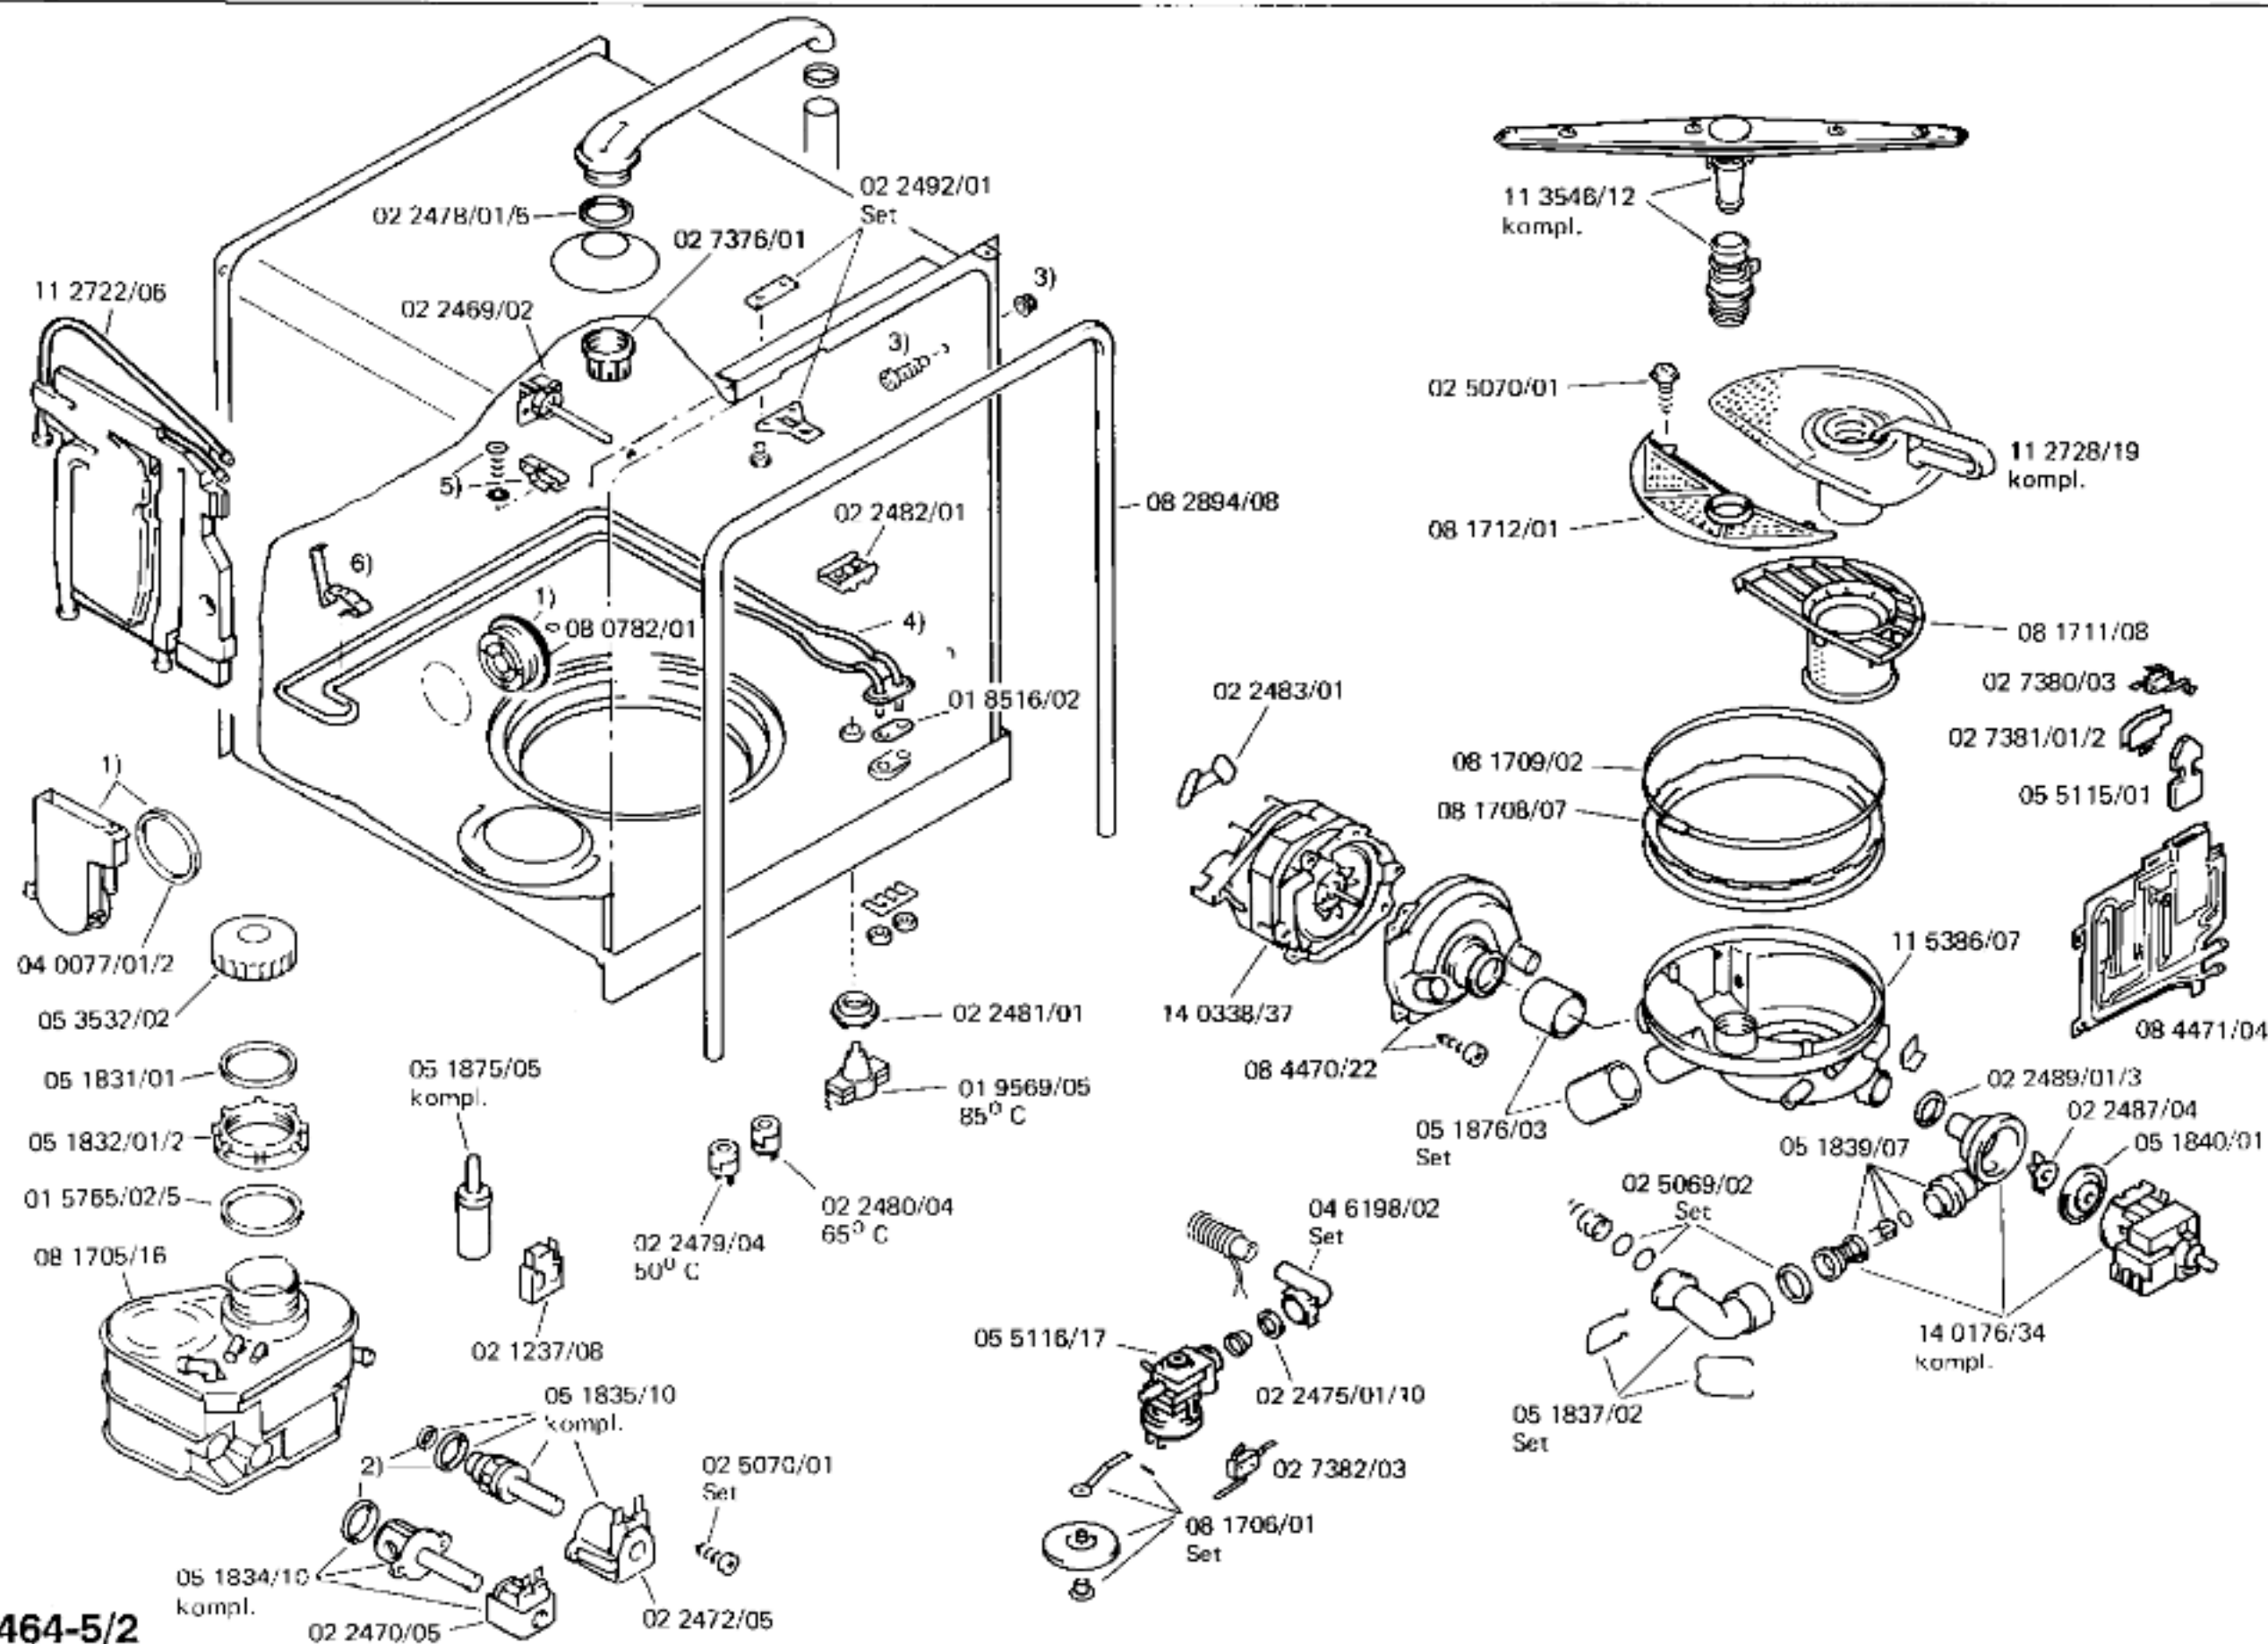GESCHIRRSPELGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

160464-5/2

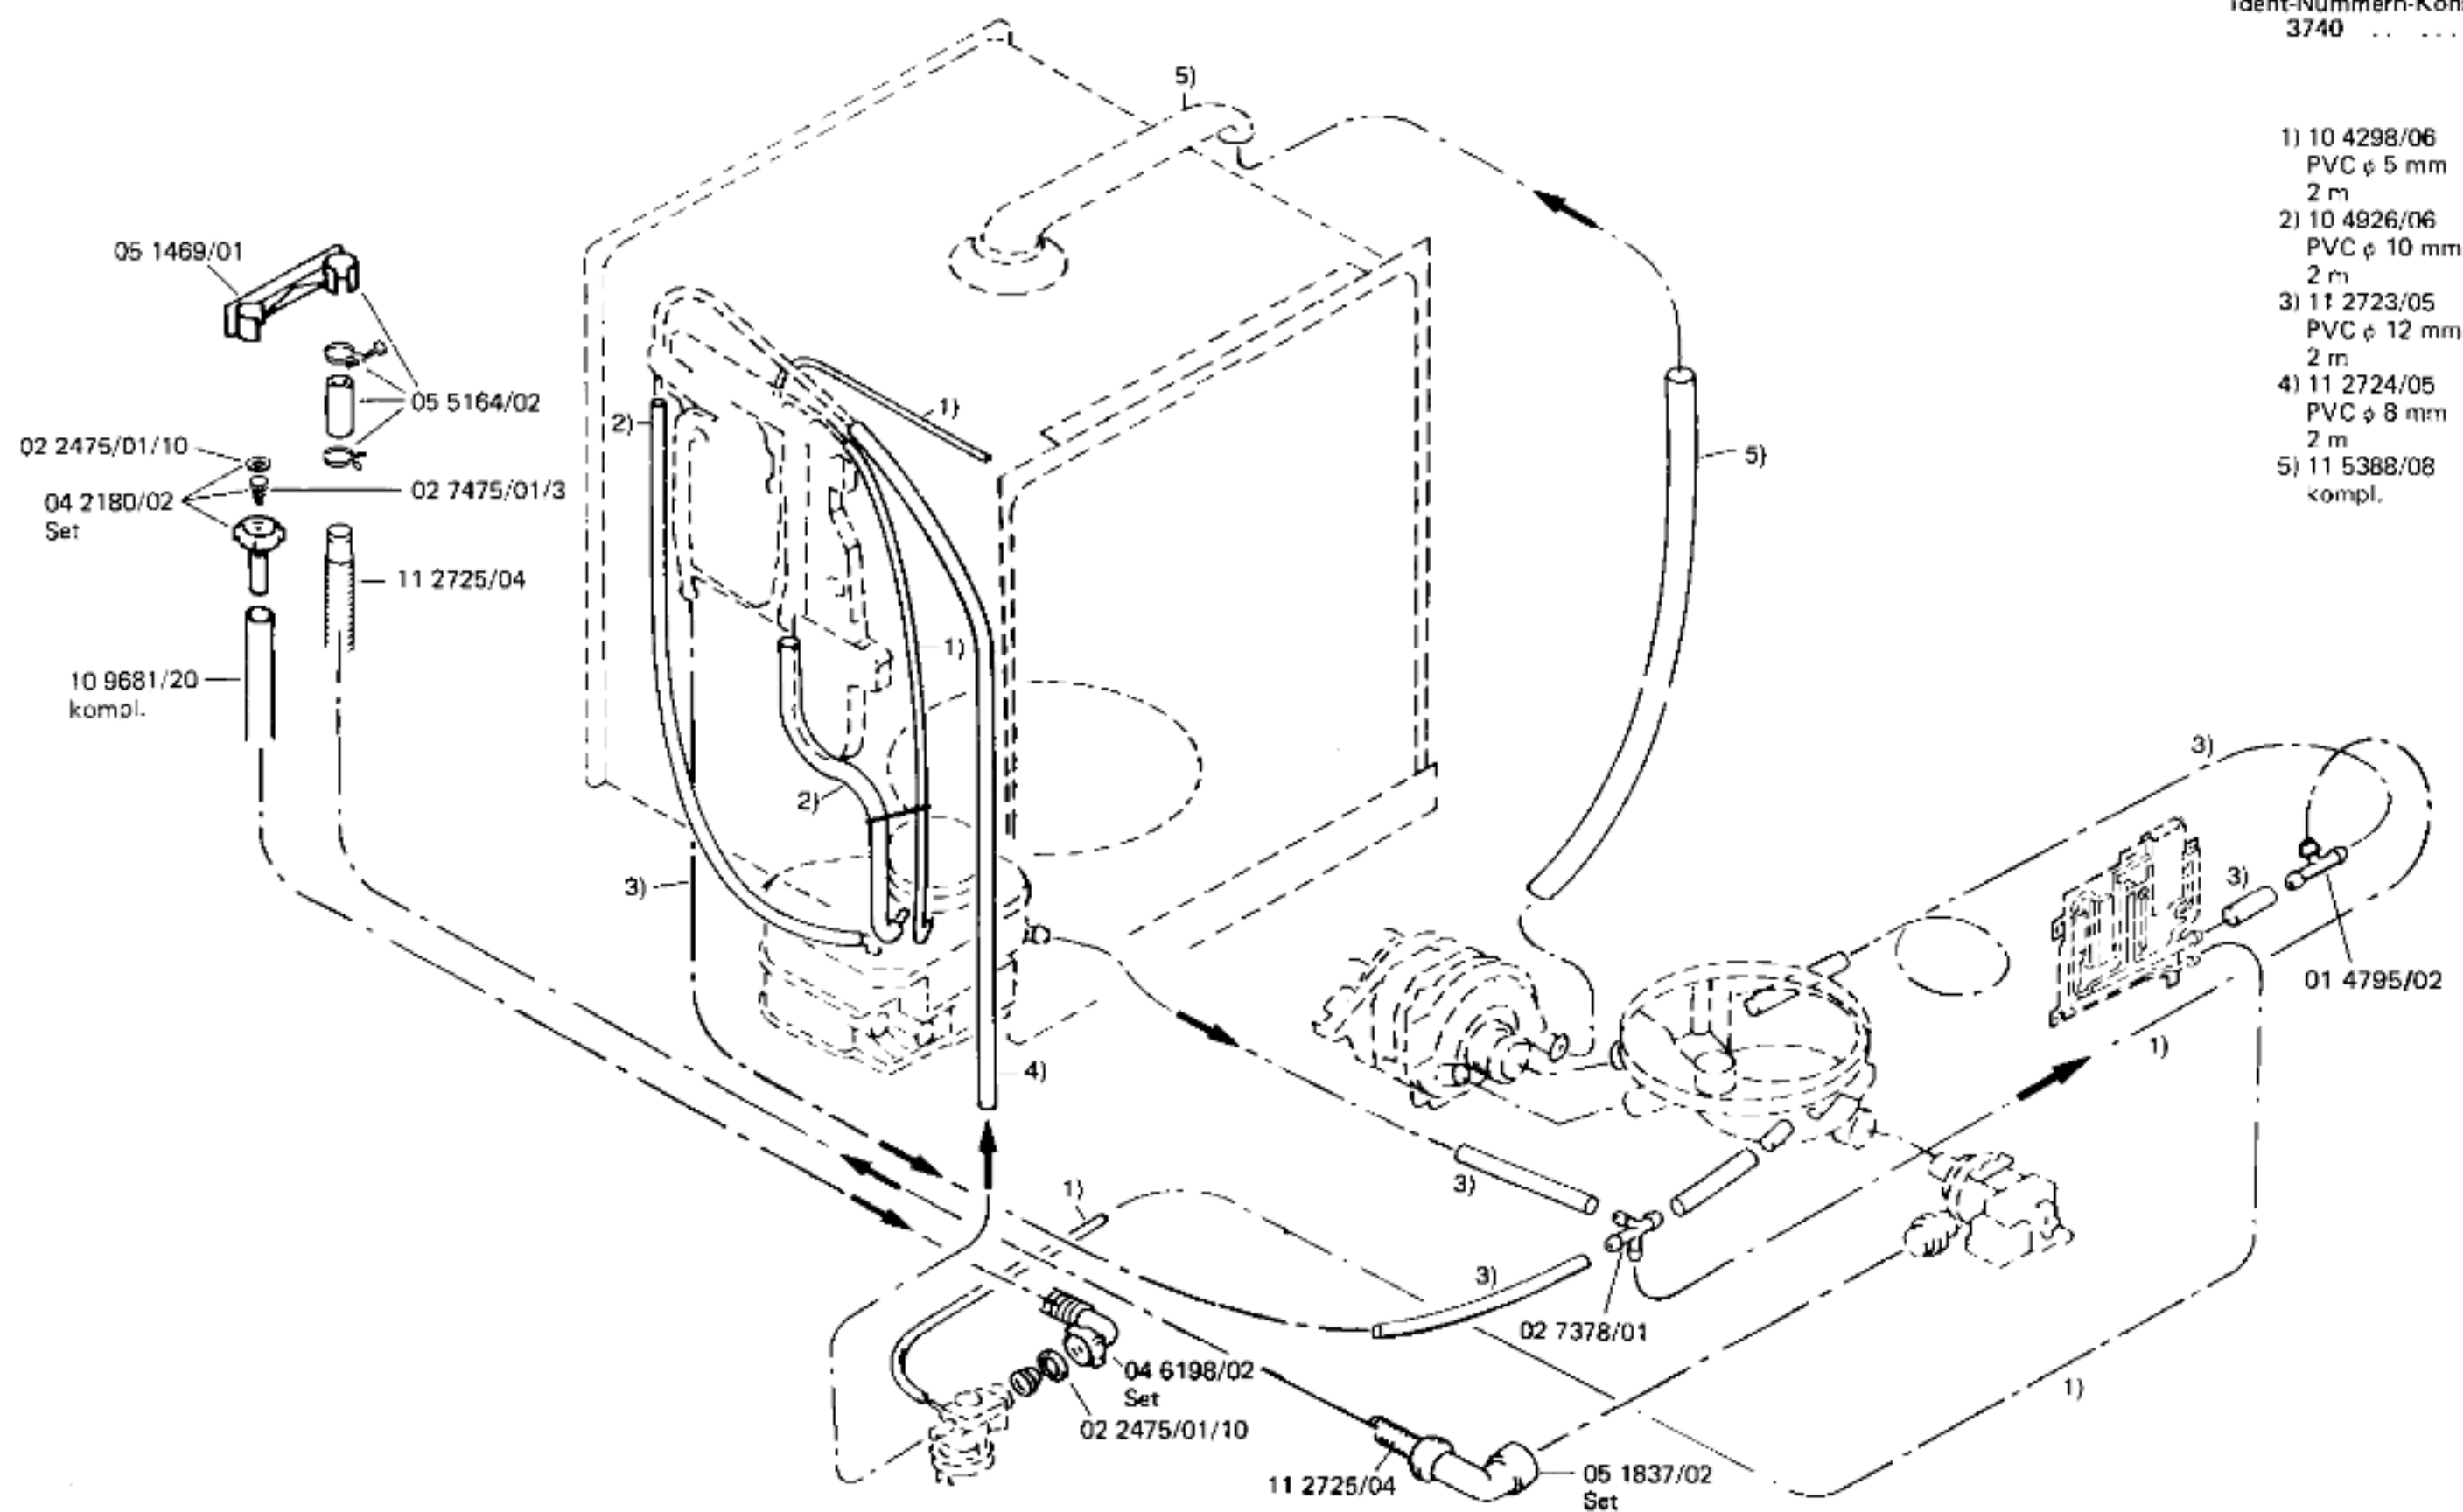Ident-Nummern-Konstante
3740

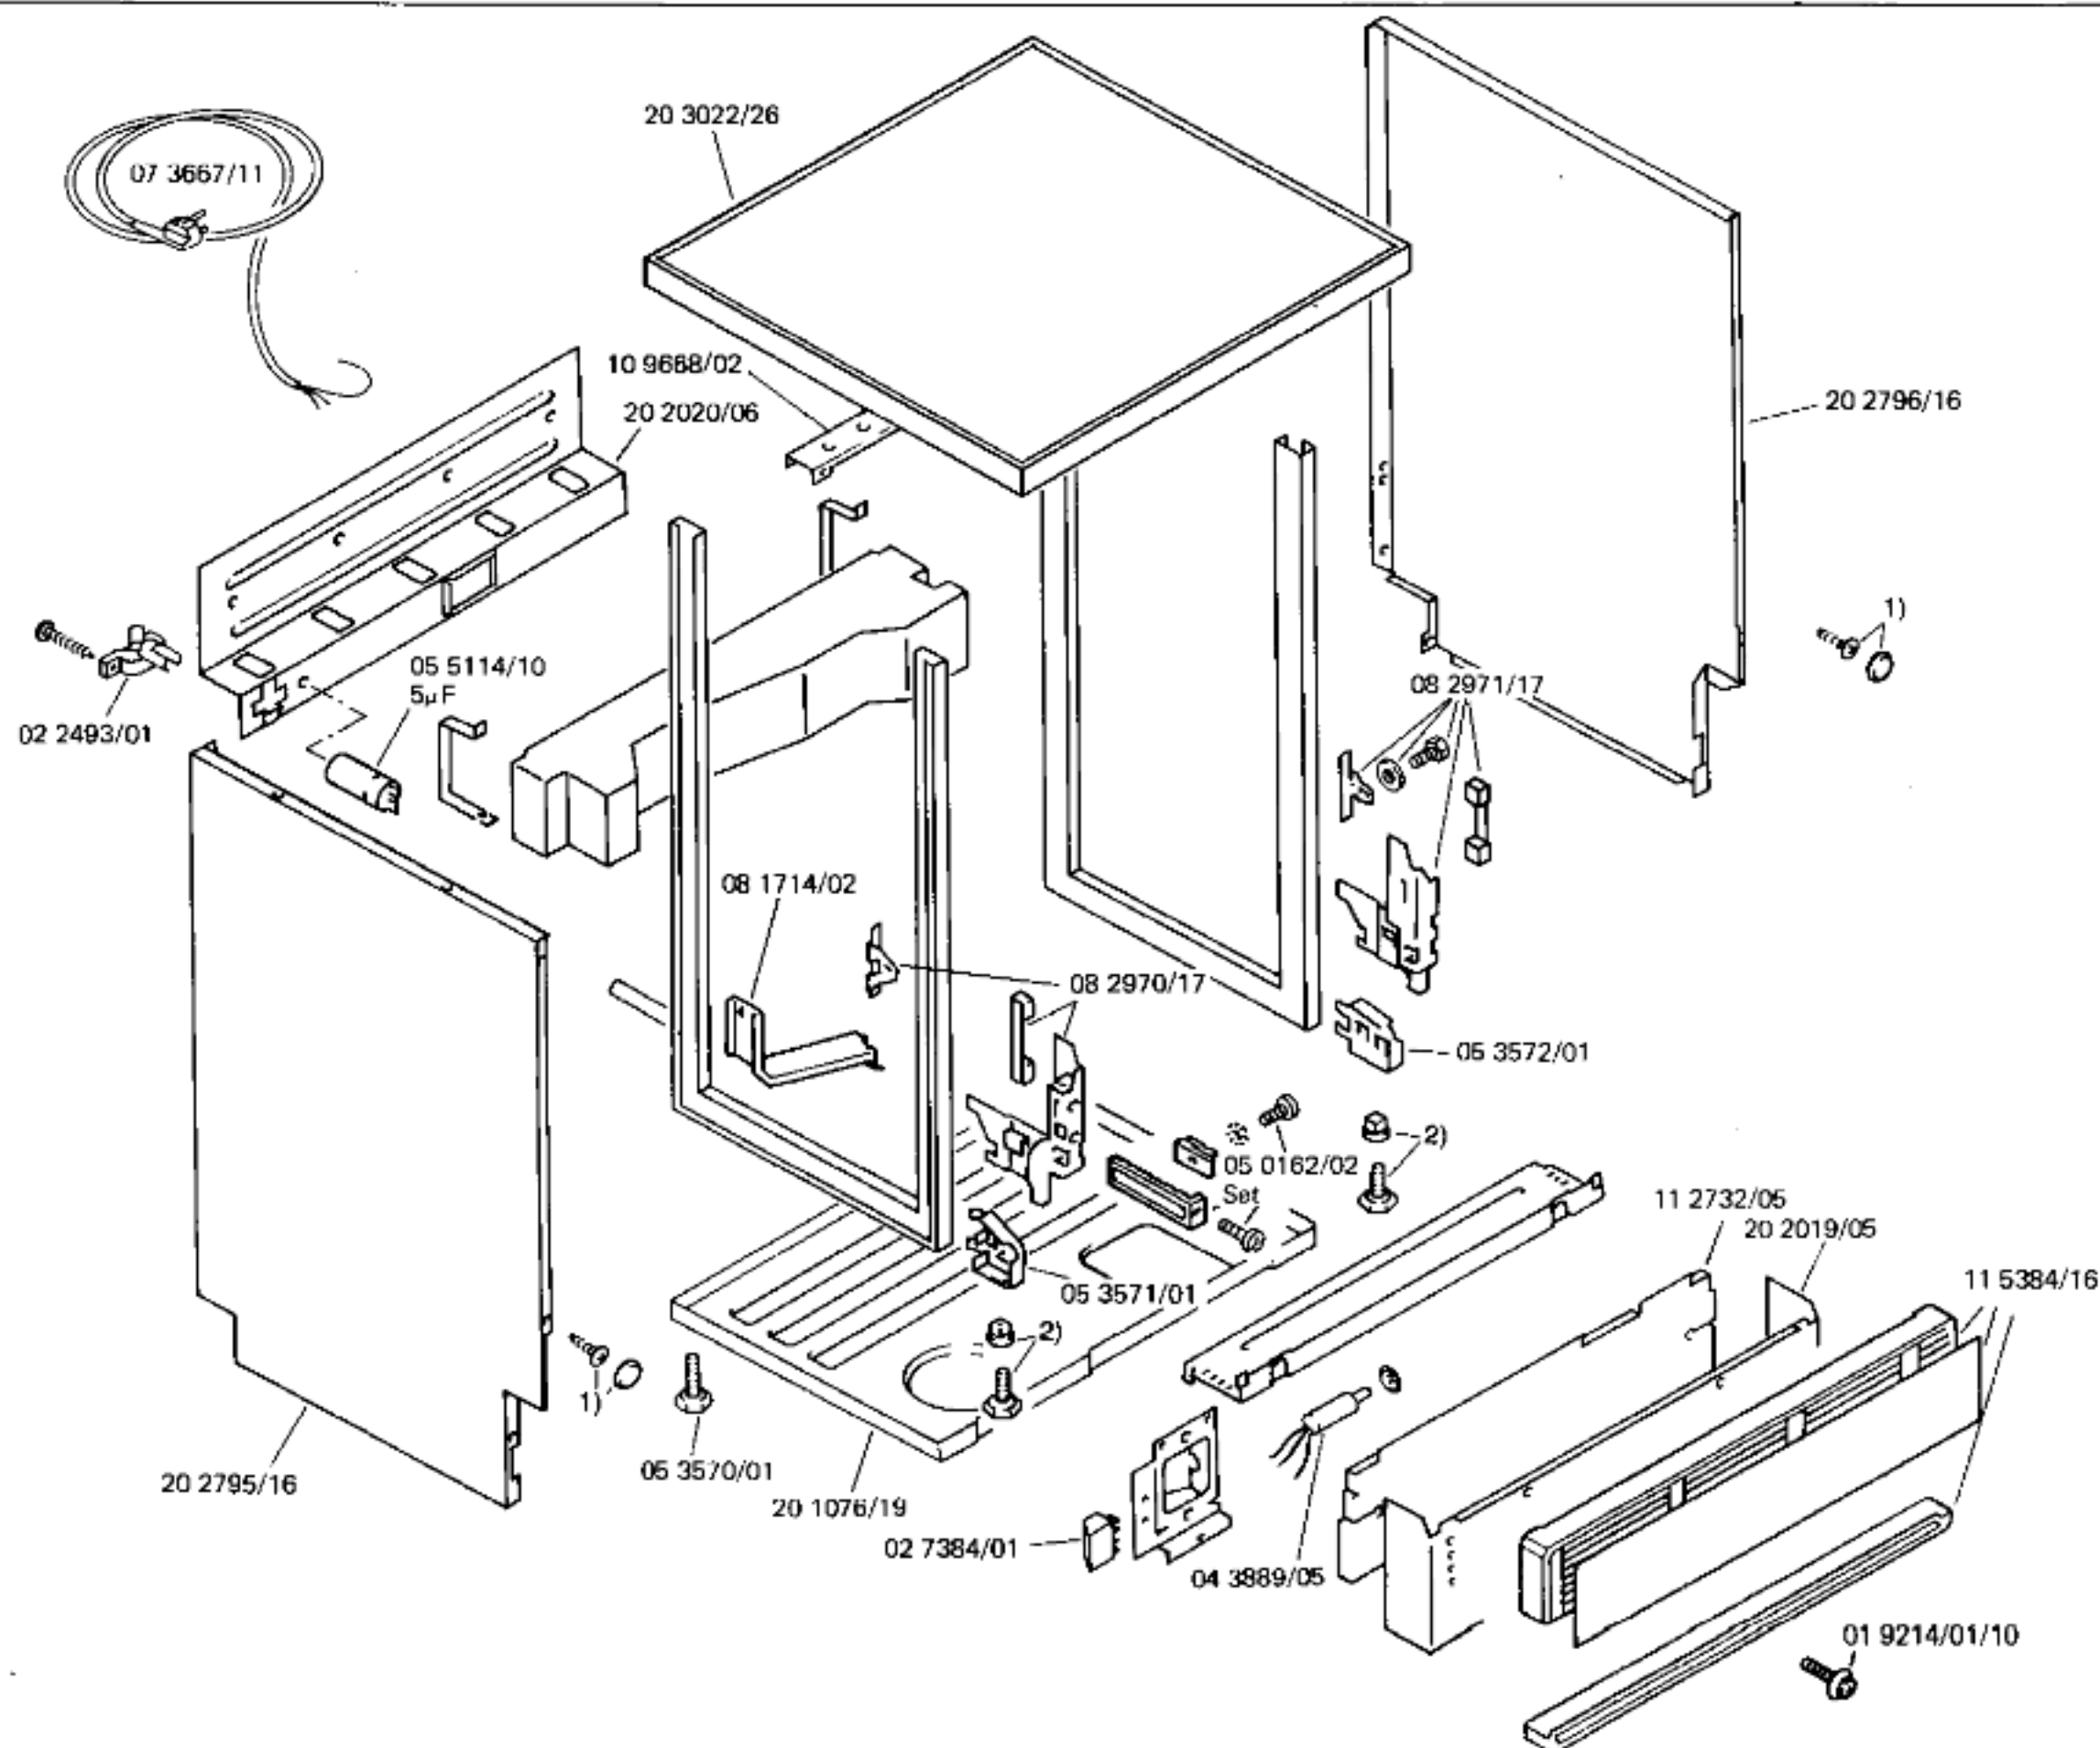

**BOSCH**

SMS 7100 – 0 730 100 623–EU1

GESCHIRRPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

1) 01 9202/01/4

2) 11 0668/07
Set3) 05 1287/03
Set