
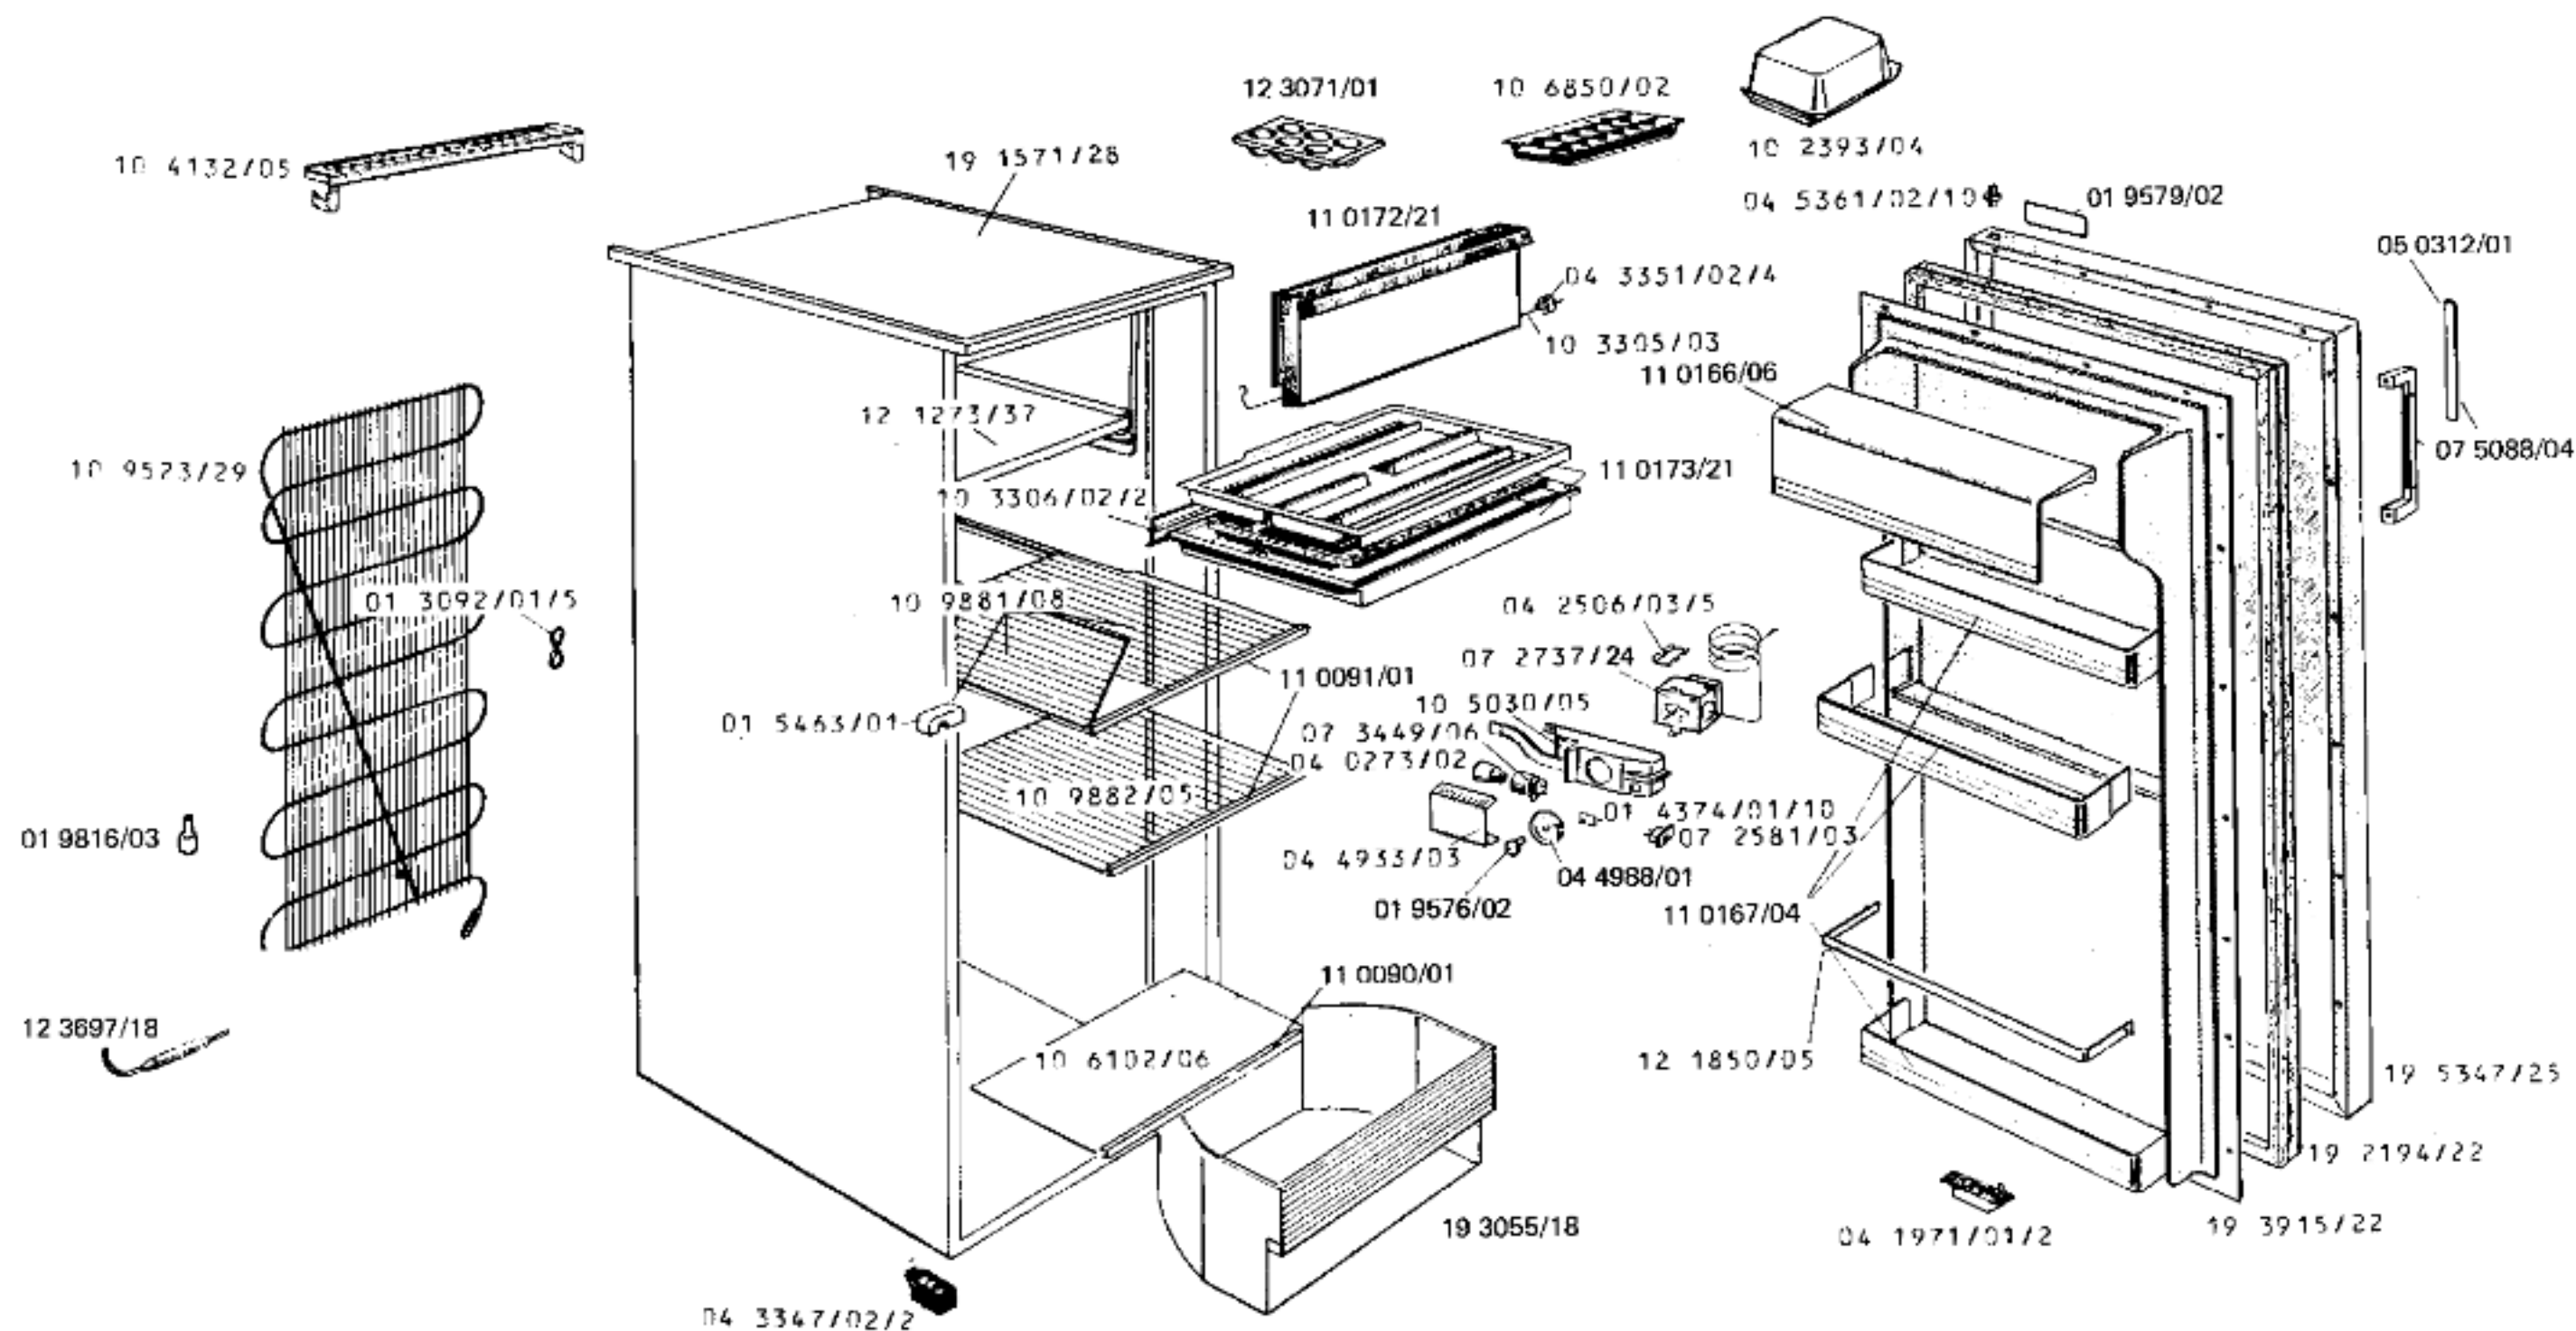


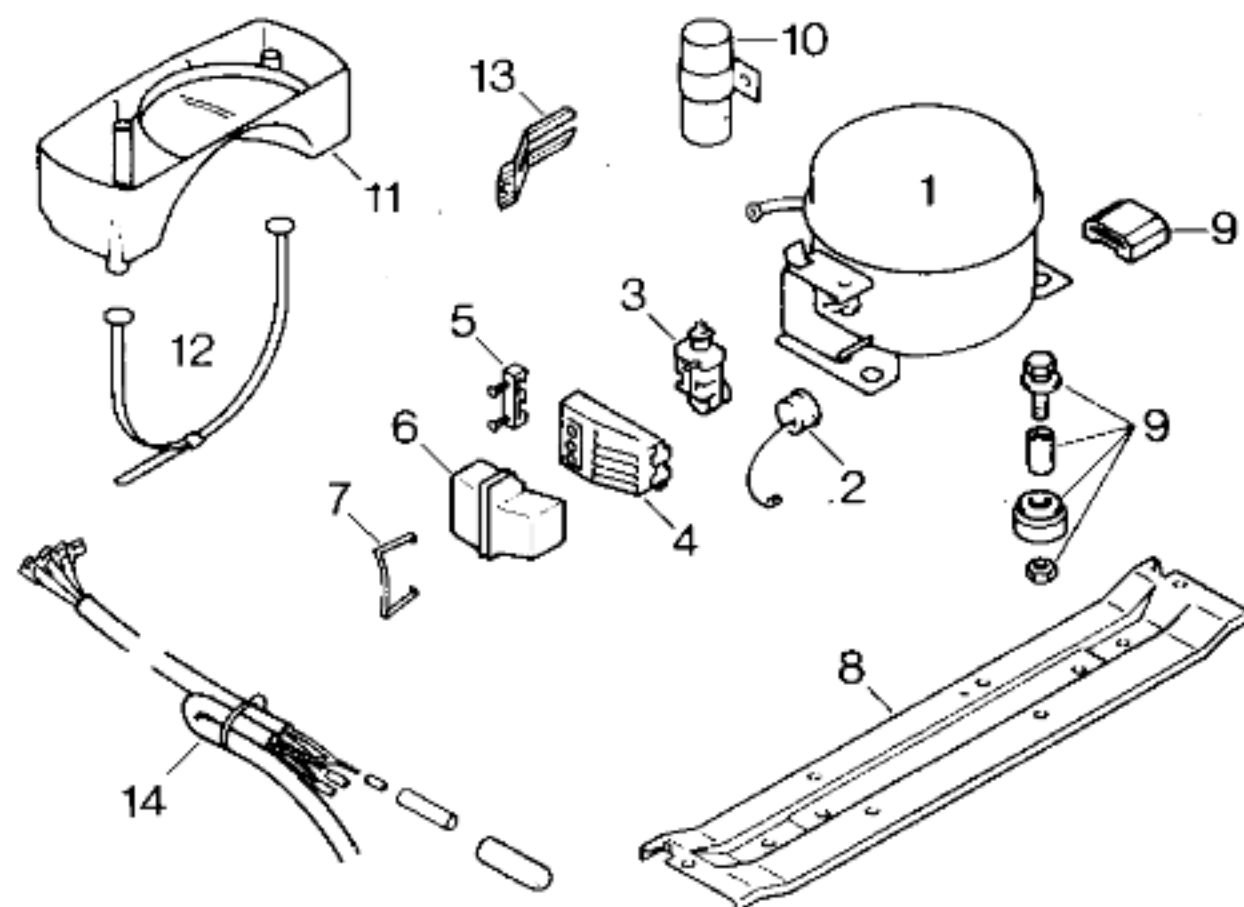

51 0205/00
Bed. Anleitung

**BOSCH**

KÜHLSCHRANK IF 1621 - 0 701 164 666-D1

Ident-Nummern-Konstante
3740**TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES**

Verdichter/Compressor/Compresseur		Bosch	Danfoss		
Typ/Type		V 612	TL 3 A		
Förderleistung/Delivery/Débit	l/h	612	576		
Anlaufstrom/Starting current/Cour. de démarrage	A	5,6	7,2		
Widerstand/Resistance/Résistance	Ha/main/prin.	31,5	31,7		
	Hi/aux	50,5	17,0		
Temp.-Regler/Thermostat		Ranco			
Typ/Type		F 50			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/	„ein“ °C	- 12	- 2,5		
Valeurs de commutation	„aus“	- 25	- 11,5		
(„abtauen“ od.)	„alarm“	+ 6			
Füllmenge/Fill.quantity/Charge	R12	g	85		
Anschlußwert/Conn.load/Puiss. connectée		W	90		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.	D1	D1		
	Bosch	Danfoss		
1		14 0080/44		
2	07 1691/18			
3	07 1692/18	02 0108/27		
4	04 9757/02			
5		02 1361/02		
6	04 9758/02	05 1413/06		
7				
8		*11 1493/03		
9		*05 0166/05/4		
10				
11				
12				
13		*04 1568/01/2		
14		*05 1226/08		

*) Bei Ersatz des Bosch-Verdichters mitbestellen
 To be ordered when replacing the Bosch compressor
 A commander lors du remplacement du compresseur Bosch