 
 


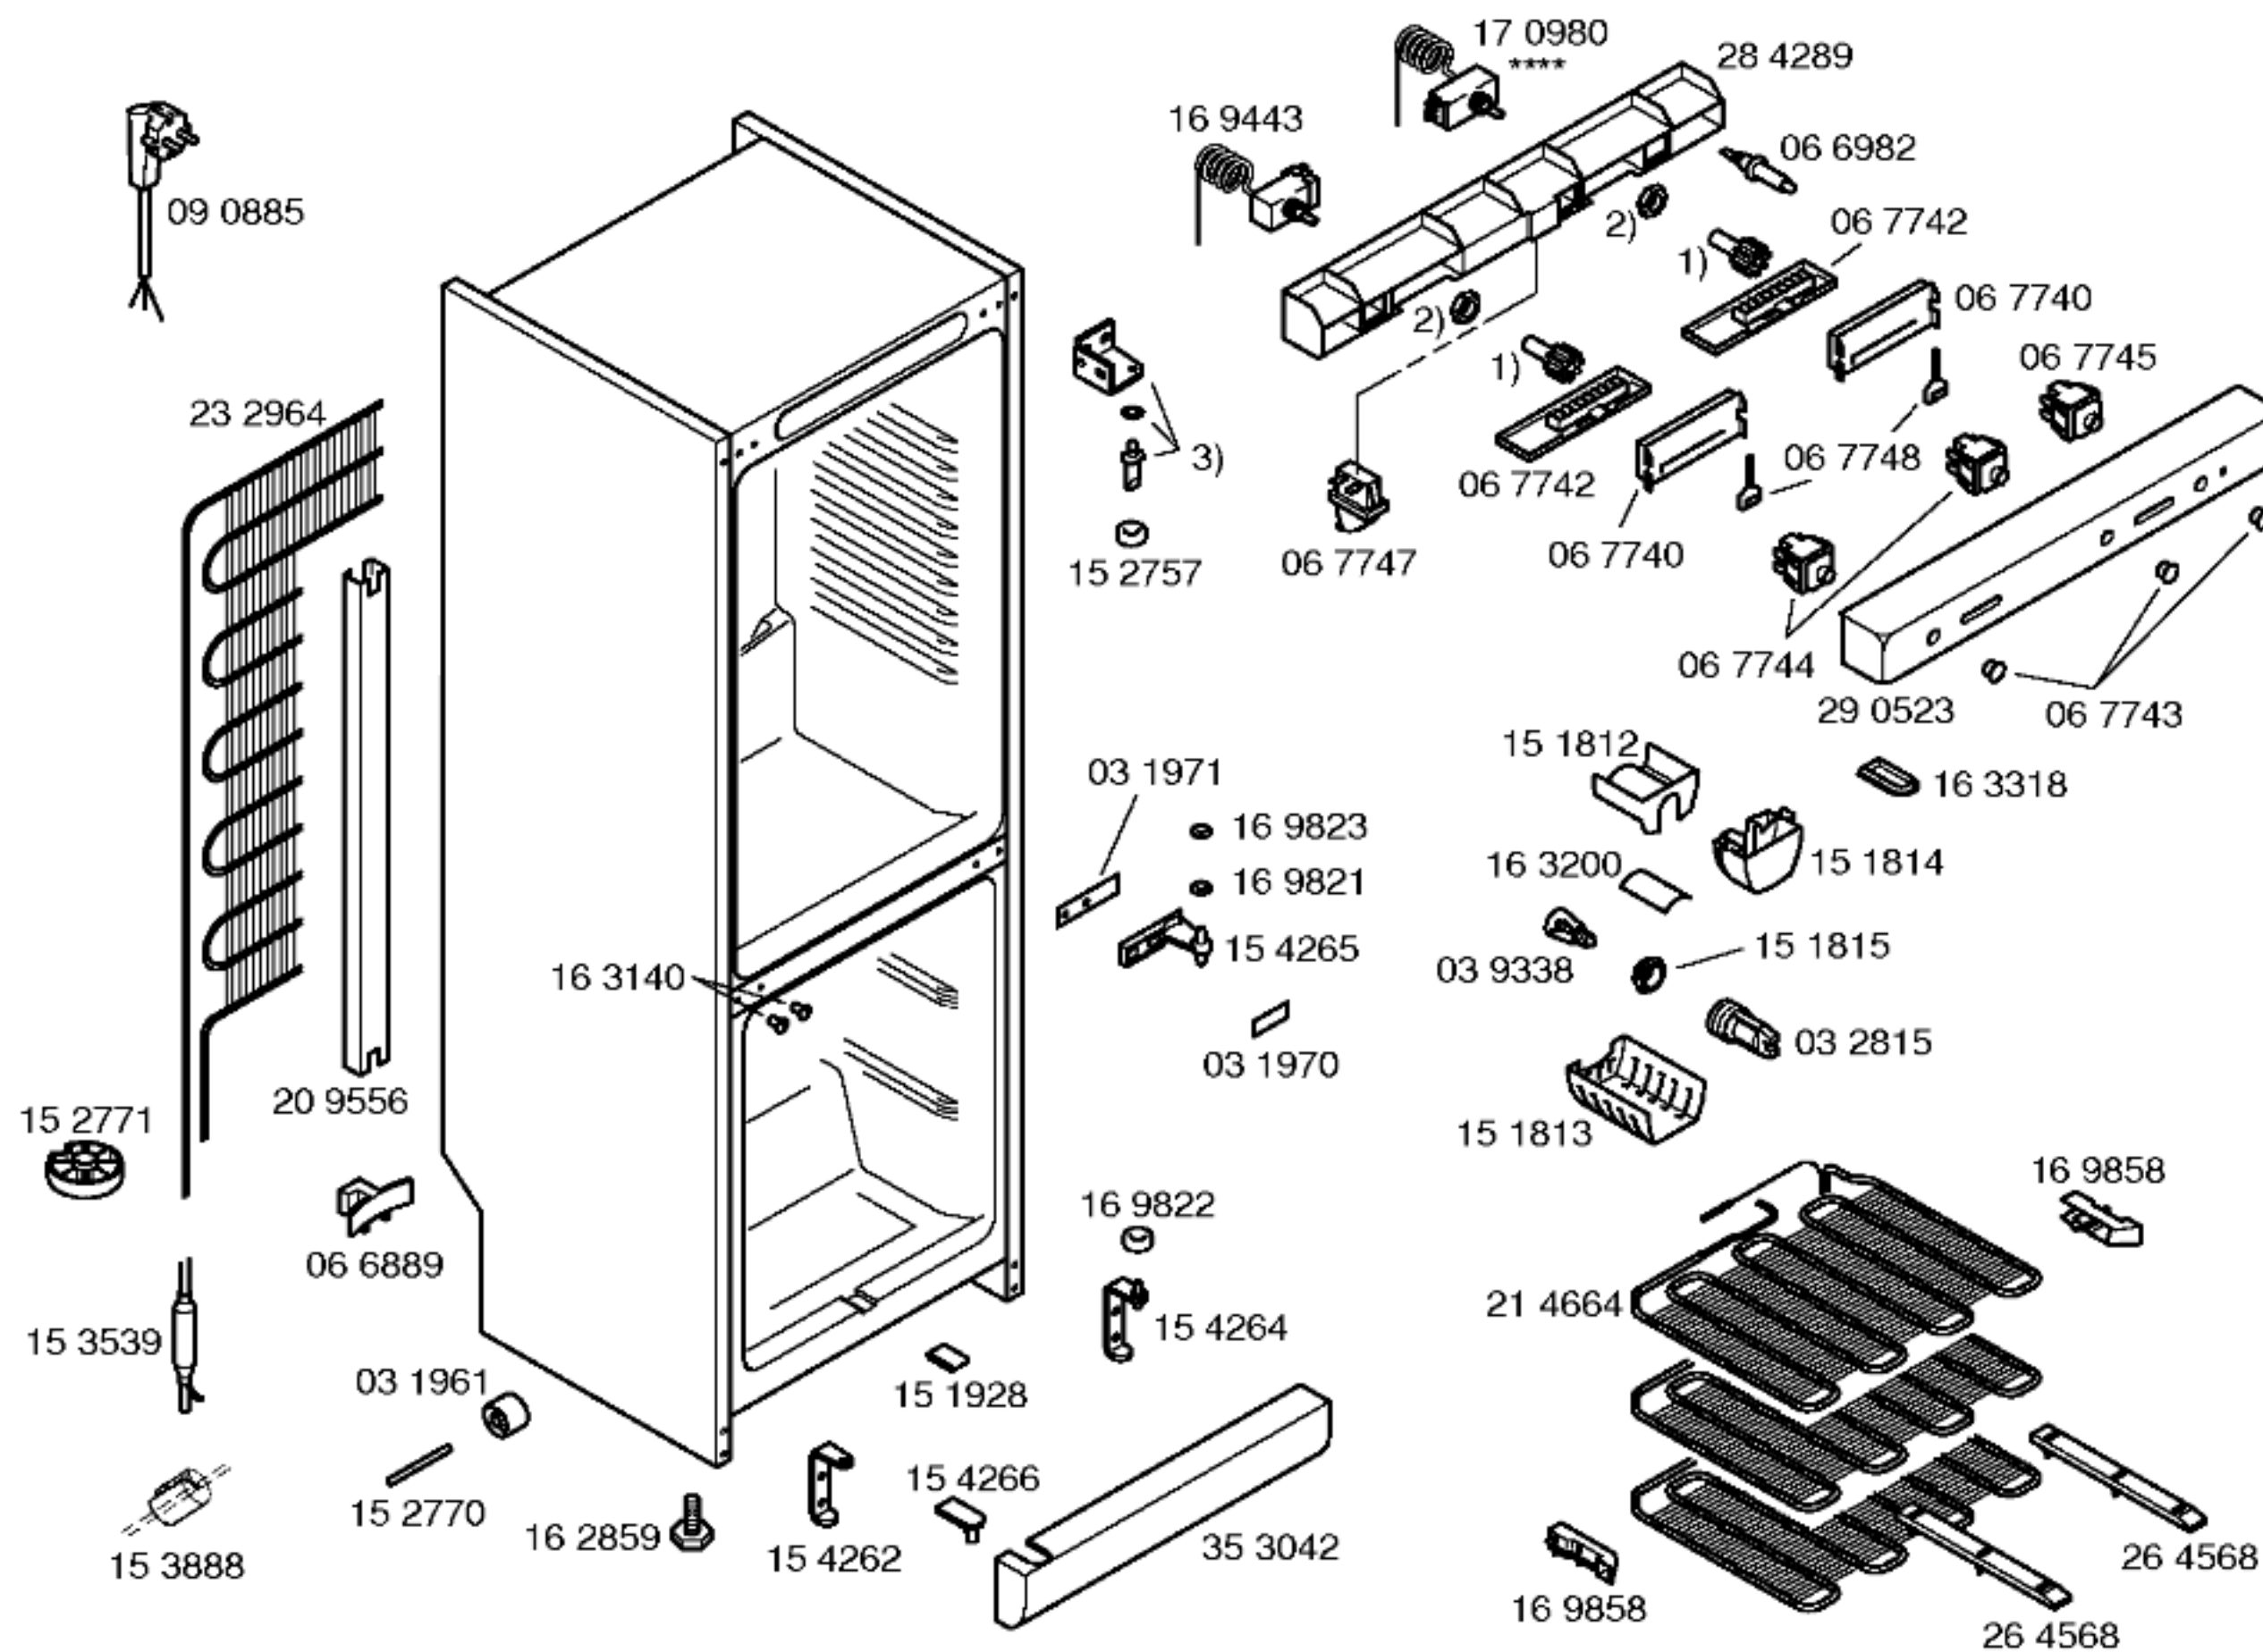 


Libro de instrucciones
52 4512
(E,P,GB,F,NL,GR)

Instrucciones de montaje
51 9729
(D,GB,F,I,NL,E,P,GR)

1) 06 7746
2) 03 3058
3) 16 9346
Set

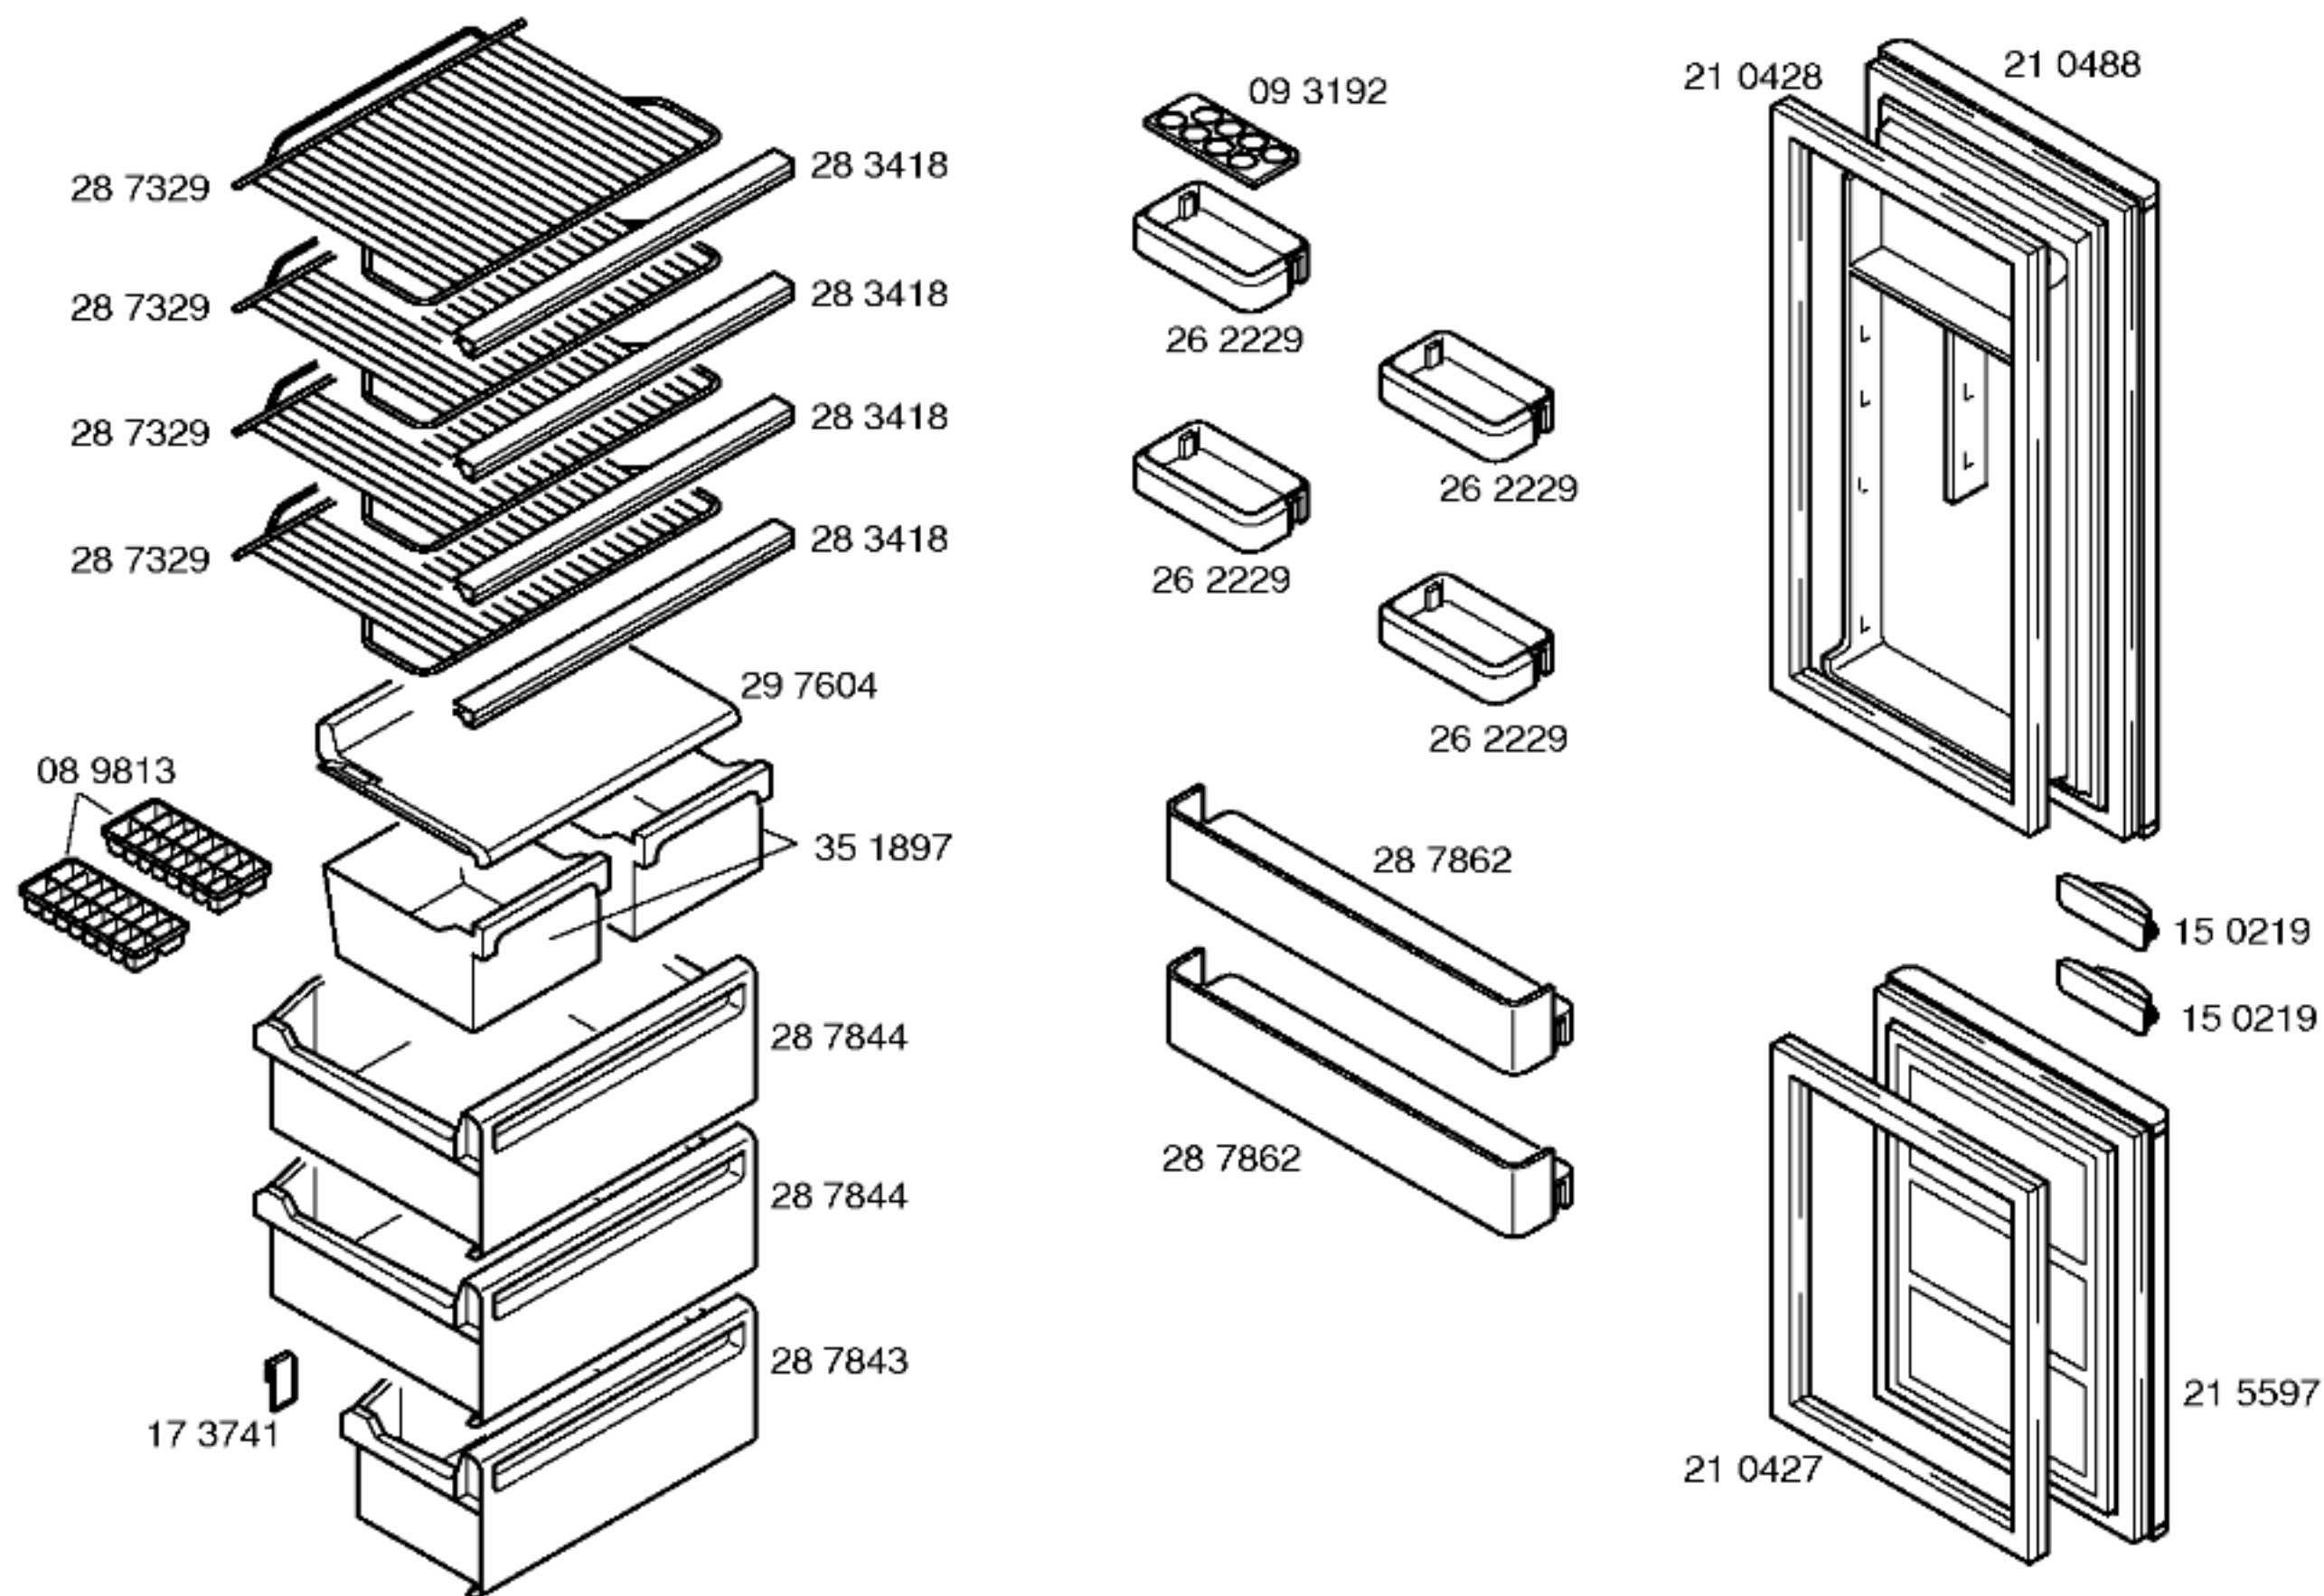

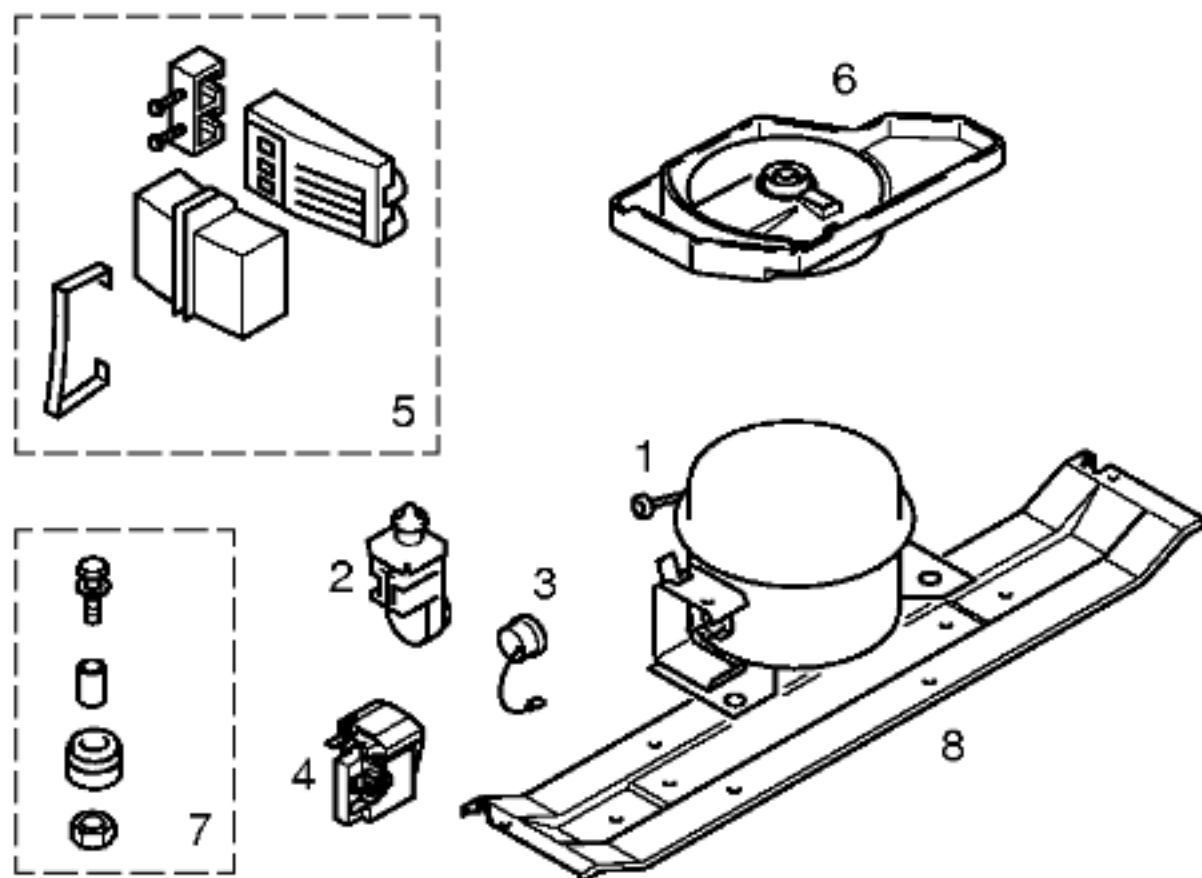

Pos.	****			
	Aspera BPK1072Y	Aspera BPK1084Y		
1	14 2000	14 2001		
2	15 4315	15 4315		
3	17 3748	16 7769		
4				
5				
6	26 4123			
7	05 0166	05 0166		
8	28 8253	28 8253		
9				
10				
11				
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo	Aspera BPK1072Y	Aspera BPK1084Y		
Förderleistung/Delivery/Debit/Aspiración l/h				
Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A	0,47	0,52		
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	33,10	29,35		
Hi/aux.	38,20	41,25		
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo	Ranco K59-L6050	Ranco K54-L2006		
Reglerstellung/Position/Conexión	MIN. MAX.	MIN. MAX.		
Schaltwerte/Switching values/ ..ein/conex.°C	+6°	-14° -22°		
Valeurs de commutation/Desconex. ..aus°/descon.	-11° -28°	-20° -28°		
(..abtaven' od) ..alarm'		-10° -18°		
Füllmenge/Fill. quantity/Charge/Carga R600a	g	*		
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	79,5	87,5	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia	Ohm			
Leistung/Power/Puissance/Potencia	W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia	Ohm			
Spannung/Voltage/Tension/Tensión	V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características