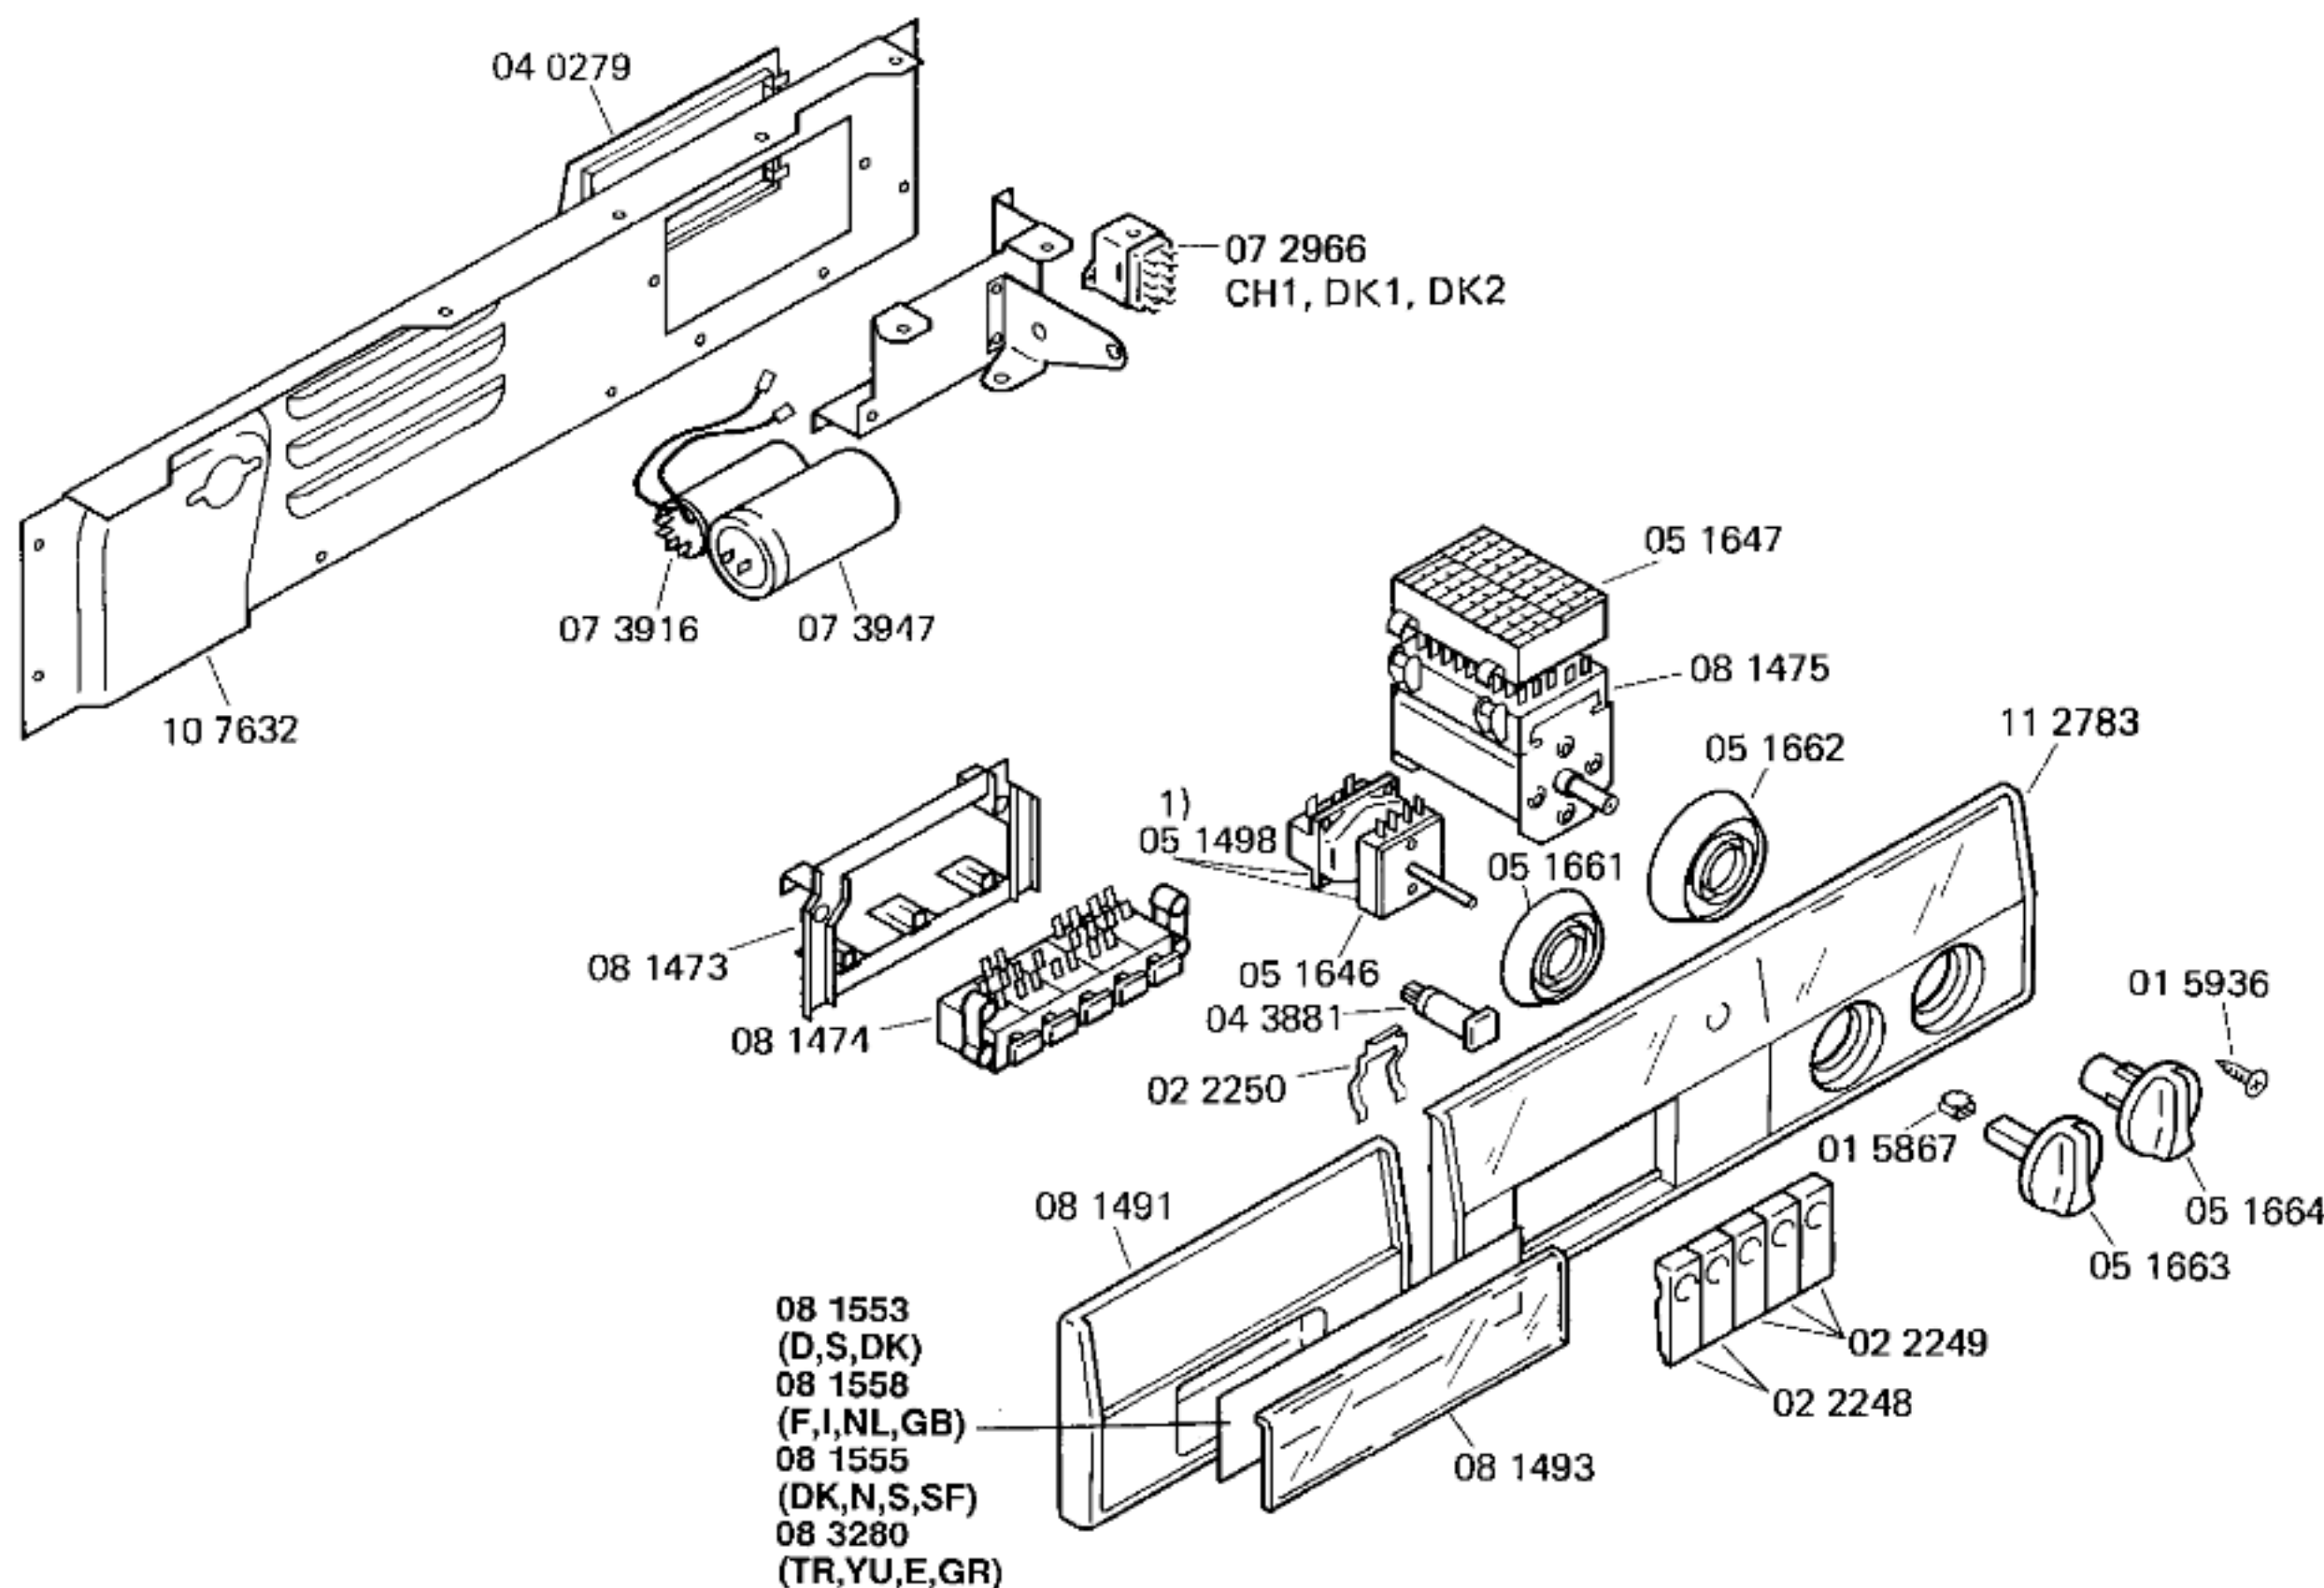 


**BOSCH**

BOSCH V 660 — 0 722 044 332—D1
 — 0 722 044 351—CH1, DK1
 — 0 722 044 425—DK2

WASCHGERÄTE
 Waschvollautomaten

Ident-Nummern-Konstante
 3740

**Aufstellanweisungen:**

51 1221
 D1
 (D, F, I, NL, GB, E)
 51 1430
 CH1
 (D, F, I)
 51 1337
 DK1, DK2
 (D, F, I, S, DK, NL)

 
Gebrauchsanweisungen:

51 1240
 D1, CH1
 (D, F, I, NL, GB, E)
 51 1865
 DK1, DK2

Programmtabellen:

51 1223
 D, CH1
 (D, F, I, NL, GB, E)
 51 1490
 DK1, DK2
 (D, F, I, S, DK, N)

1) Bis FD 6301
 05 1661 mitbestellen

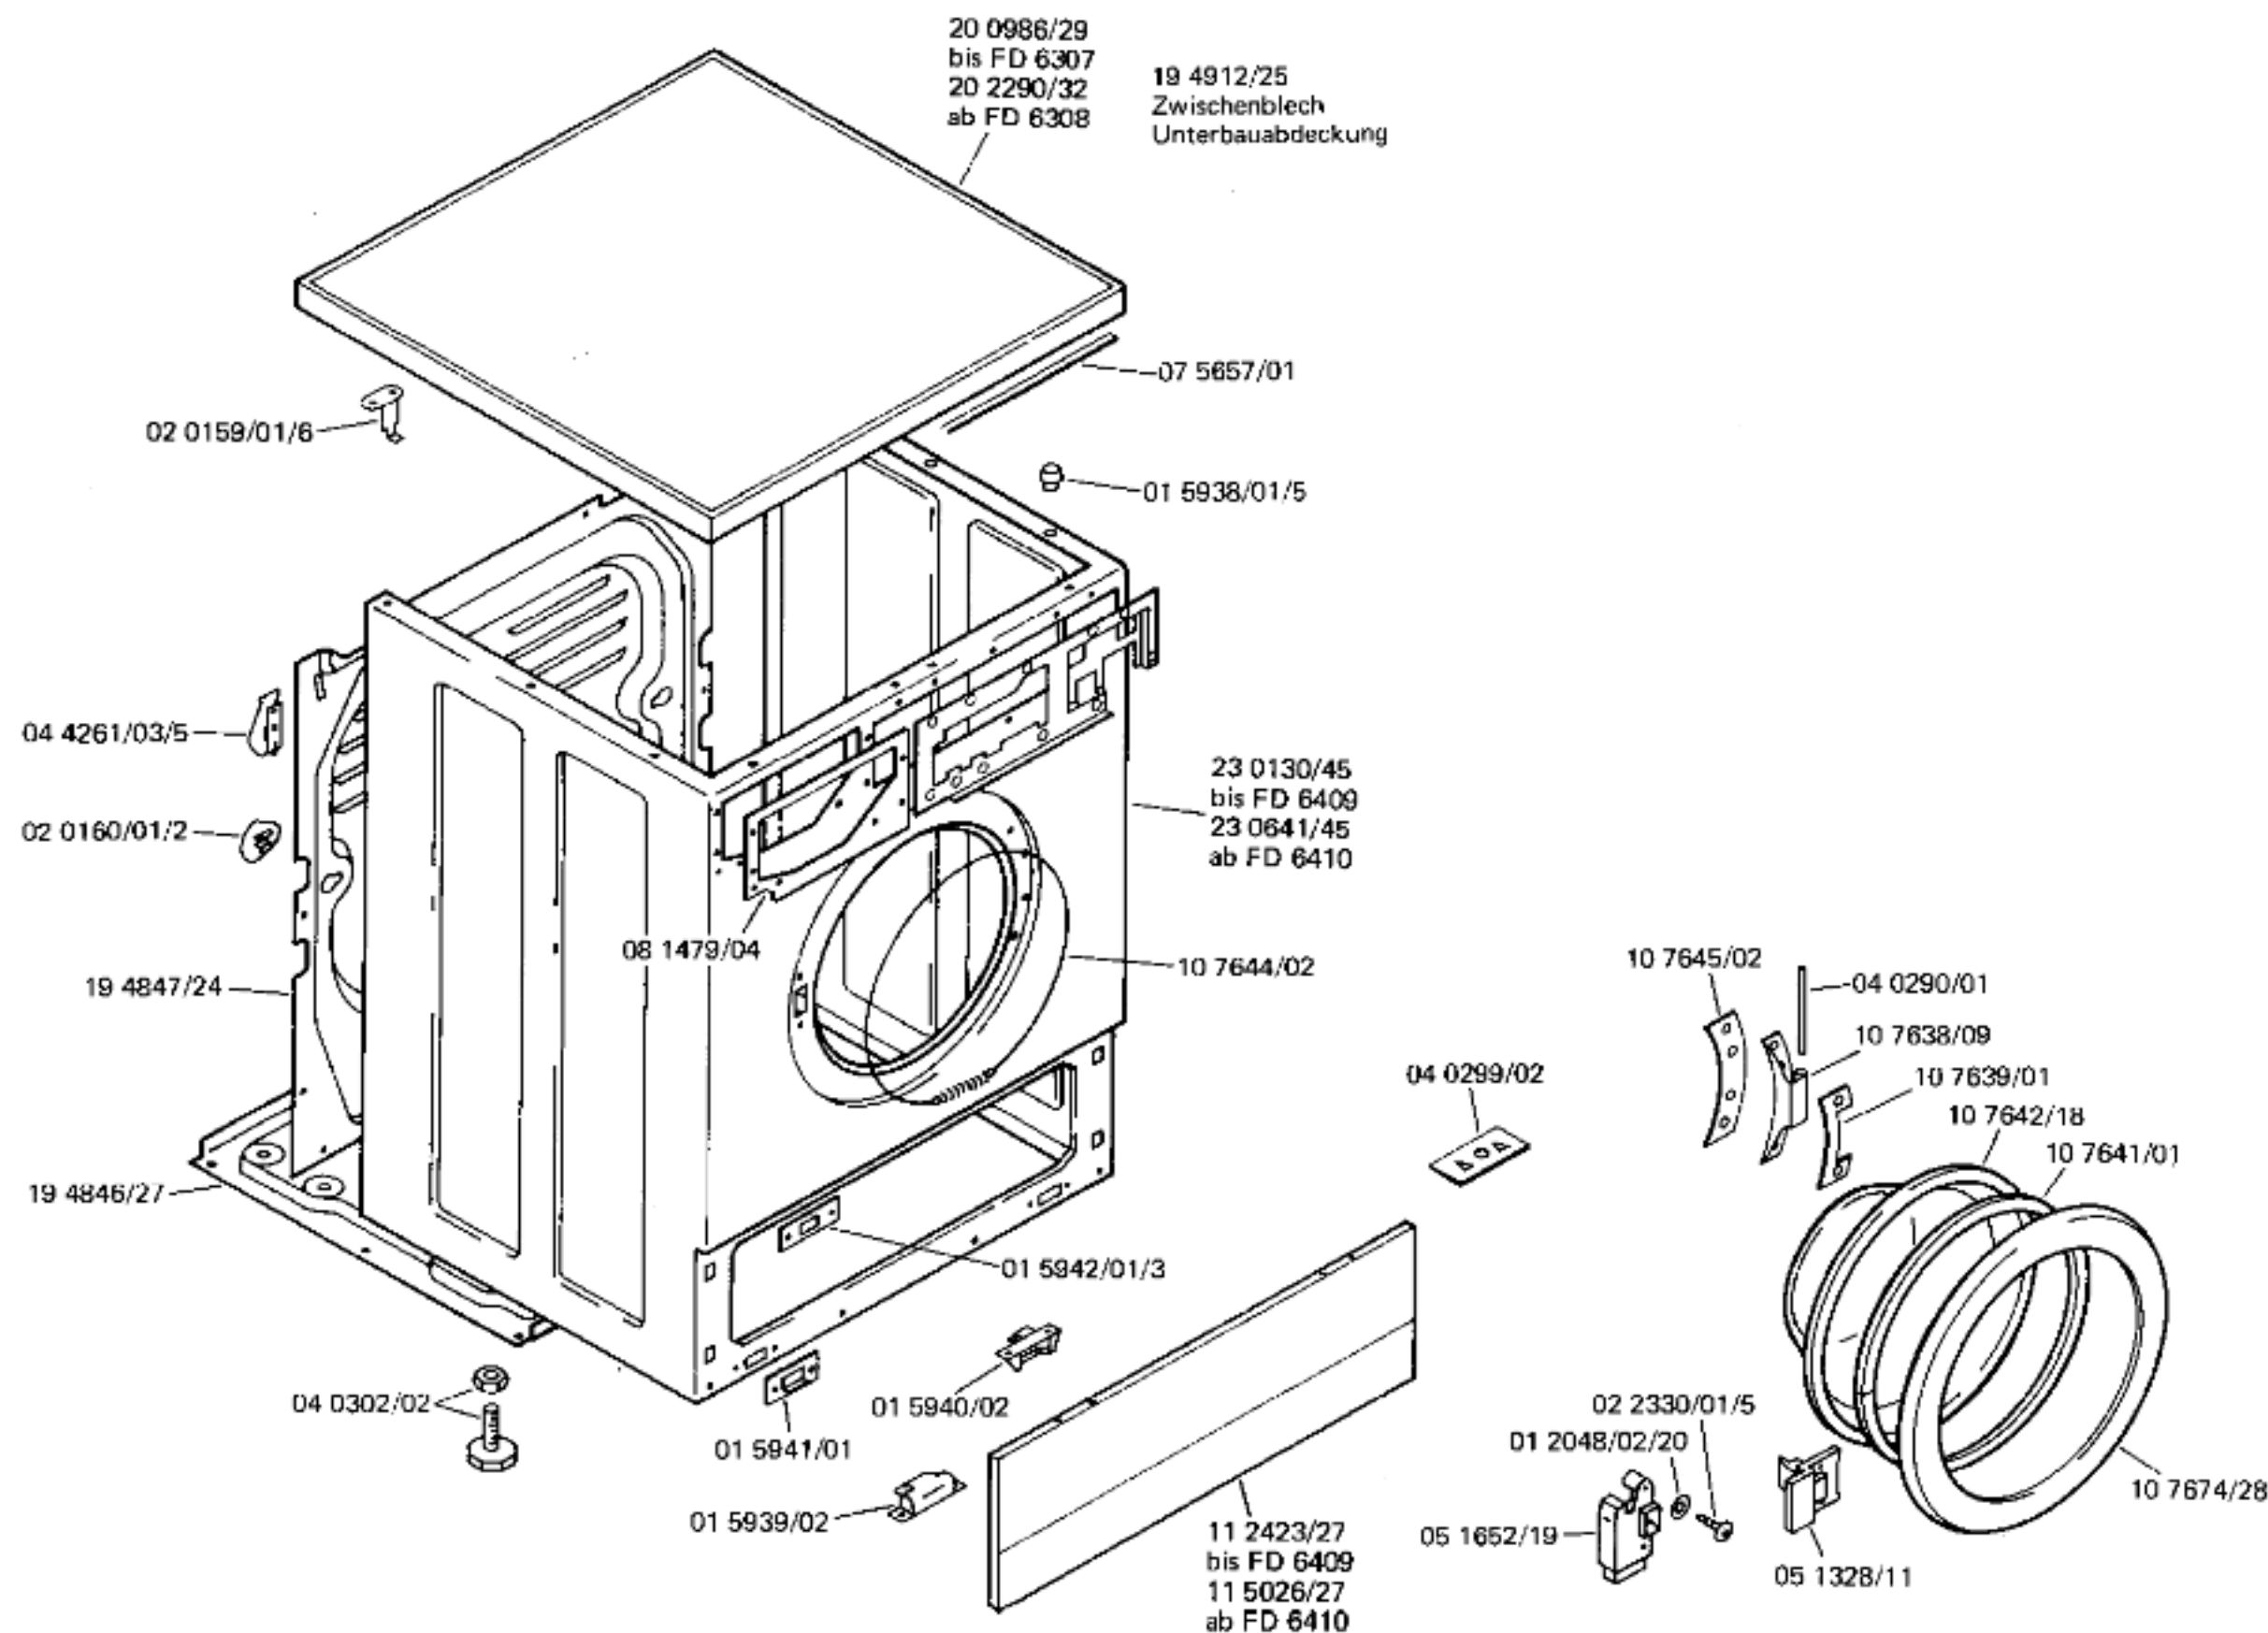

**BOSCH**

BOSCH V 660 – 0 722 044 332–D1
– 0 722 044 351–CH1, DK1
– 0 722 044 425–DK2

WASCHGERÄTE
Waschvollautomaten

Ident-Nummern-Konstante
3740

