


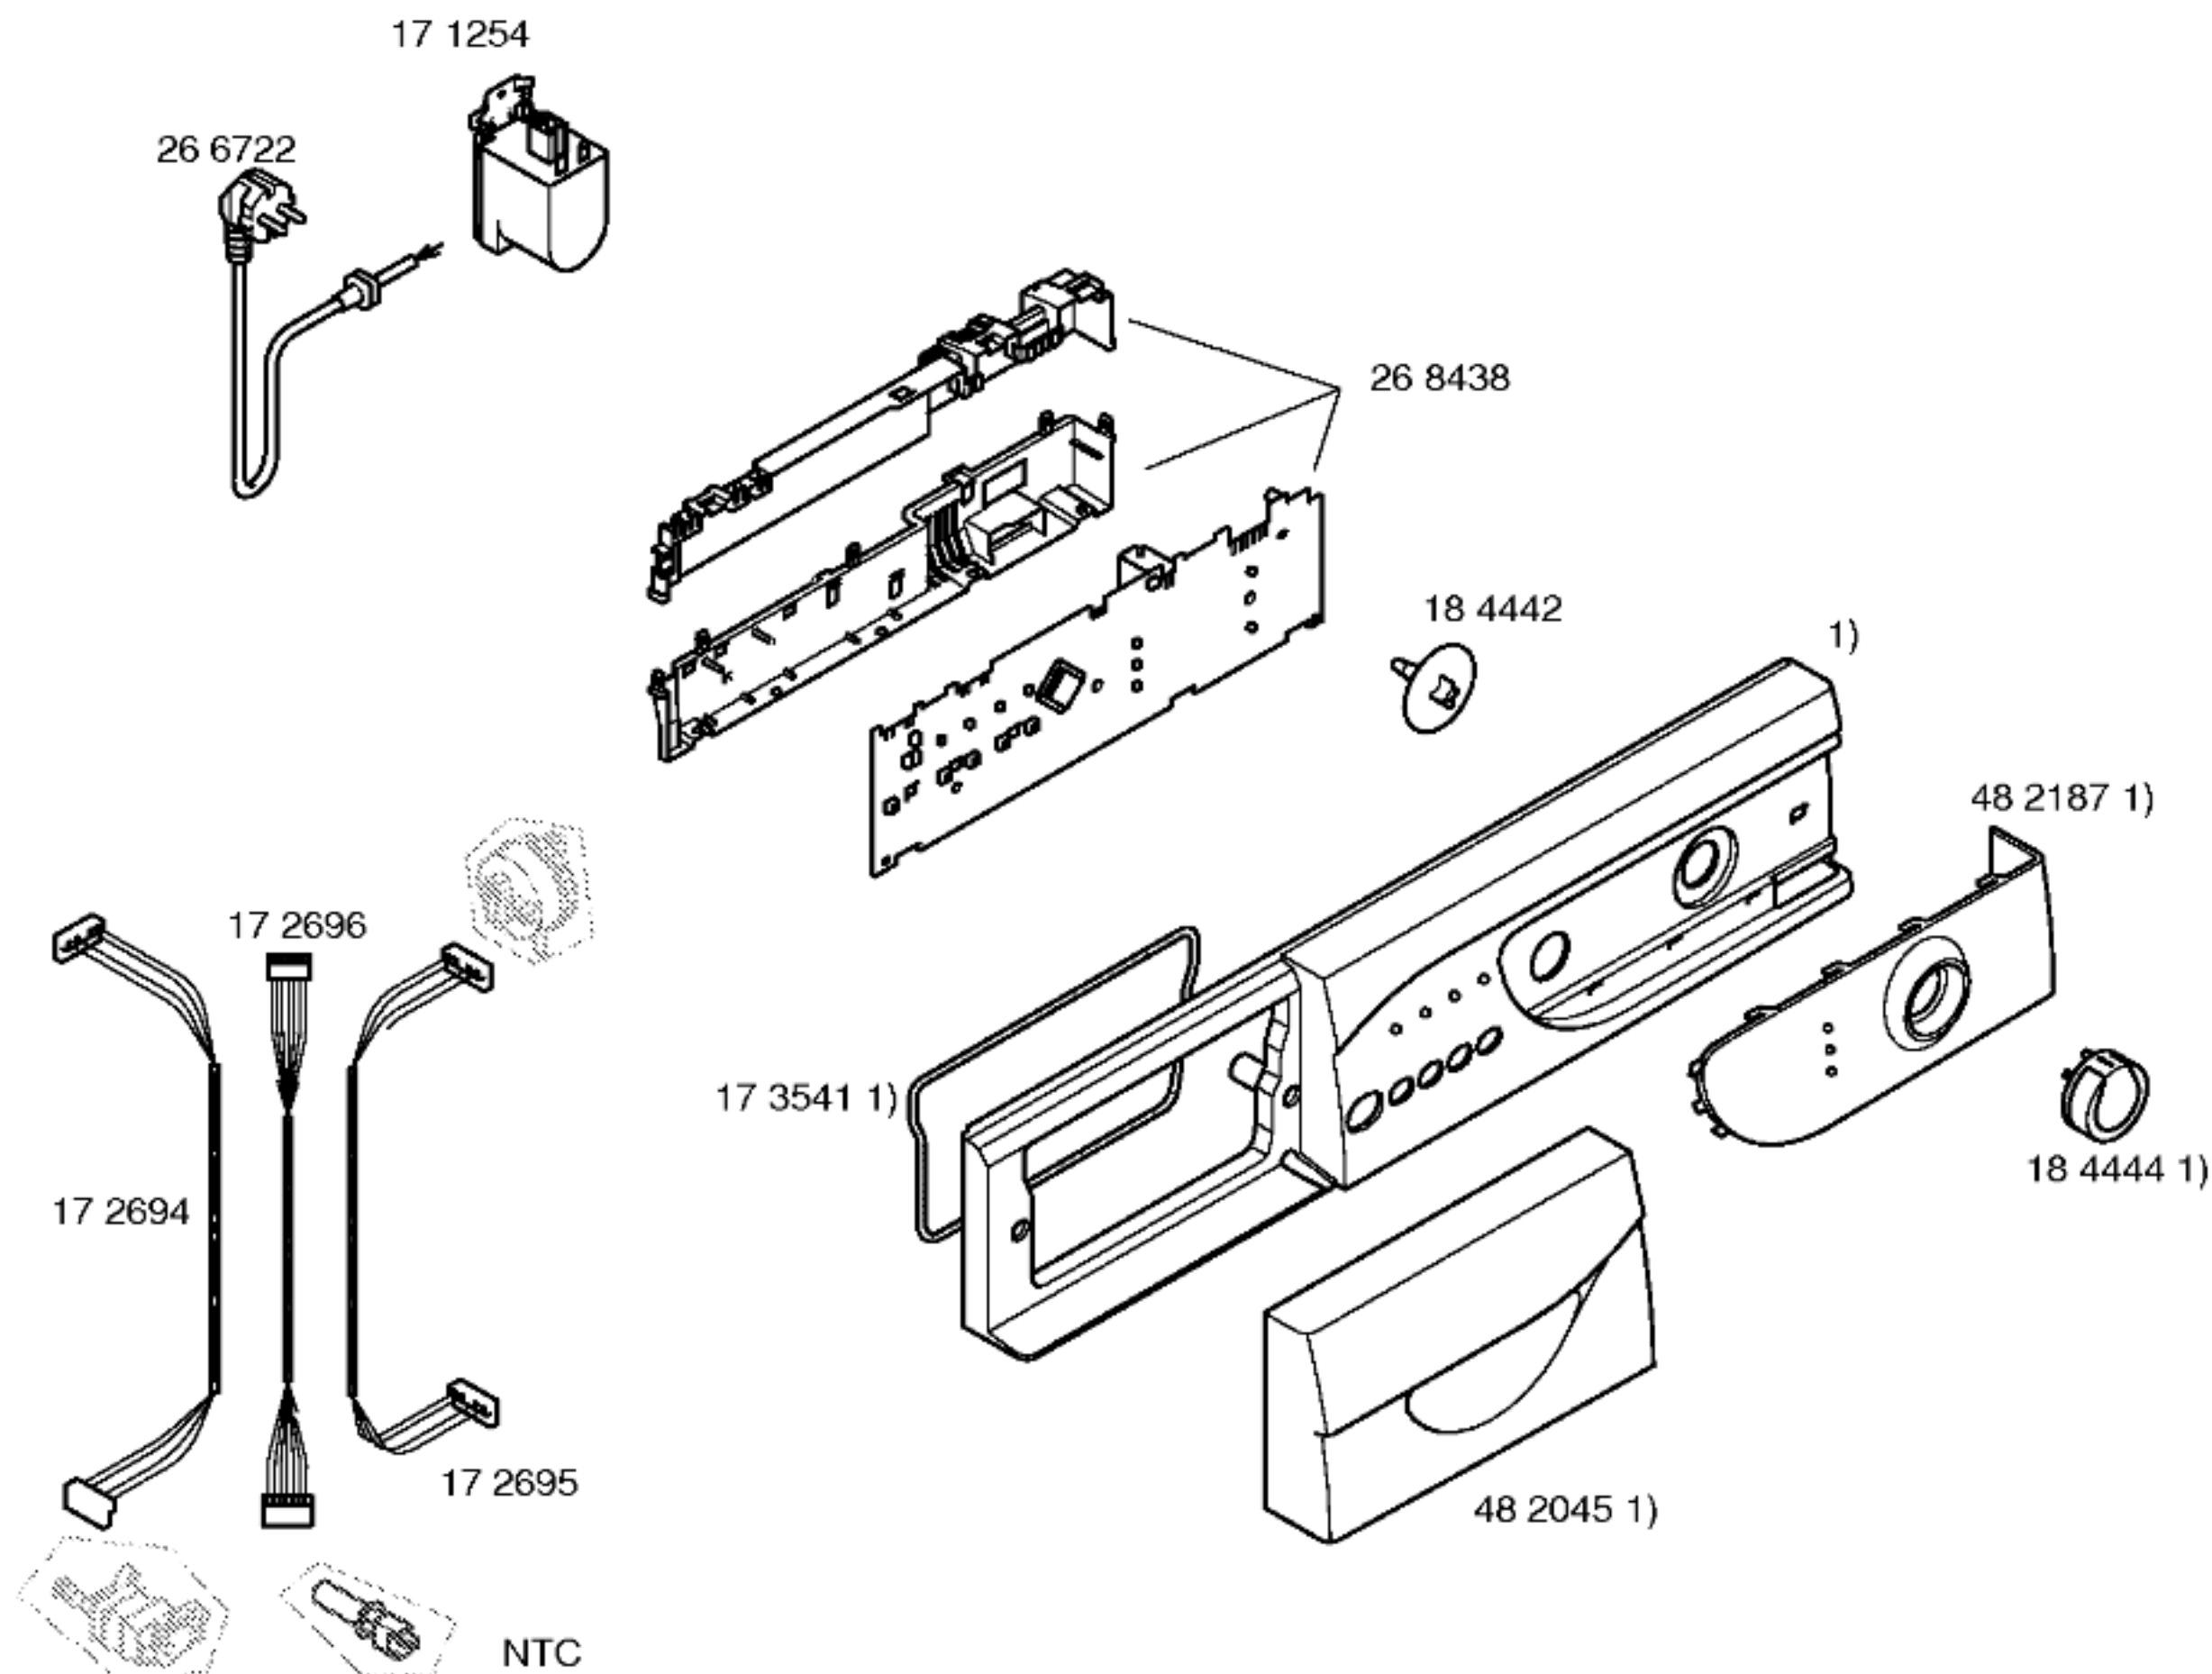


ex20357 -4/1


Instrucciones de uso
52 9638
(es)
52 9639
(pt)
58 0576
(en,fr,de)
58 0577
(ca,eu,ga)

Tabla de programas
18 4719
(es)
18 4720
(pt)


1) 36 3362

Tapa metálica – VDE
21 5174

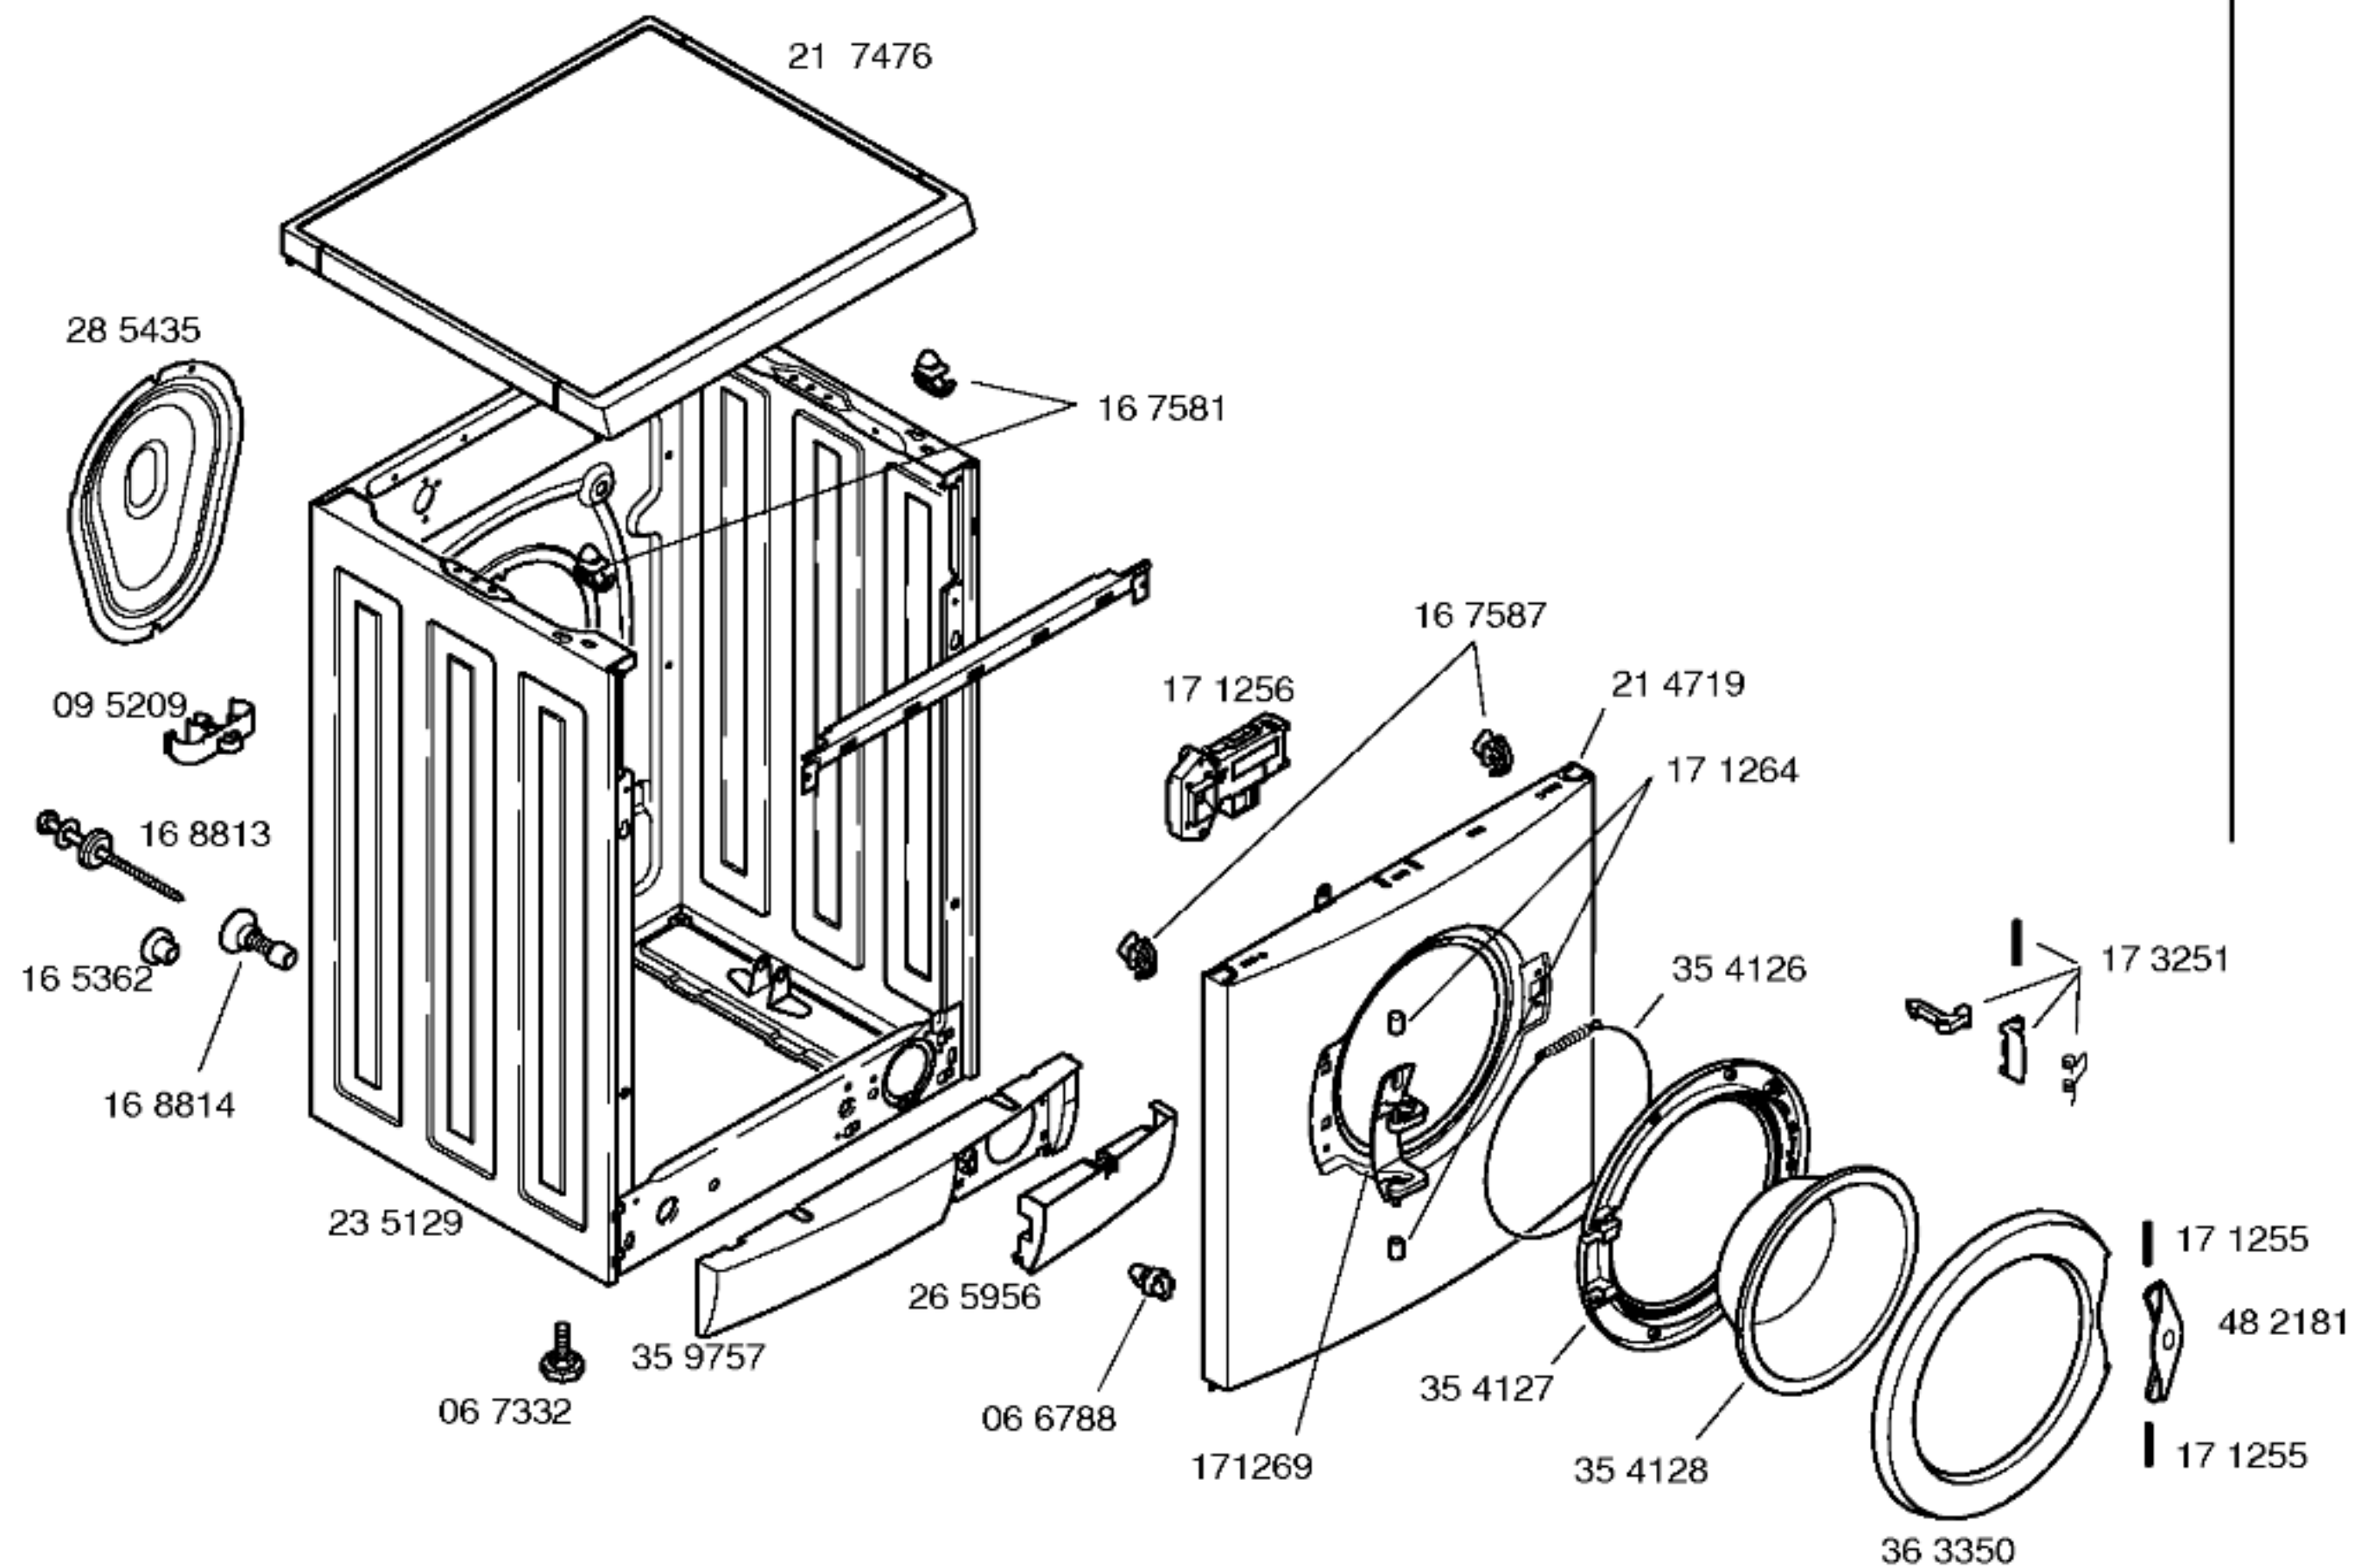

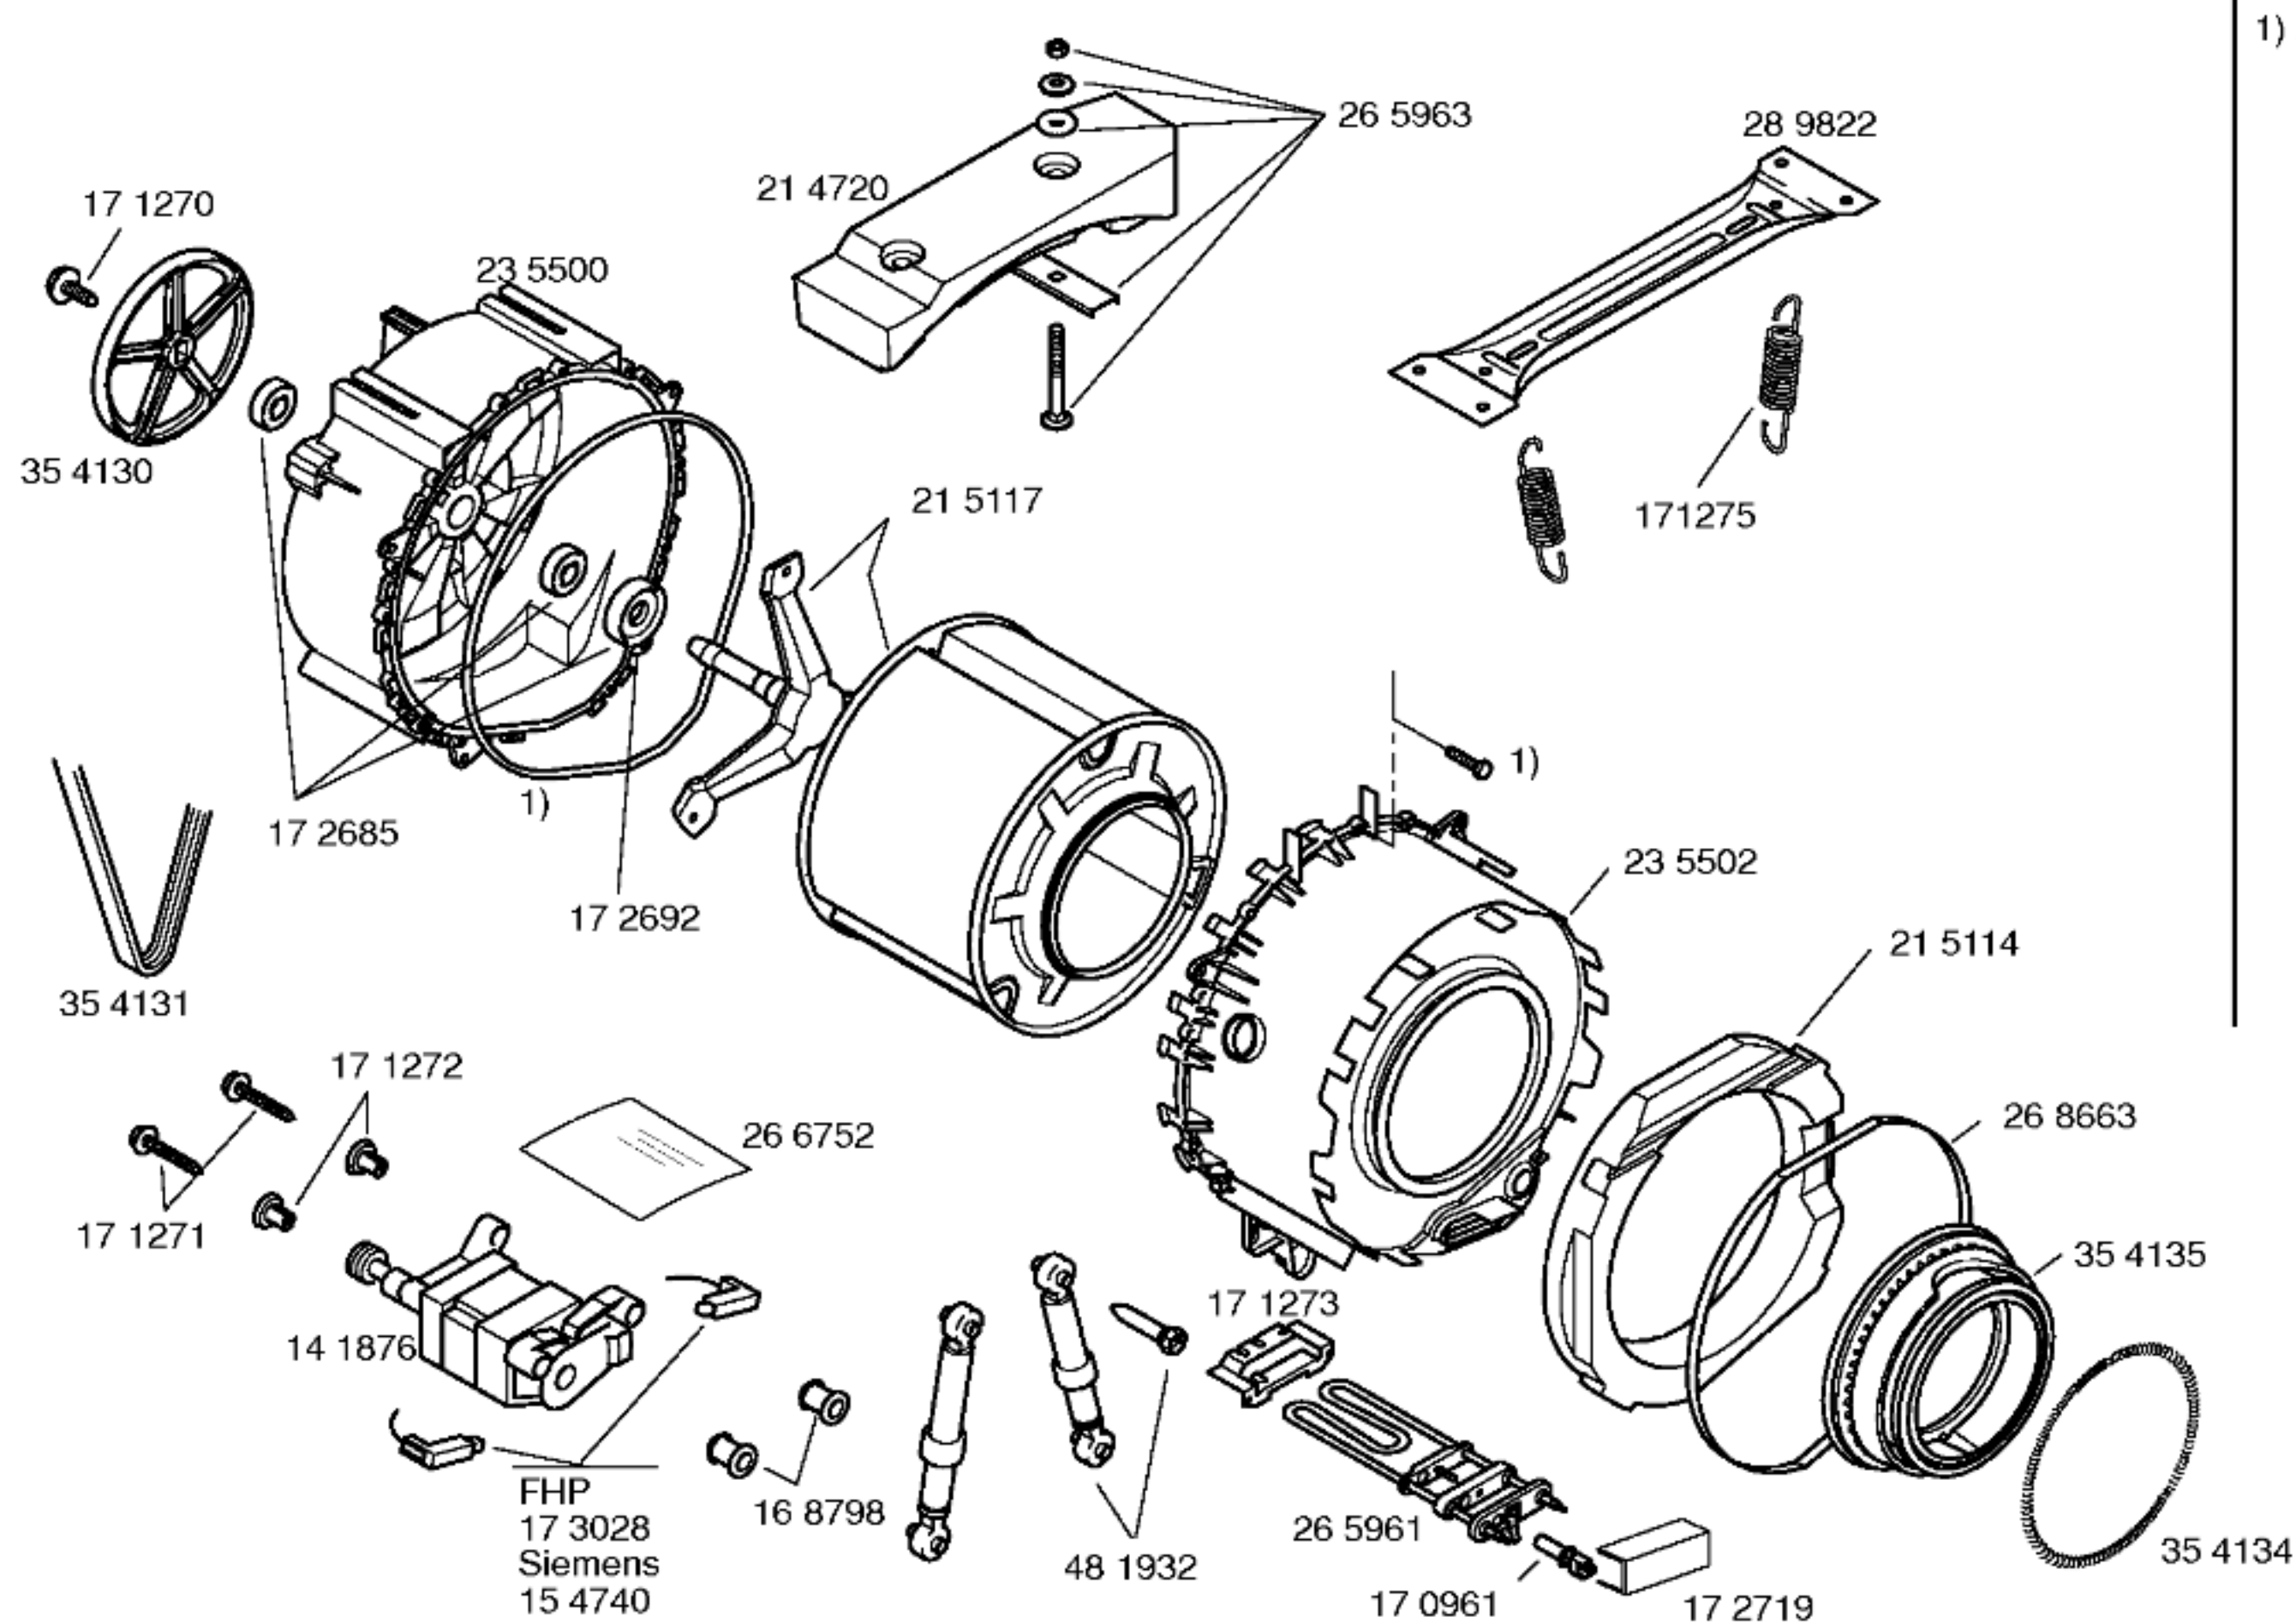

1) 26 5964

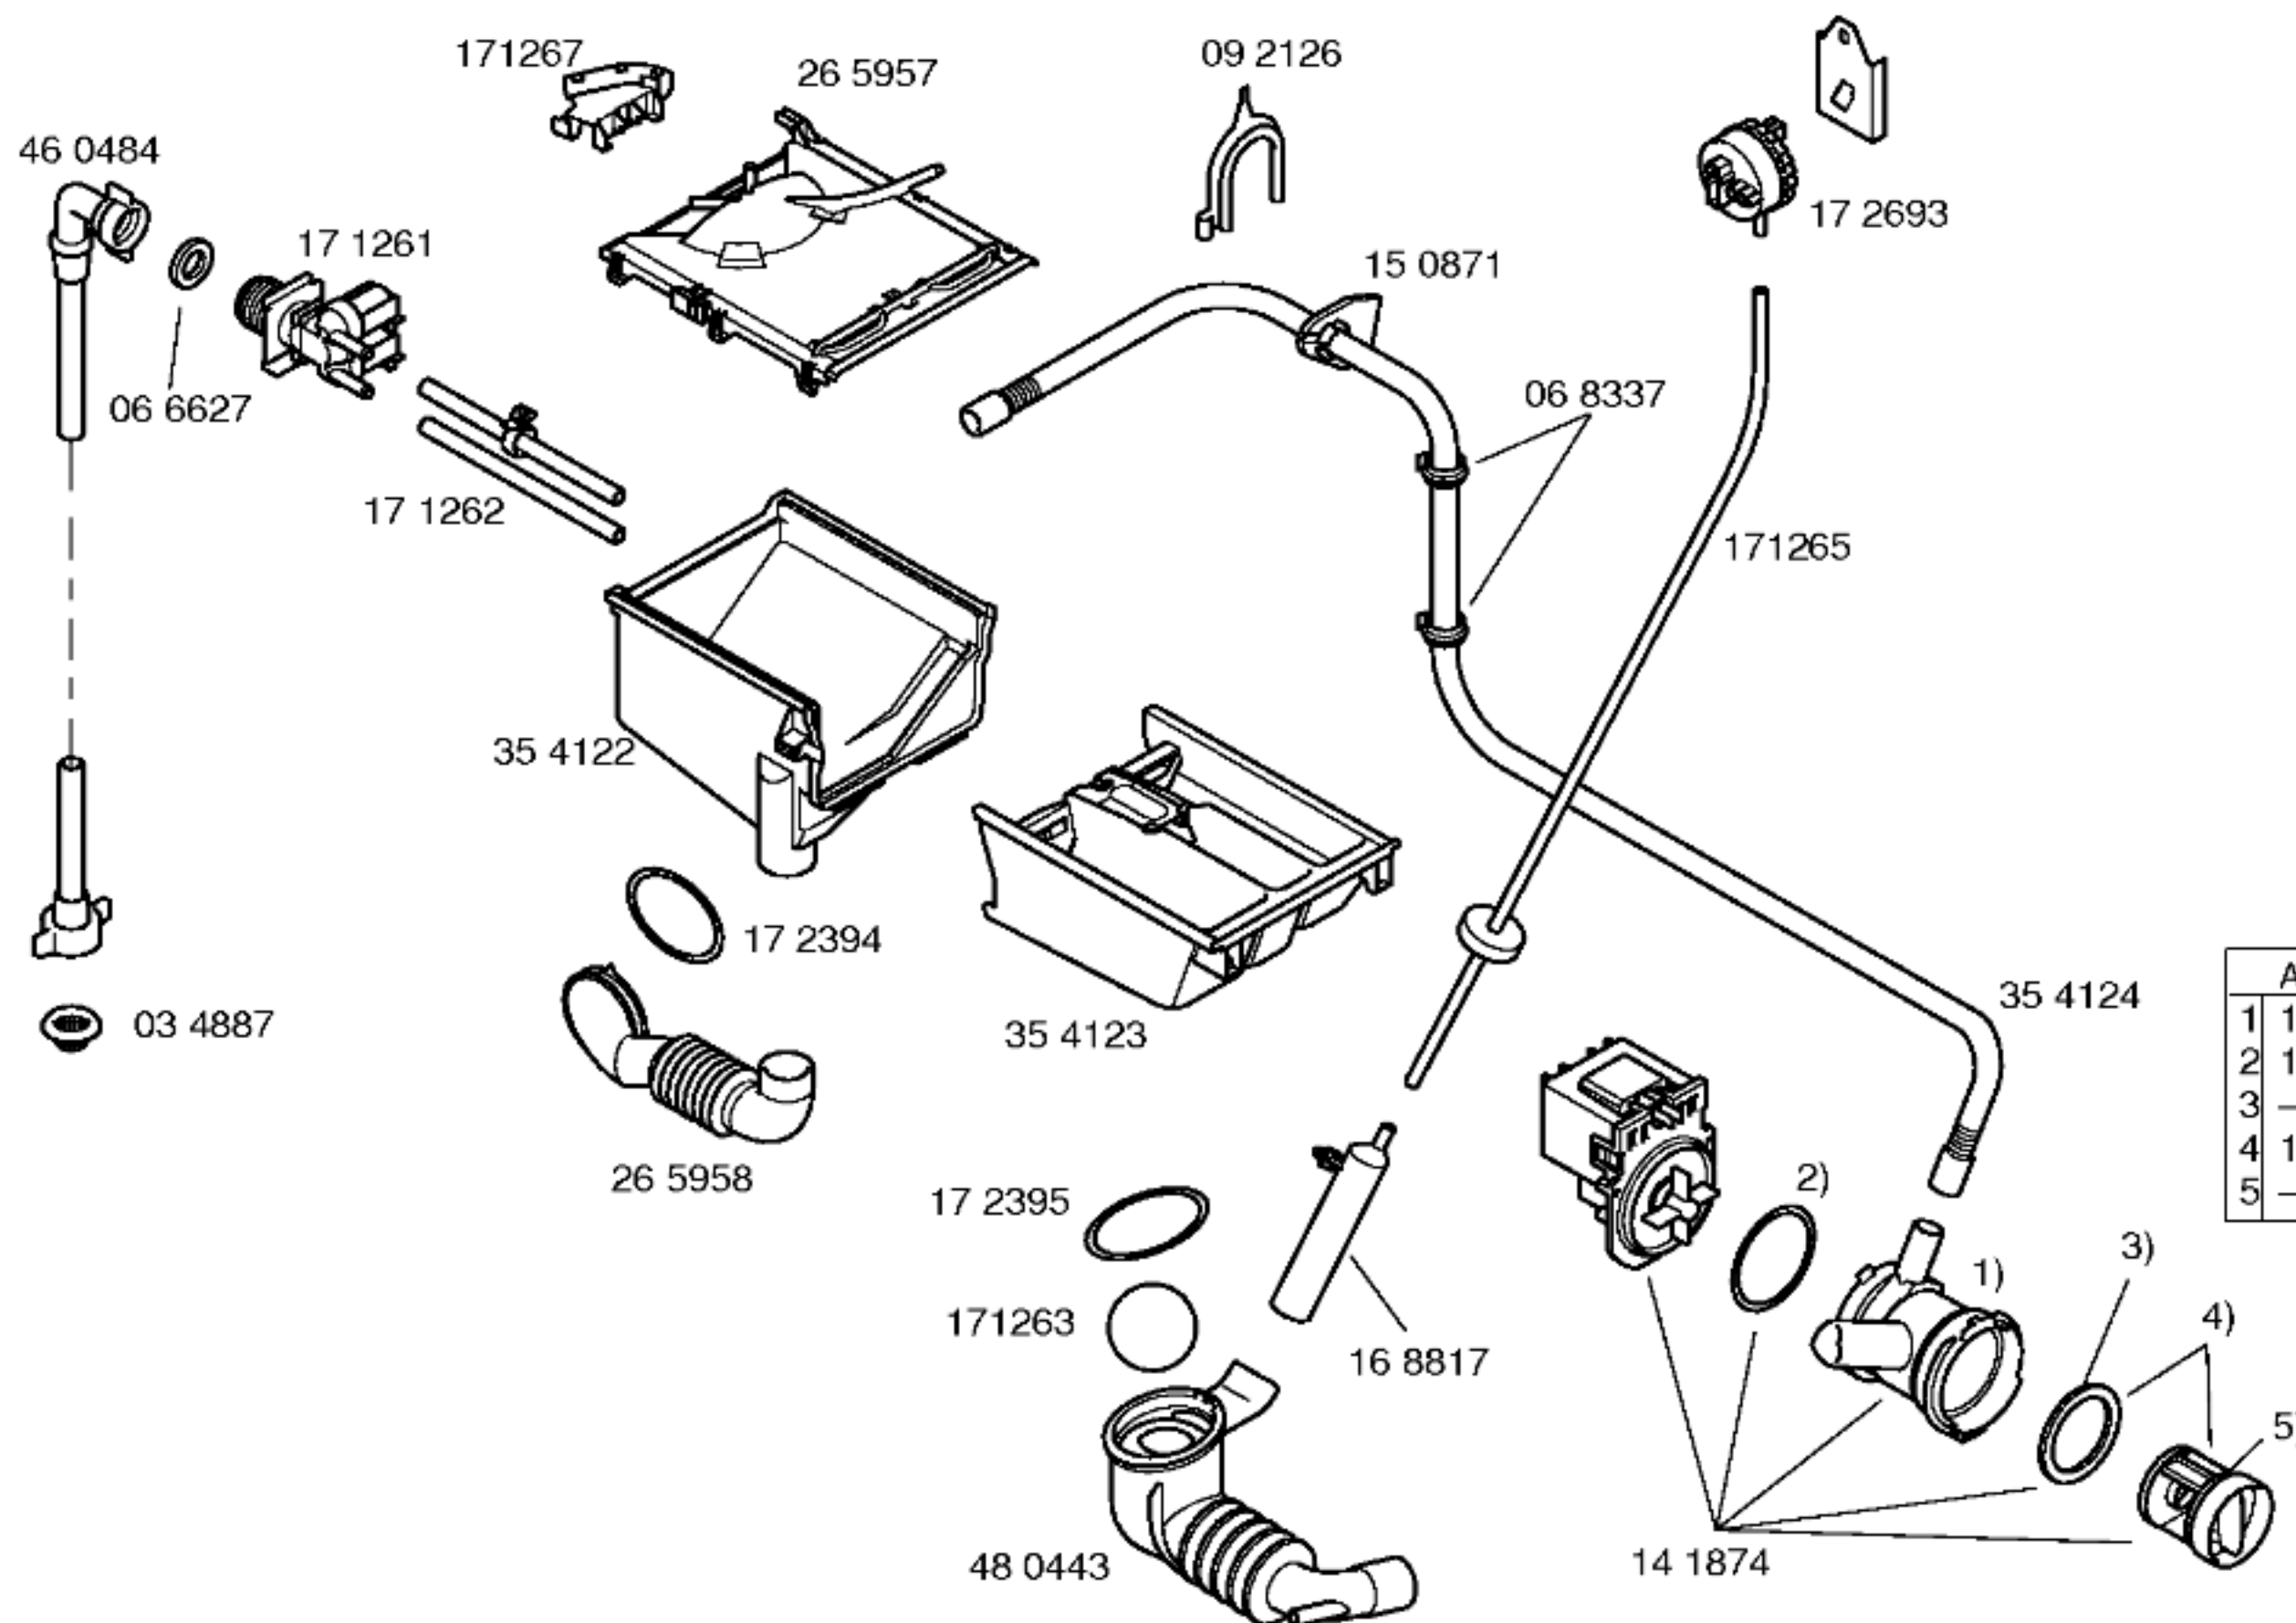

	ASKOLL	COPRECI
1	17 2340	17 2337
2	15 1408	15 4358
3		172338
4	15 1409	
5		17 2339