



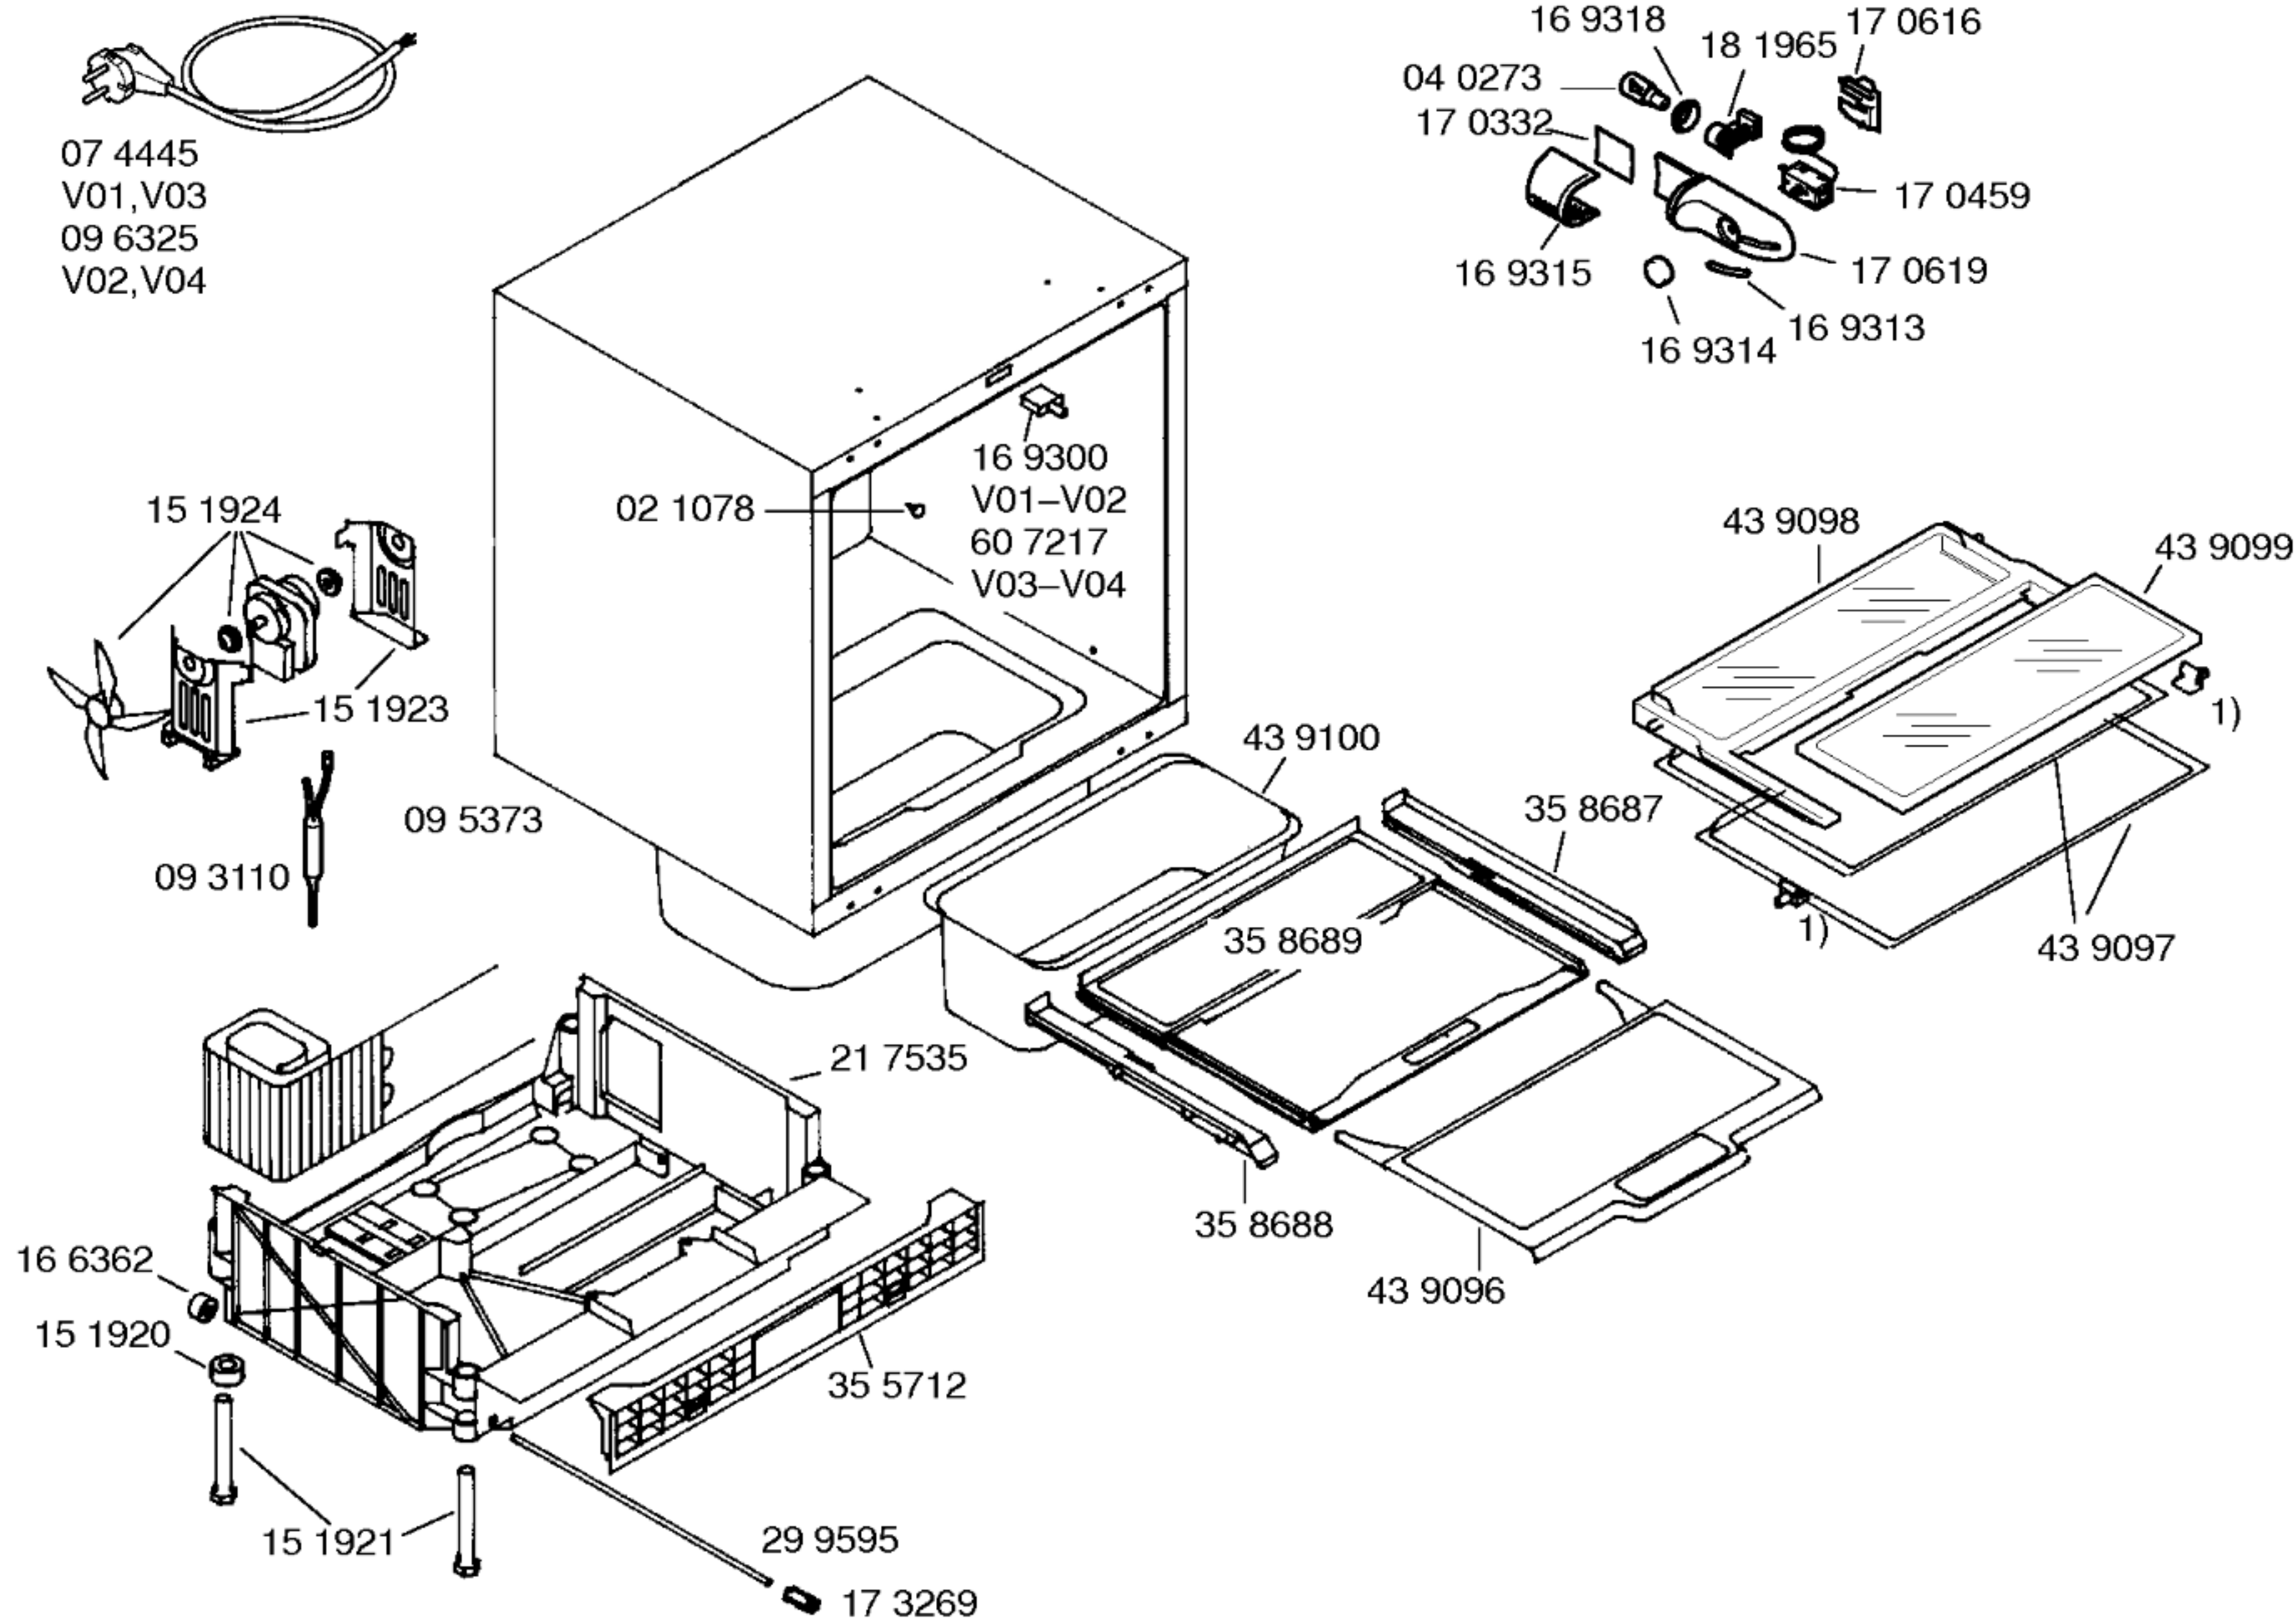


Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
59 0433 - V01-V02
54 6626 - V03-V04
(de,en,it,nl)
Montageanleitung
69 2132
Beistellsatz
26 8429

1) 16 5789

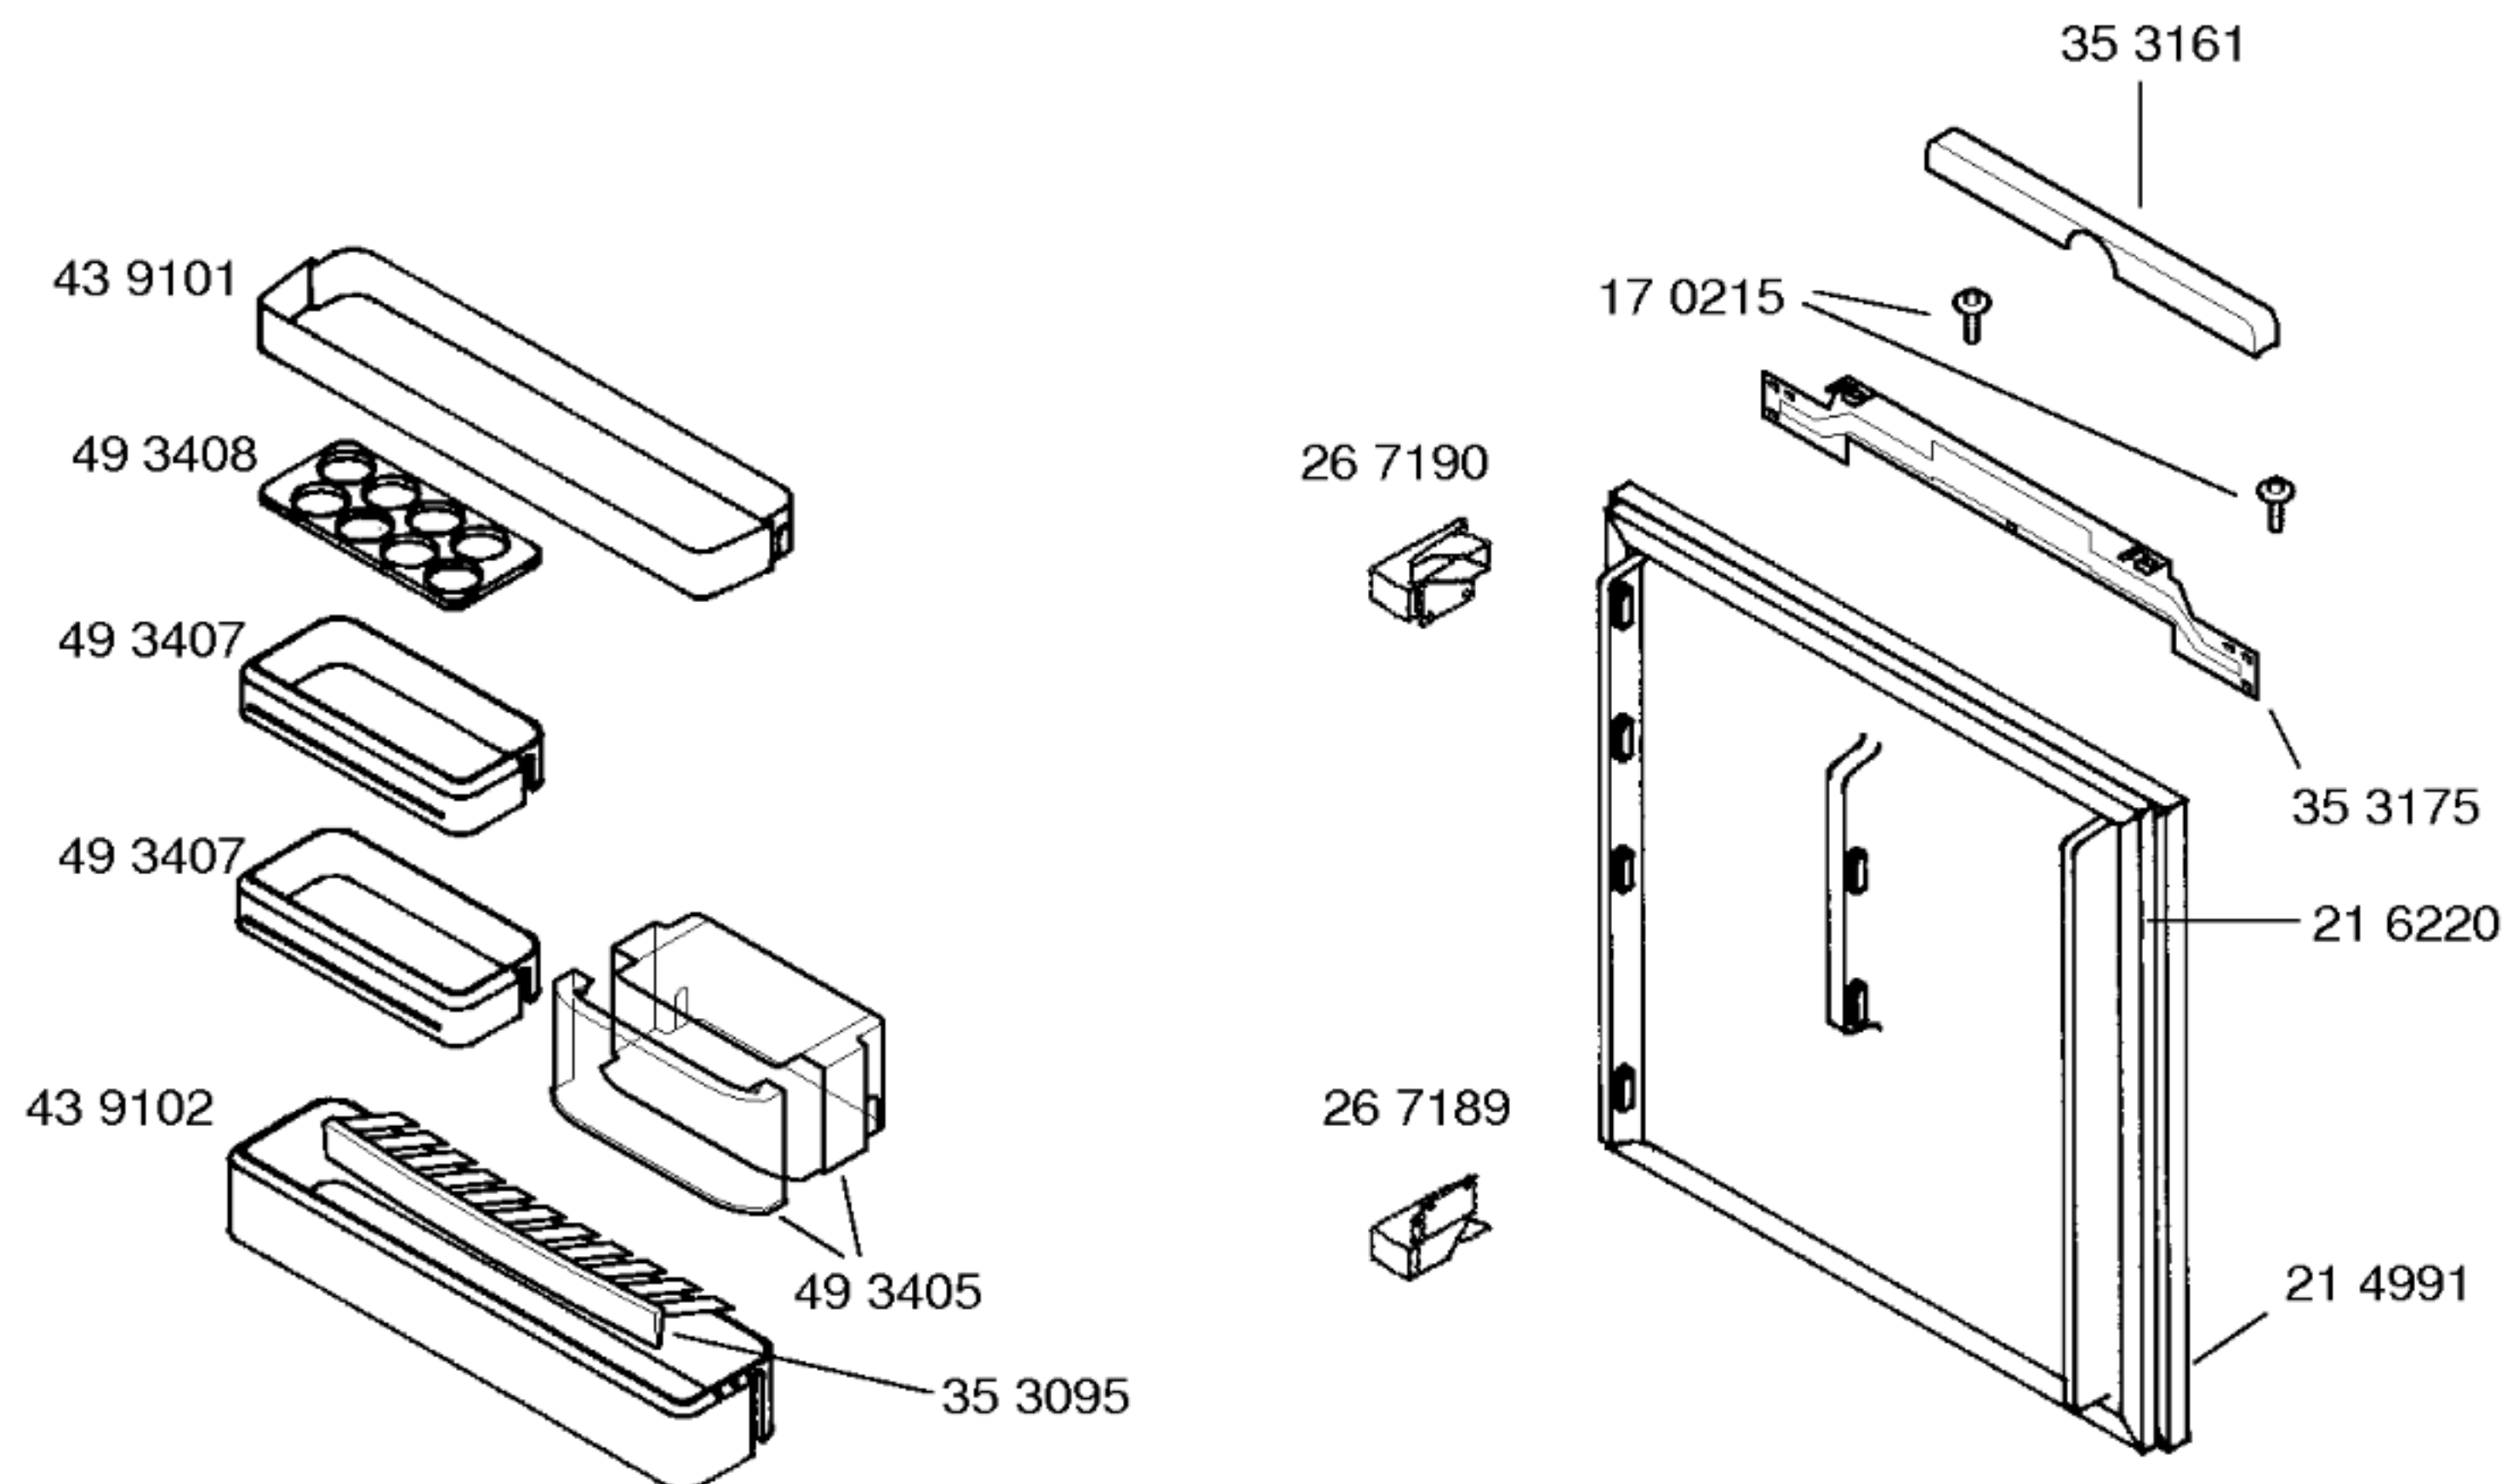

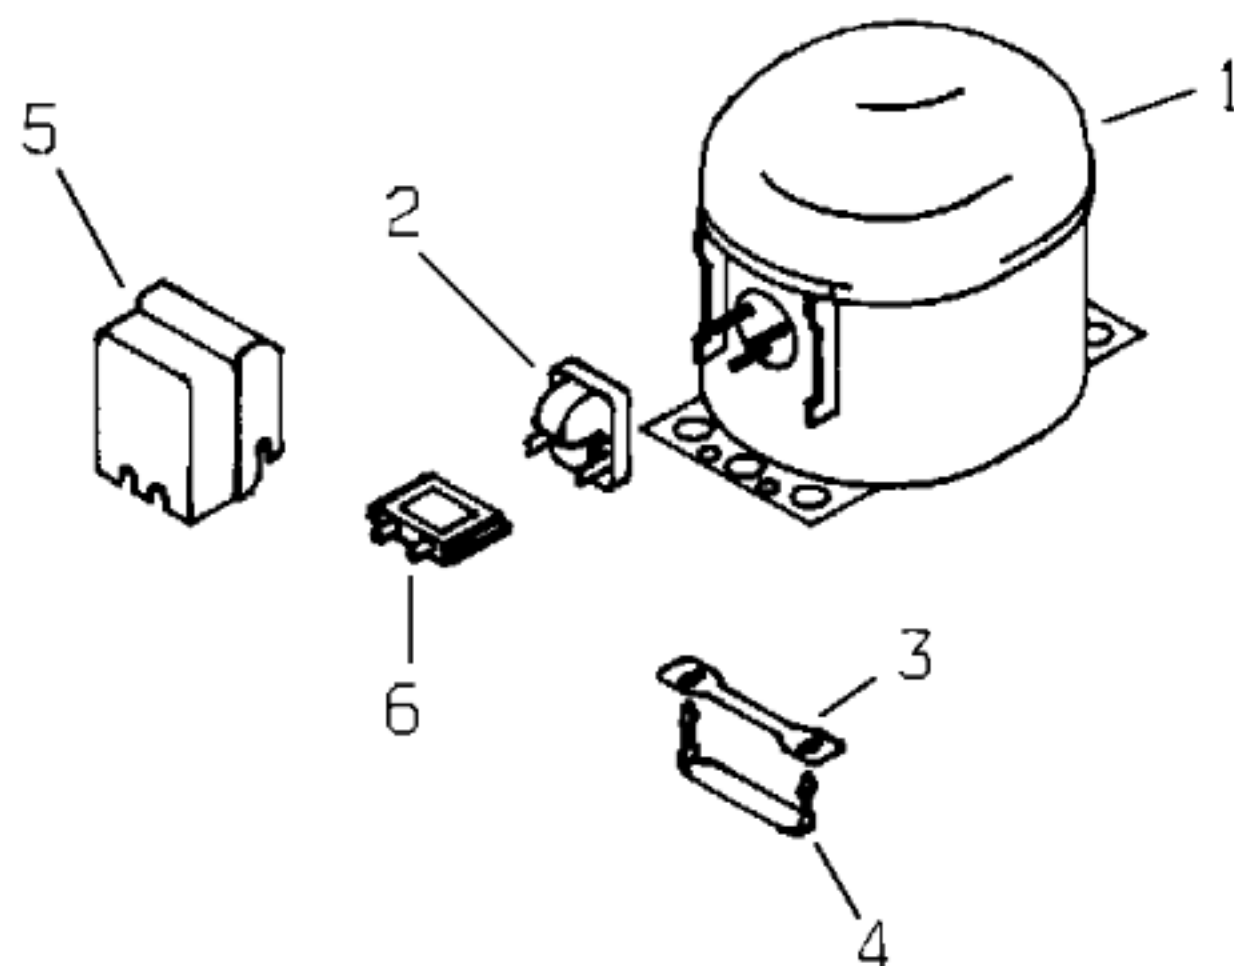

Pos.	V01 – V02	V03 – V04	
	Danfoss	Danfoss	
	TLES 6 KK2	TLES 5,7 KK3	
1	14 1905	14 4919	
2	15 1055	15 1055	
3	15 1919	15 1919	
4	15 1918	15 1918	
5	15 1072	15 1072	
6	15 0760	15 0760	
7			
8			
9			
10			
11			
12			