


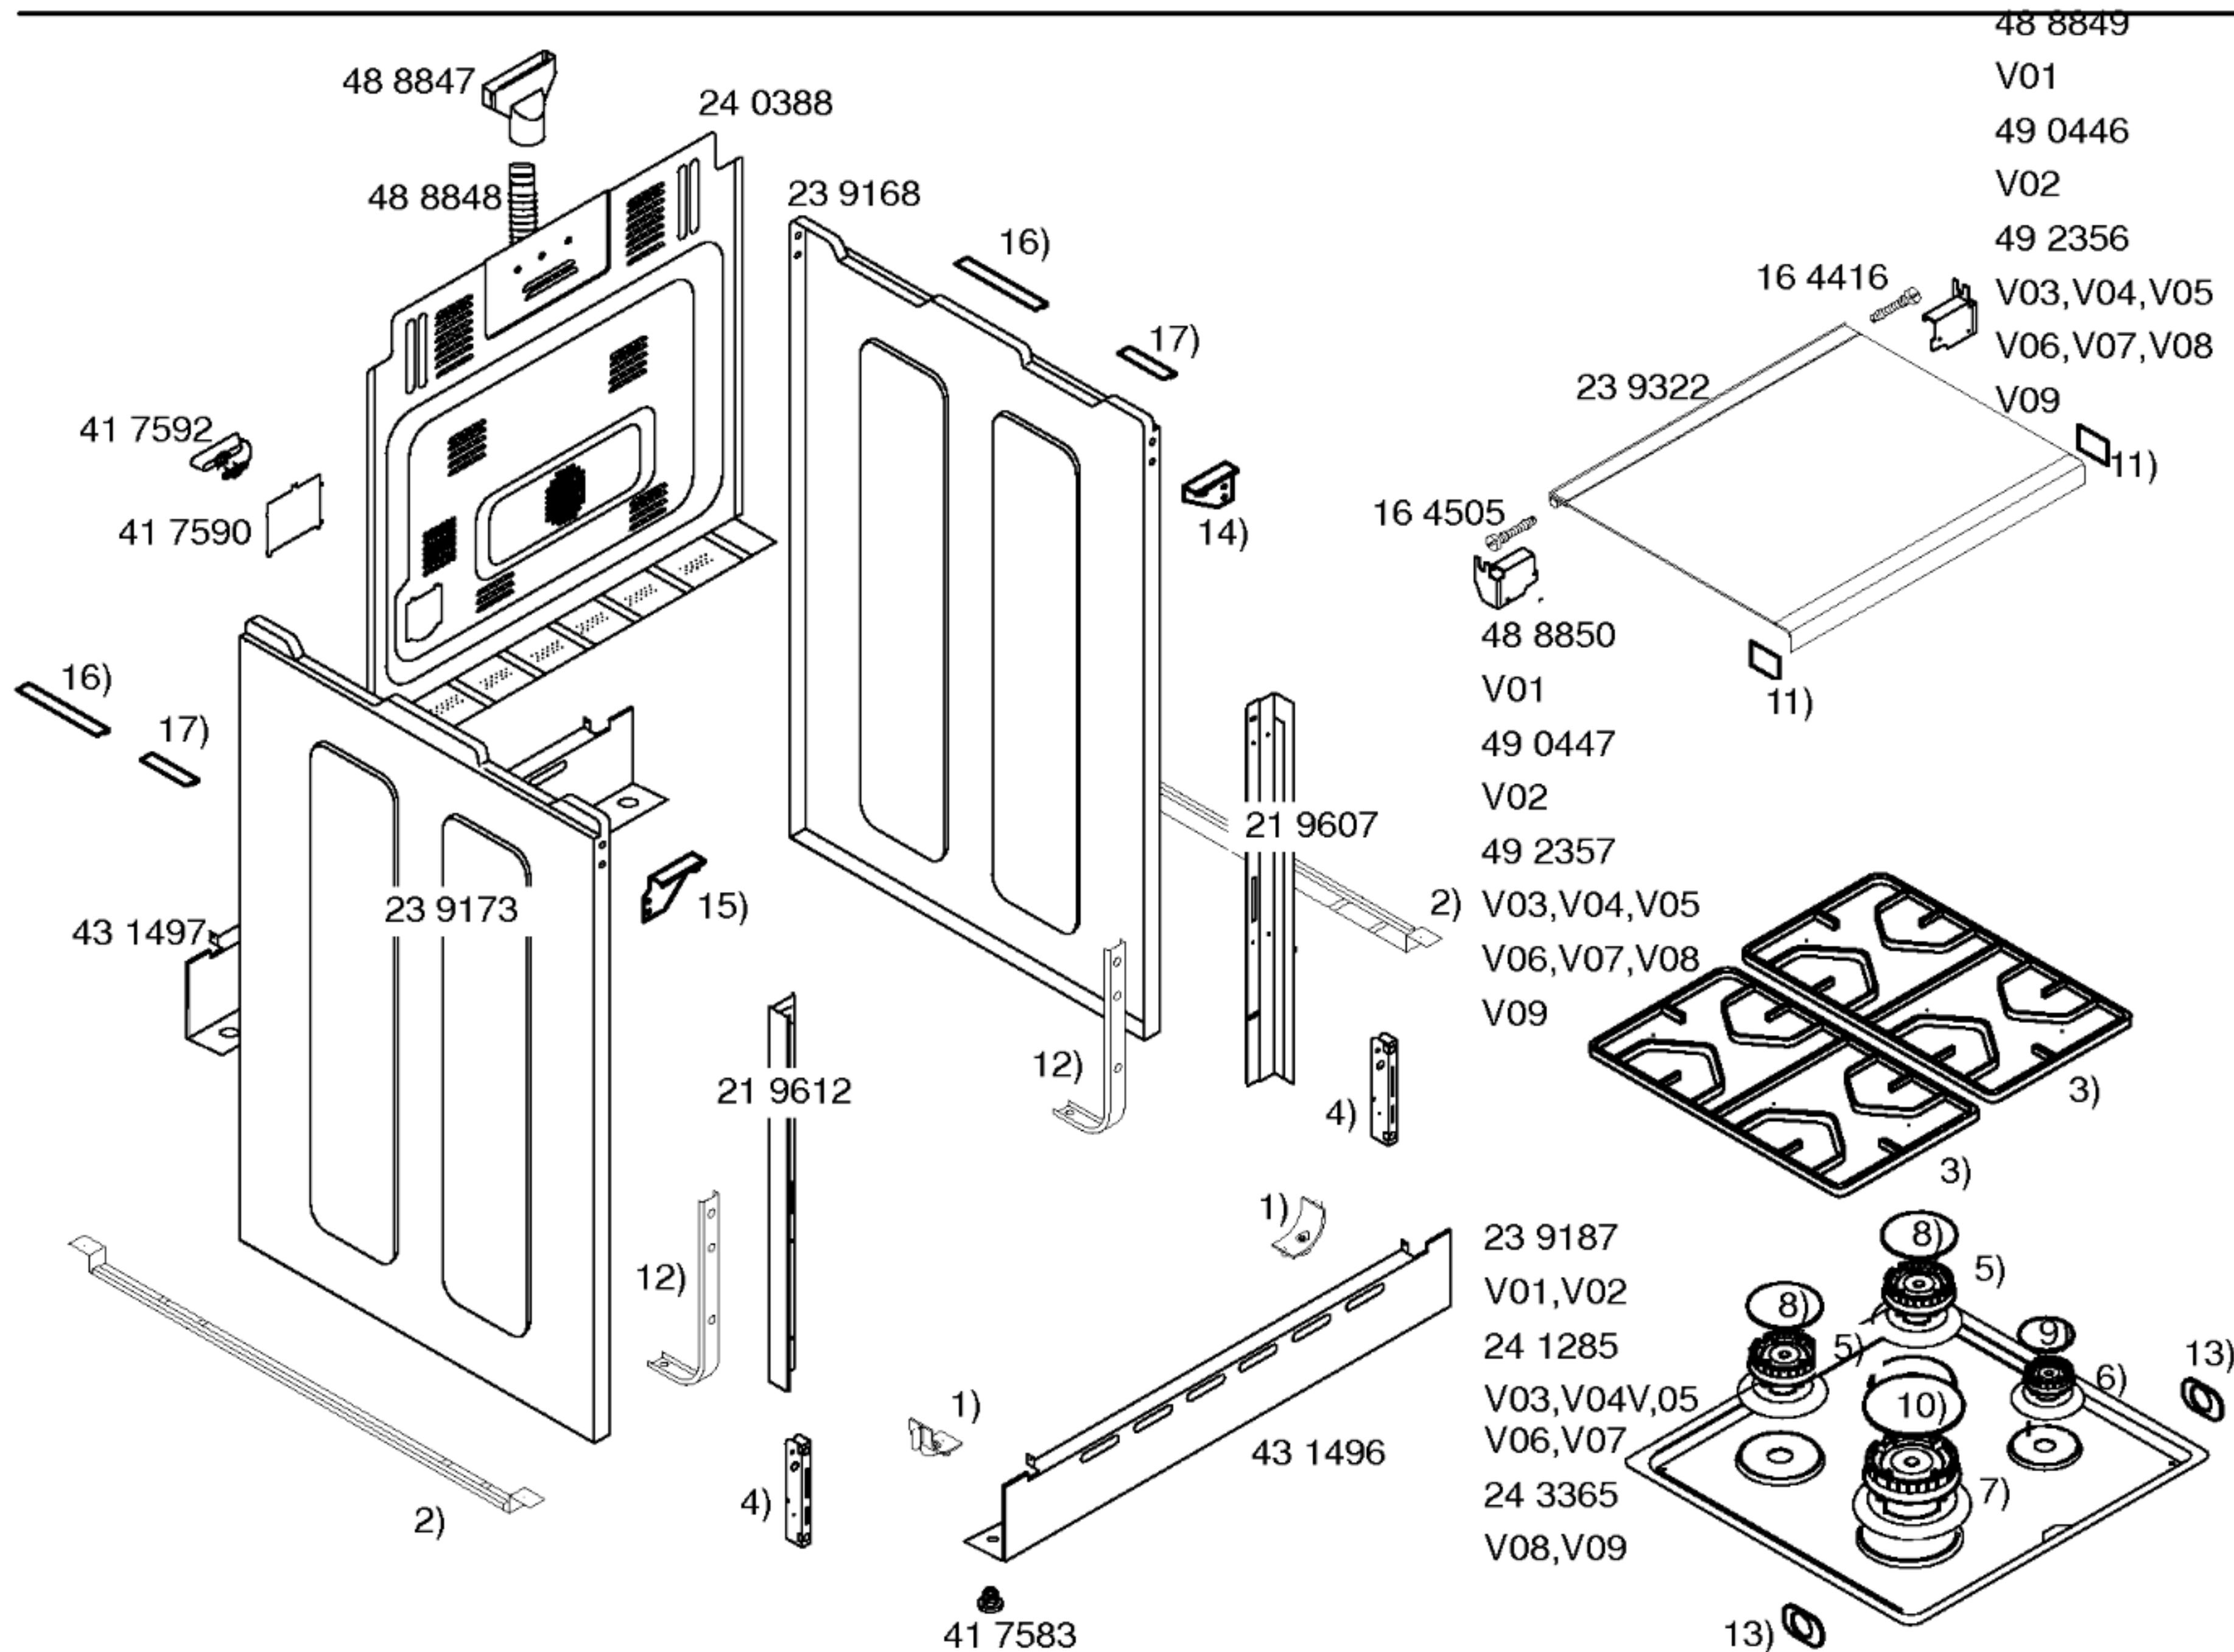

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisung
 58 6260
 (NL,EN)

- 1) 41 7587
- 2) 43 1499
- 3) 48 2070
- 4) 41 7579
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 41 8694
- 9) 41 8696
- 10) 41 8881
- 11) 18 4302
- 12) 43 1502
- 13) 41 6914
- V01,V02
- 14) 42 3351
- V03,V04,V05,V06
- V07,V08,V09
- 15) 42 3352
- V03,V04,V05,V06
- V07,V08,V09
- 16) 42 3353
- V03,V04,V05,V06
- V07,V08,V09
- 17) 42 3354
- V03,V04,V05,V06
- V07,V08,V09

48 9251


V01,V02

49 2362


V03,V04

V05,V06,V07

V08,V09

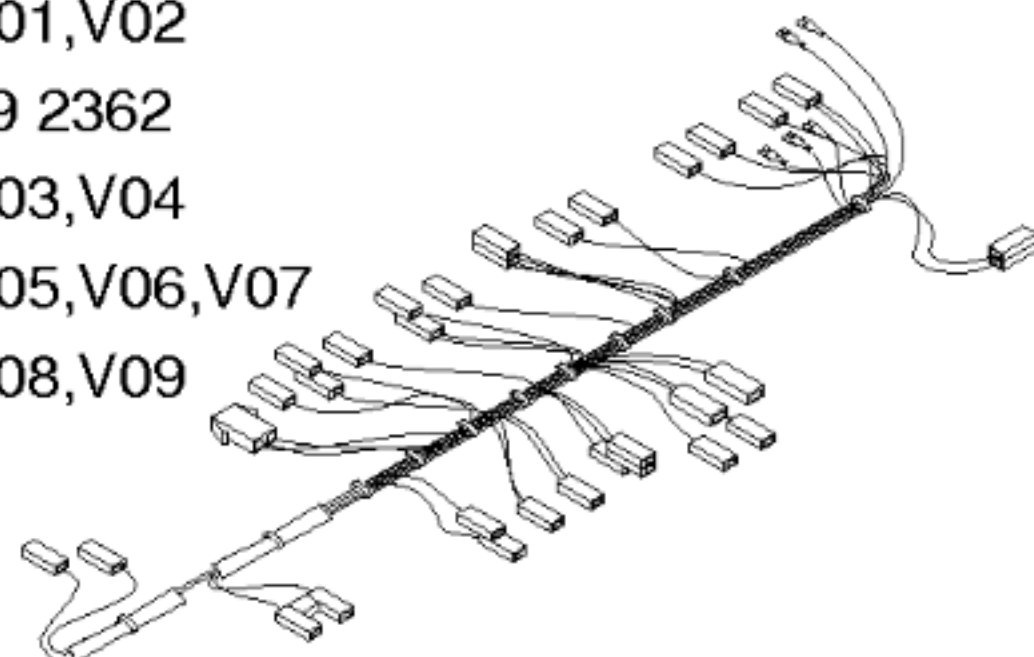

41 8395

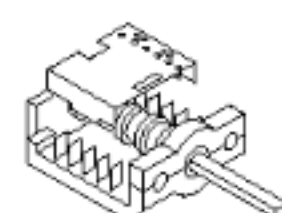

26 2730



41 8396




36 2893

43 1504
 V01,V02

36 2724
 V01,V02,V03
 V04,V05,V06
 V07
 44 6608
 V09

41 6860


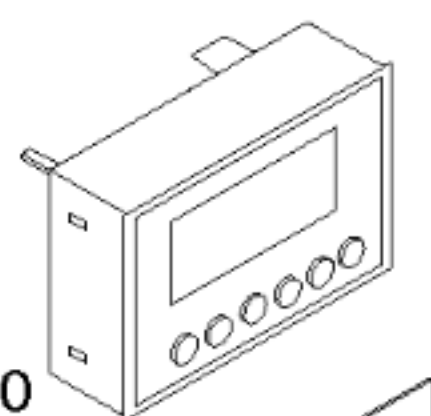


18 4233
 V01,V02,V03
 V04,V05,V06
 V07,V08

18 7478
 V01,V02,V03
 V04,V05,V06
 V07,V08

18 4045

18 4057

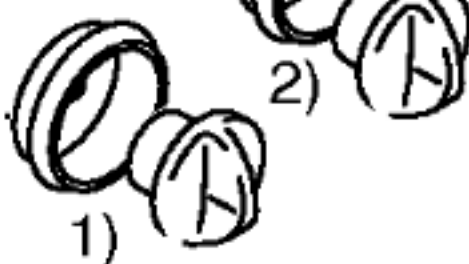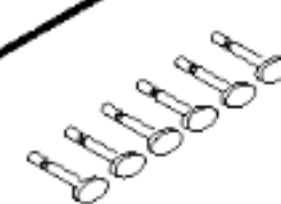


60 1939
 V09




Mat. - Nr. - Konstante
 3740

1) 18 8165
 2) 18 8171
 3) 18 8160
 V01,V02,V03,V04
 42 5190
 V05,V06,V07,V08
 V09

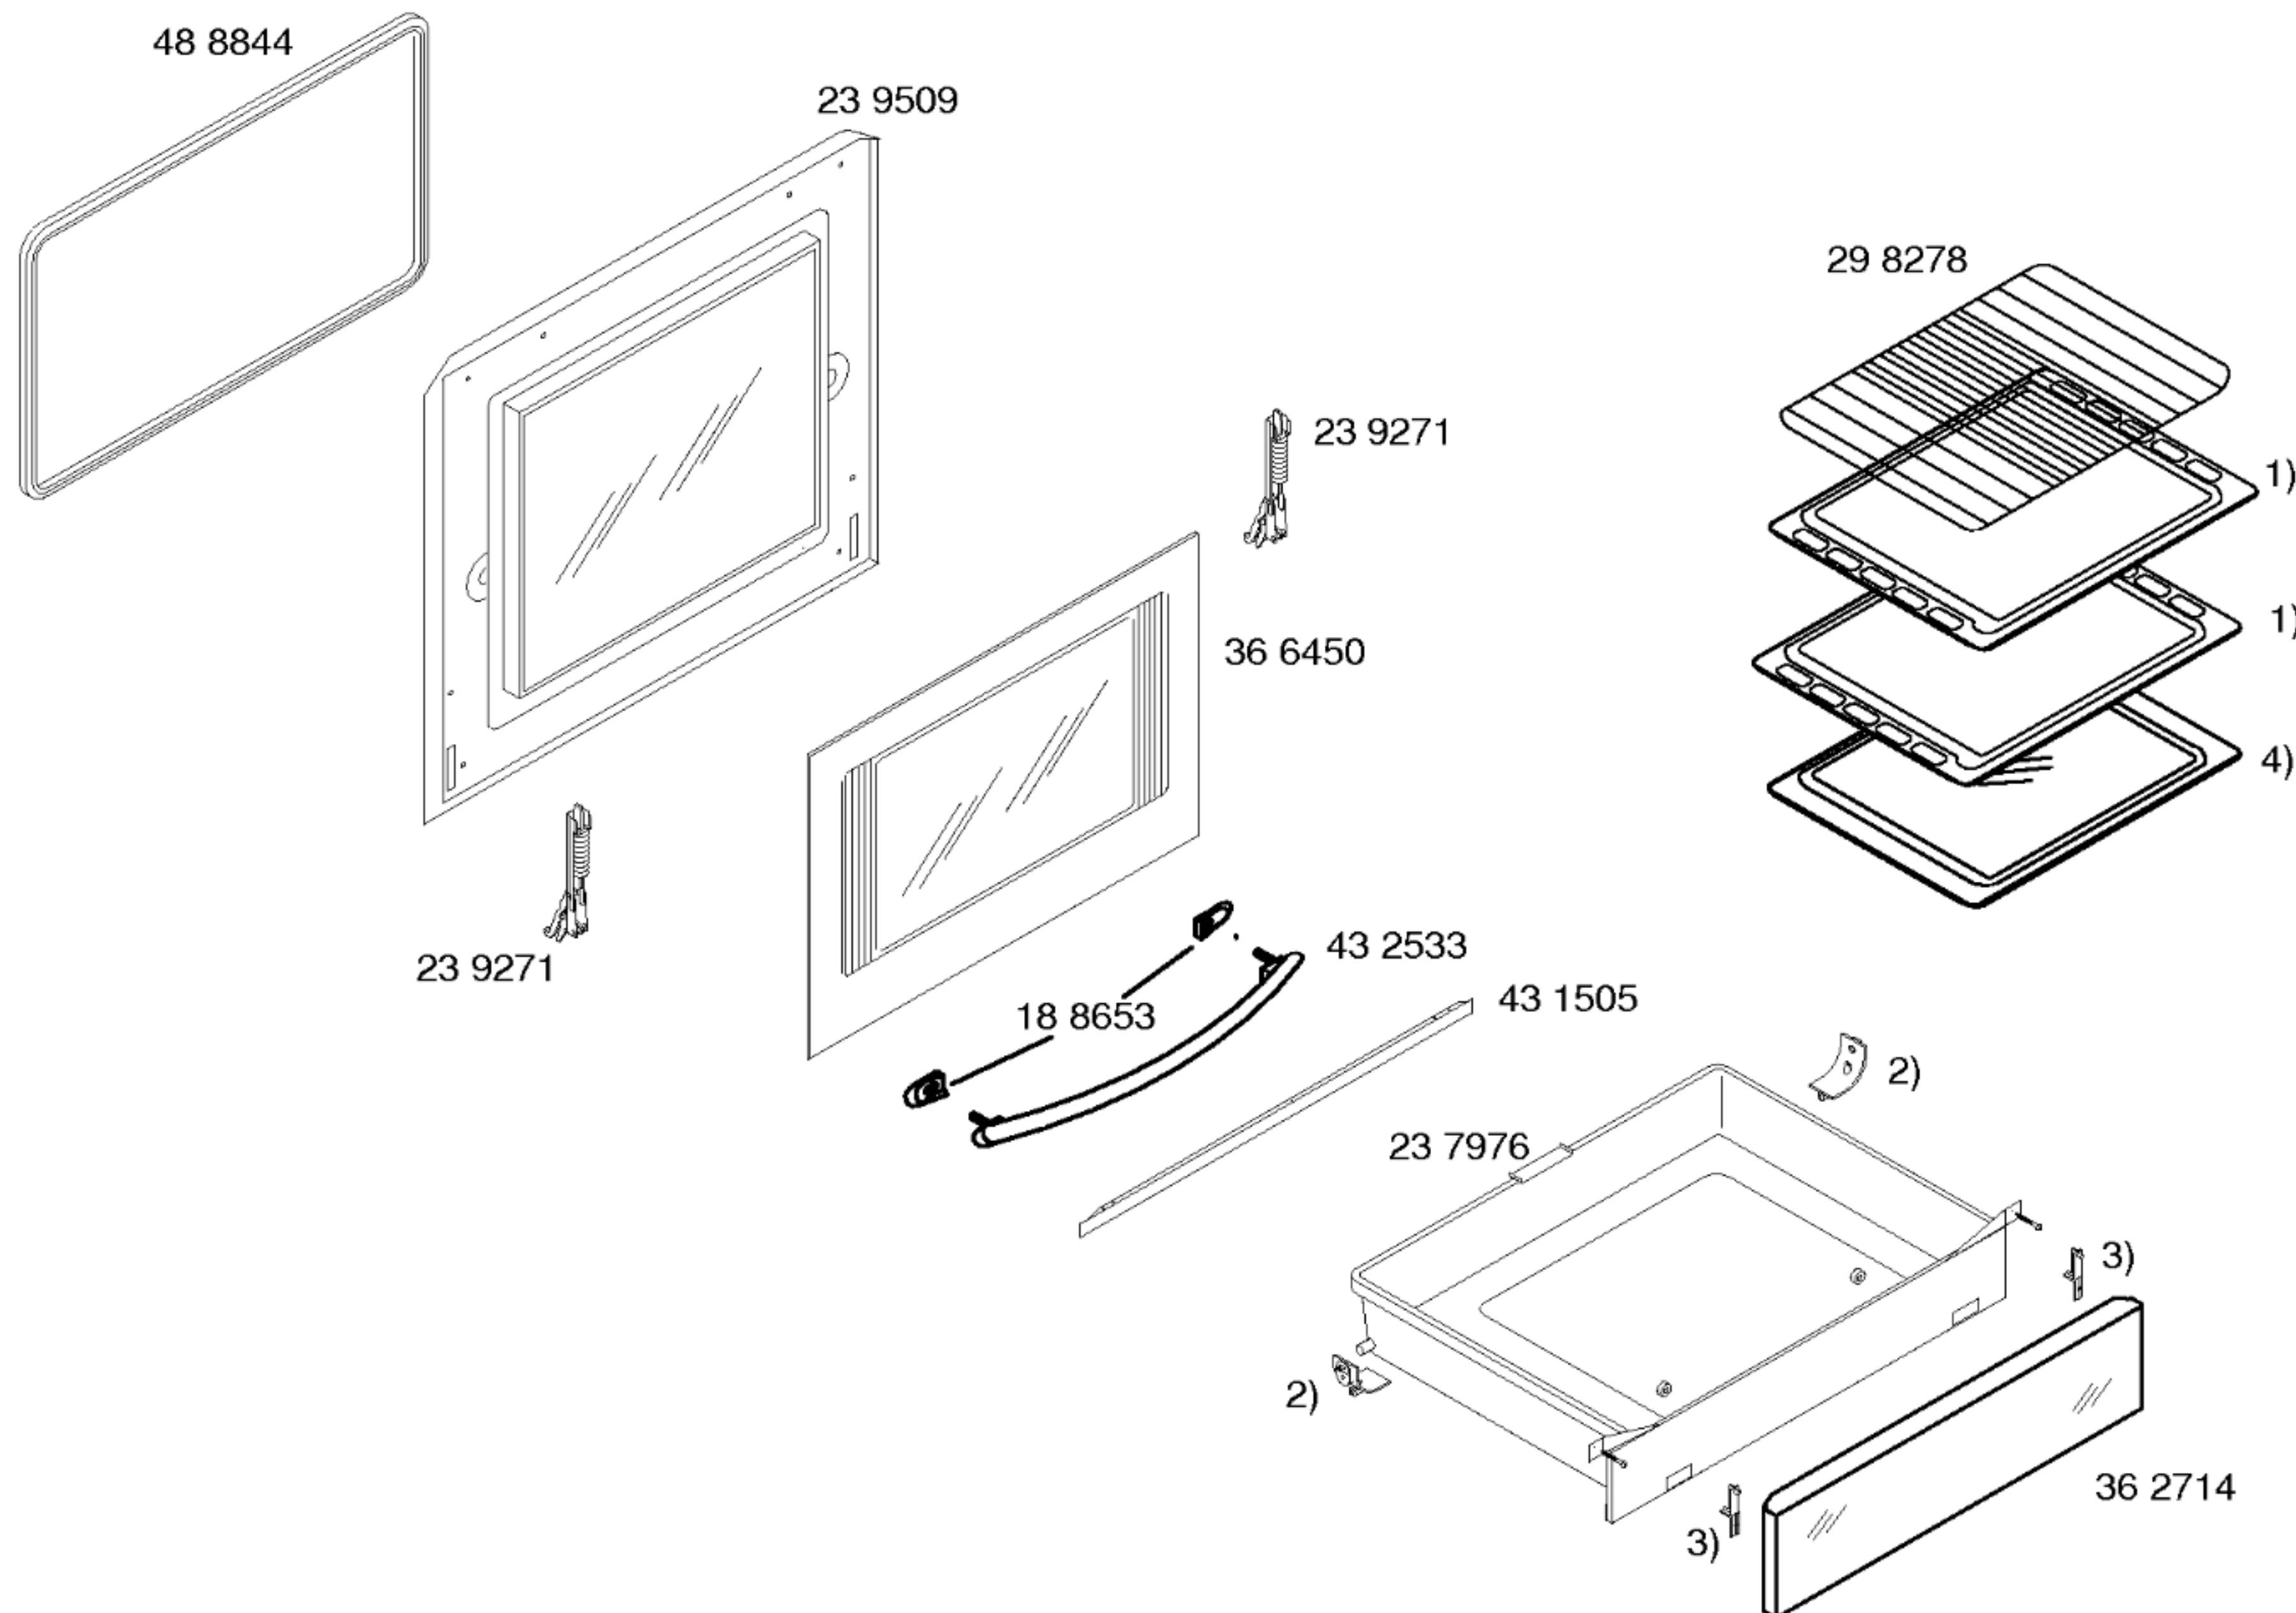


Mat. – Nr. – Konstante
 3740

- 1) 35 3489
- 2) 41 7587
- 3) 41 7588
- 4) 36 5988

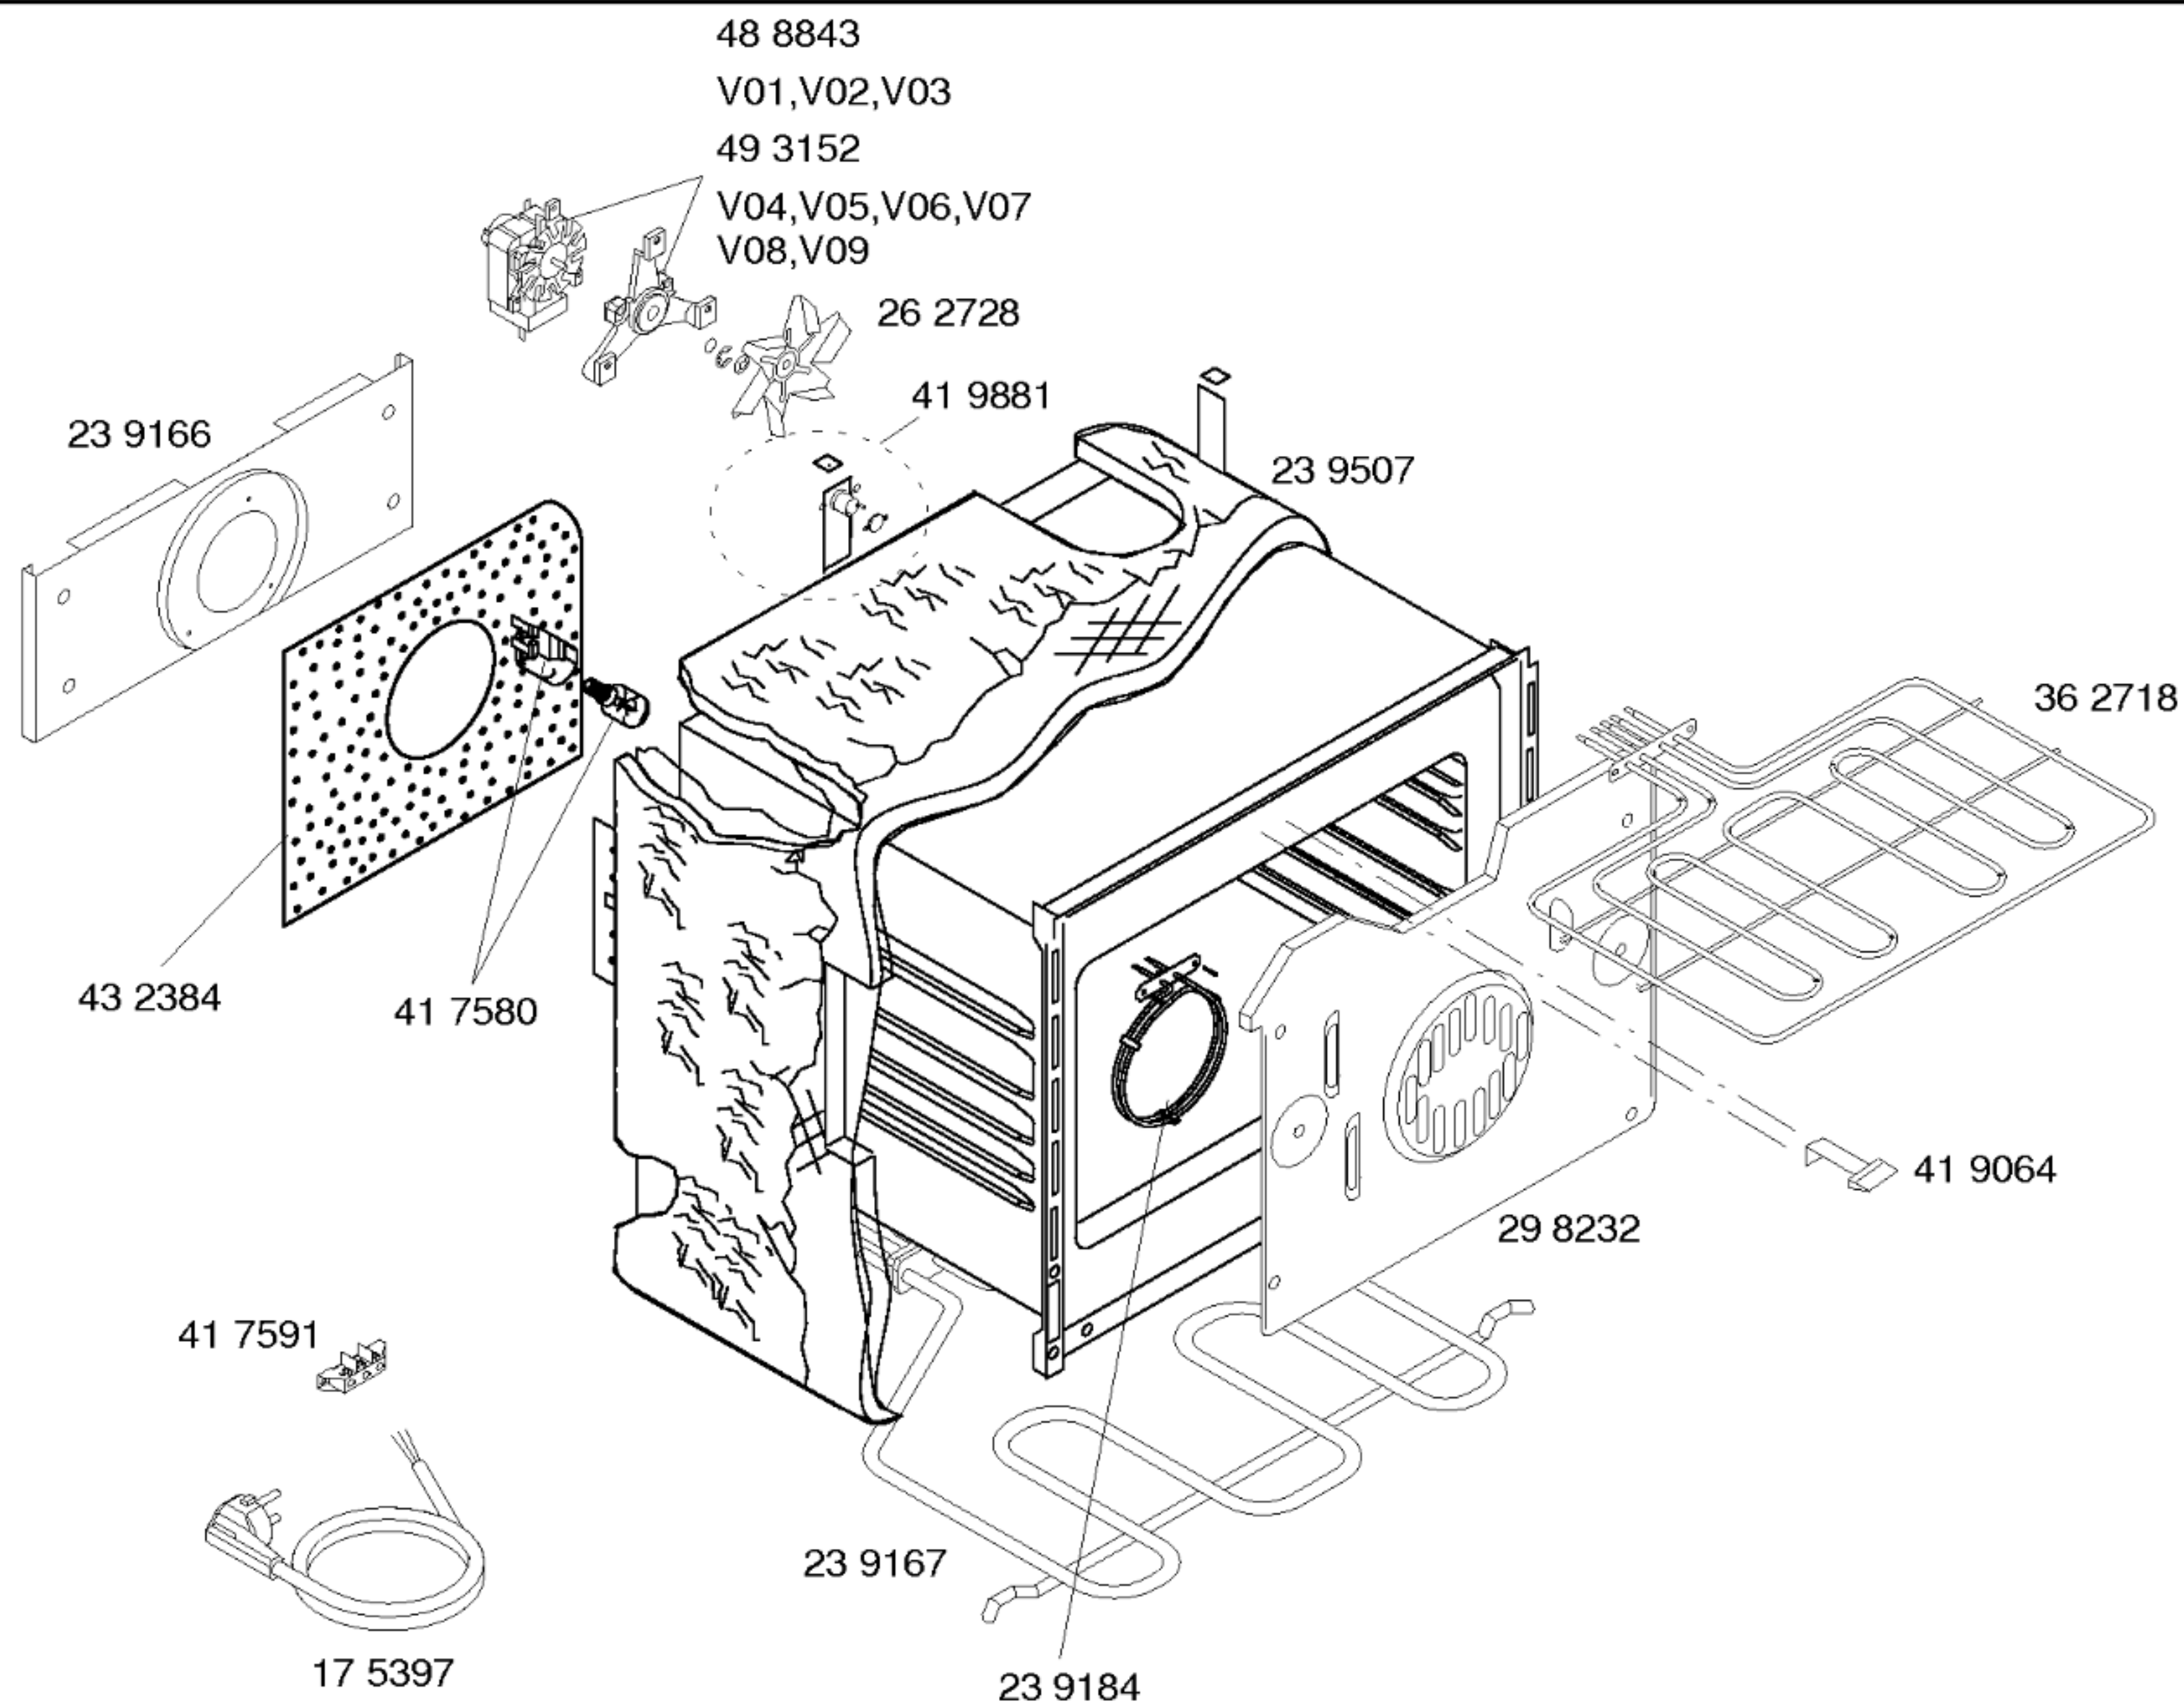

Mat. – Nr. – Konstante
 3740

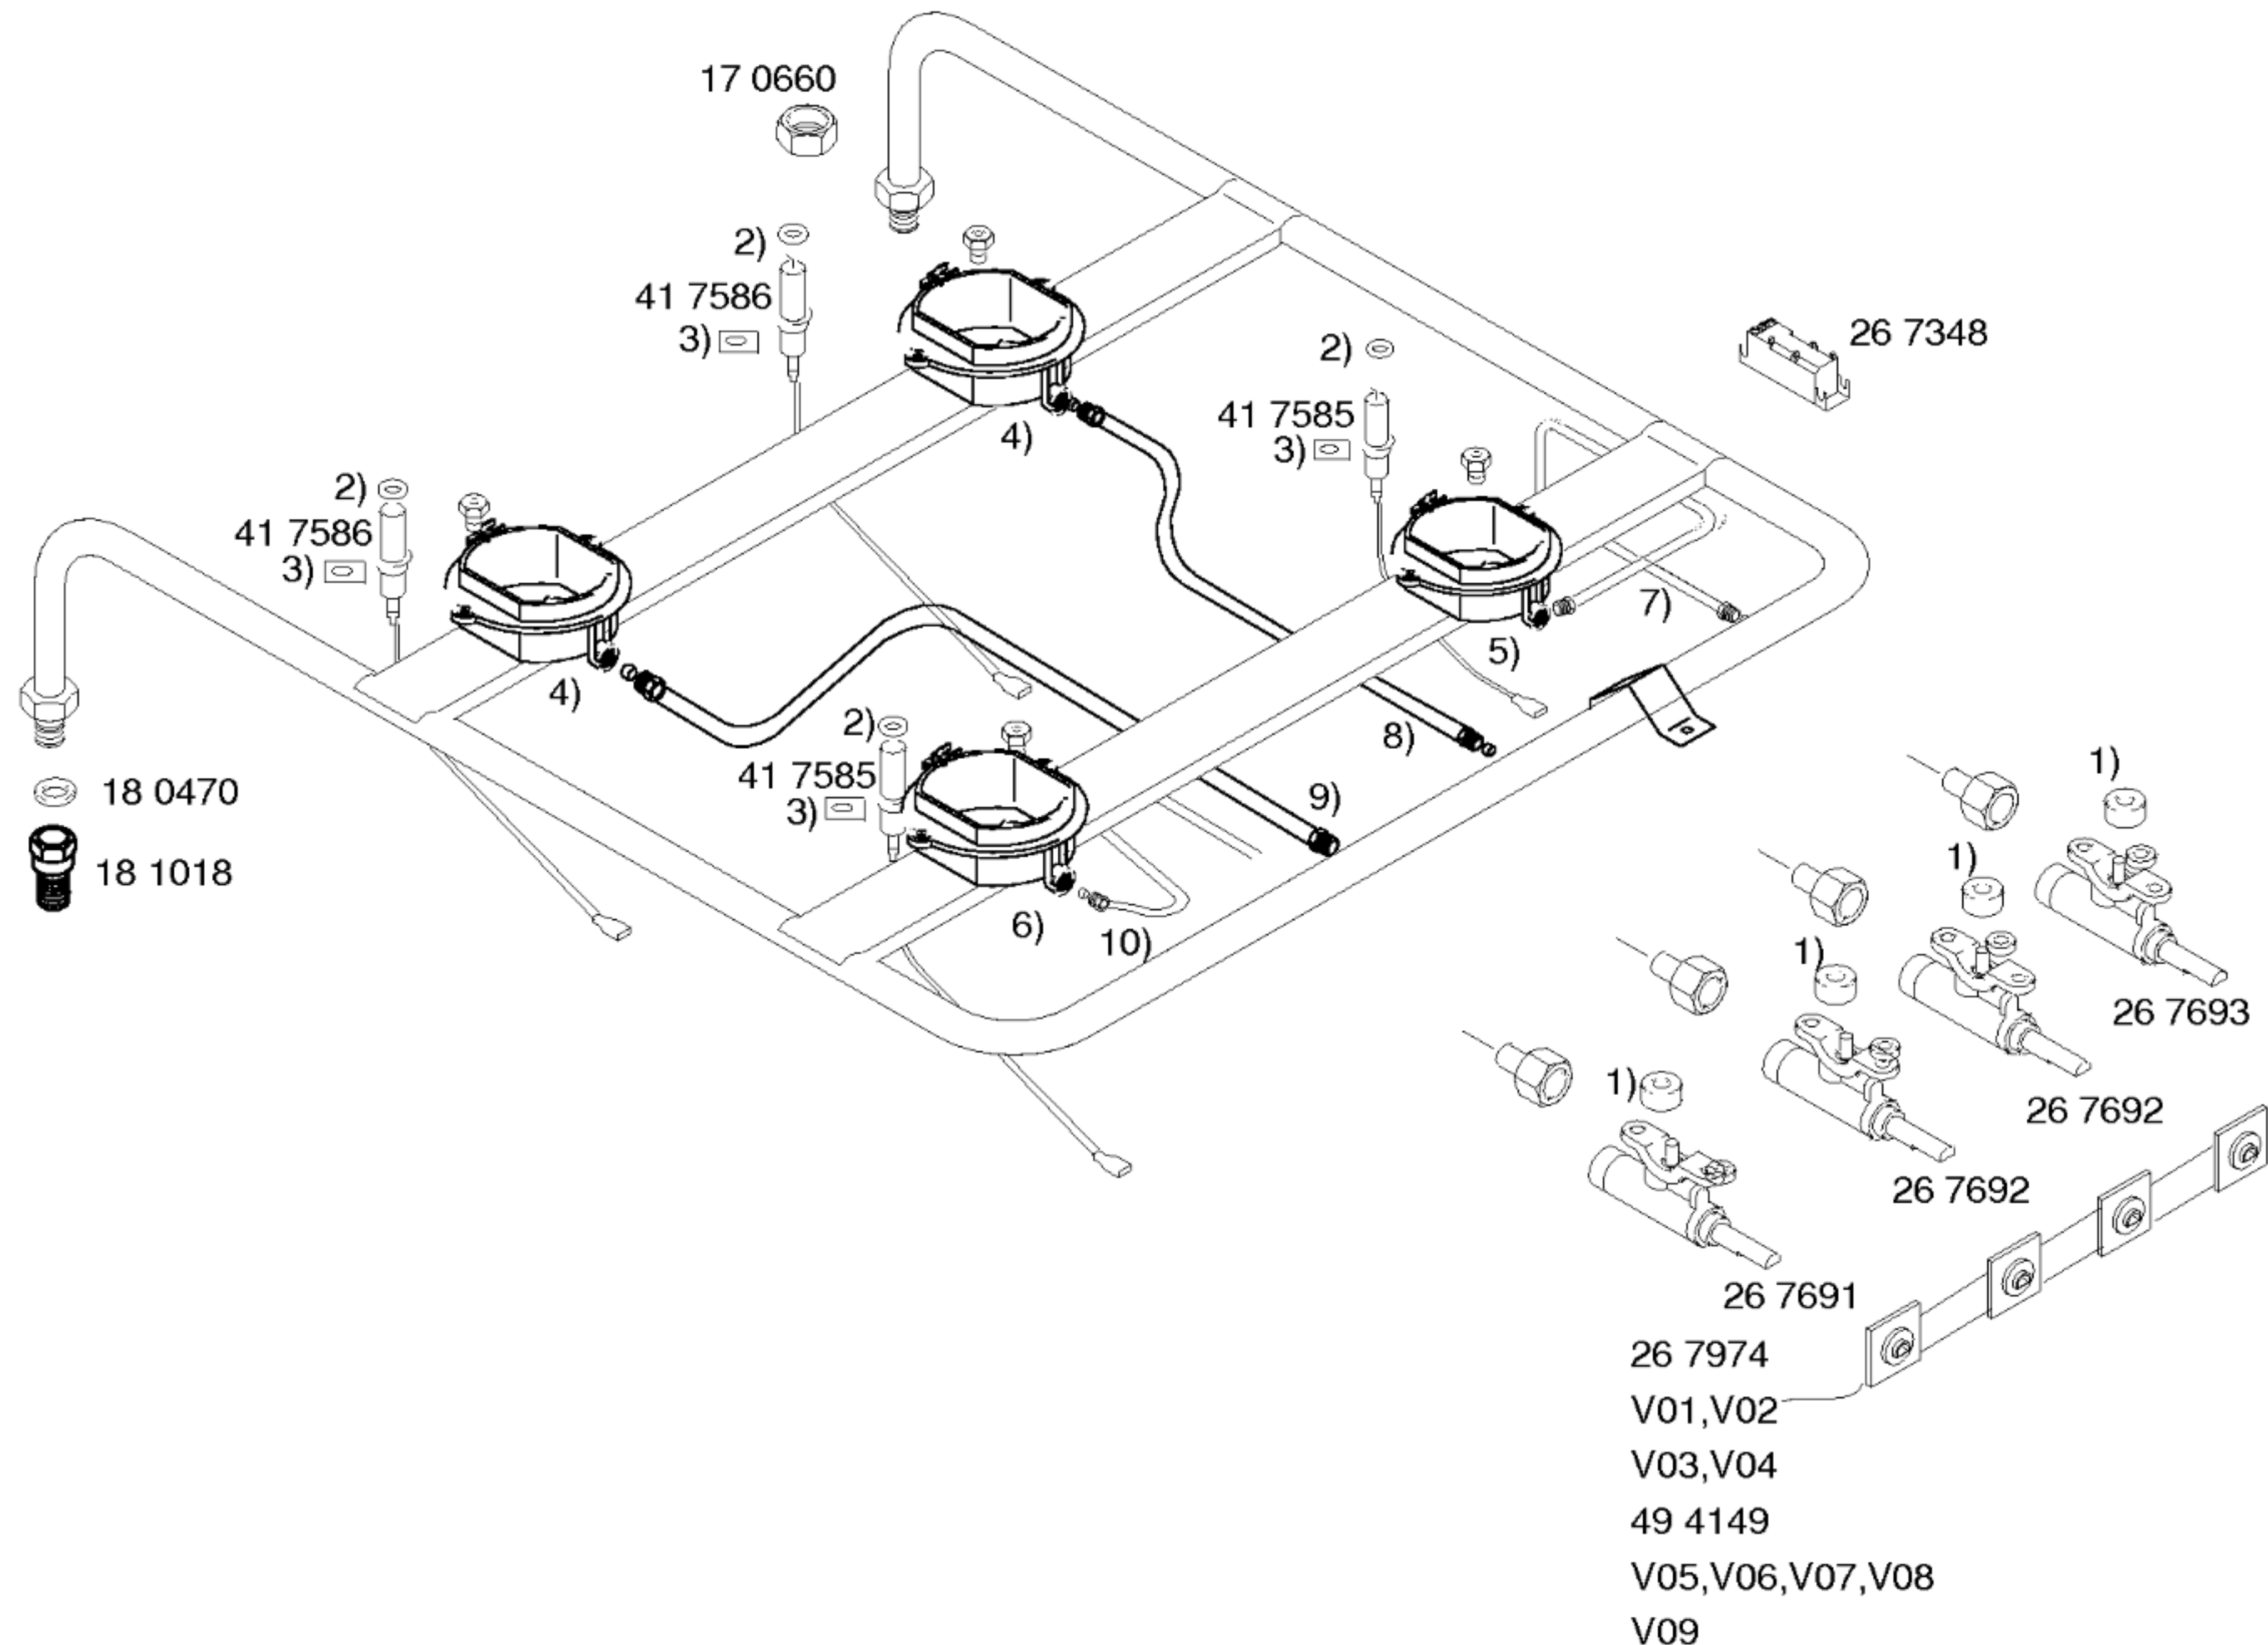

Mat. - Nr. - Konstante
 3740

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 48 0074
- 5) 48 0075
- 6) 48 0073
- 7) 35 7810
- 8) 35 7811
- 9) 35 7809
- 10) 35 7808

Duesensatz Für:
 EG LL G25 25mbar
 17 5527

FG G30/31 30mbar
 17 4048

EG LL G25 25mbar
 (inkl. Bypassdusen)
 41 8134

FG G30/31 30mbar
 (inkl. Bypassdusen)
 41 7837