 
 


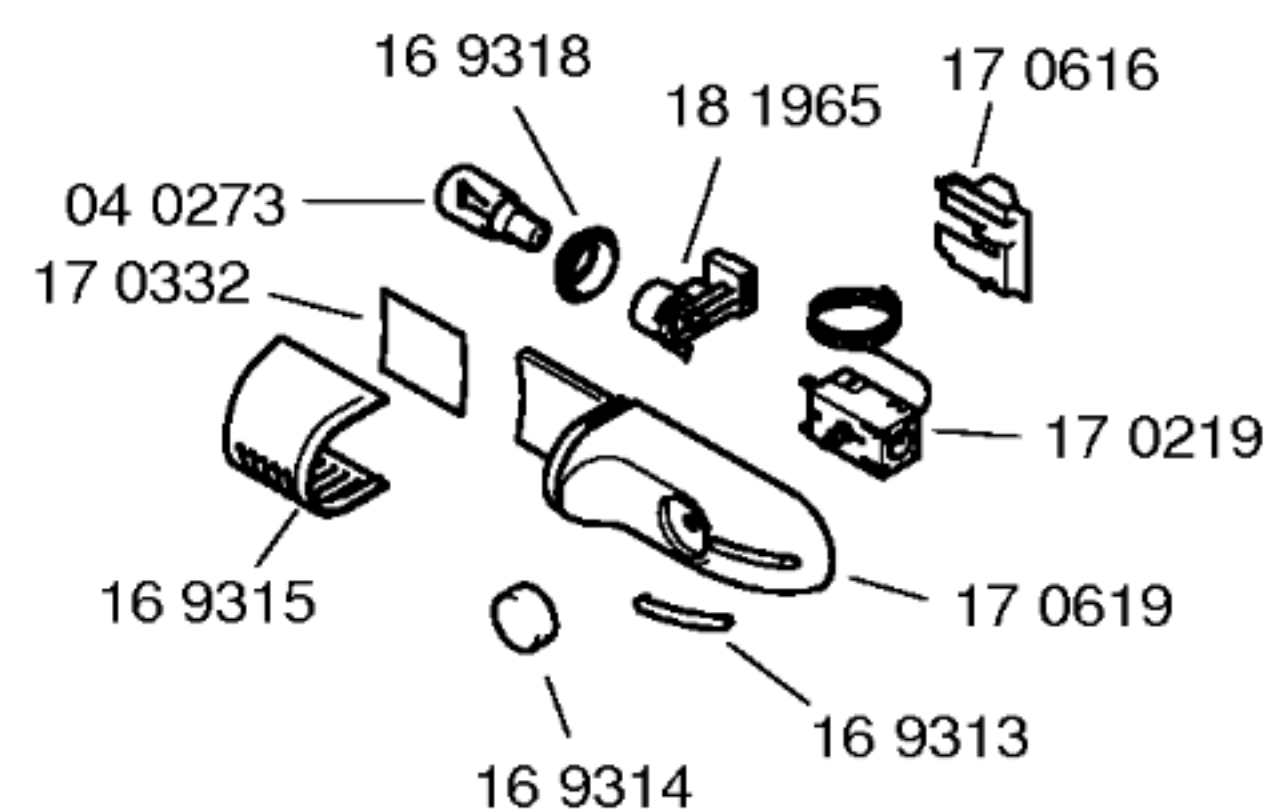


07 4445

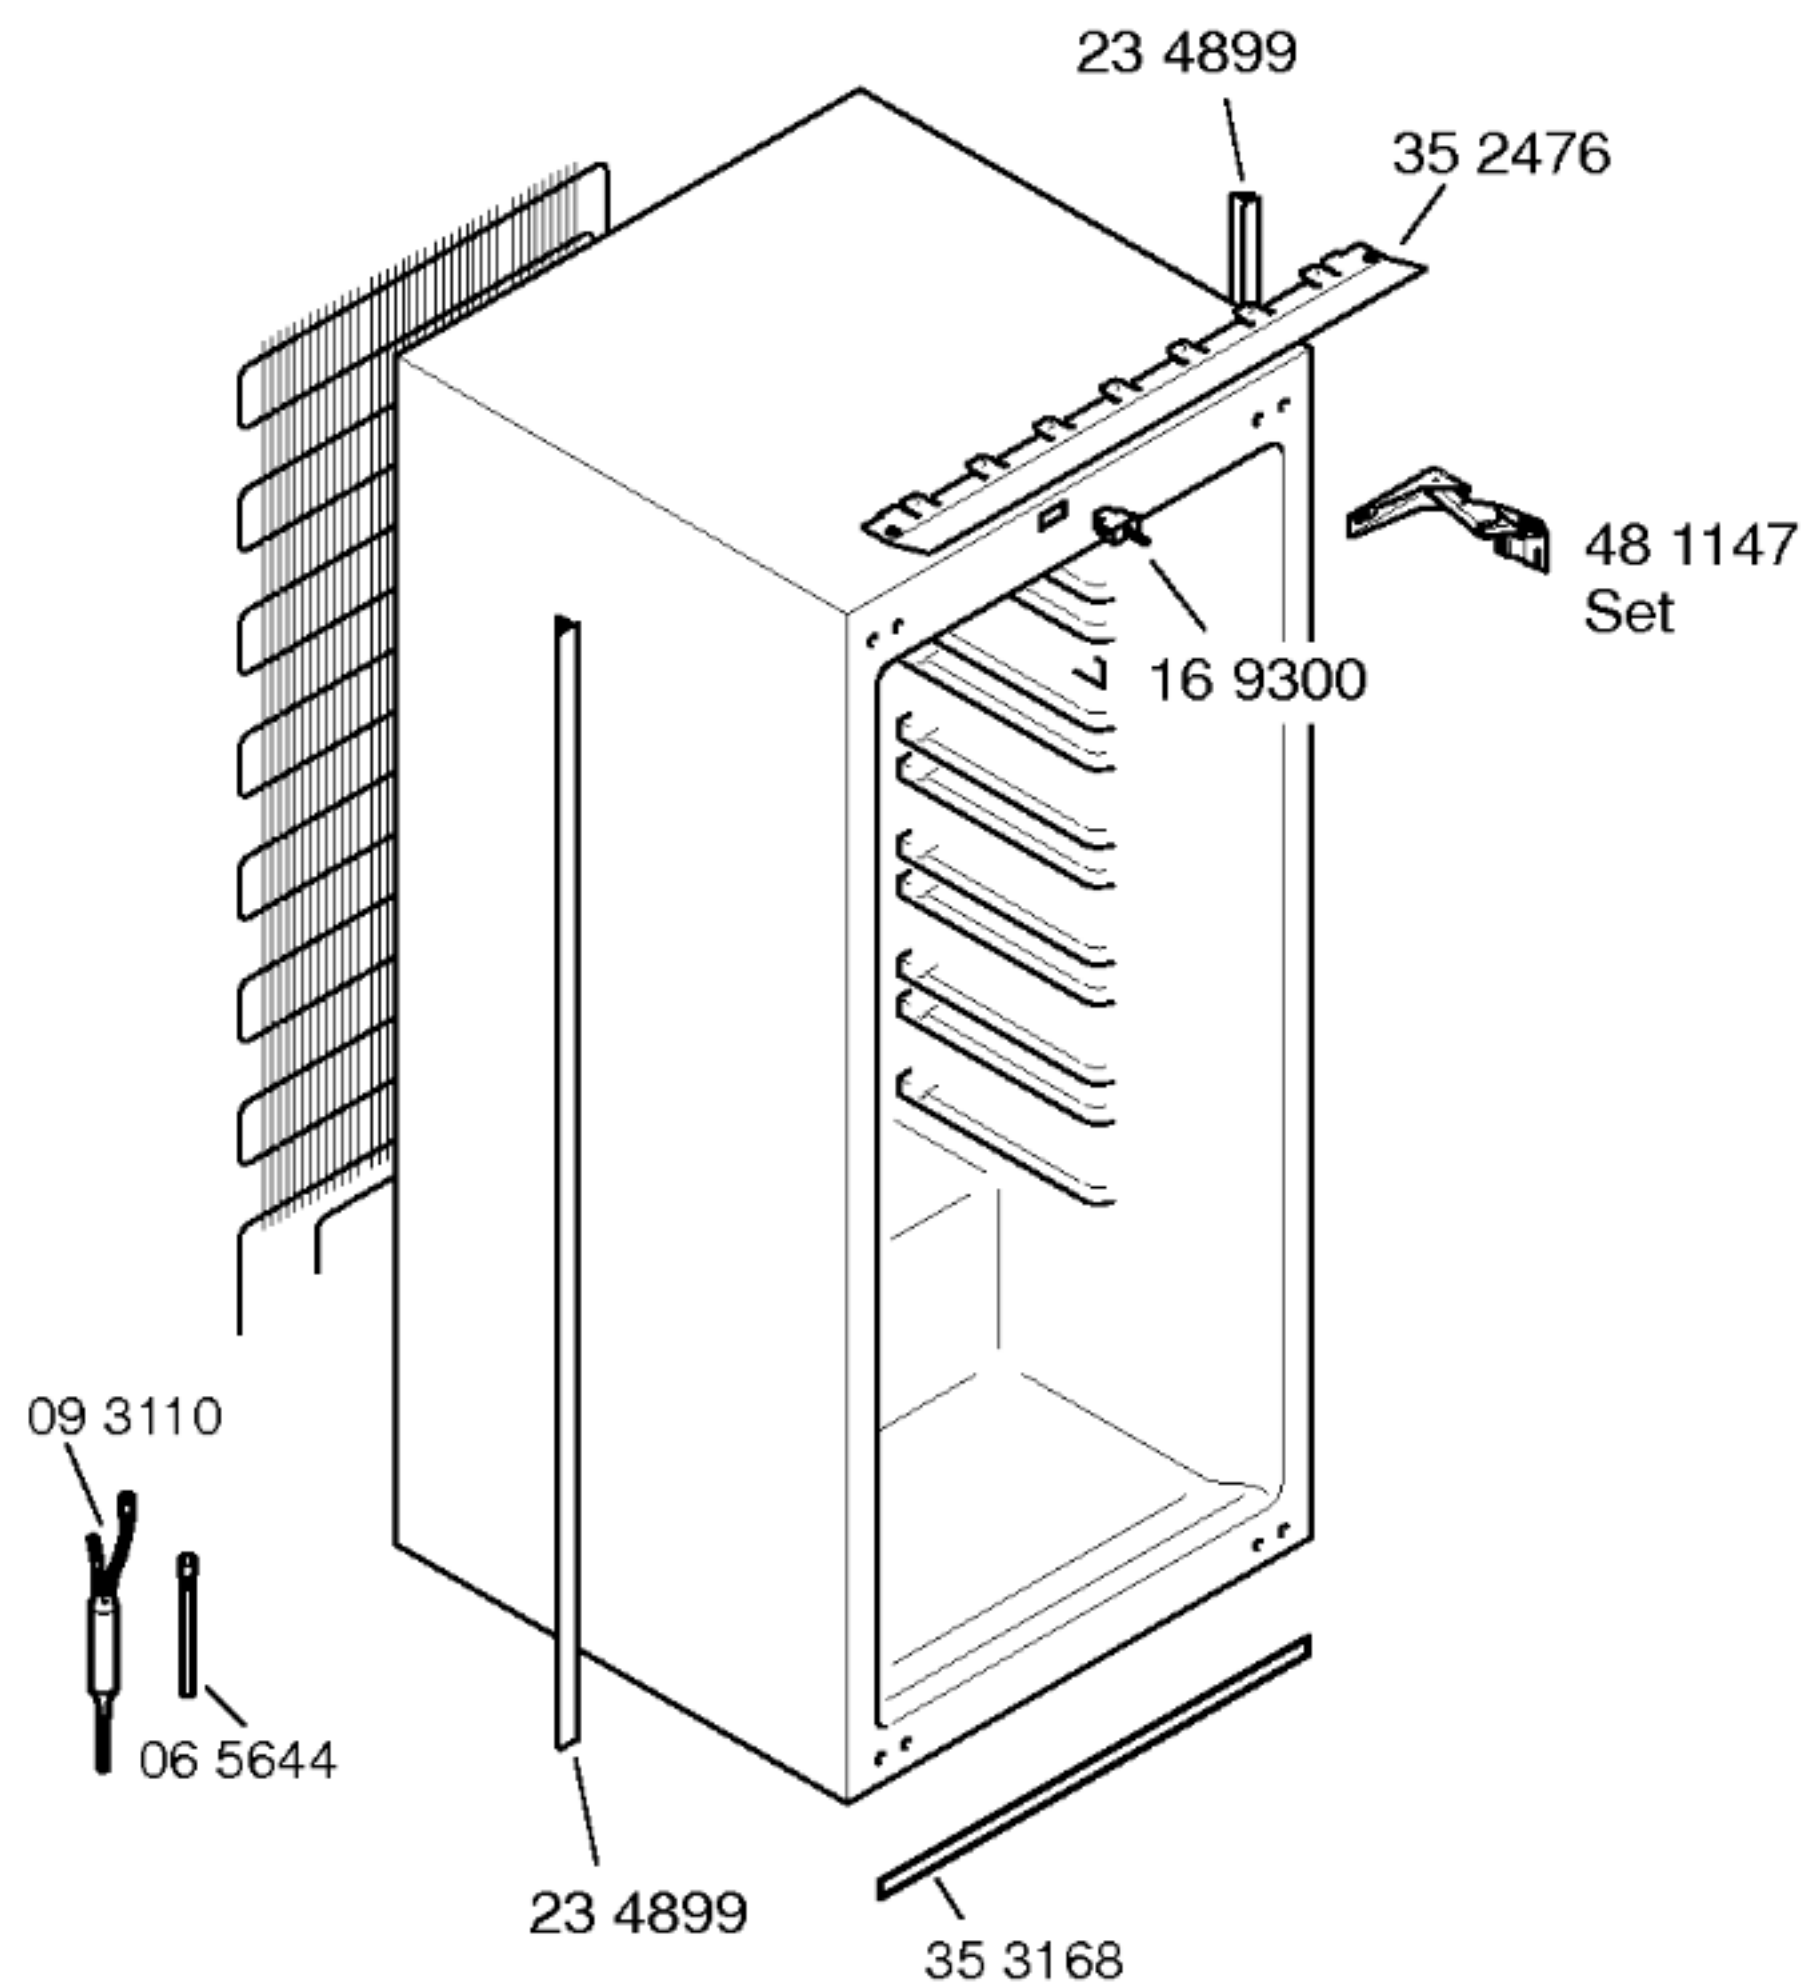


Gebrauchsanweisung
52 8708
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

  Beistellsatz
48 1531

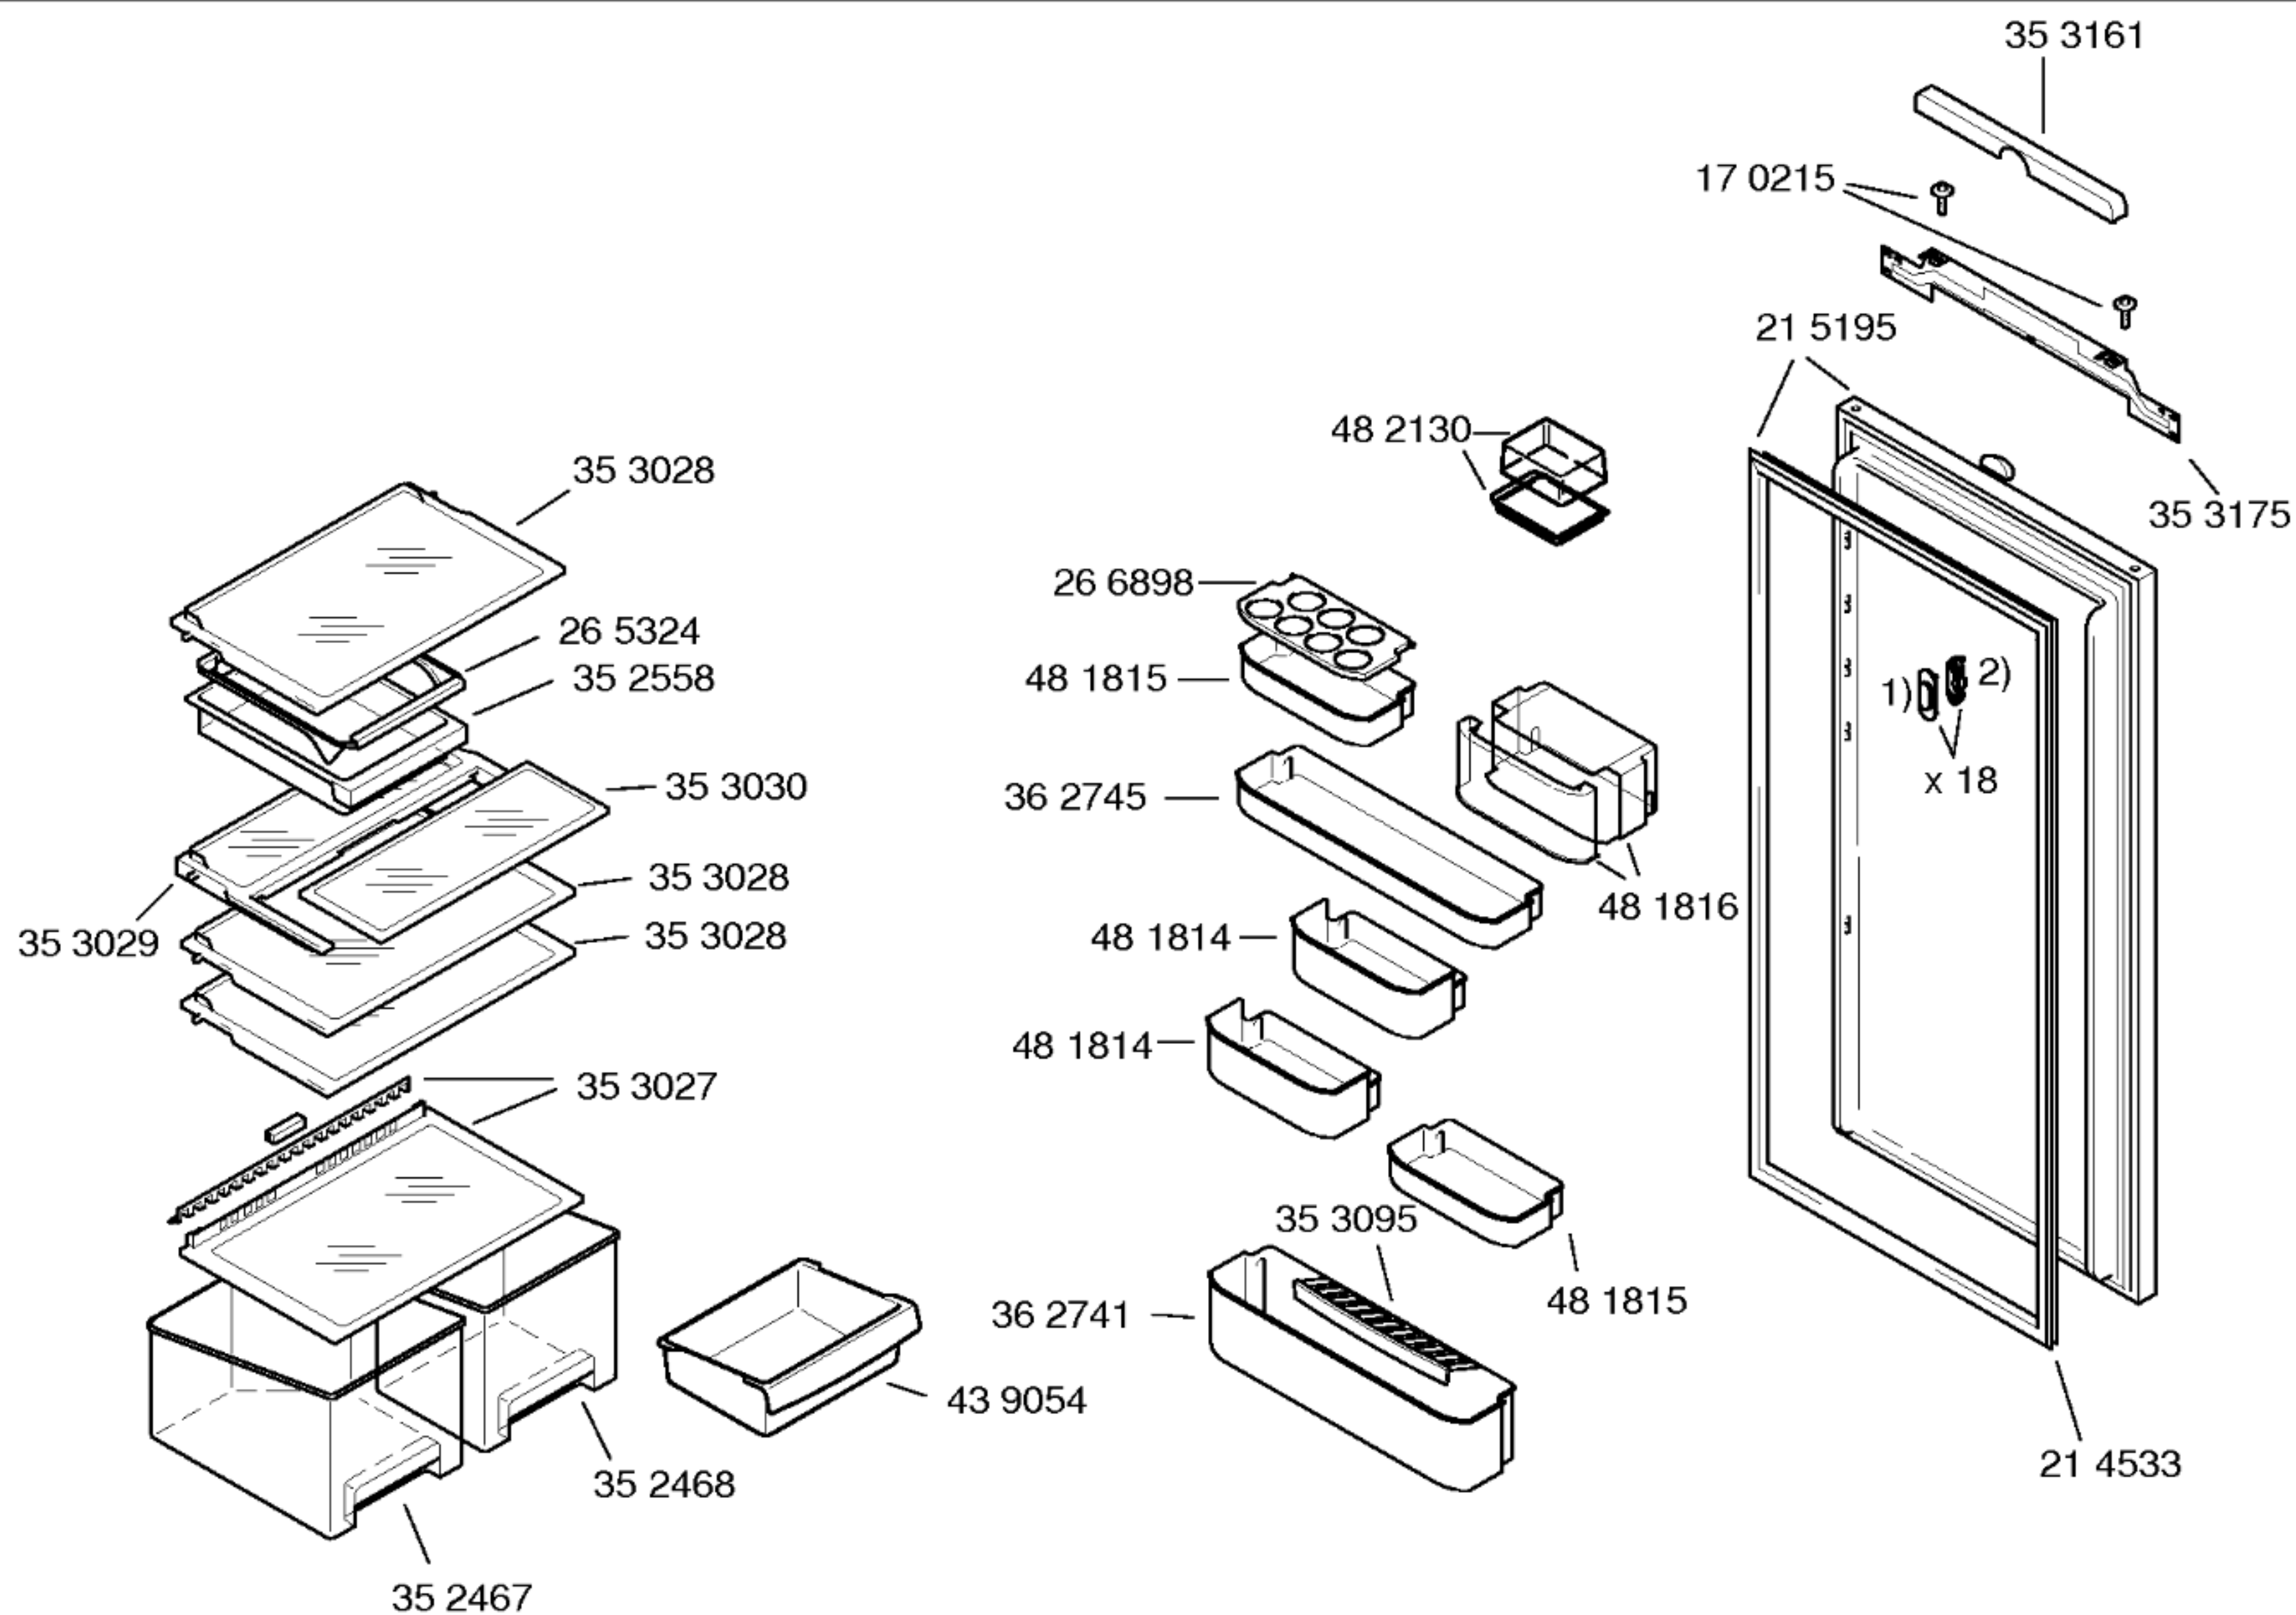

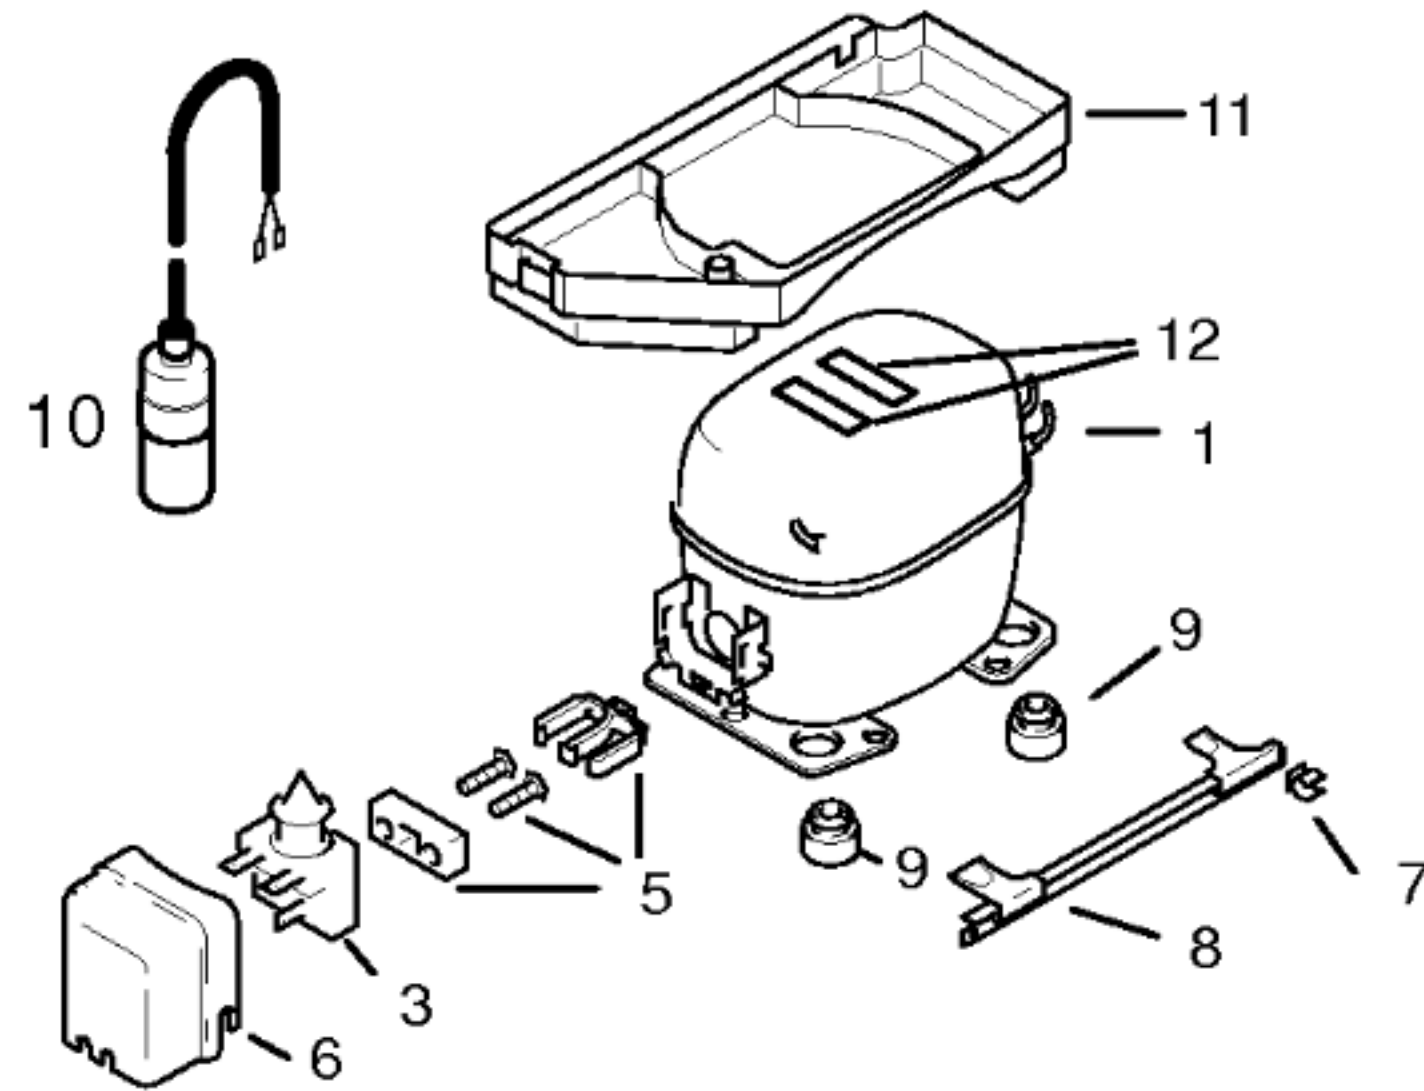

Pos.	Danfoss		
	TLY4K		
1	14 2057		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	050166		
10	16 5852		
11	36 5099		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLY4K	
Förderleistung/Delivery/Débit	l/h	698	
Anlaufstrom/Starting current/Cour de démarrage	A	5,9	
Widerstand/Resistance/Résistance	Ha/main/prin	W	49,0
	Hi/aux	W	15,0
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K59	
Regelstellung/Position		kalt	warm
Schaltwerte/Switching values	"warm"	+5,0	+5,0
Valeurs de commutation	"kalt"	-25,0	-10,0
	"alarm"		
Füllmenge/Fill.quantity/Charge	R600a	+	
Anschlußwert/Conn.load/Puiss. connectée	W	45	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	W		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	W		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	W		
Spannung/Voltage/Tension	V		