


GIL1240

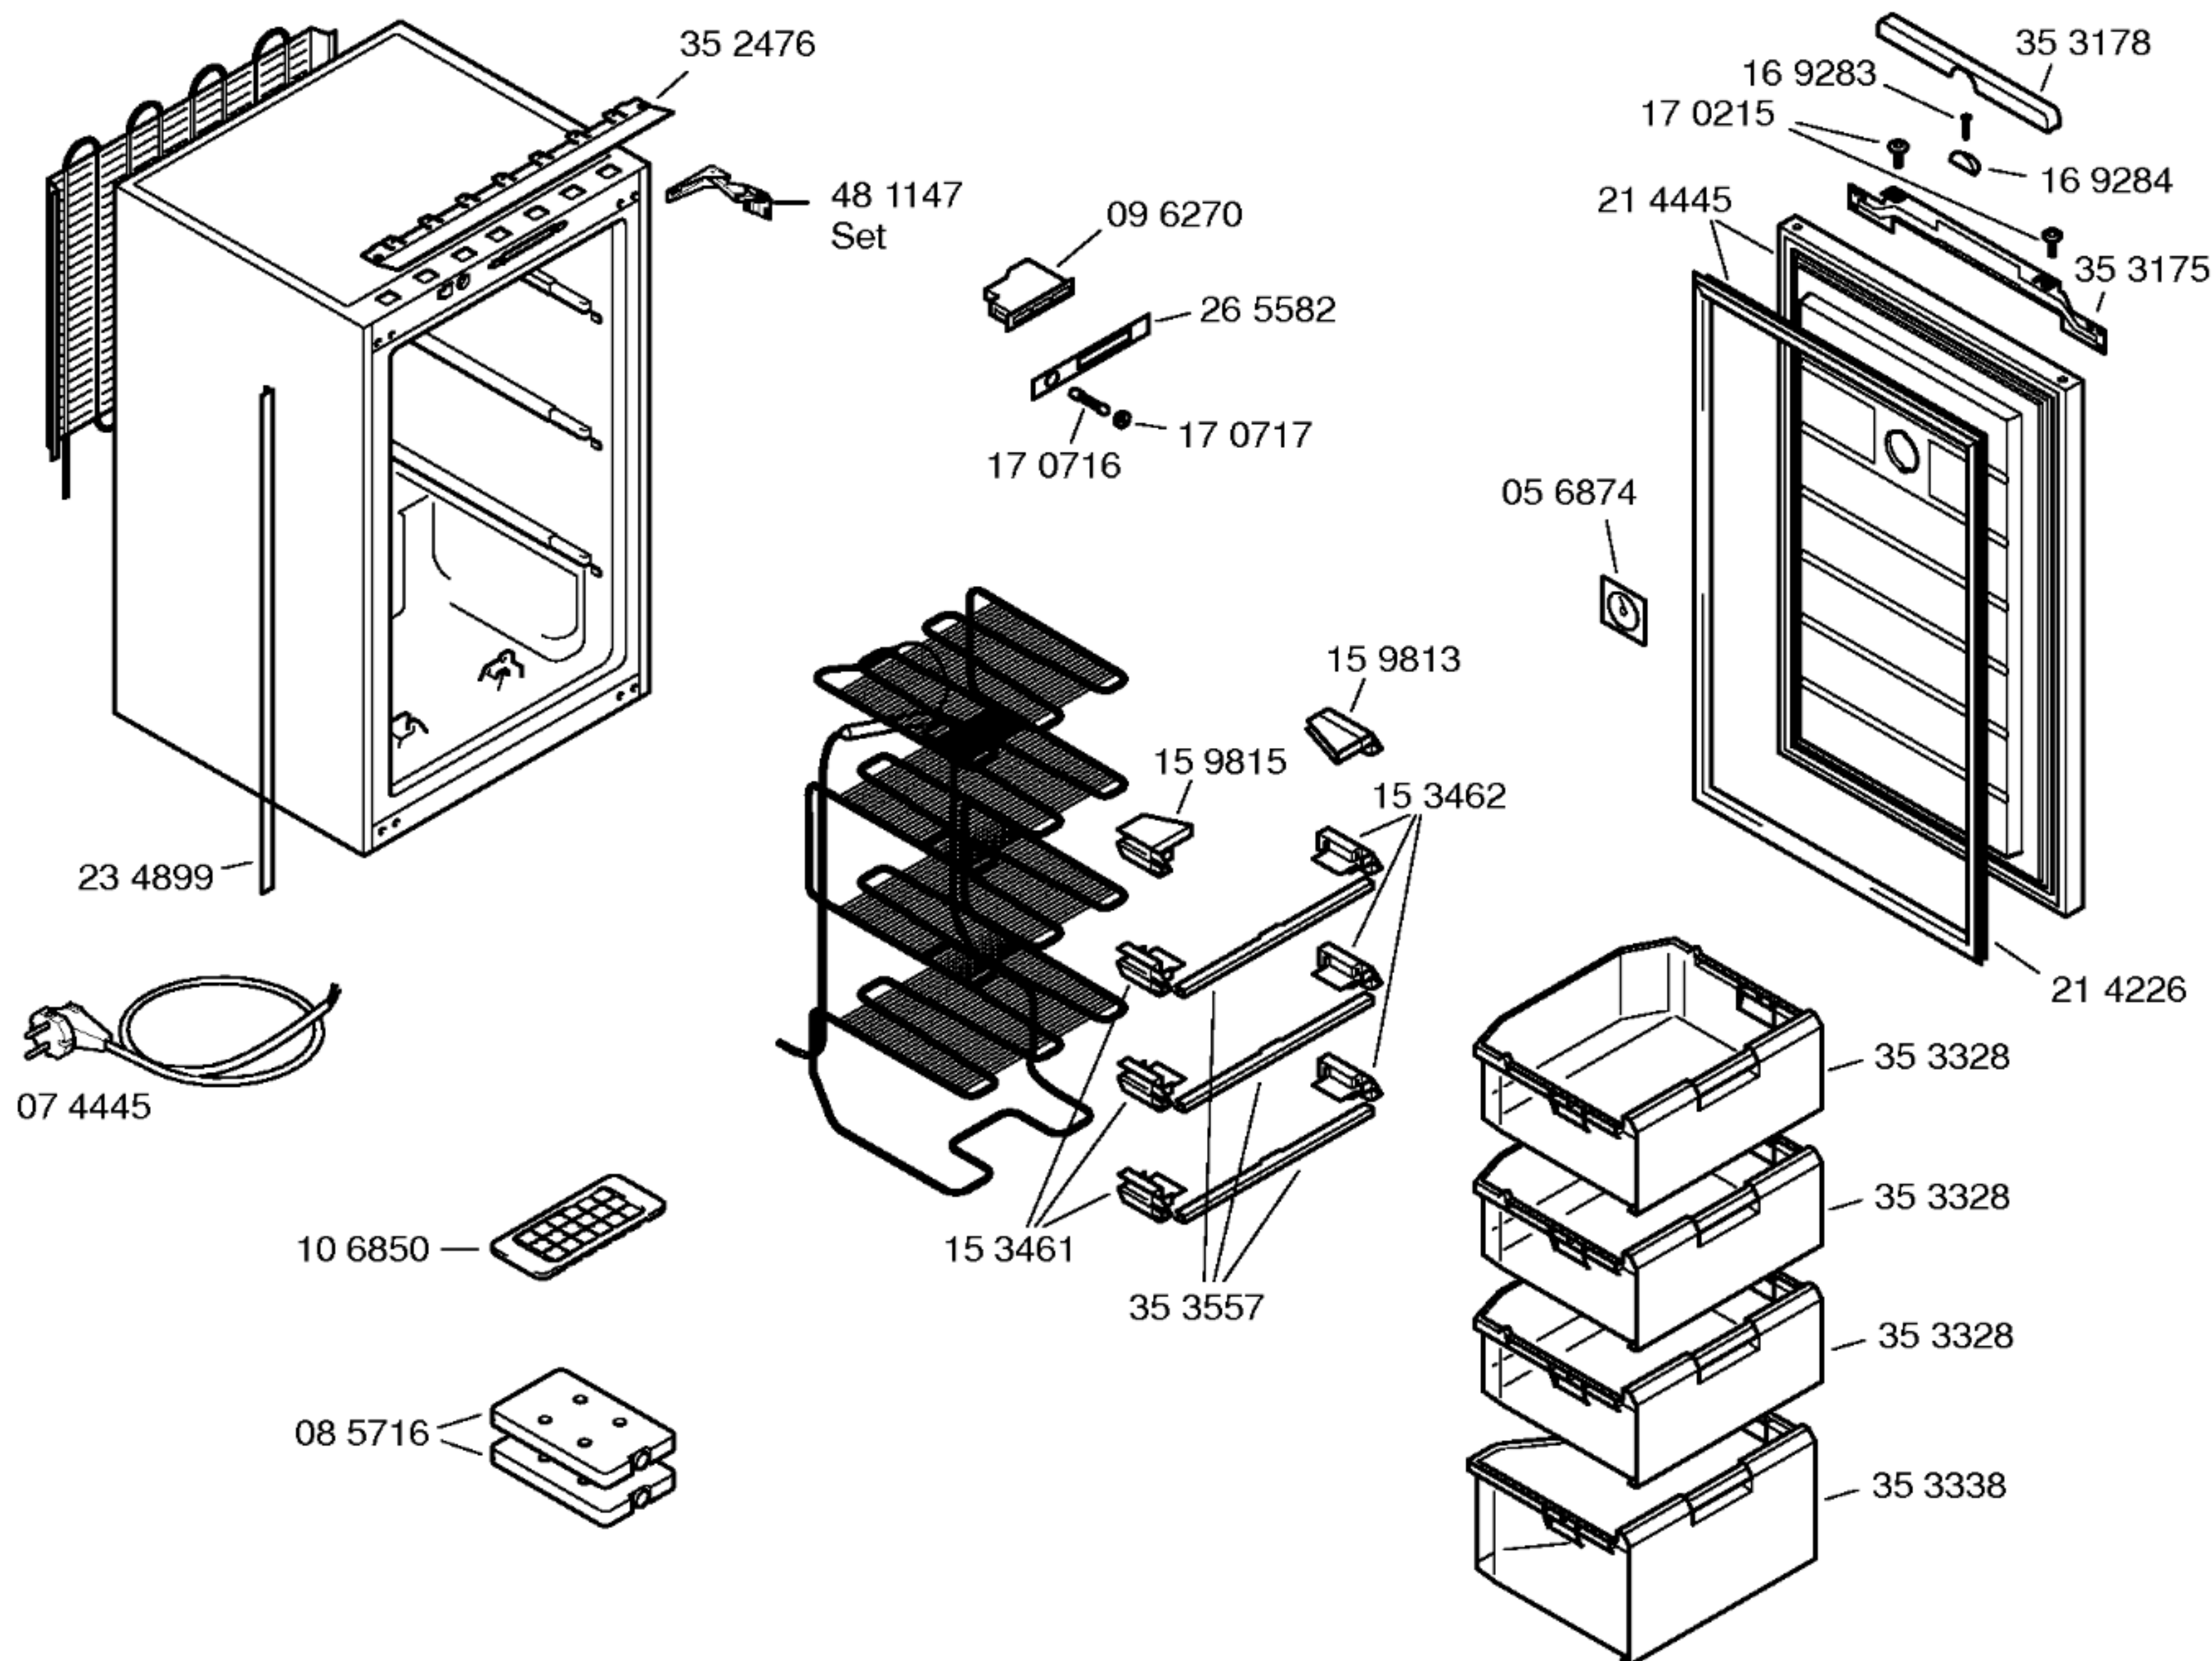


Gebrauchsanweisung
52 2707
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

Temp.-Regler
Rep.-Satz
26 5271

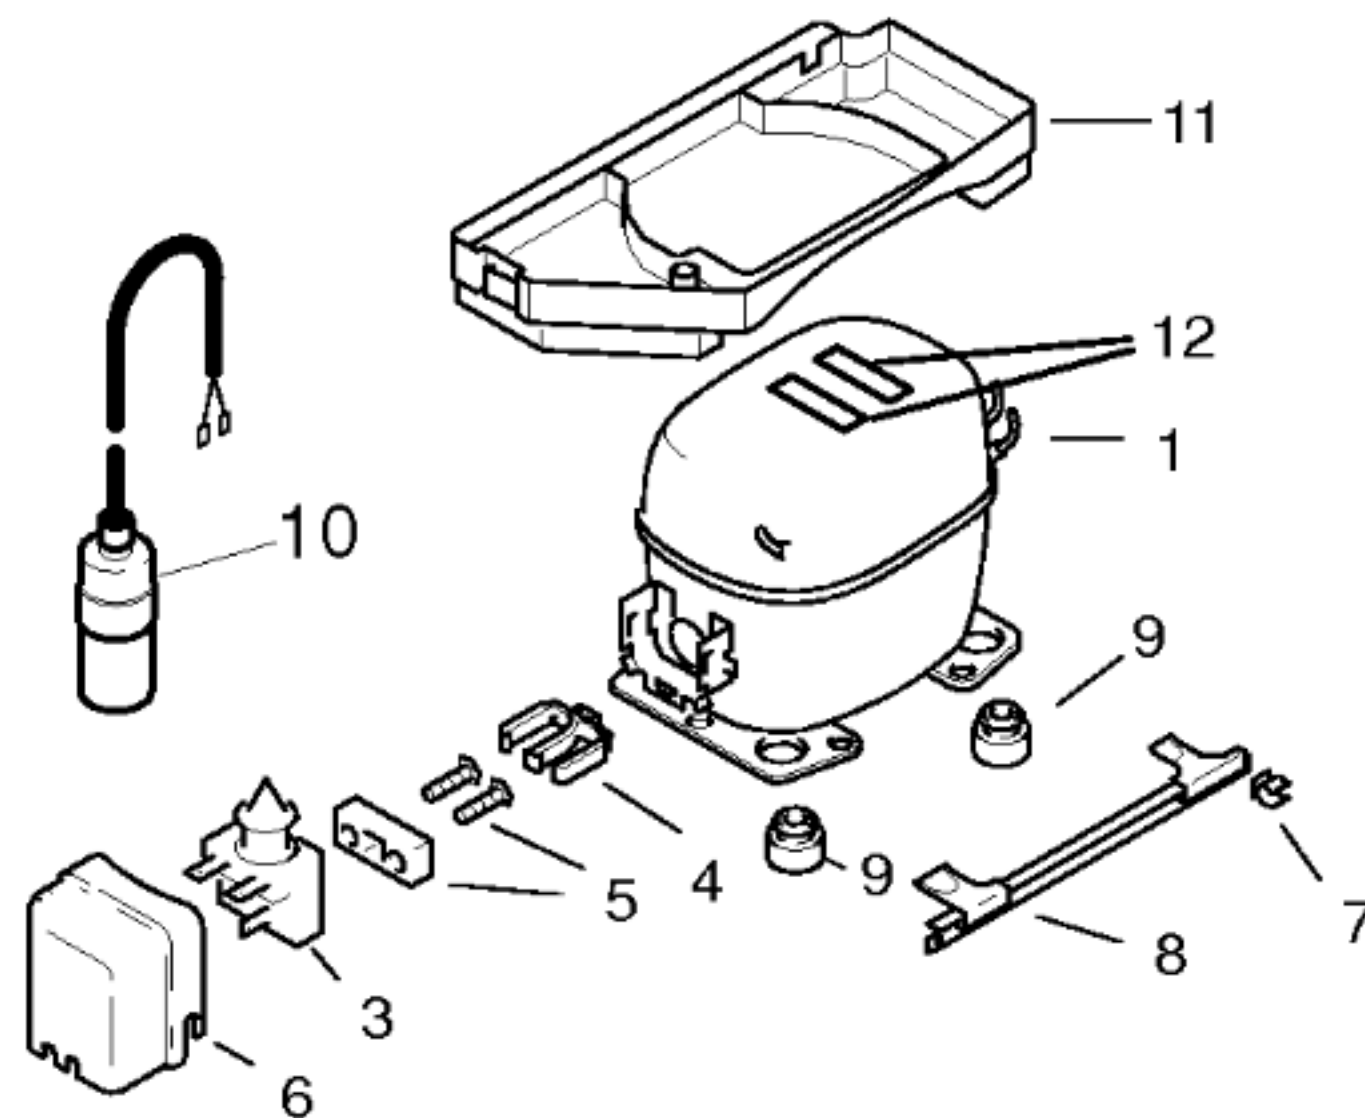

	V01	V02	
Pos.	Danfoss	Goldstar	
	TLES 9 K	ND69NAEM	
1	14 1660	14 1999	
2			
3	15 1055	17 0743	
4	15 1053	17 0746	
5	15 0760	17 0745	
6	15 1072	17 0744	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Goldstar	
Typ/Type		TLES 9 K	ND69NAEM	
Förderleistung/Delivery/Débit	l/h	1589	1242	
Anlaufstrom/Starting current/Cour de démarrage	A	8,8	2,2	
Widerstand/Resistance/Résistance Ha/main/prin	Ω	16,5	29,5	
Hi/aux	Ω	16,5	21,0	

Temp.-Regler/Thermostat		KER		
Typ/Type		RCO		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values	ein"	-23,0	-15,0	
Valeurs de commutation	aus"	-31,0	-21,0	
	"alarm"			

Füllmenge/Fill.quantity/Charge	R600a	*		
--------------------------------	-------	---	--	--

Anschlußwert/Conn.load/Puiss. connectée	W	88	83	
---	---	----	----	--

Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			

Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			

Temp.-Regler/Thermostat				
-------------------------	--	--	--	--

Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild