 


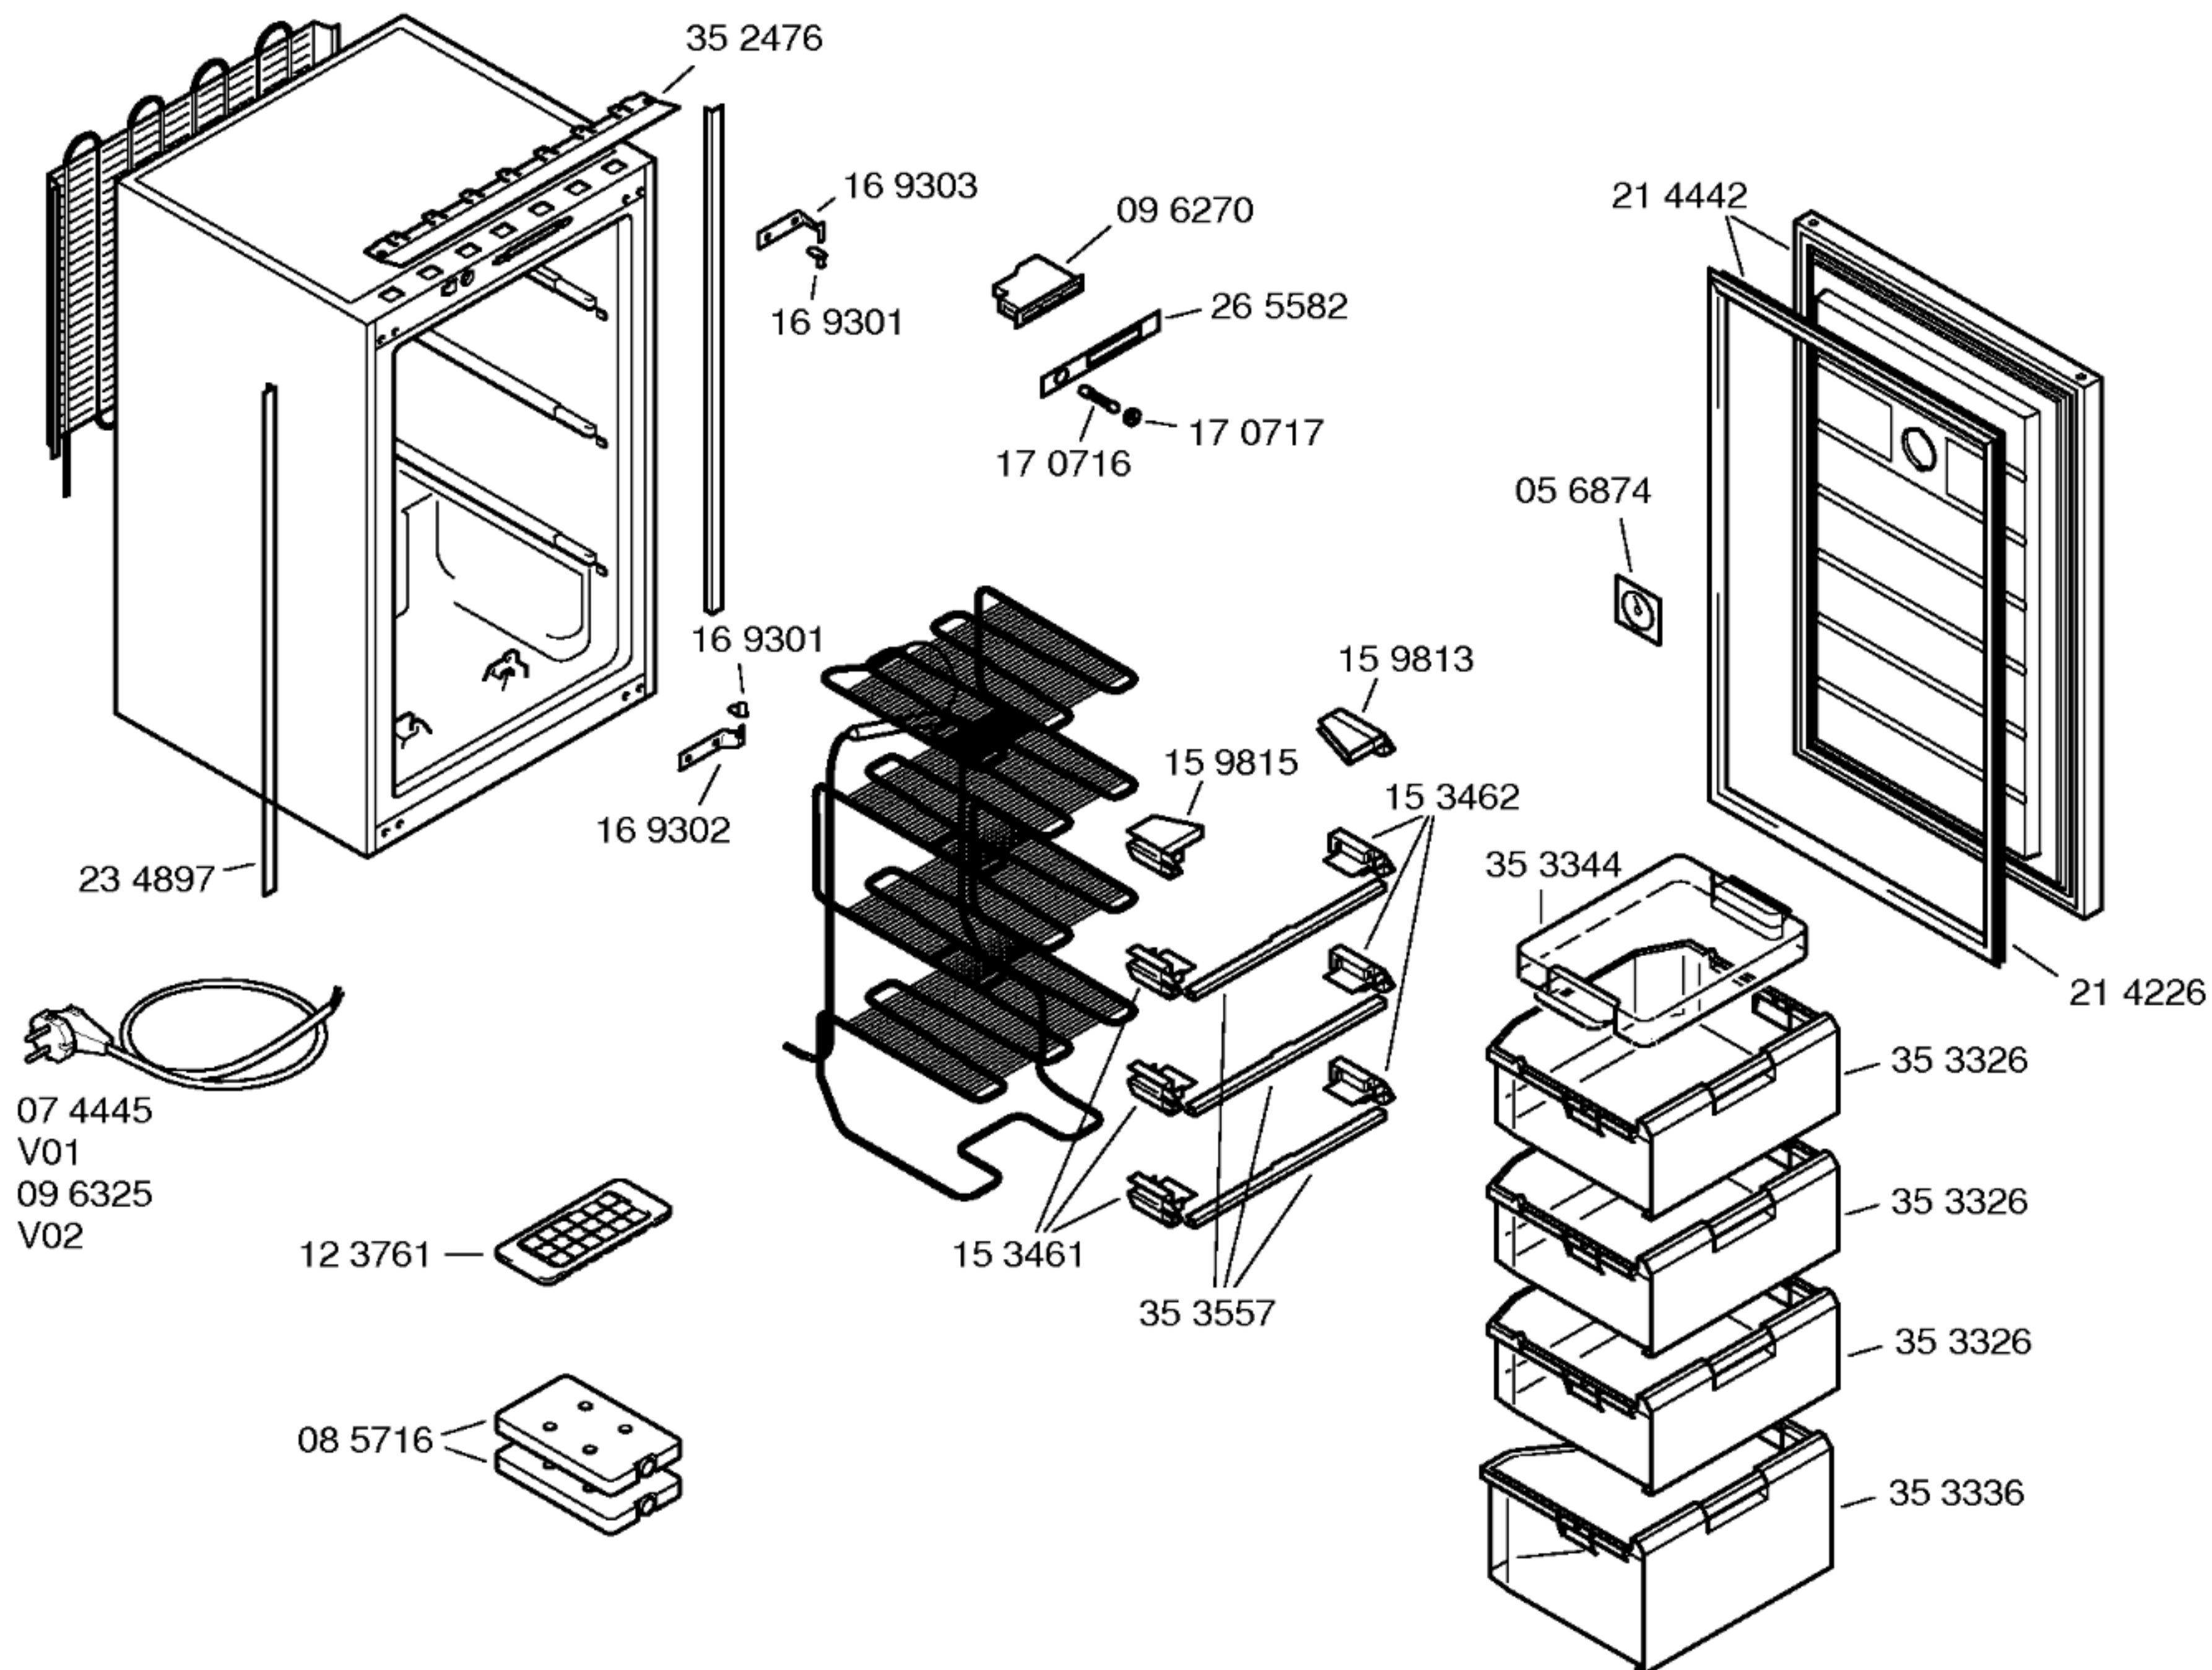


Mat. – Nr. – Konstante
 3740

Gebrauchsanweisung
 52 2706
 (de,eng,fr,it,nl)
 52 8837
 (es,pt,el,tr)

Montageanleitung
 52 1893
 (D,GB,F,I,NL,DK,N,SF,
 SE,P)

Beistellsatz
 26 4862

 Temp.-Regler
 Rep.-Satz
 26 5271

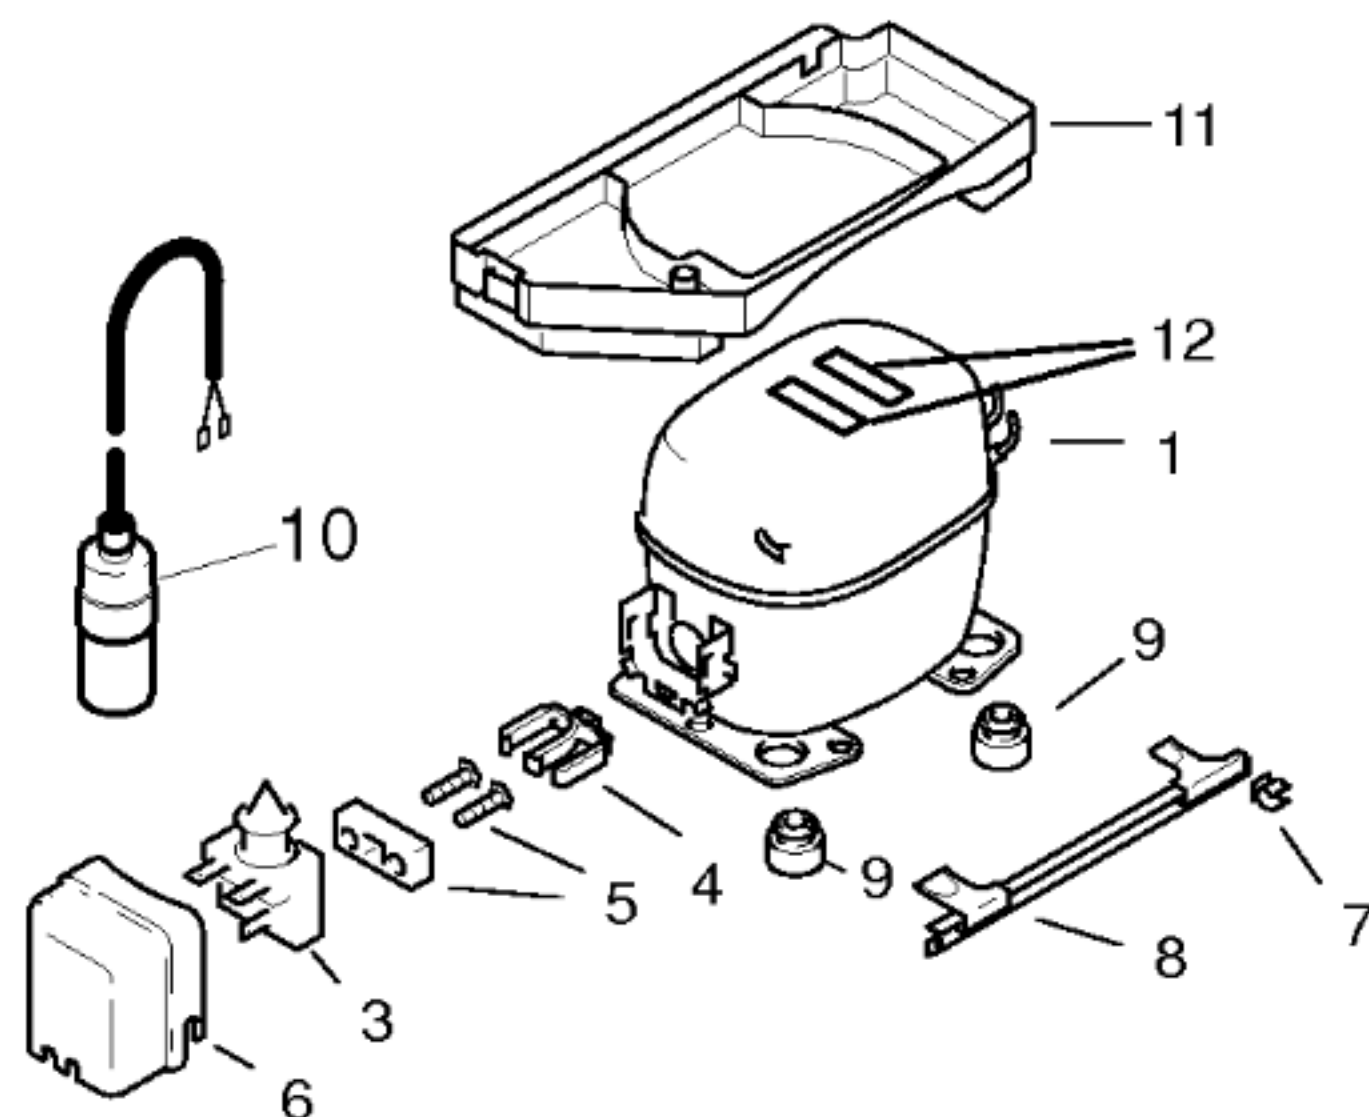

	V01,V02	V03,V04	
Pos.	Danfoss	Goldstar	
	TLES 9 K	ND69NAEM	
1	14 1660	14 1999	
2			
3	15 1055	17 0743	
4	15 1053	17 0746	
5	15 0760	17 0745	
6	15 1072	17 0744	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Goldstar
Typ/Type		TLES 9 K		ND69NAEM
Förderleistung/Delivery/Débit	l/h	1589		1242
Anlaufstrom/Starting current/Cour de démarrage	A	8,8		2,2
Widerstand/Resistance/Résistance	Ha/main/prin	Ω 16,5		29,5
	Hi/aux	Ω 16,5		21,0
Temp.-Regler/Thermostat		KER		
Typ/Type		RCO		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values	ein"	-23,0	-15,0	
Valeurs de commutation	aus"	-31,0	-21,0	
Füllmenge/Fill.quantity/Charge		R600a		*
Anschlußwert/Conn.load/Puiss. connectée		W	88	83
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild