




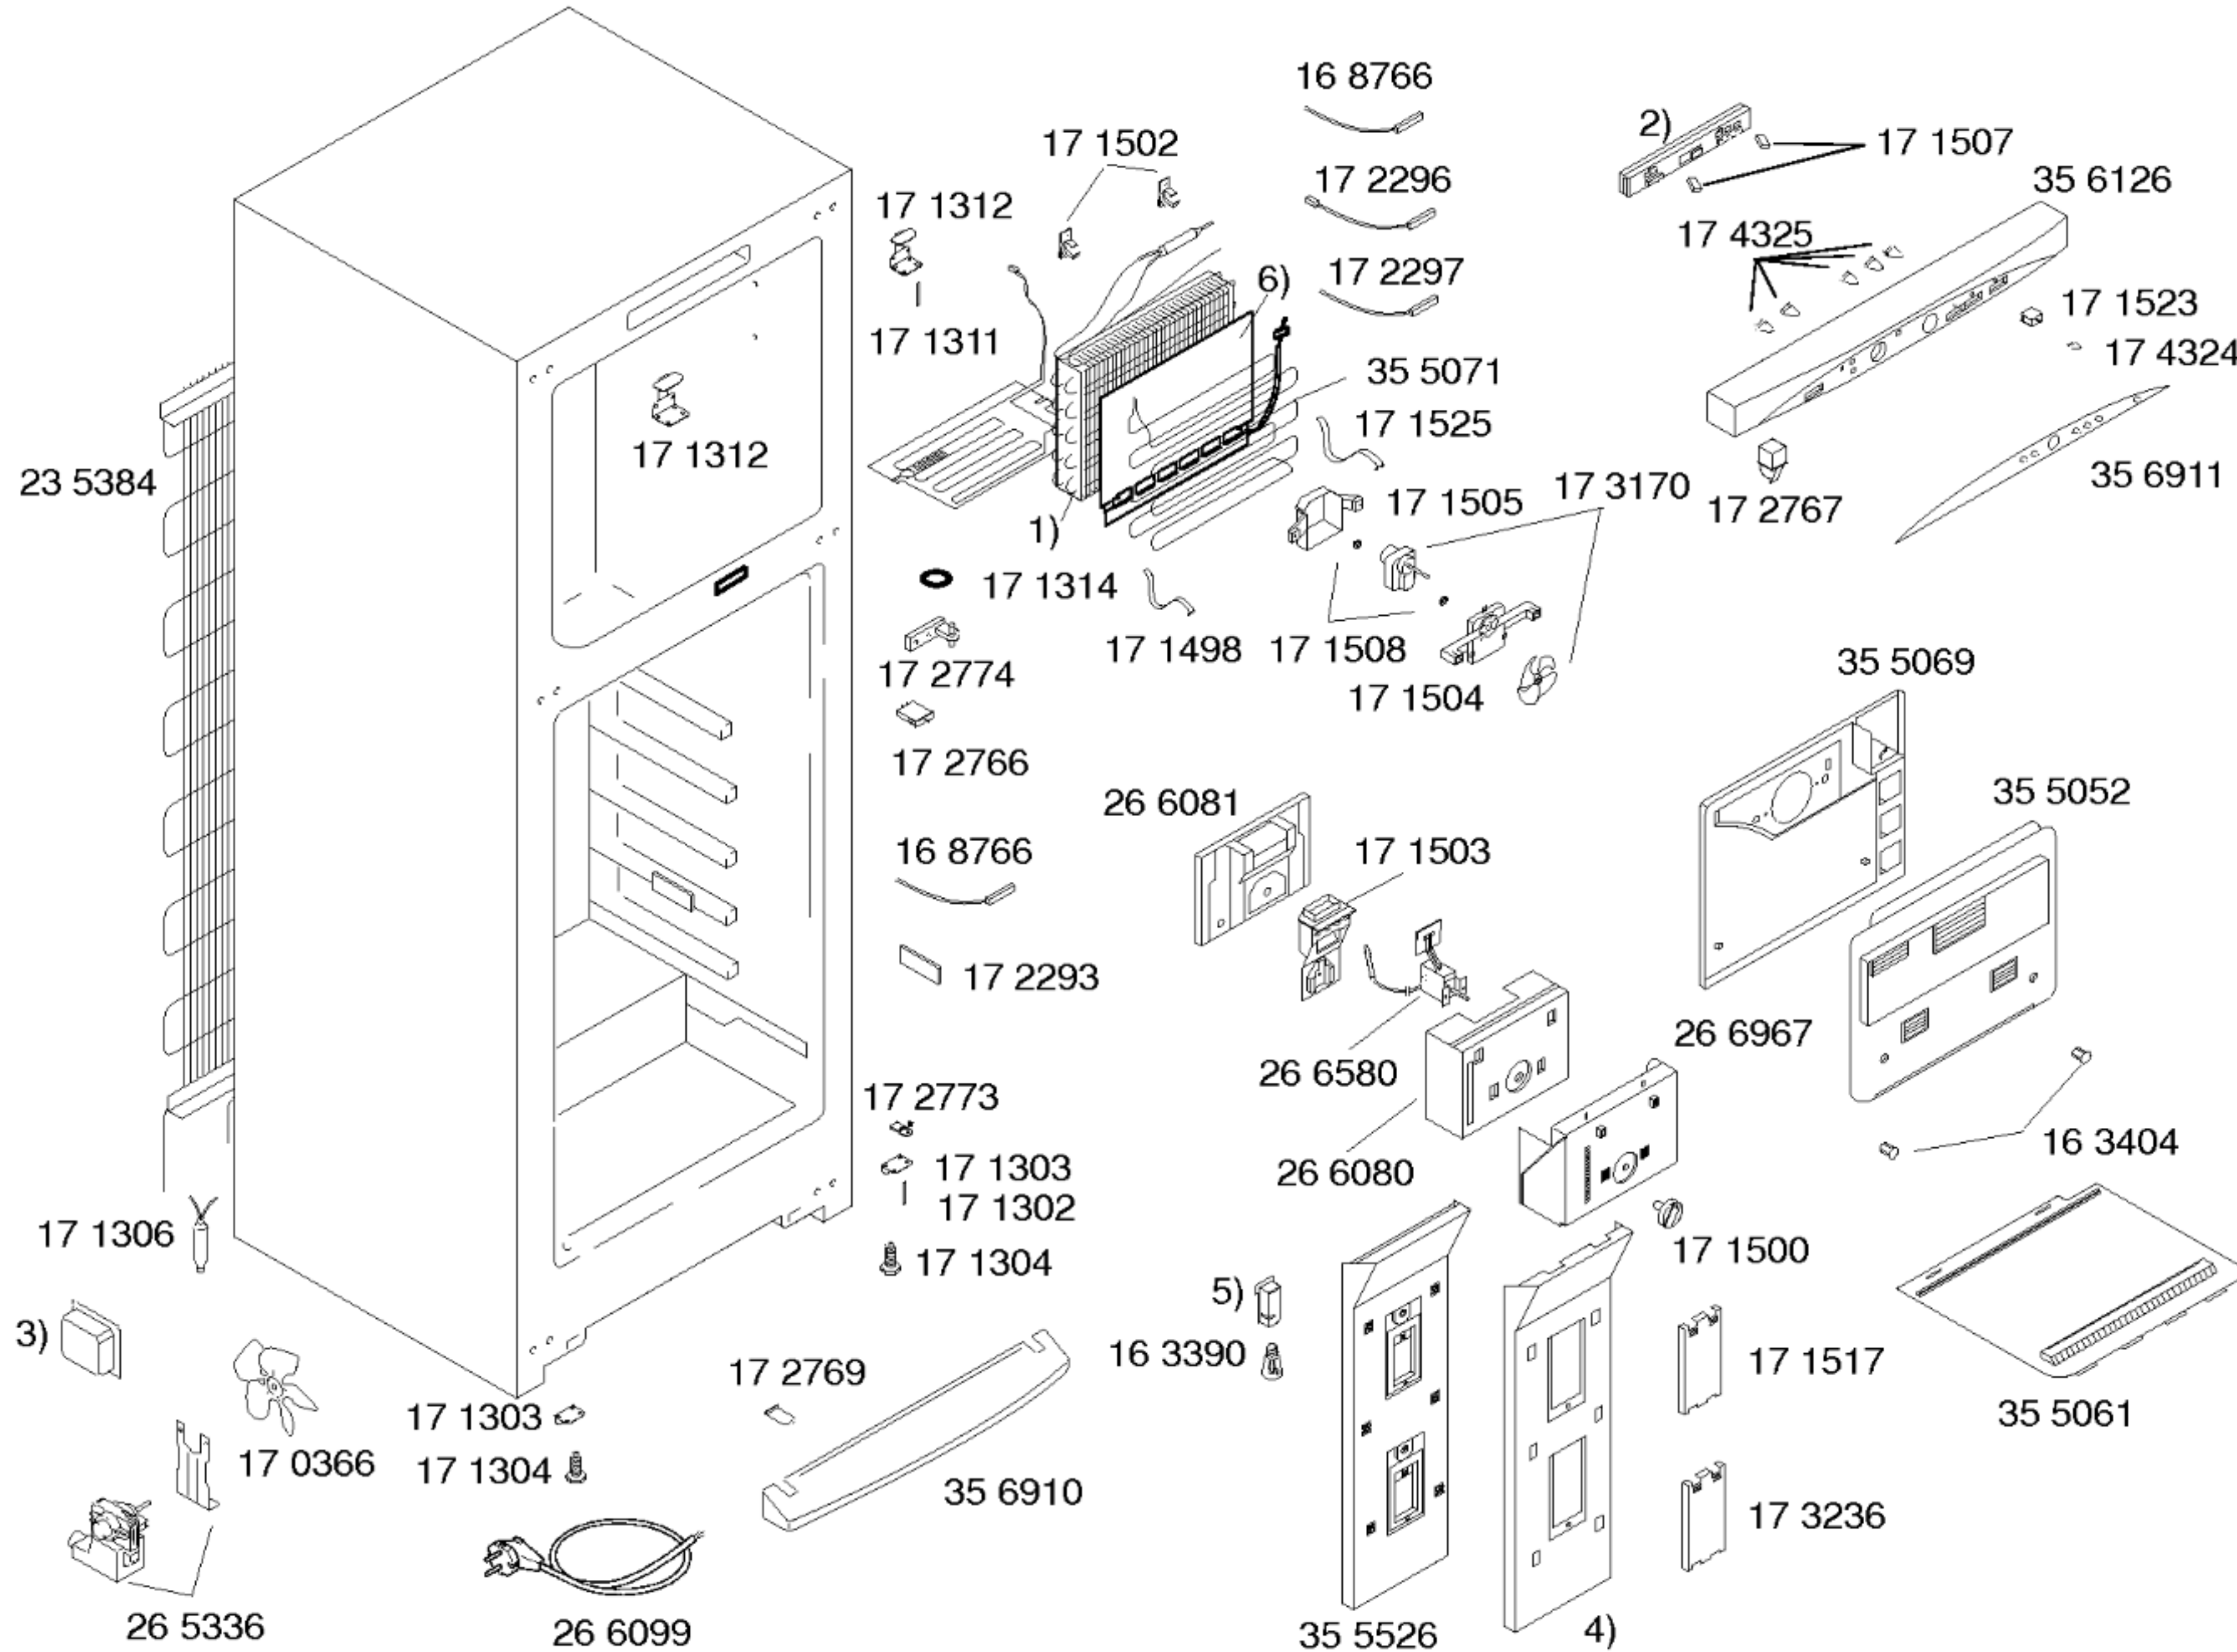

- Kullanma kılavuzu
 52 3815
 (TR)
- 1) 35 5059
 V01
 35 8634
 V02,V03,V04,V05
 V06
- 2) 17 1520
 V01
 26 8232
 V02,V03
 26 8570
 V04,V05
 48 0020
 V06
- 3) 17 1521
 V01,V02
 17 6128
 V03,V04,V05,V06
- 4) 35 5527
 V01,V02,V03,V04
 35 9730
 V05,V06
- 5) 17 1522
 V01,V02,V03,V04
 18 0735
 V05,V06
- 6) 35 9845
 V06

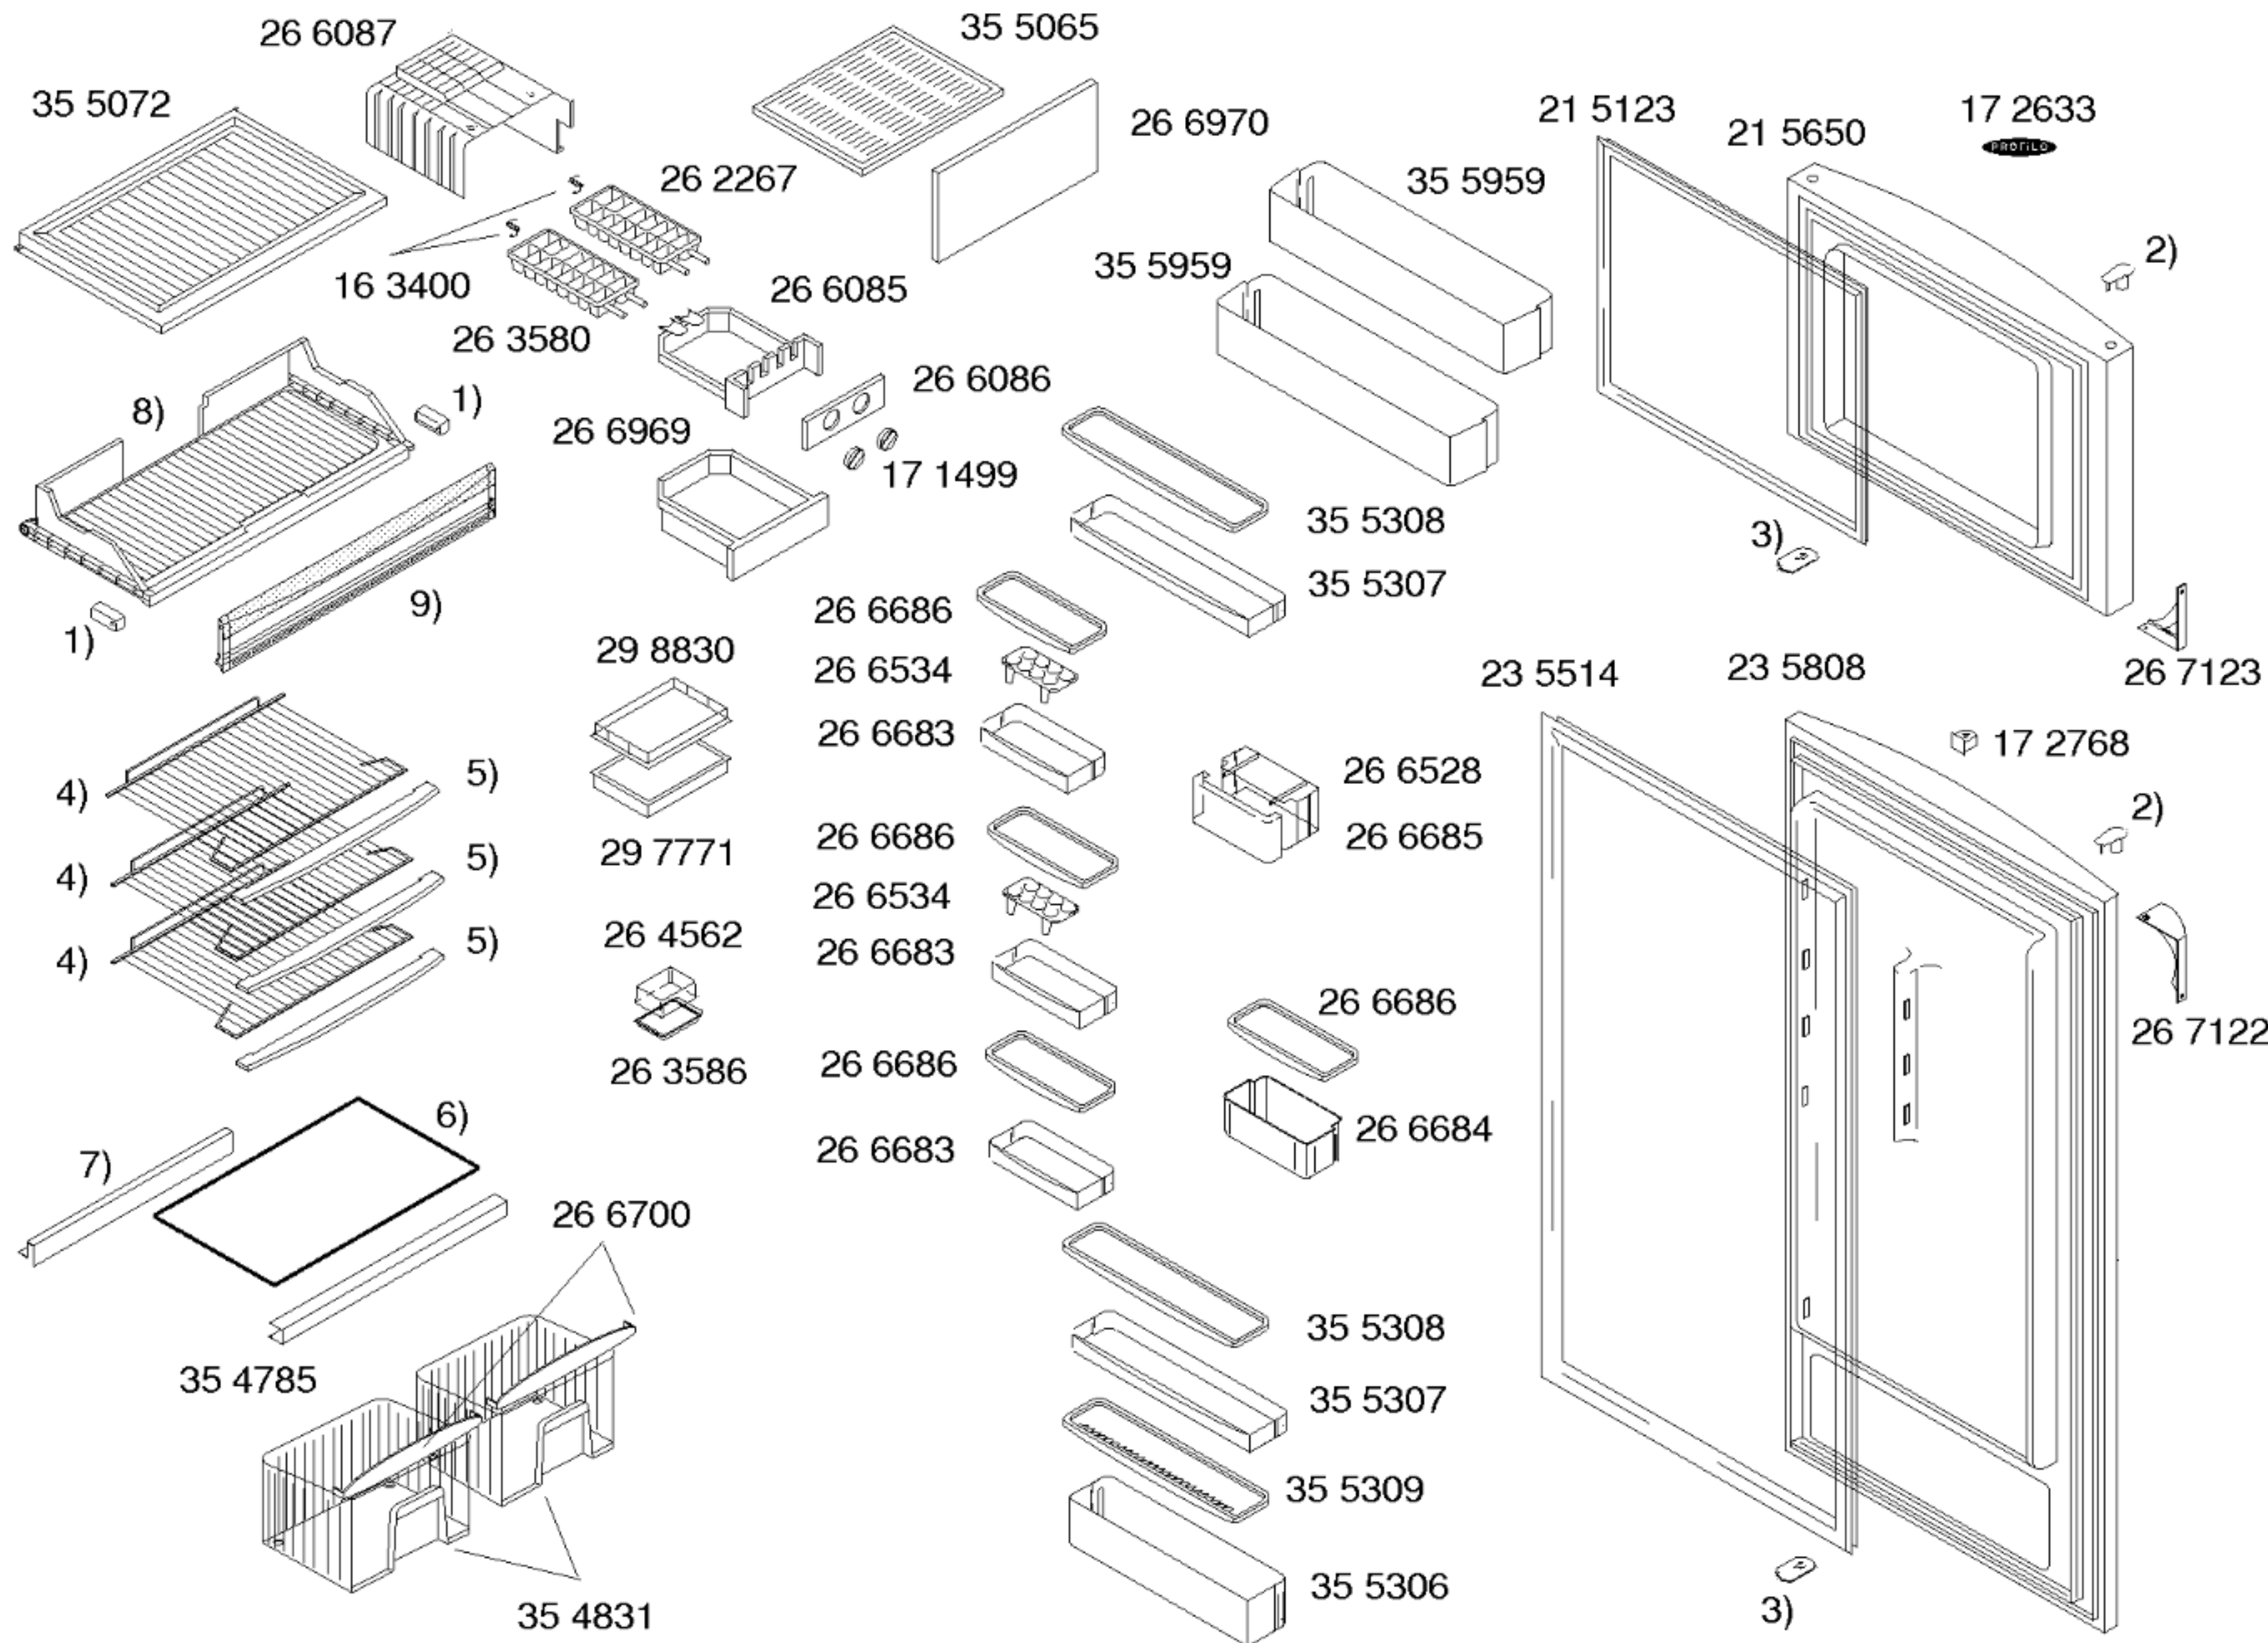

- 1) 17 1501
V01
- 2) 17 2771
- 3) 17 2772
- 4) 35 5835
- 5) 35 4789
- 6) 35 4784
V01
35 8292
V02,V03,V04,V05
V06
- 7) 35 4783
V01
35 8293
V02,V03,V04,V05
V06
- 8) 35 5064
V01,V02,V03,V04
36 0399
V05,V06
- 9) 35 5833
V01,V02,V03,V04
36 0407
V05,V06

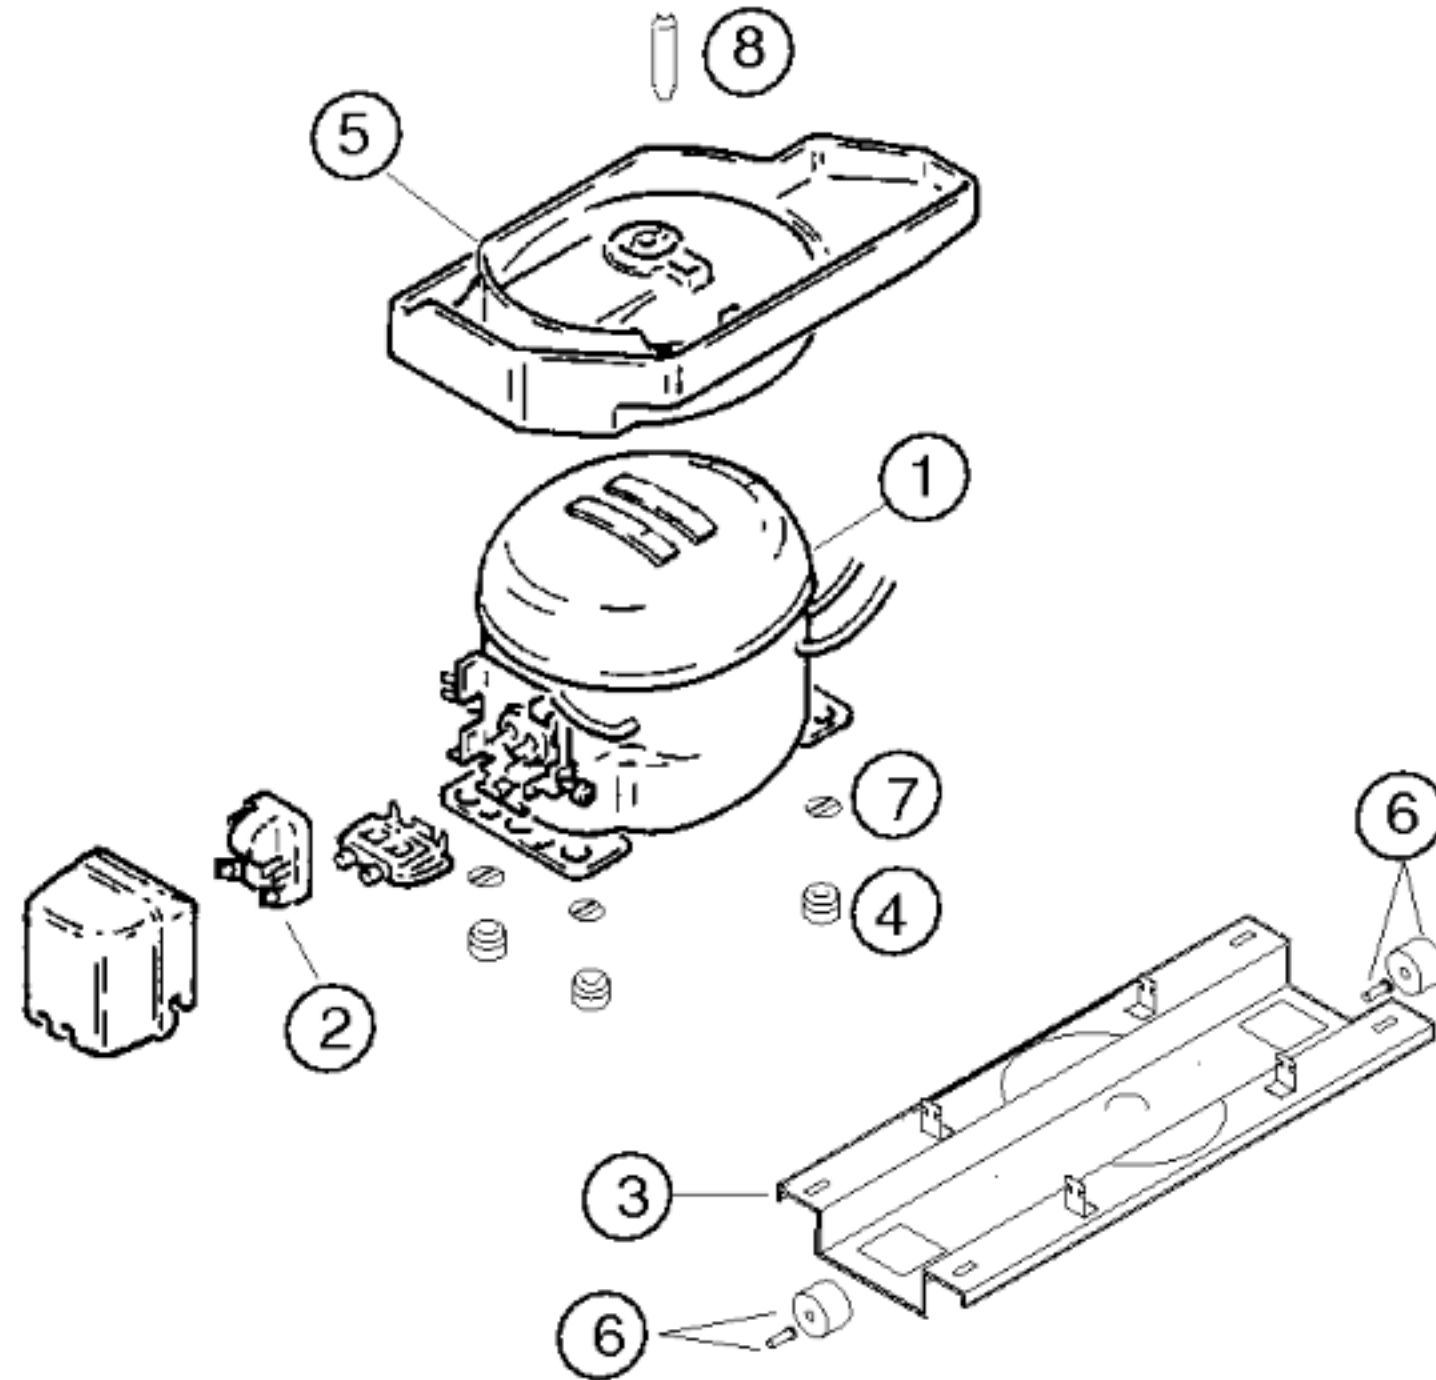

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NL11F		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	13.6	
Widerstand/Resistance/Rezistans Ha/	Ω	8.2	
Hi/aux.		14.7	
Temp.Reyler/Thermostat/Termostat	Elektronisch		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R134a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans	Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc		190	20
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör	Verdampfer		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans			
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz

Pos.	Danfoss		
	NL11F		
1	14 1916		
2	16 5570		
3	35 4583		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	17 2776		
9			
10			
11			
12			