


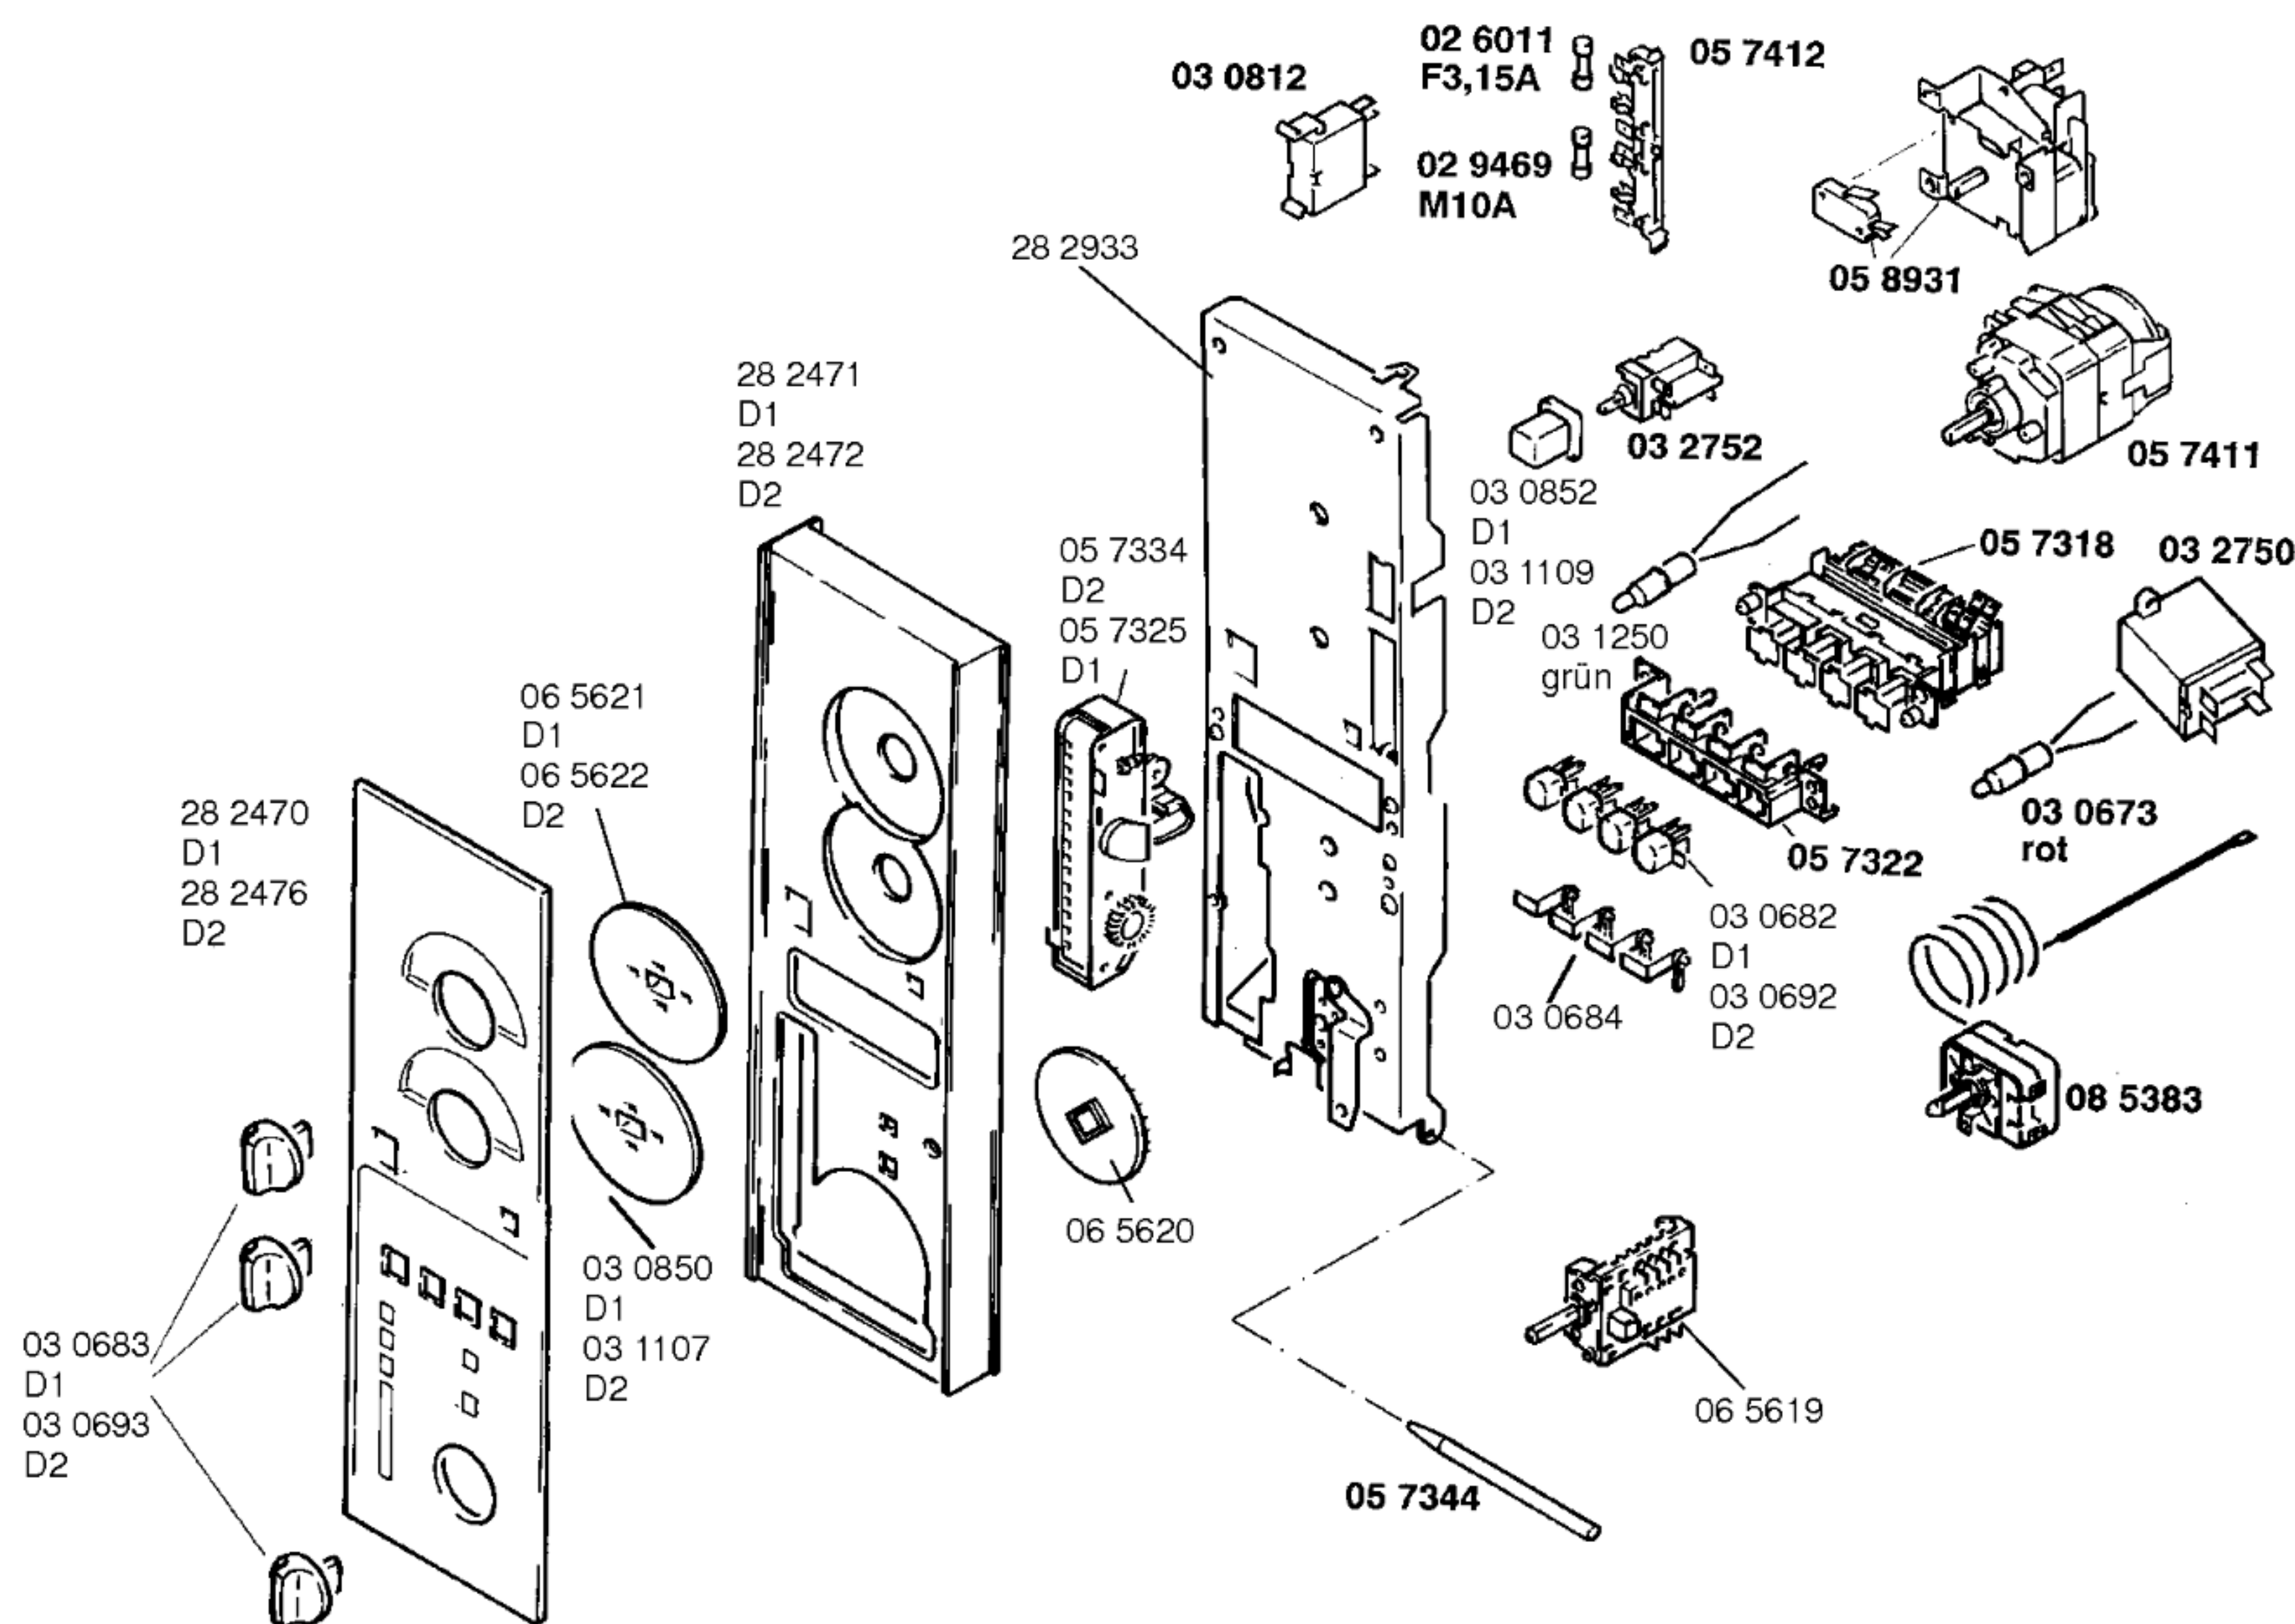

Gebrauchsanweisung
51 5854
(D,GB,F,I,NL,E)
51 4994
Einbauanweisung
51 3932
(D,F,GB,I,NL,N,S,SF,DK)

Tips und Rezepte
51 5729
(D)
Zubehör:

HZ67720
Abdeckung, kratzfest


HZ8056
Glaspfanne


HZ8055
Alu-Backblech

HZ67615
Universalpfanne

HZ9150
Glasbräter


- 1) 03 0671
- 2) 03 0813
Arretierstift

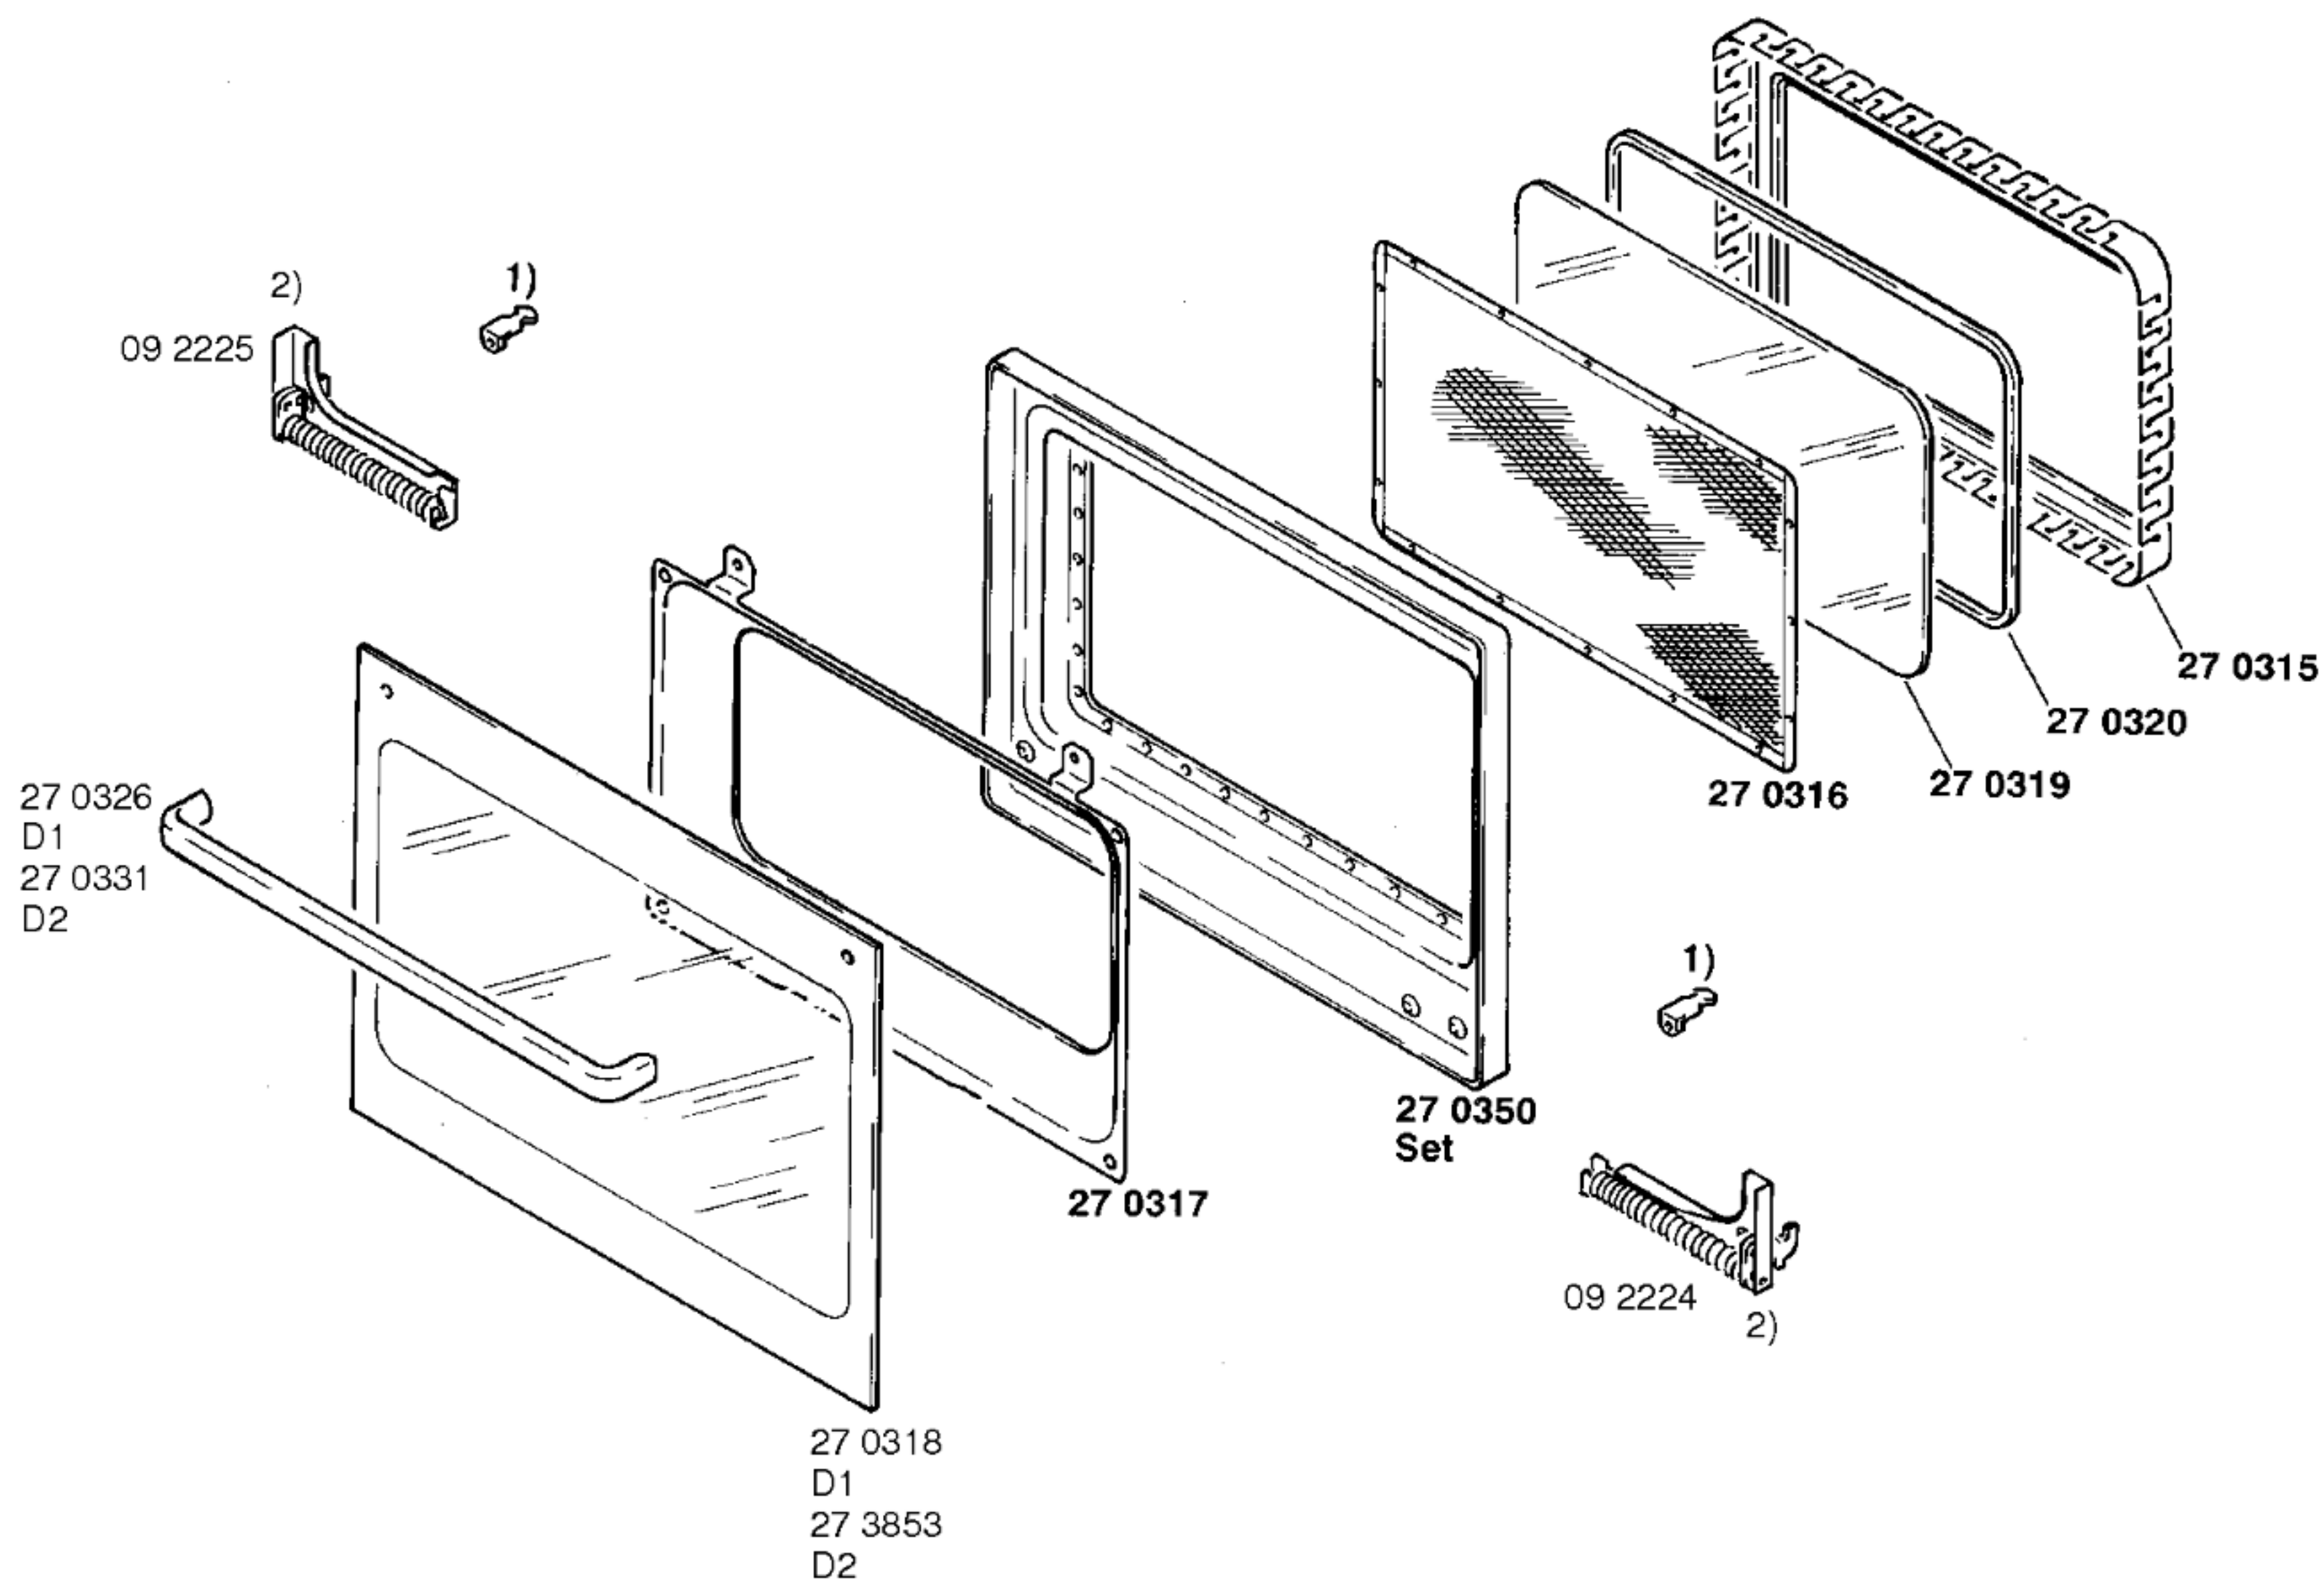


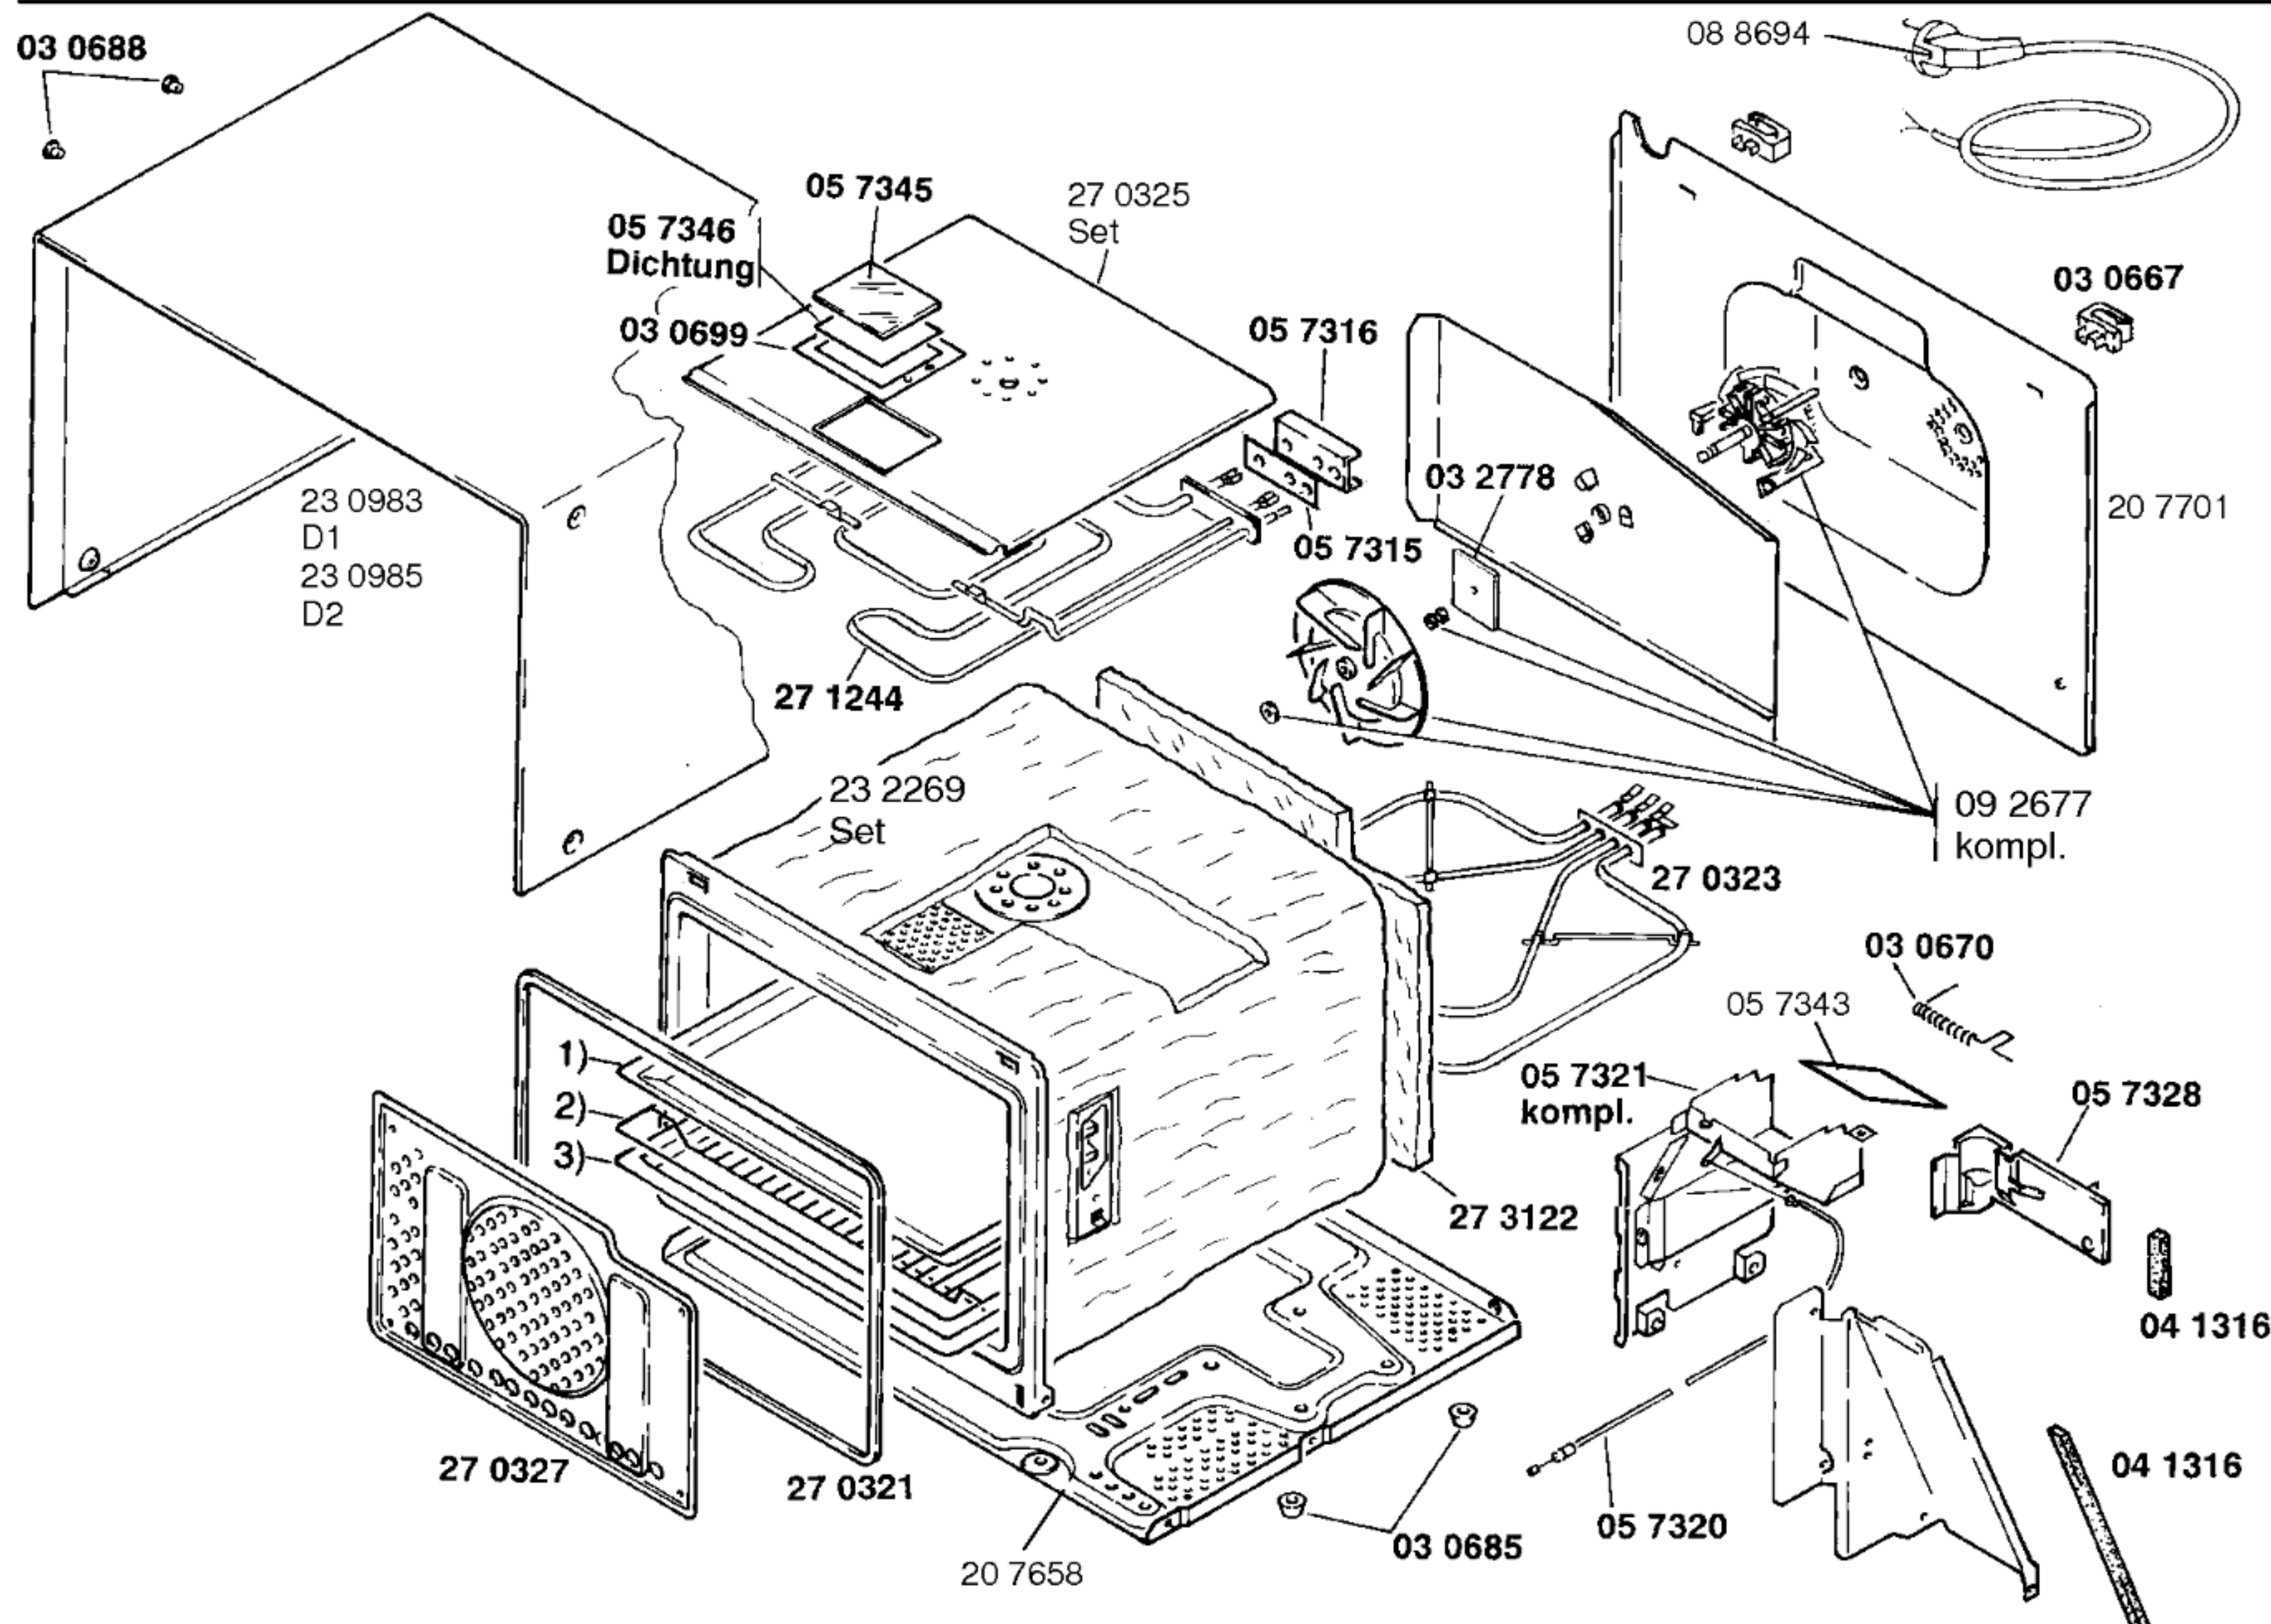

- 1) 11 4538 Backblech
 - 2) 11 4539
 - 3) 27 3844 Universalpfanne
- 02 8732 Anschlag-Backblech

1) 06 6760

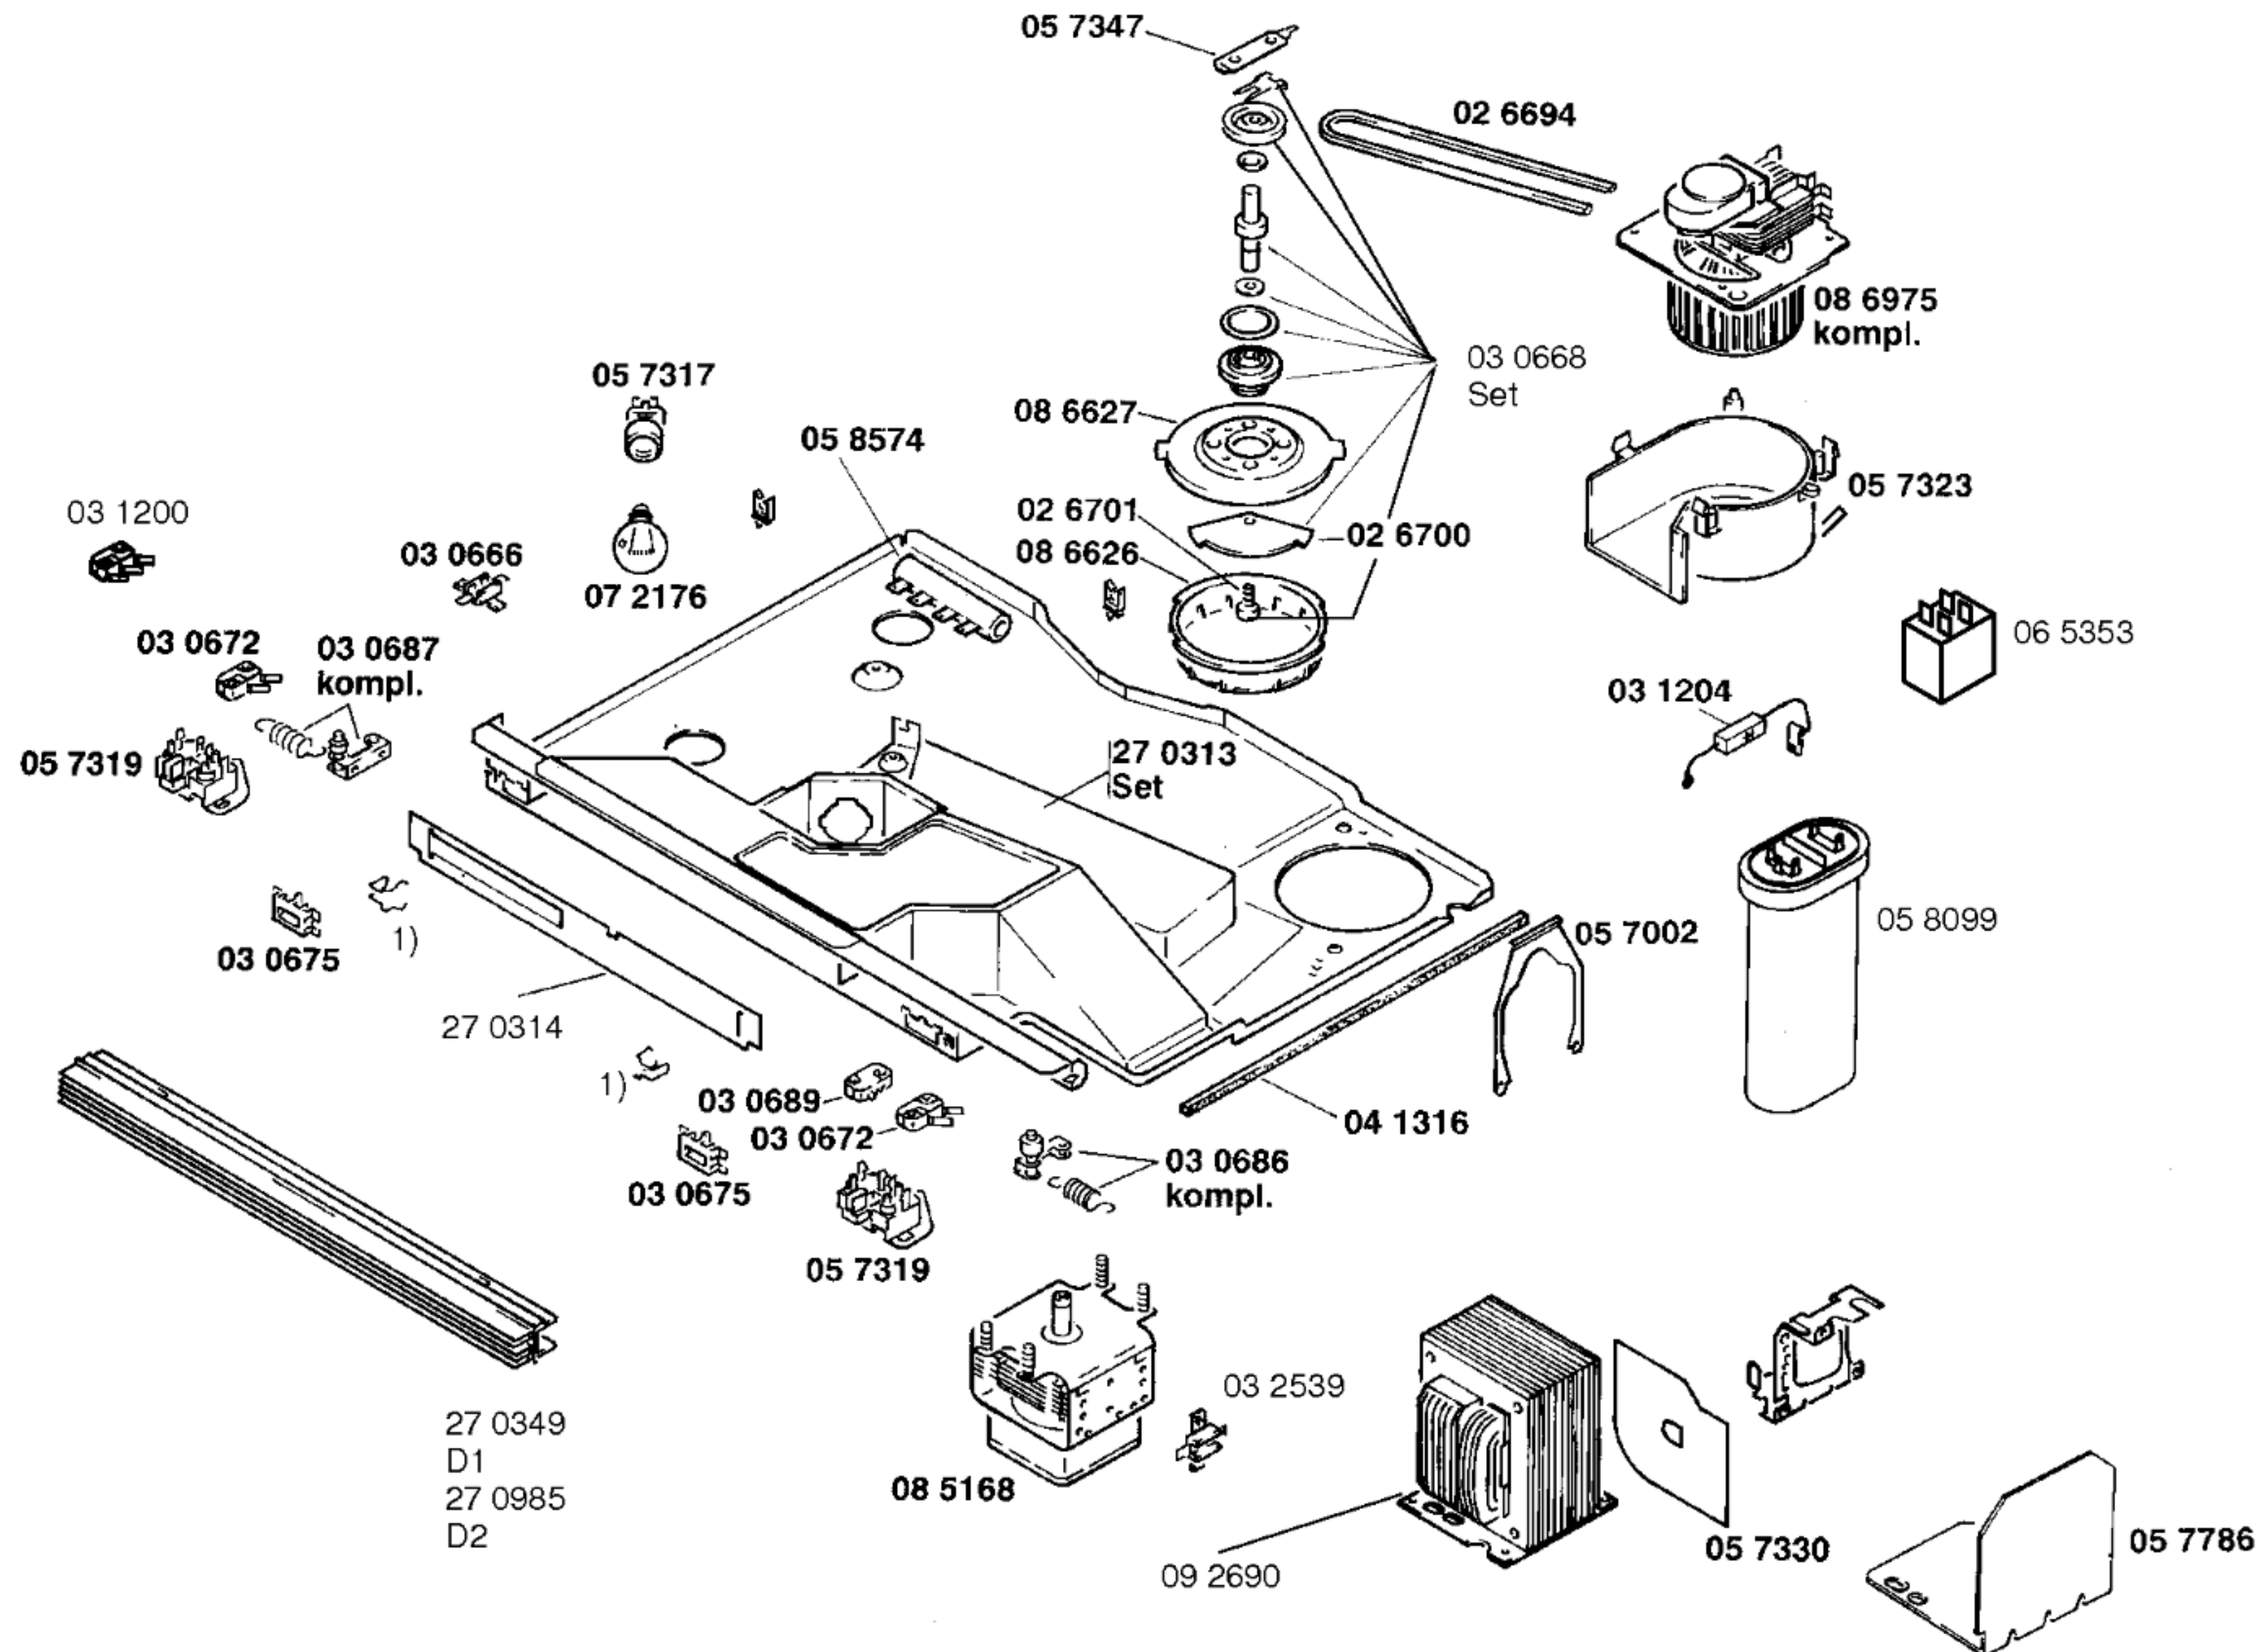

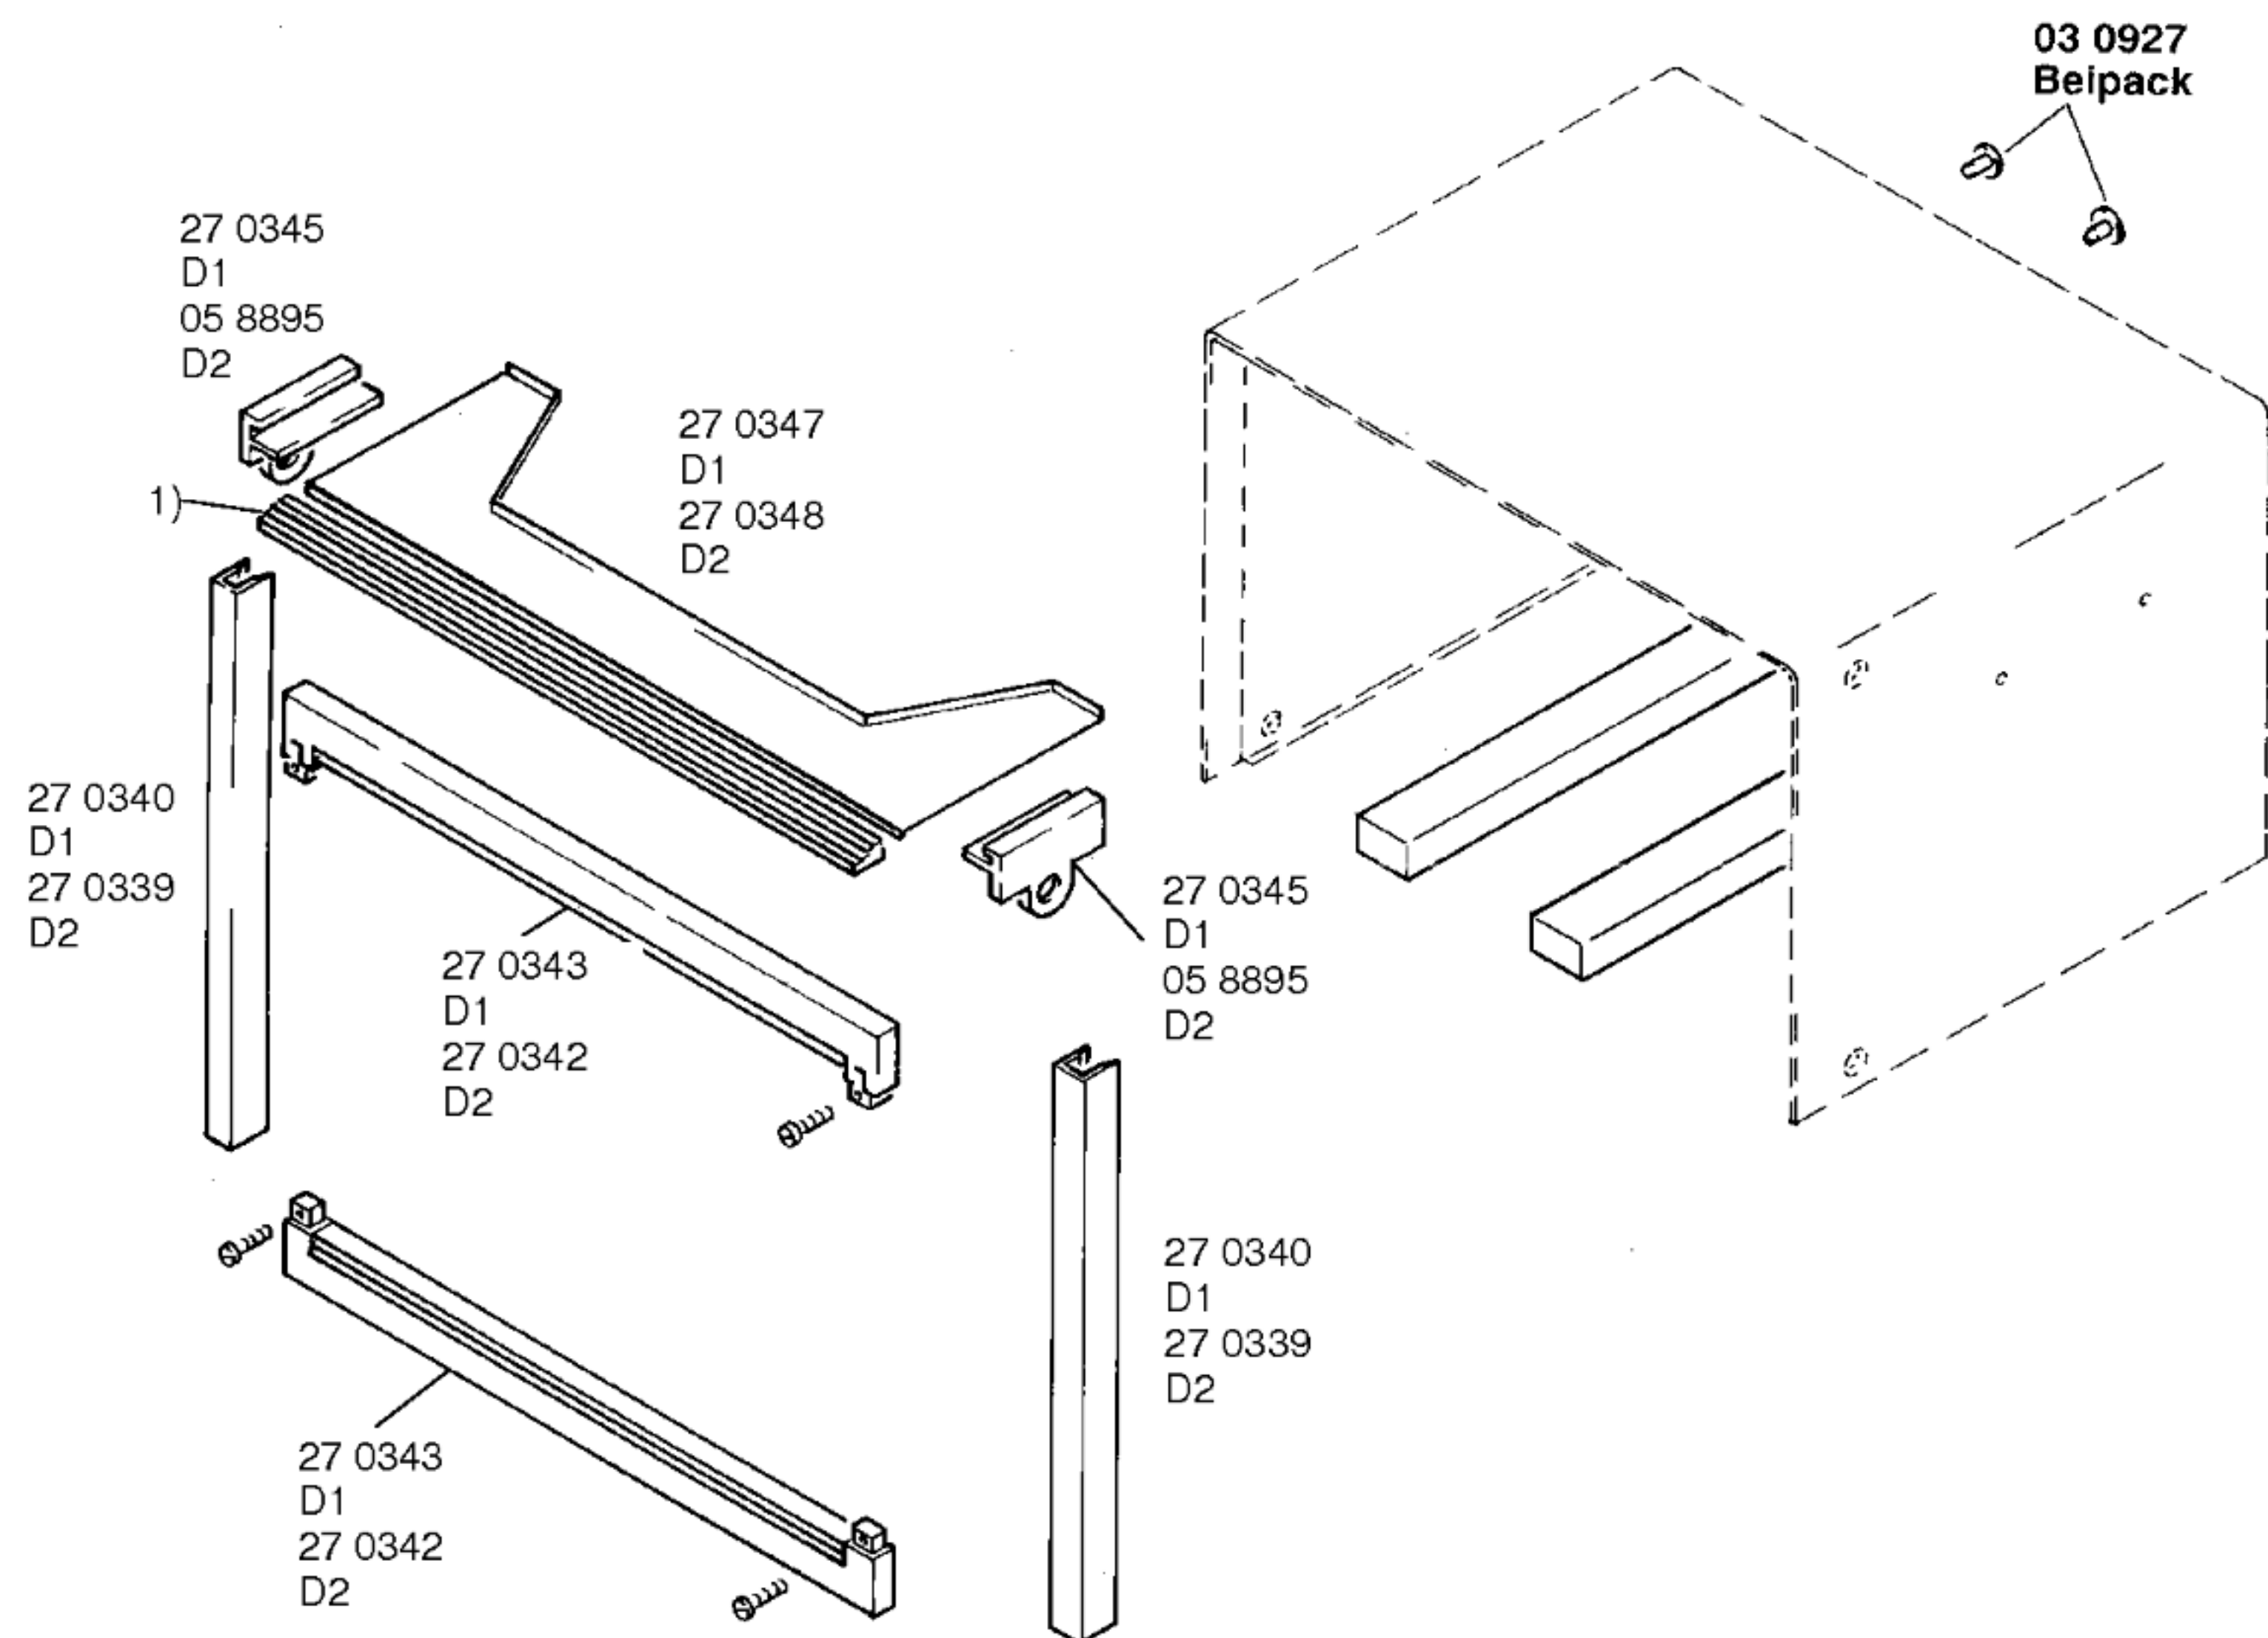

- 1) 27 3988
D1
27 3935
D2