


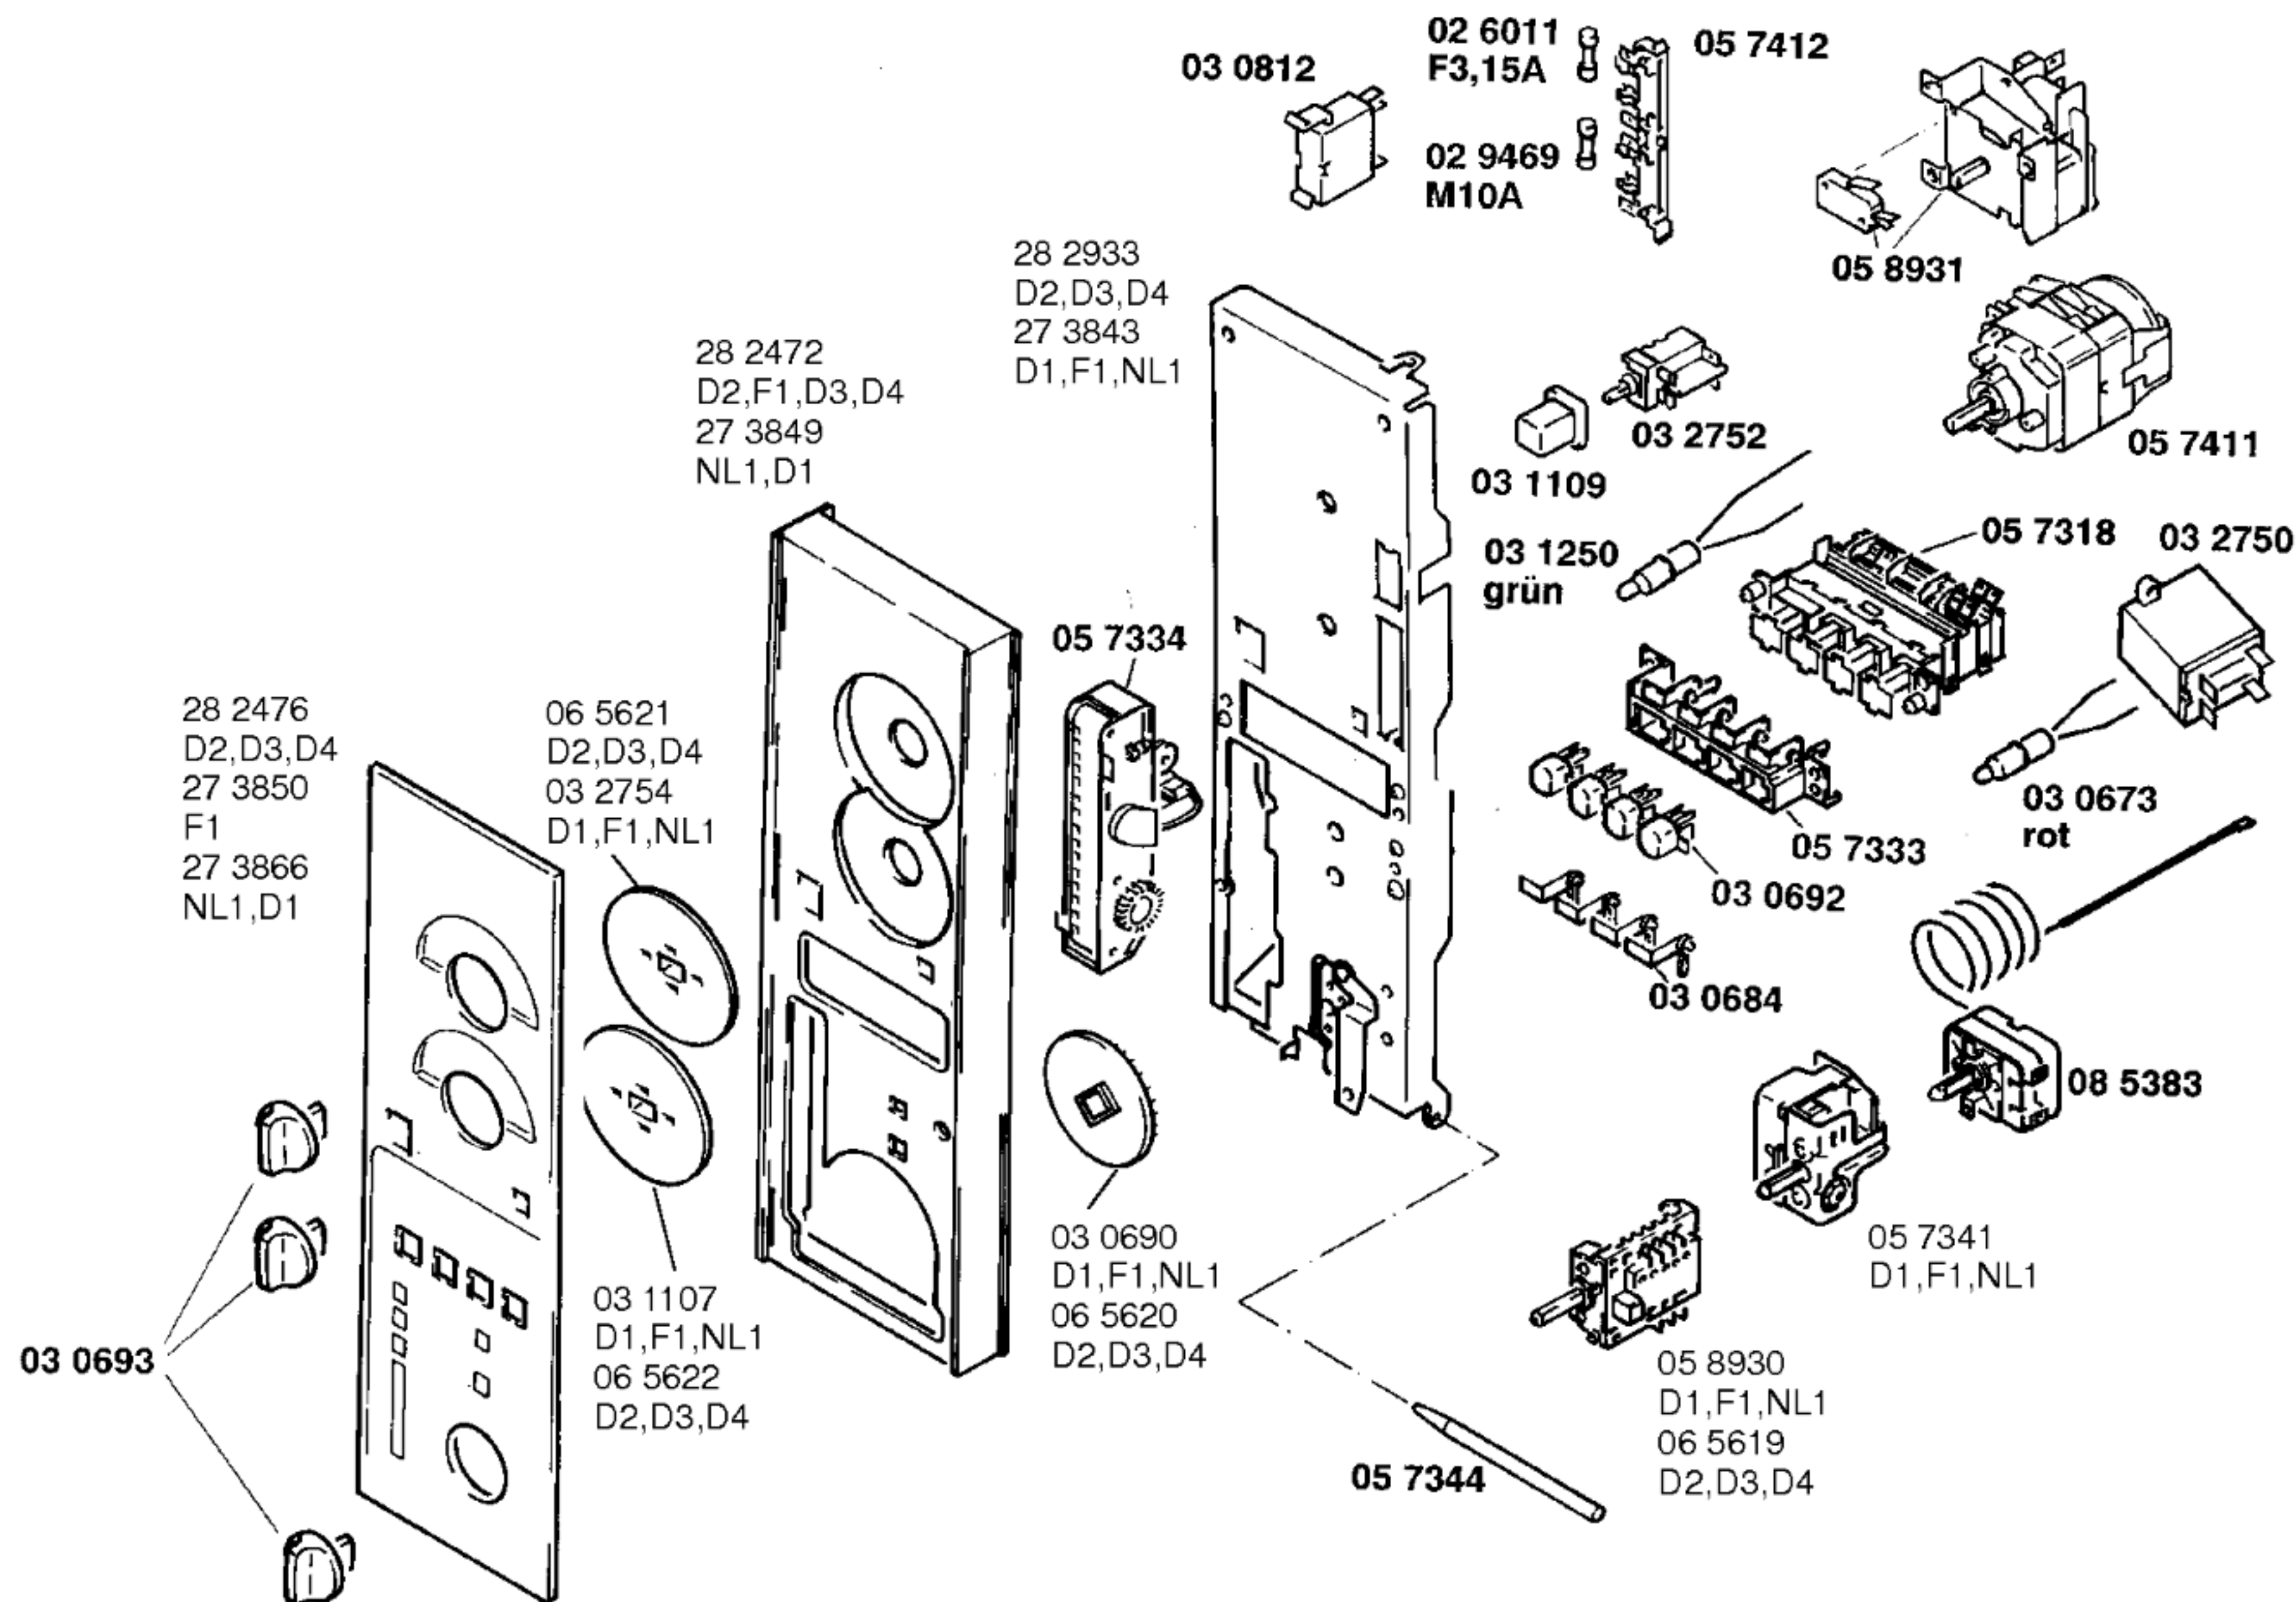

## Gebrauchsanweisung

51 4994  
F1,NL1  
(D,F,GB,NL)  
51 5485  
D1  
(D)  
51 5730  
D2,D3,D4  
(D)  
Tips und Rezepte  
51 4476  
NL1  
(NL)  
51 4861  
D1  
(D)  
51 5729  
D2,D3,D4  
(D)

## Zubehör:

HZ67040  
Einbaurahmen


HZ67740  
Abdeckung, kratzfest

HZ8056  
Glaspfanne

HZ8055  
Alu-Backblech


HZ67615  
Universalpfanne

HZ9150  
Glasbräter

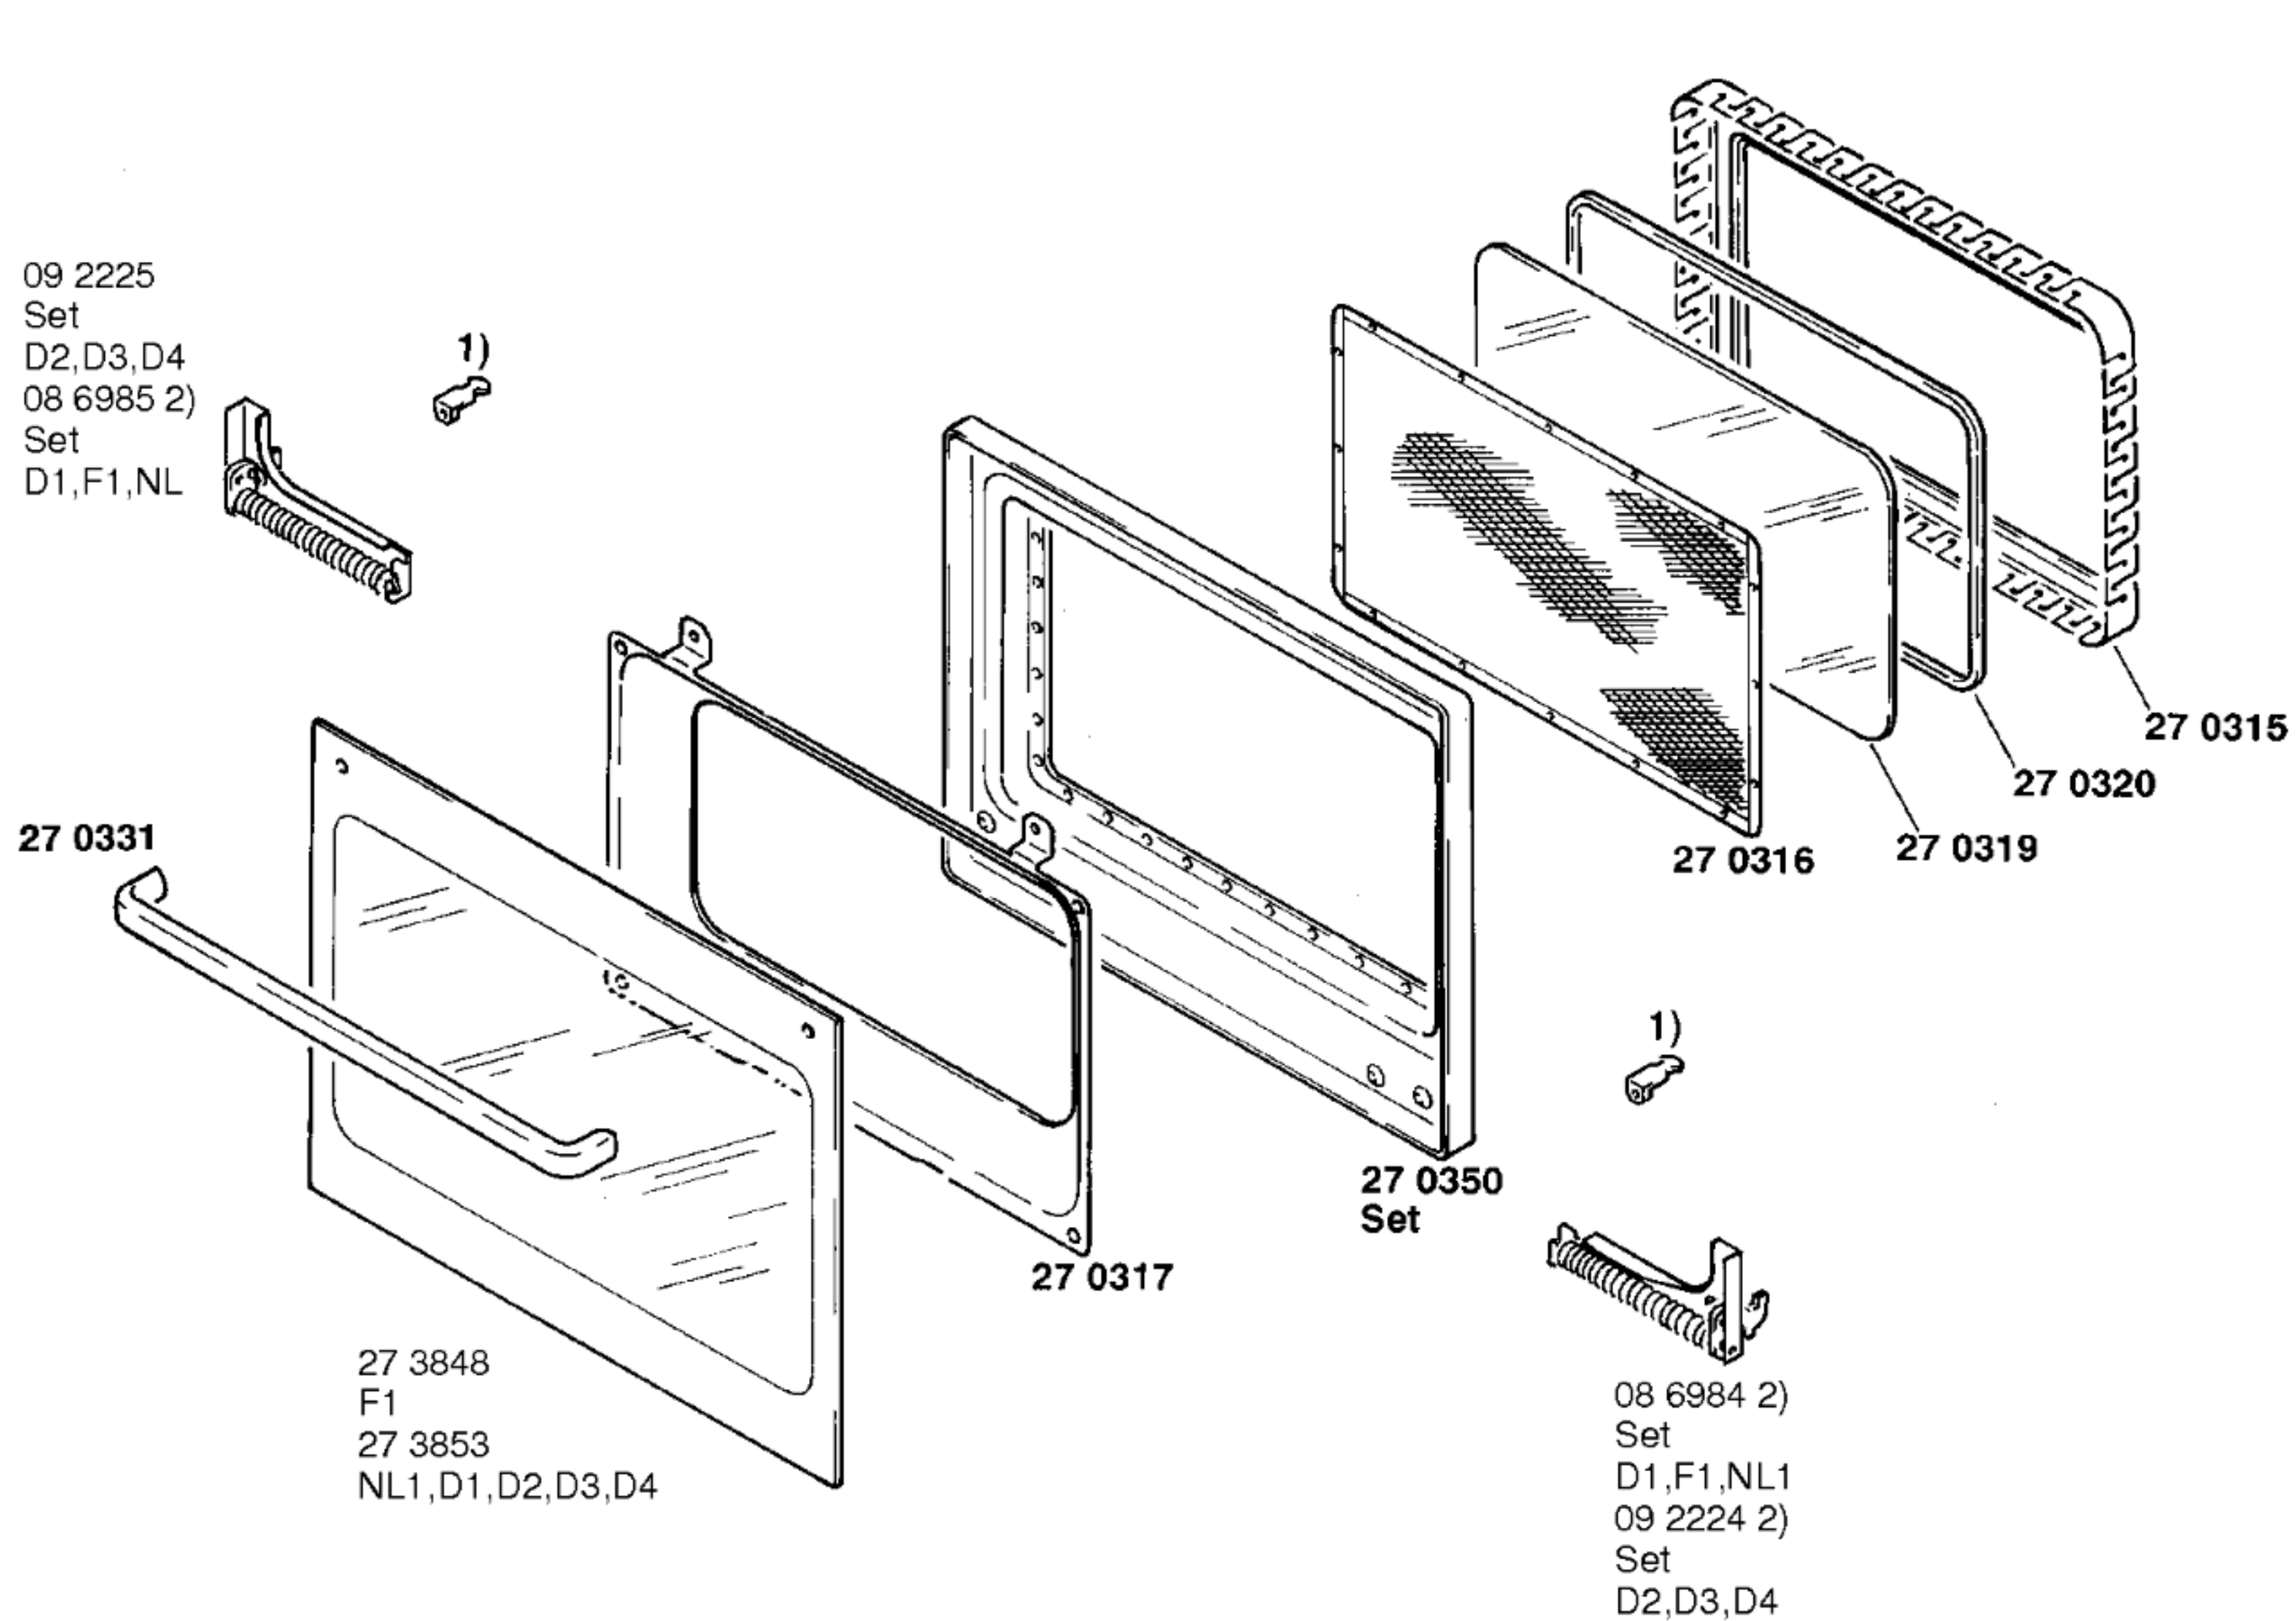


- 1) 03 0671  
2) 03 0813  
Arretierstift



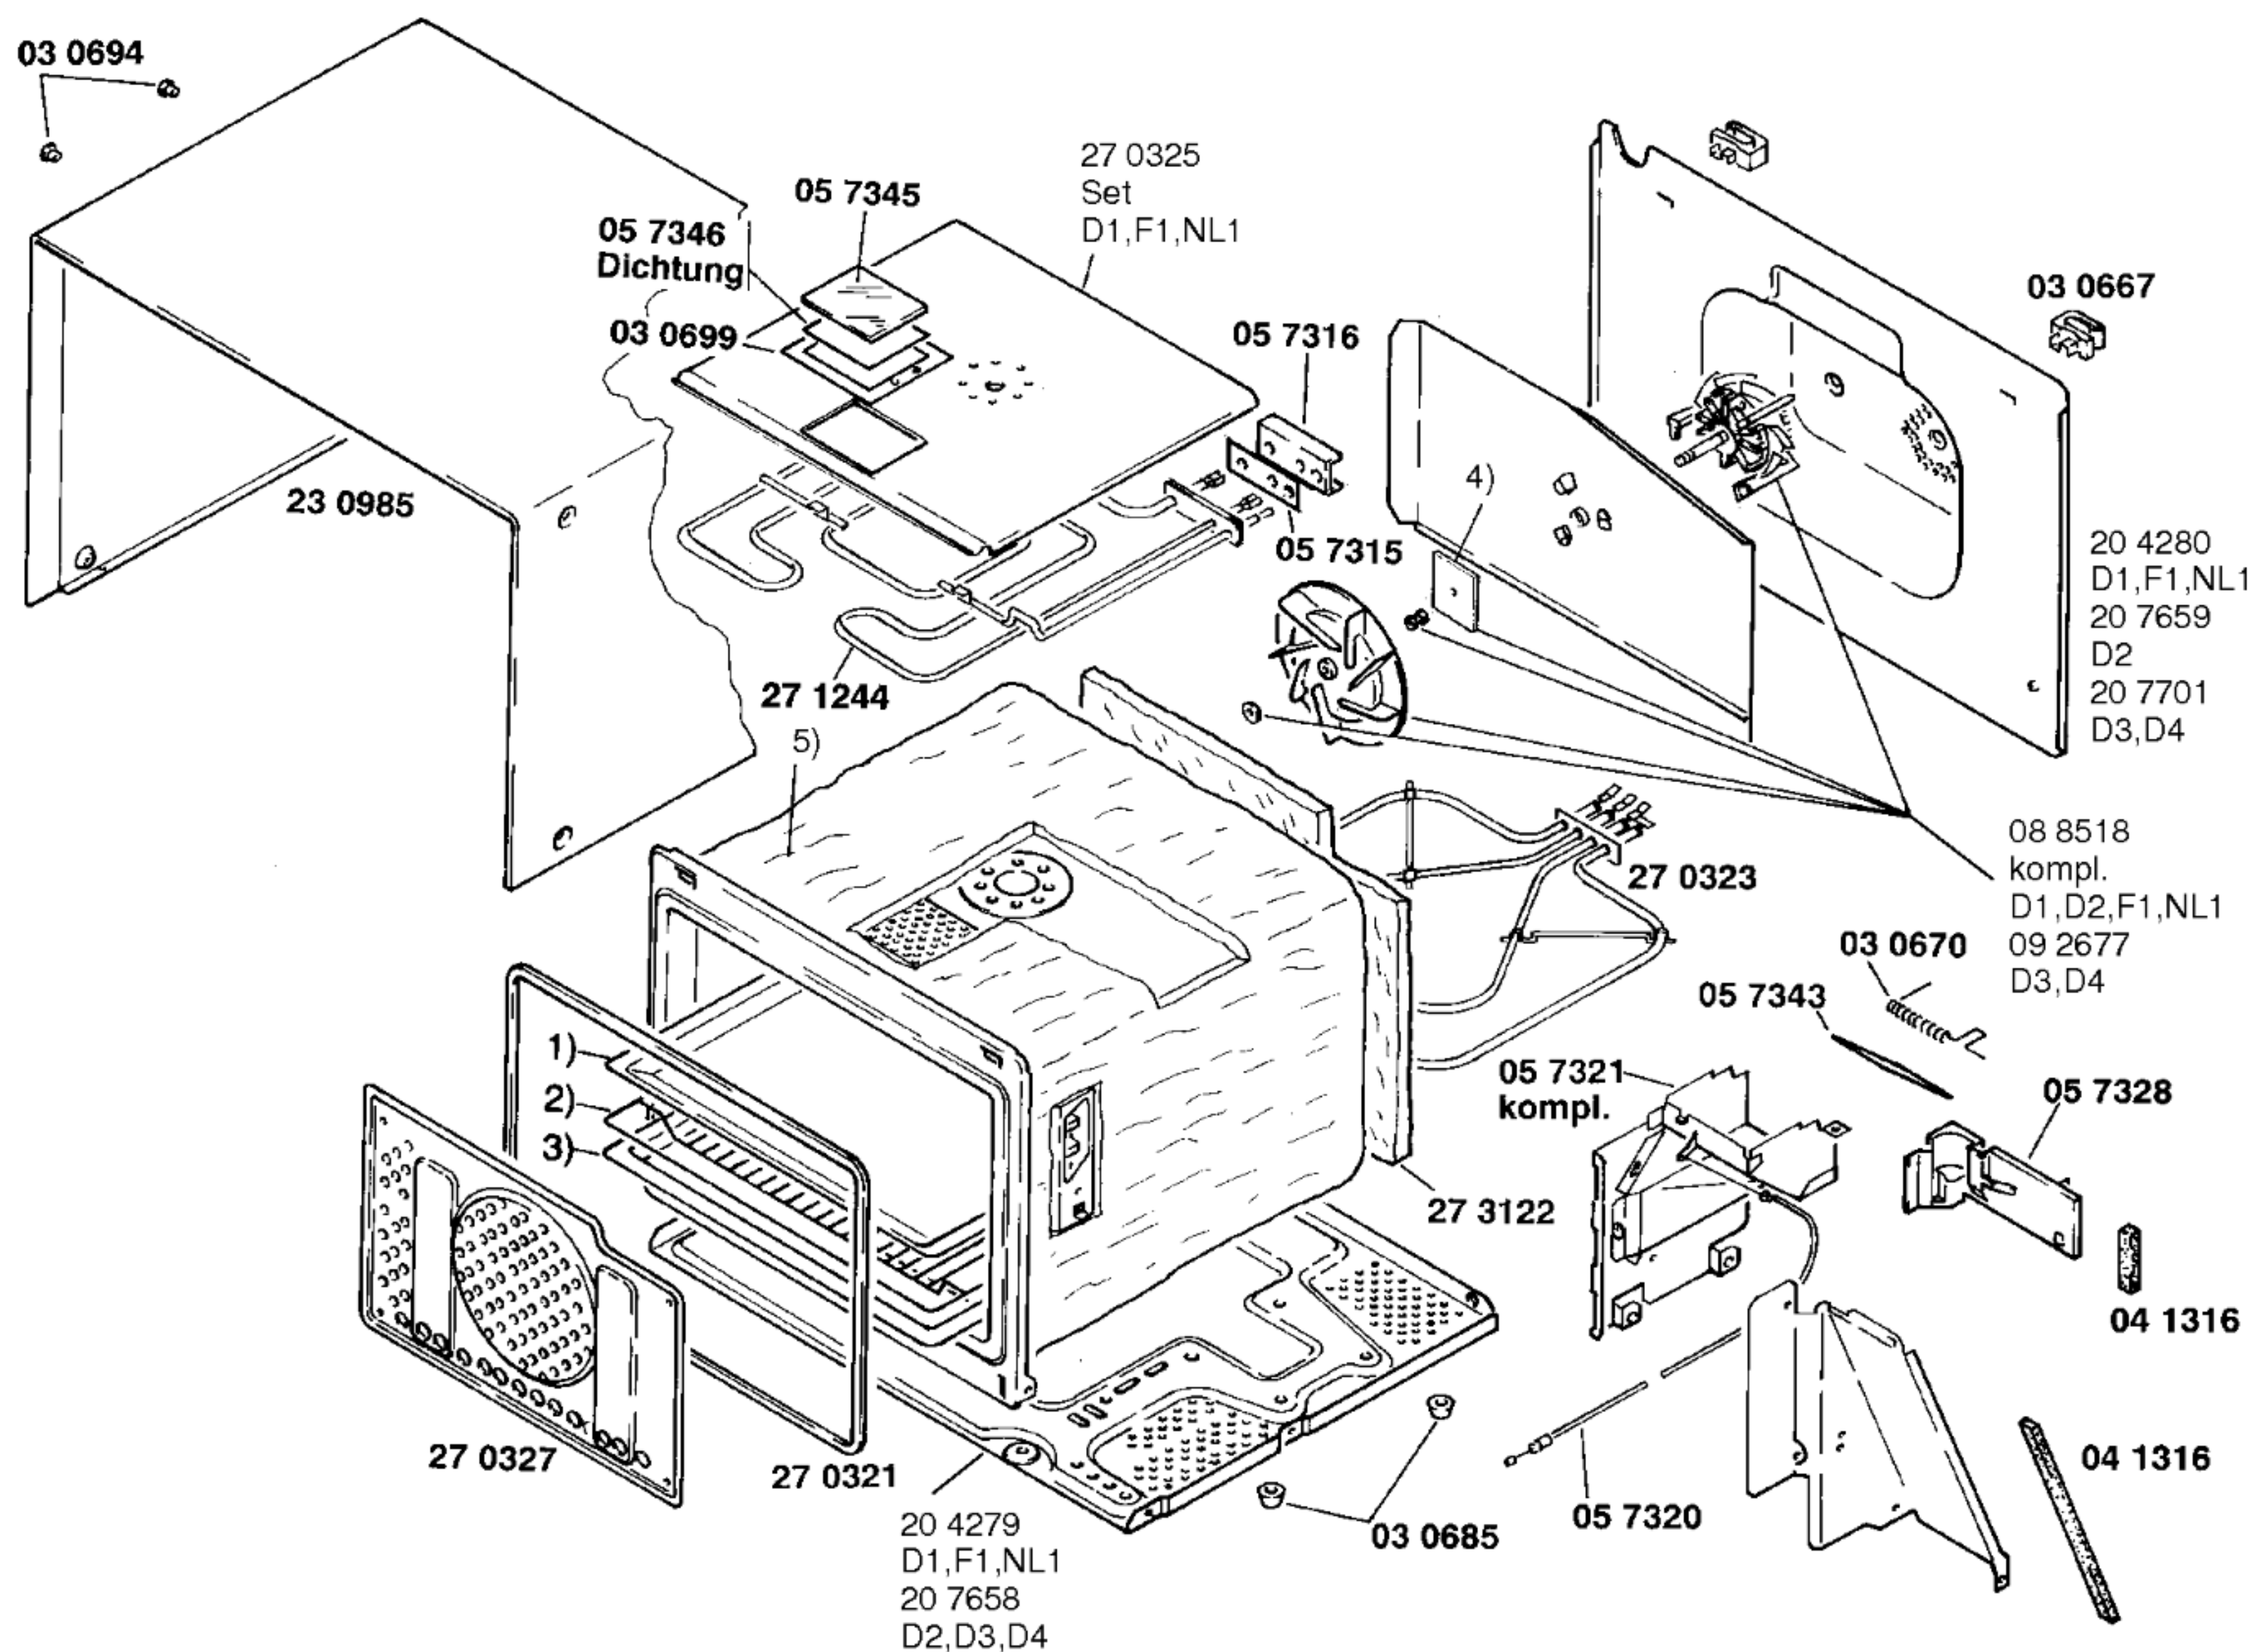

- 1) 11 4538 Backblech
- 2) 11 4539
- 3) 27 3844 Universalpfanne  
02 8732 Anschlag-Backblech
- 4) 03 2778 D1,D2,F1,NL1
- 5) Set  
23 1101 D1,D2,F1,NL1  
23 2269 D3,D4

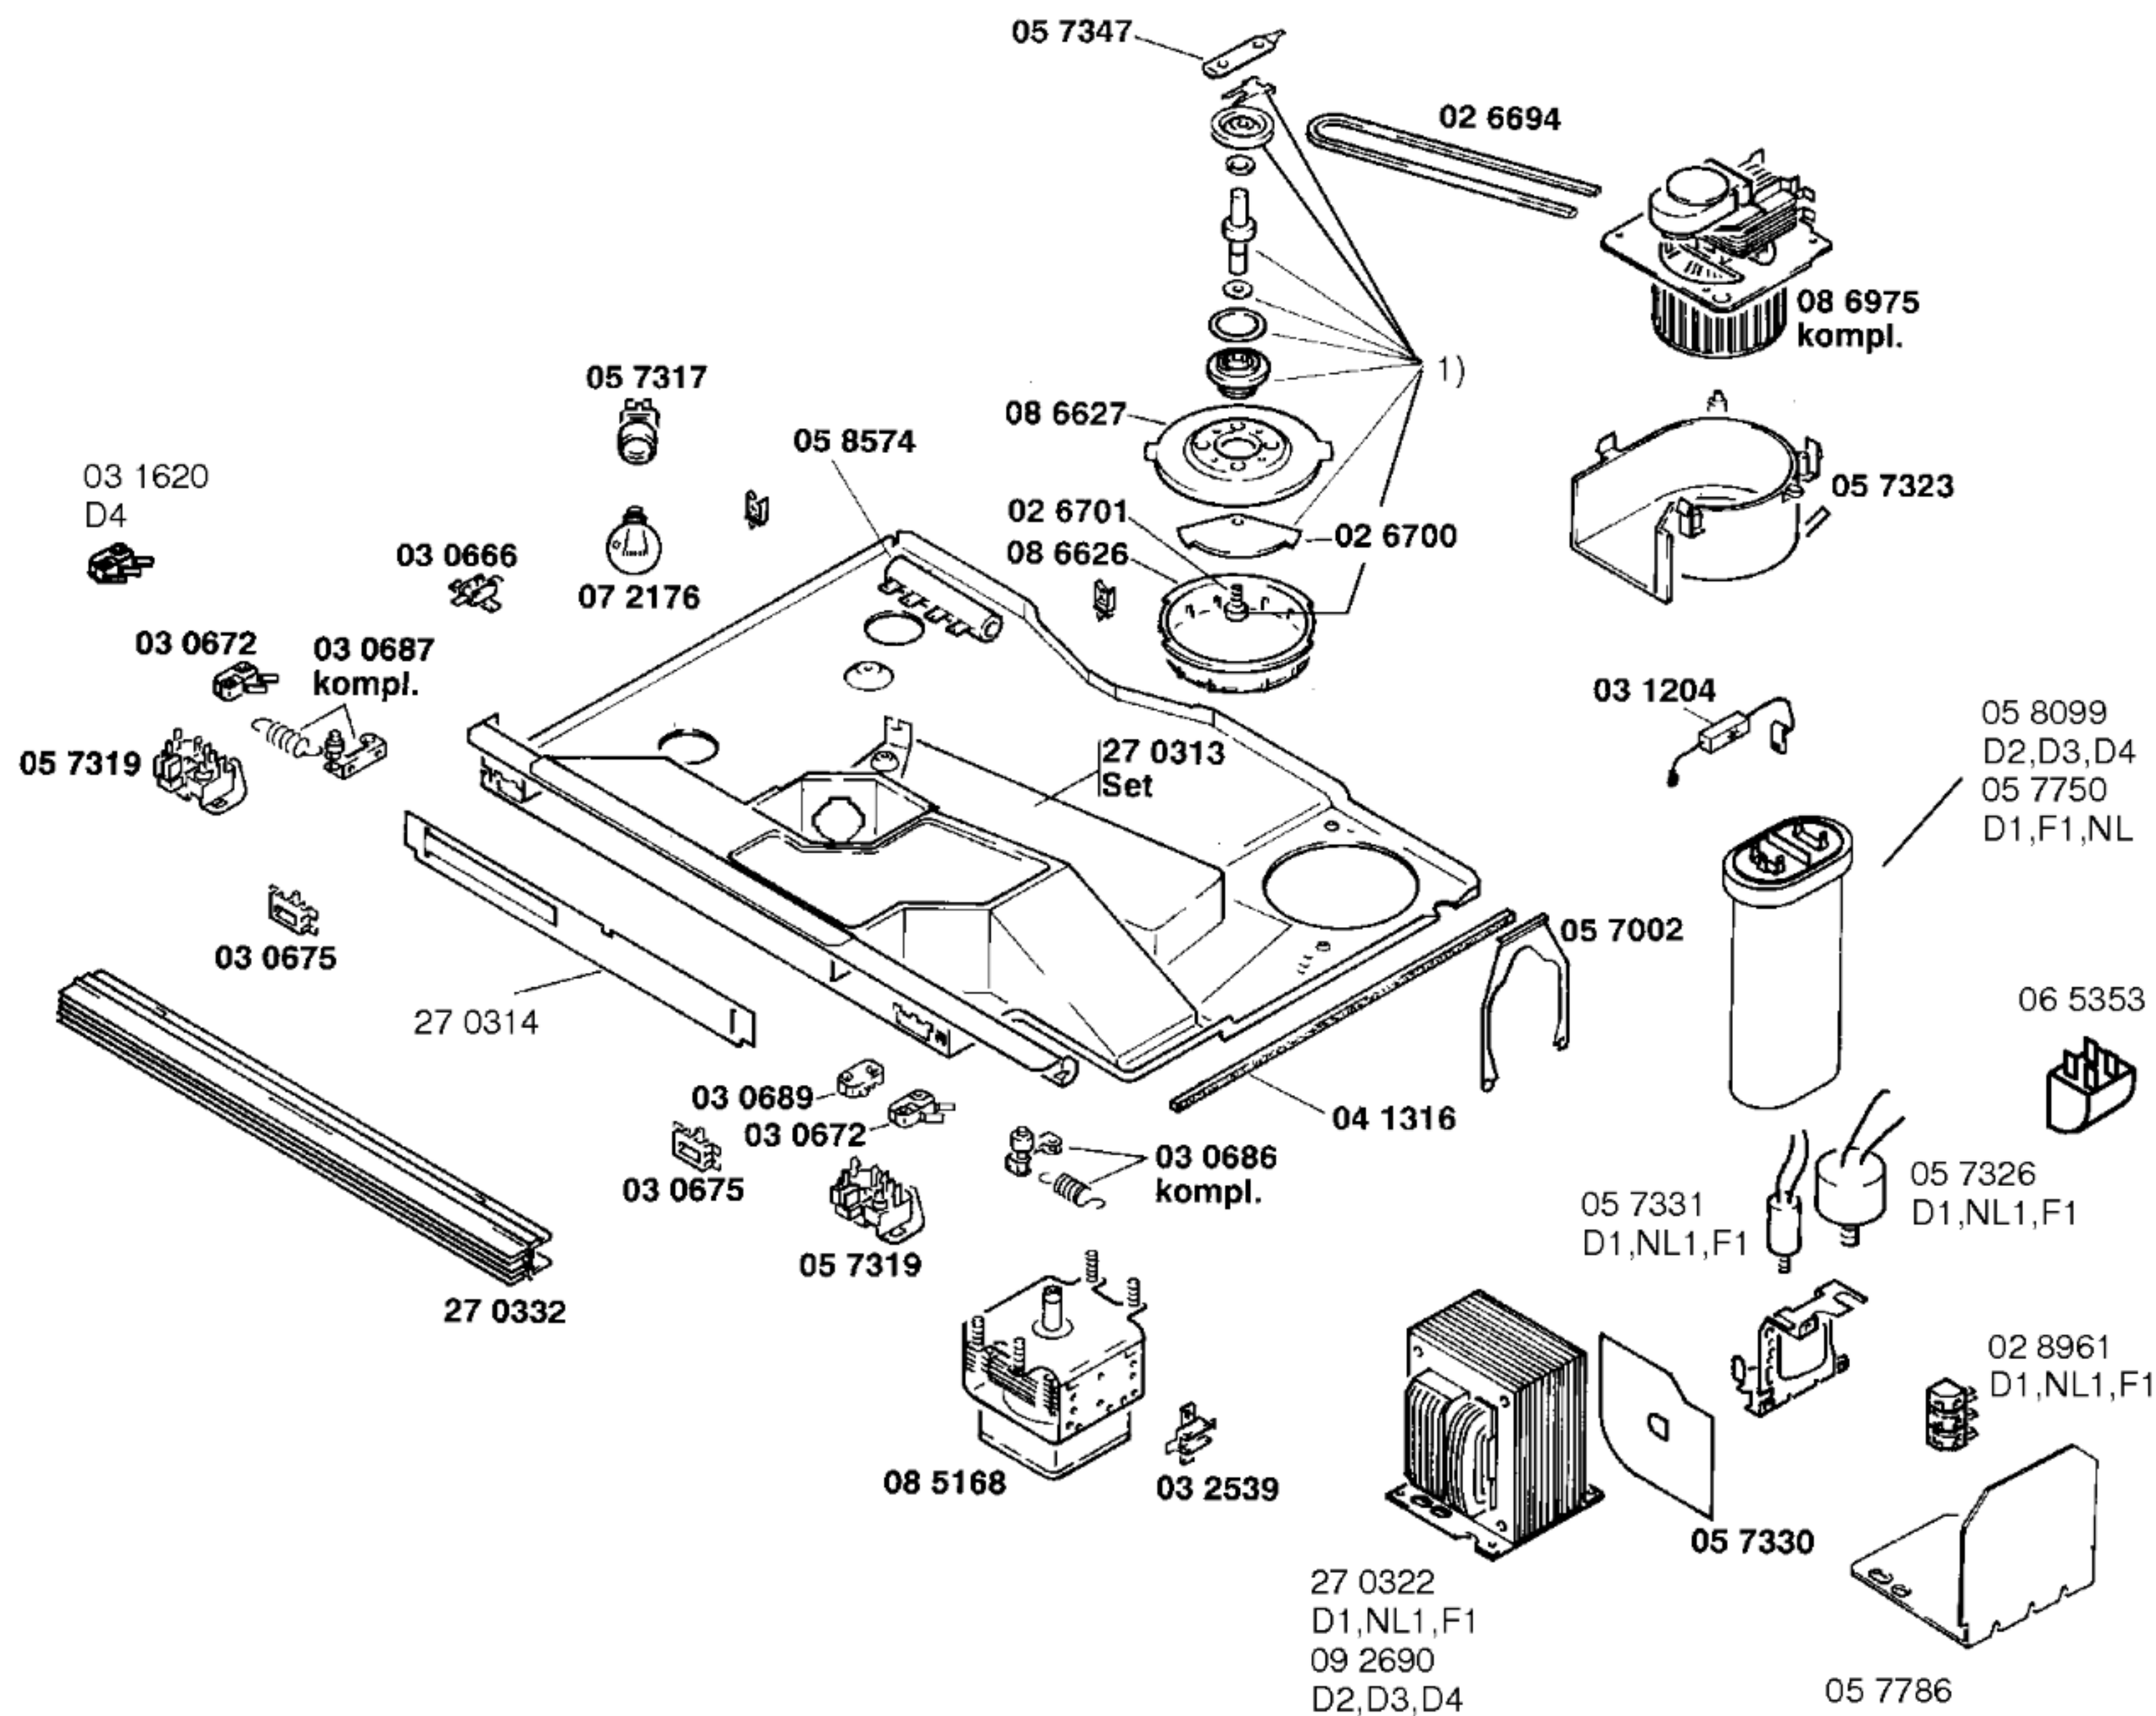

- 1) 06 6872  
Set  
D2  
03 0668  
Set  
D1,F1,NL1