


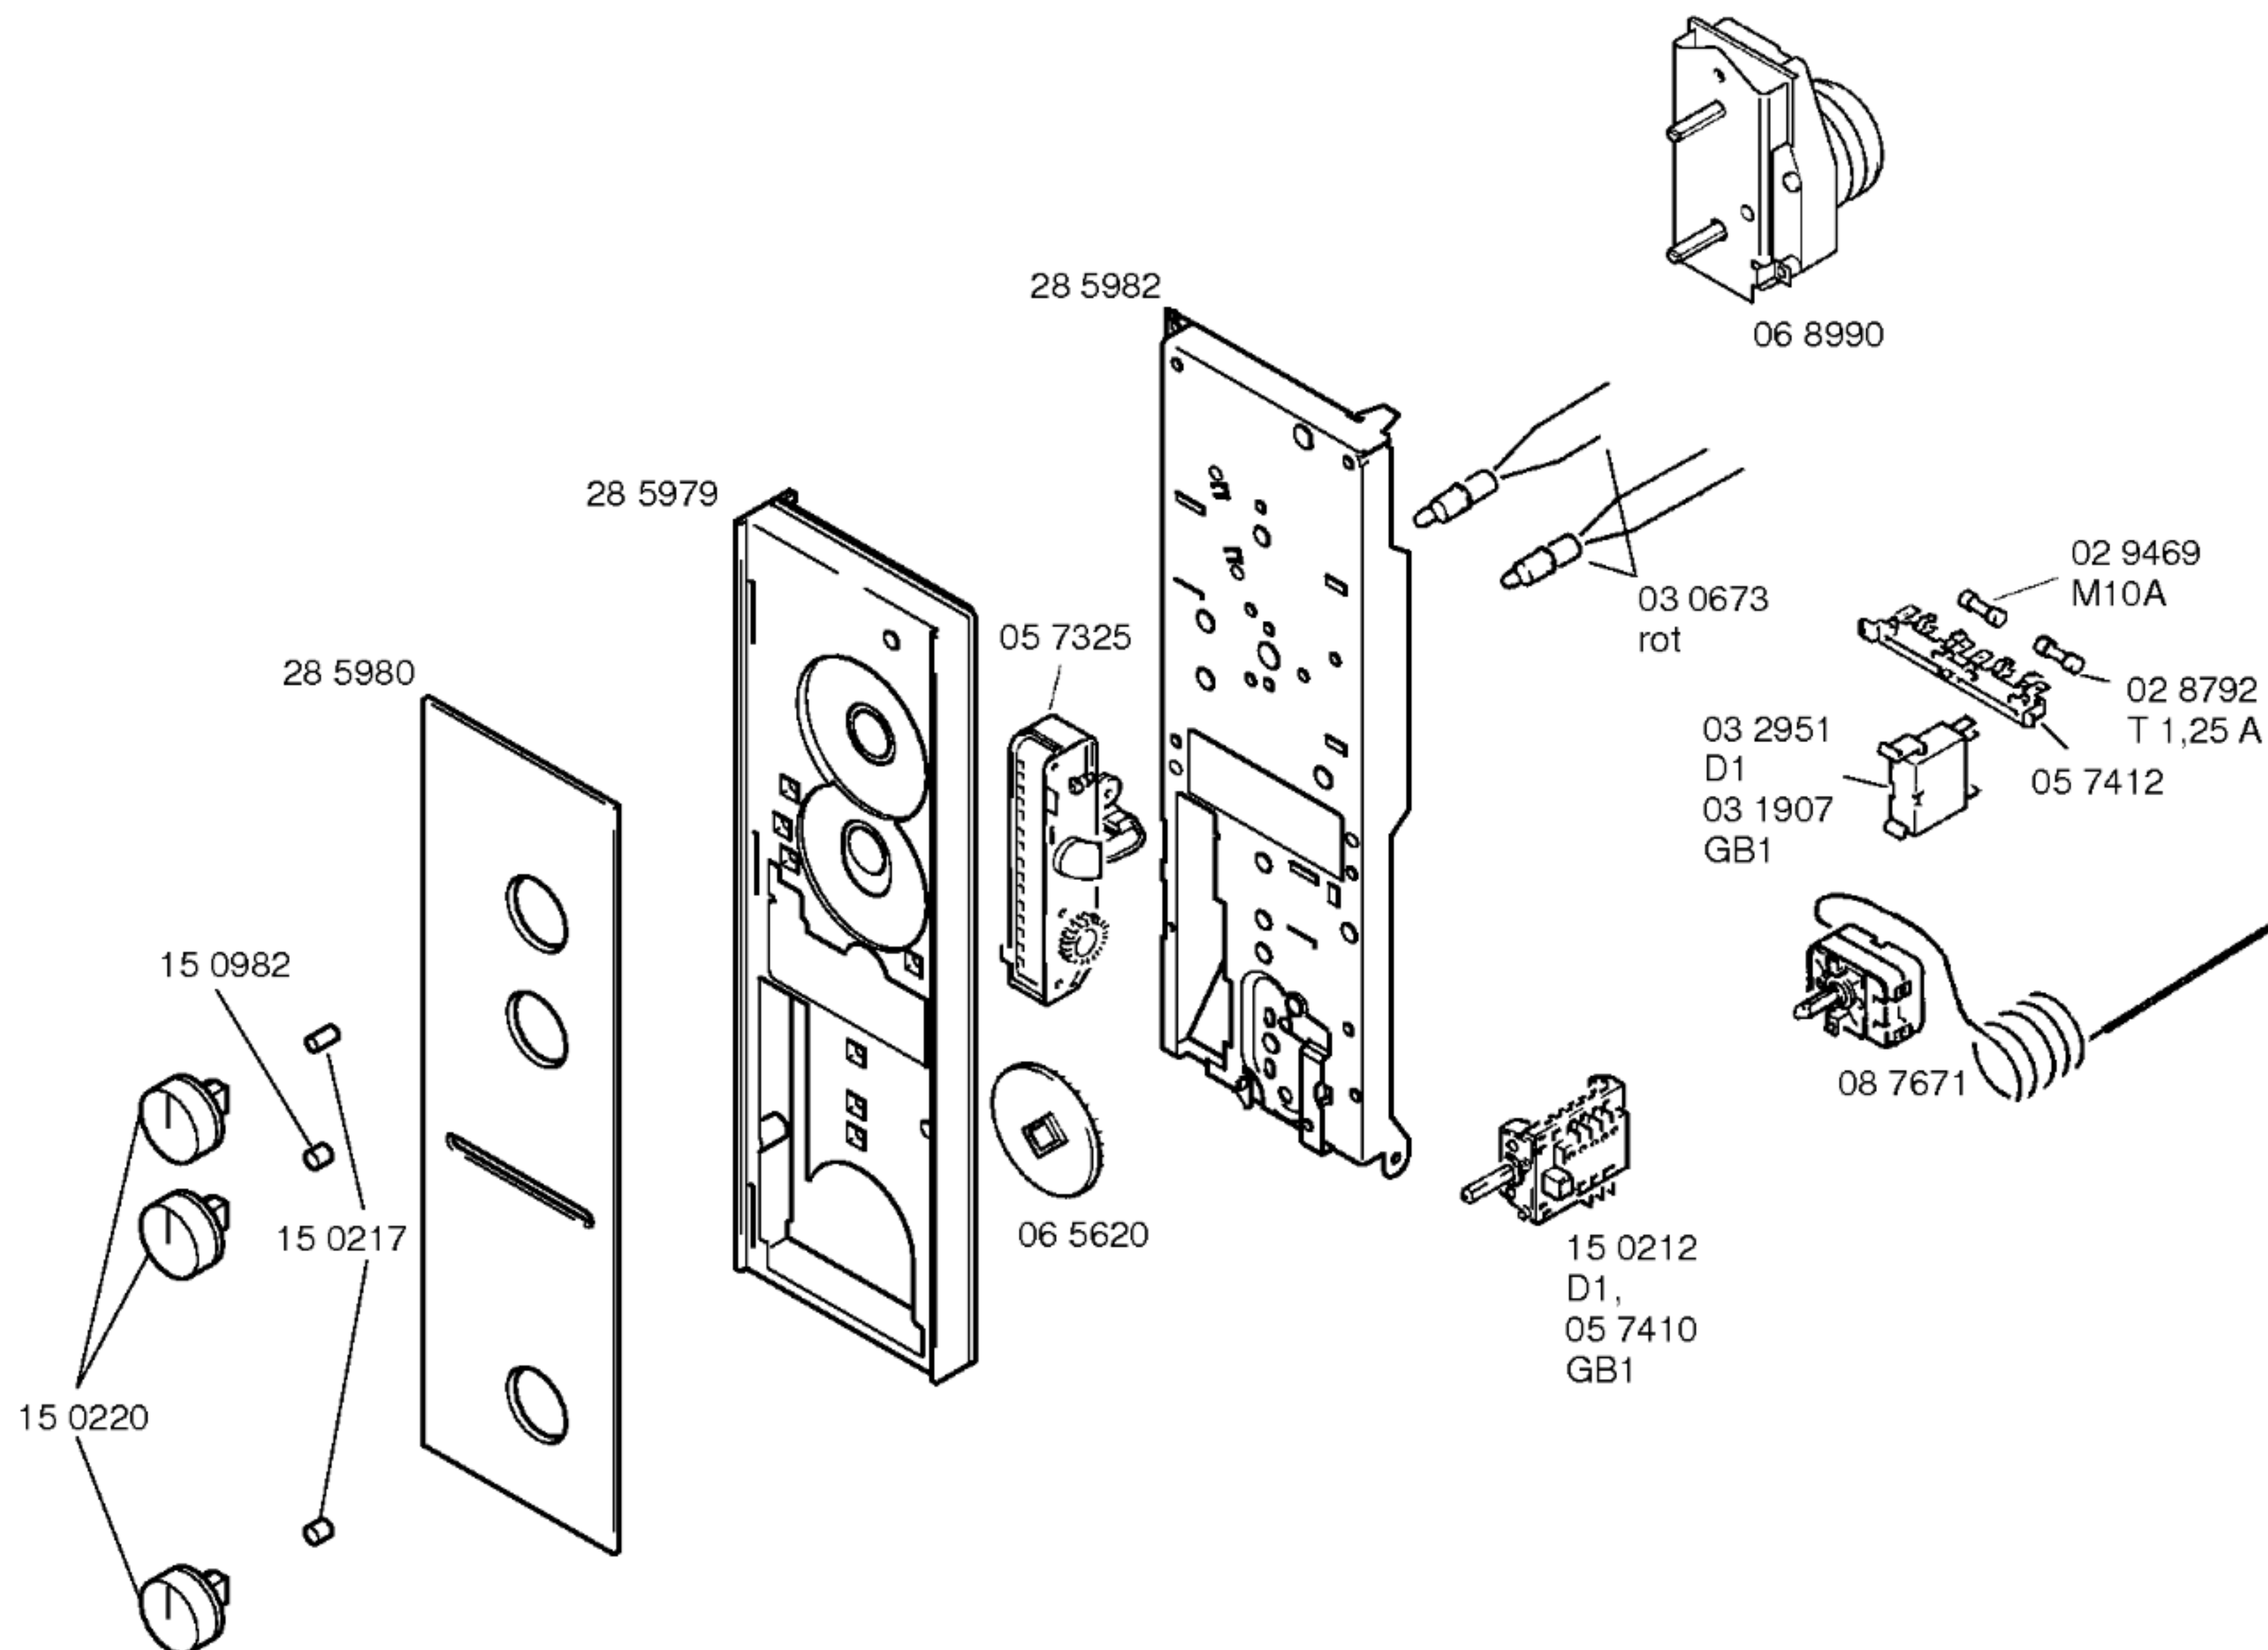



Gebrauchsanweisung

51 6887
(D,GB,NL)
D1,NL1
51 6888
(GB/10A)
GB1
Kochbuch
51 5833
(D)

Zubehör:

Einbaurahmen
HZ 67042
Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056

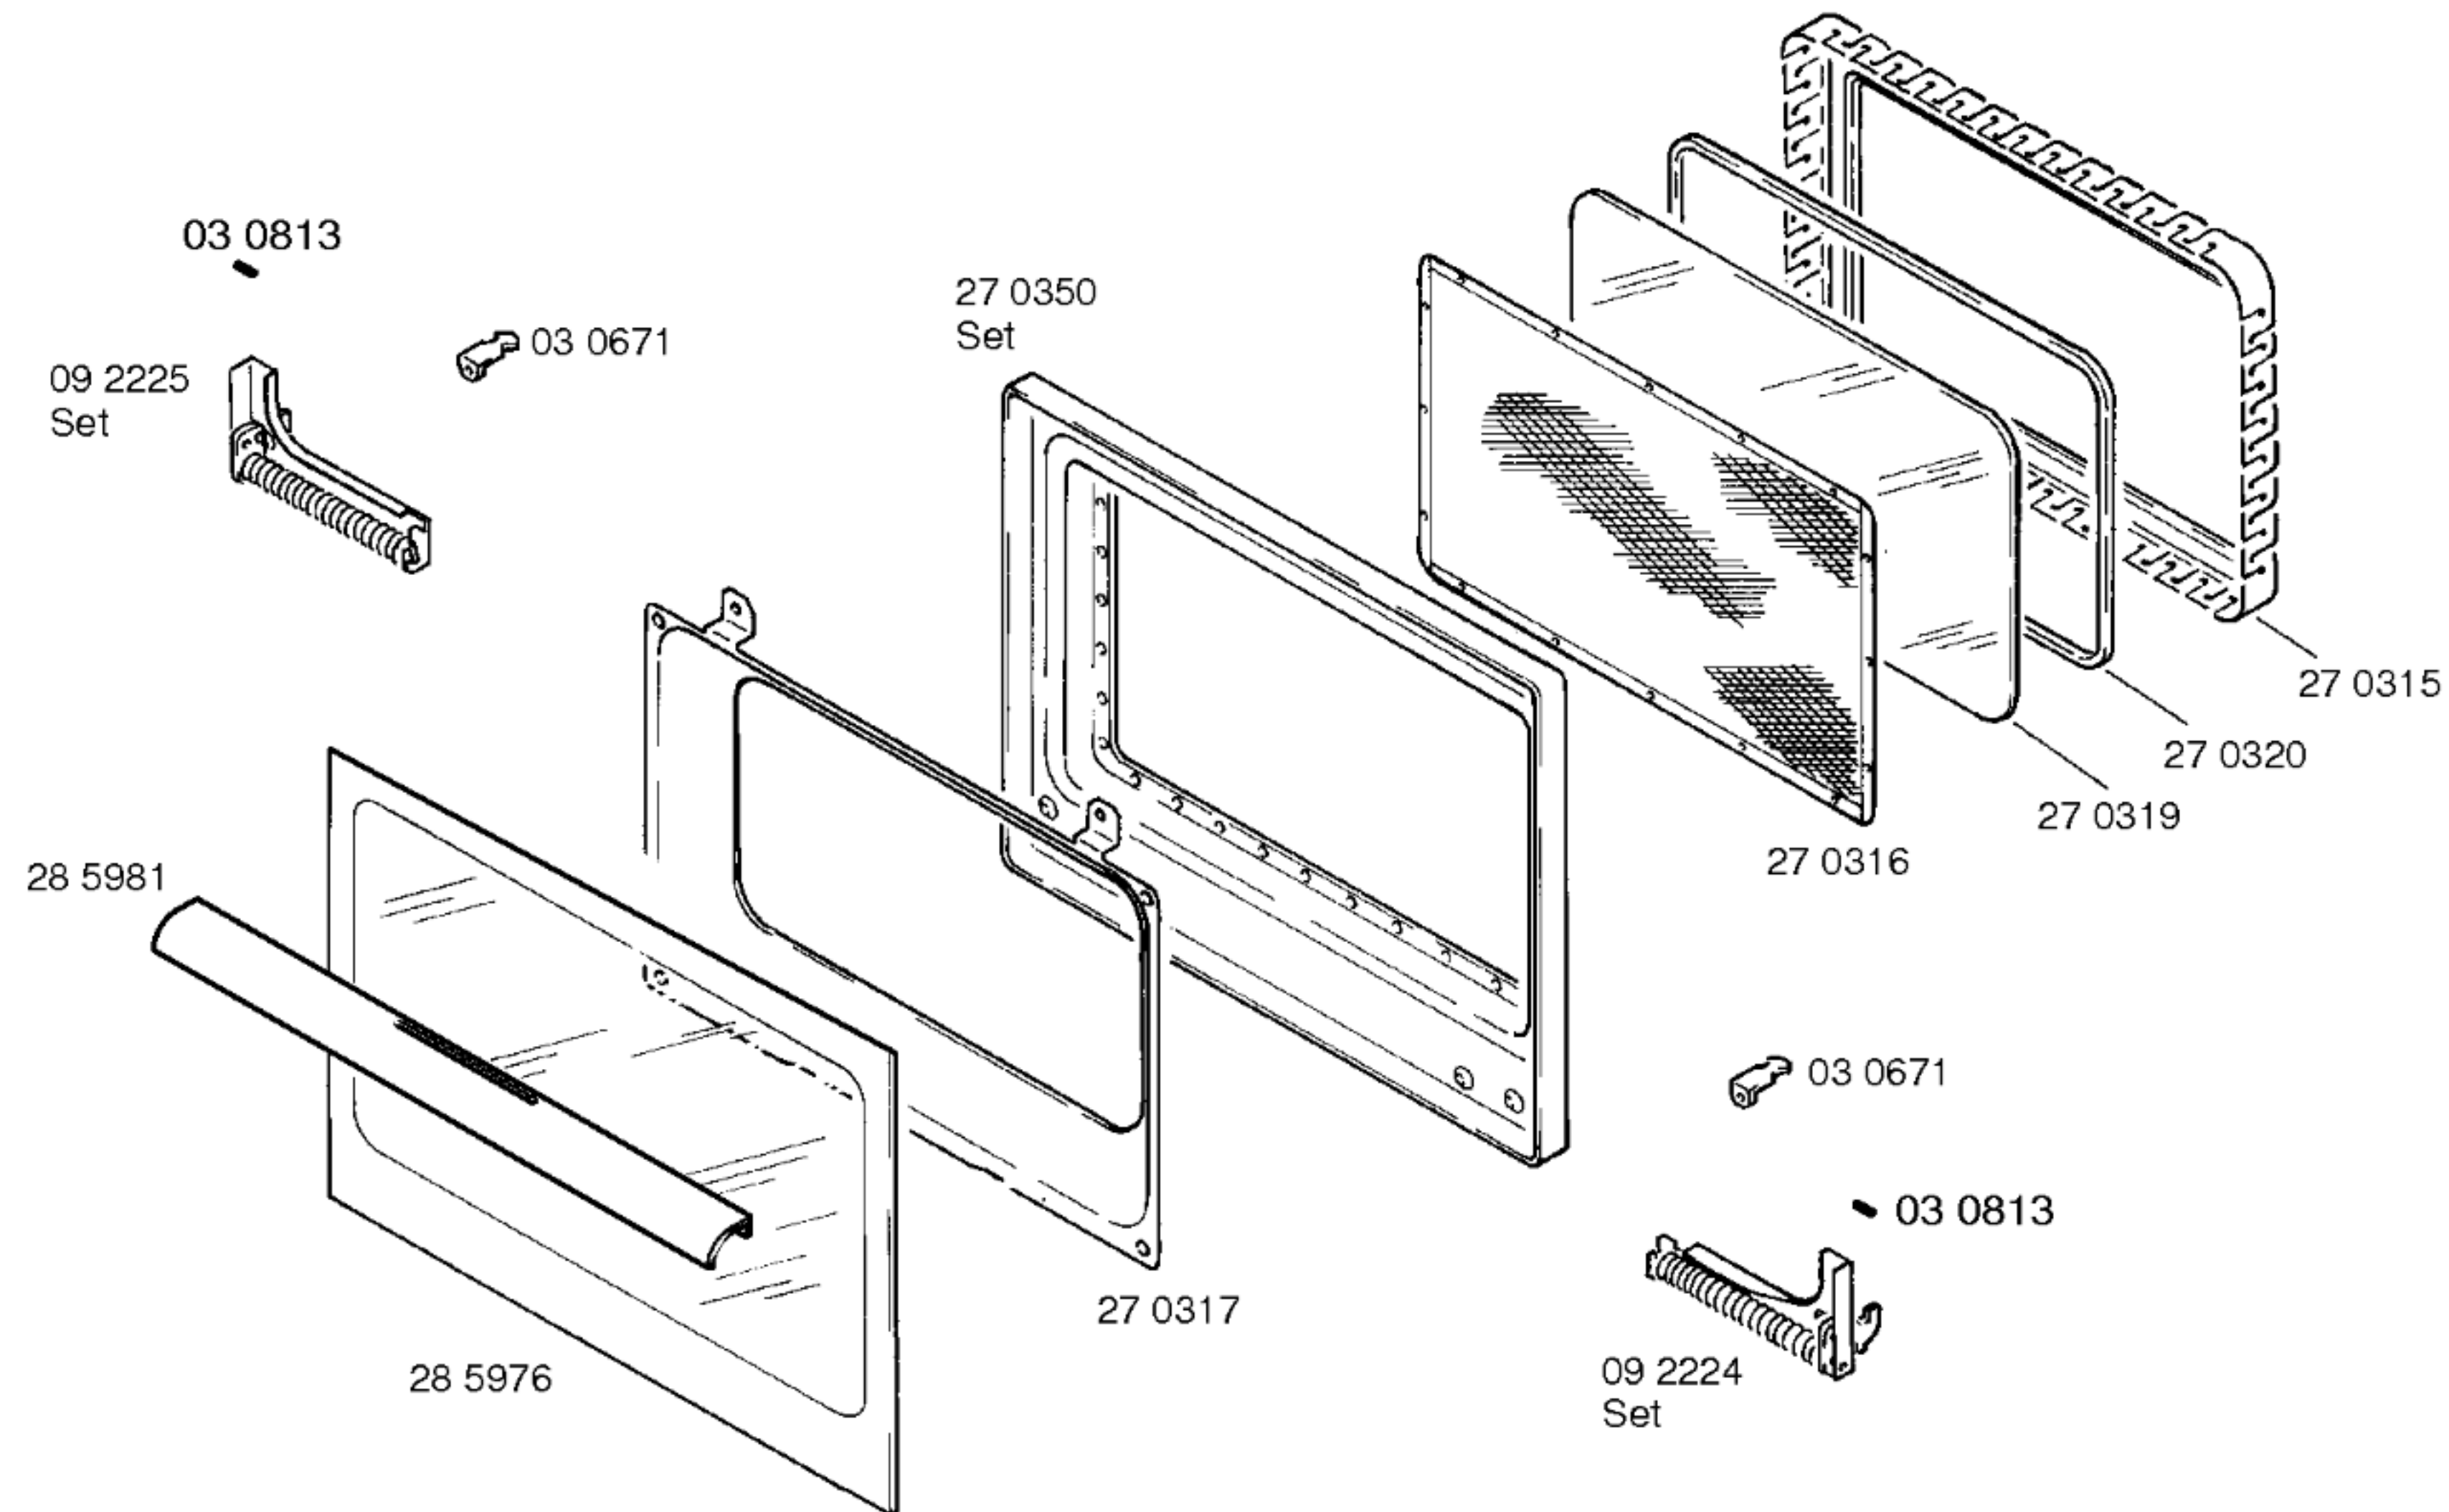

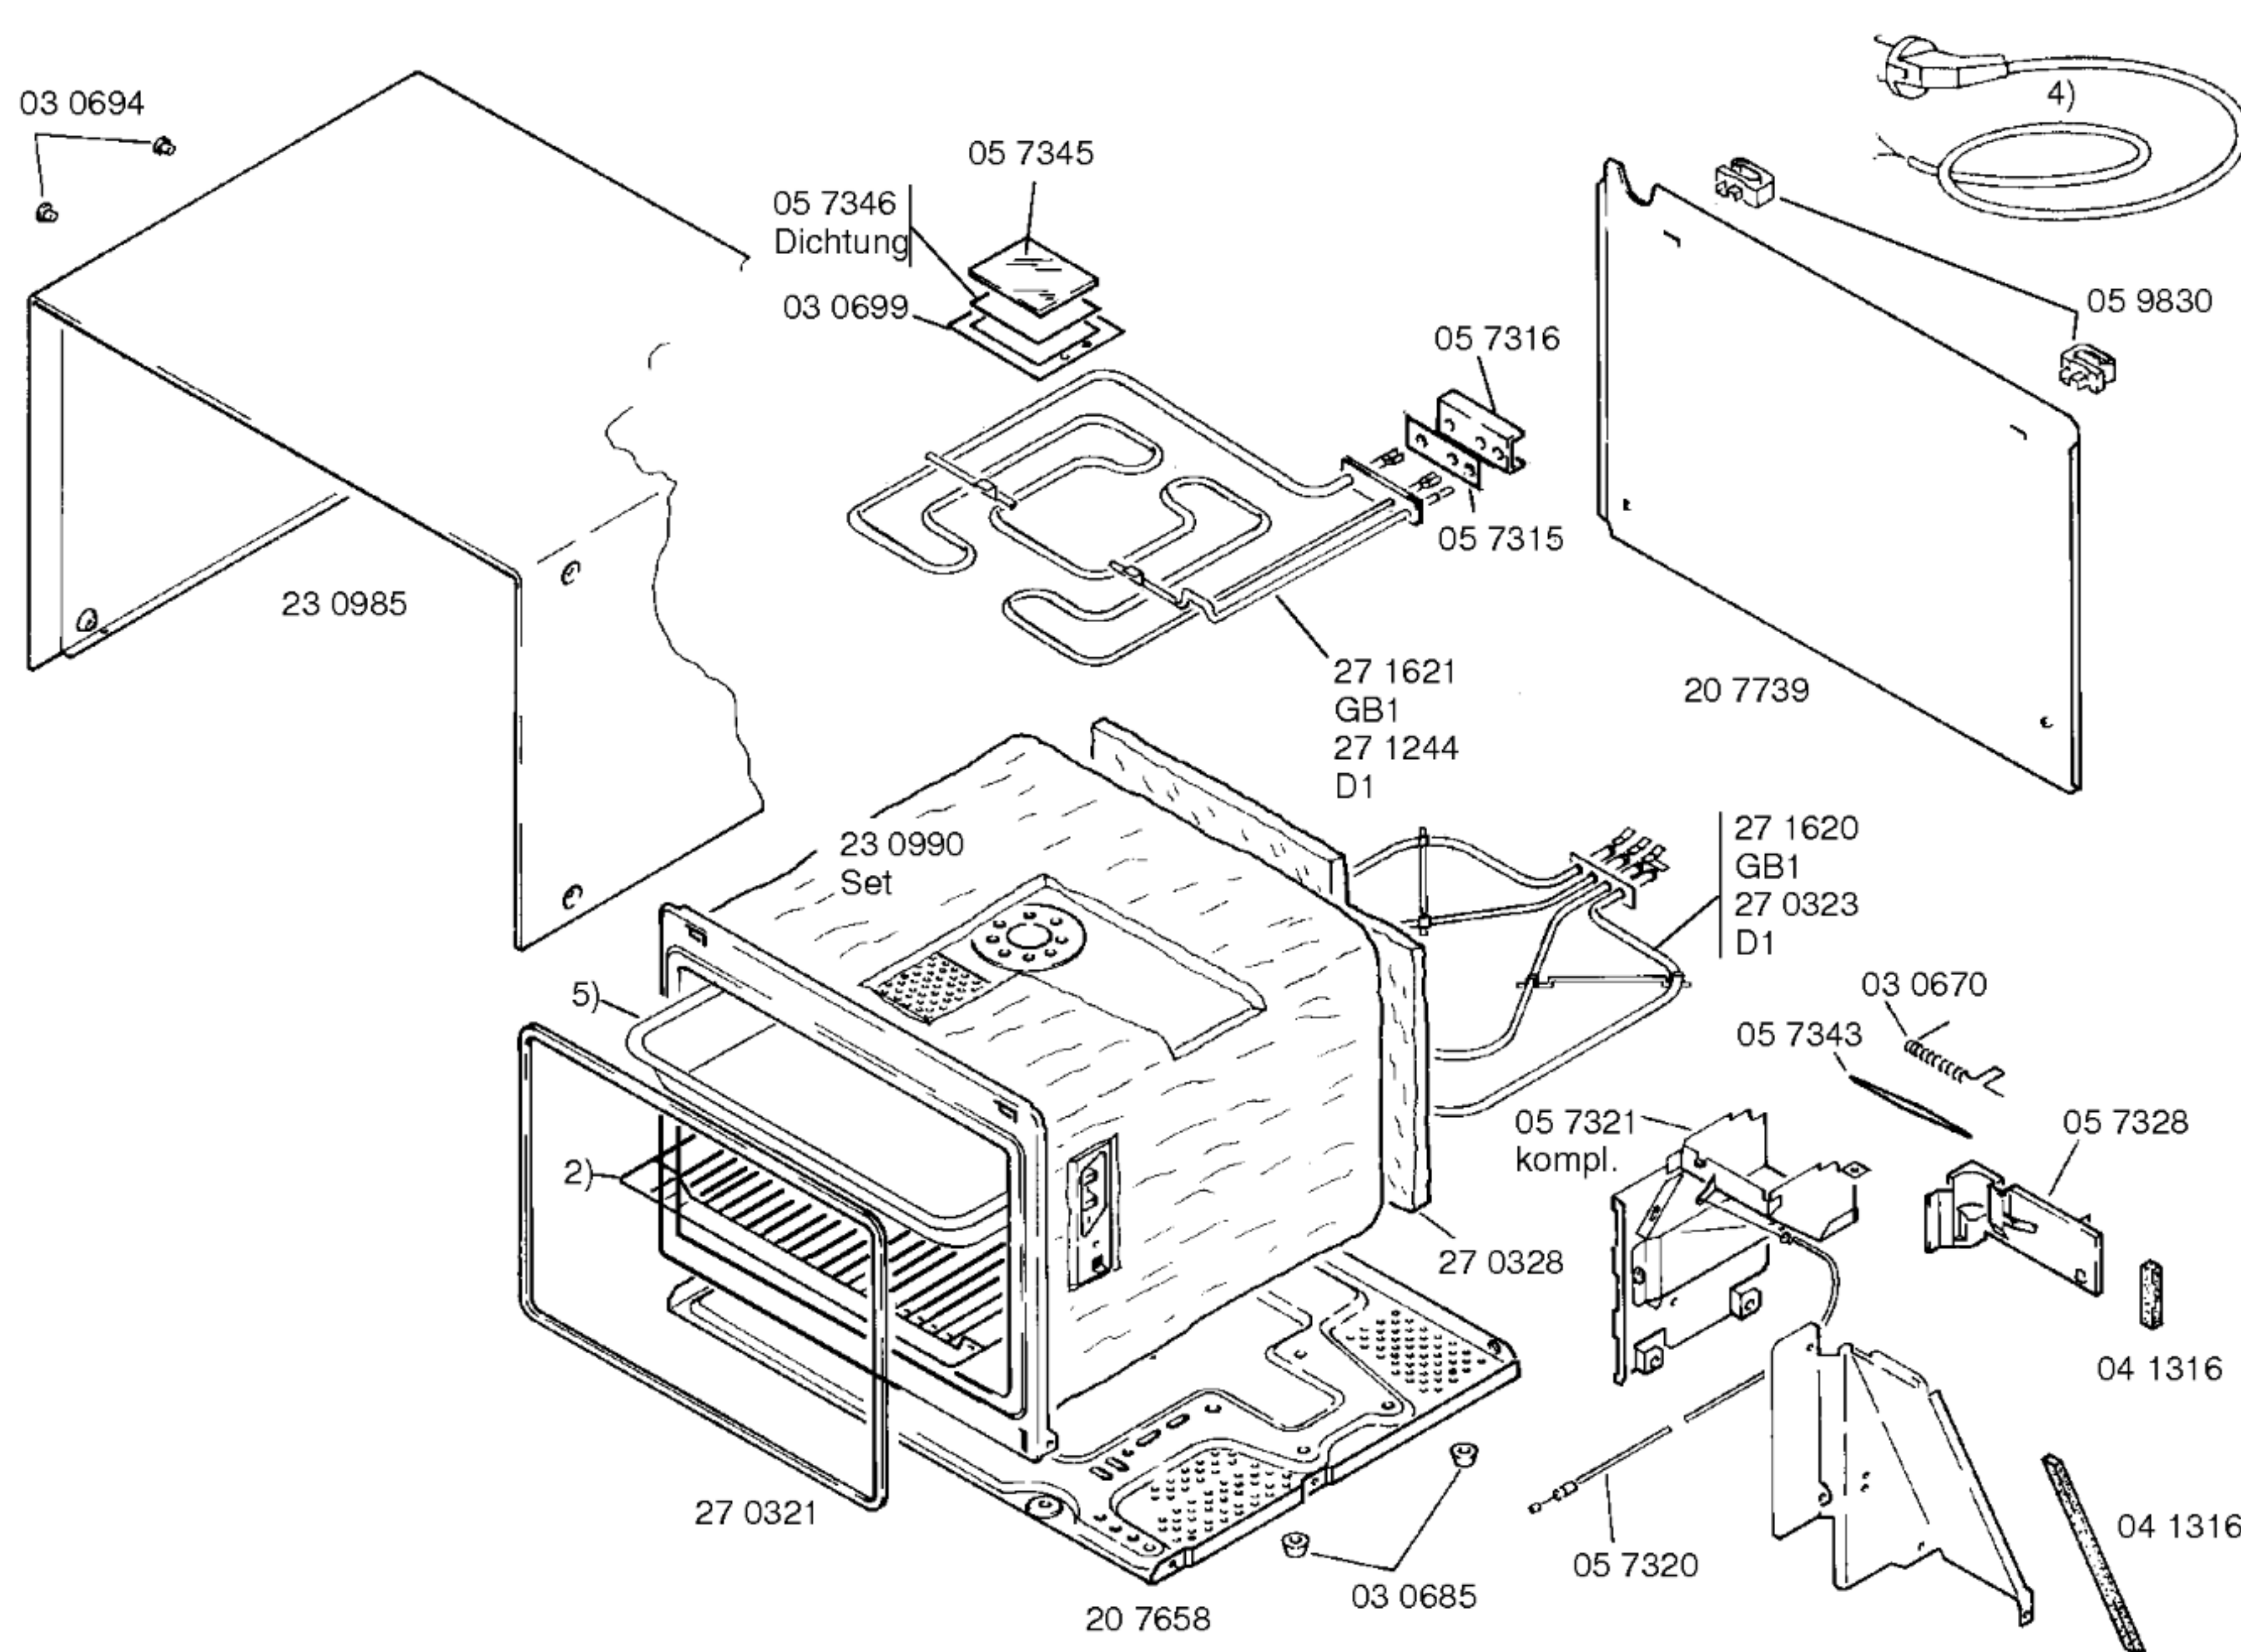

- 2) 11 4539
- 4) 08 8694
D1
09 2862
GB1
- 5) 27 3844
Kombipfanne
- 02 8732
Anschlag-Backblech

