


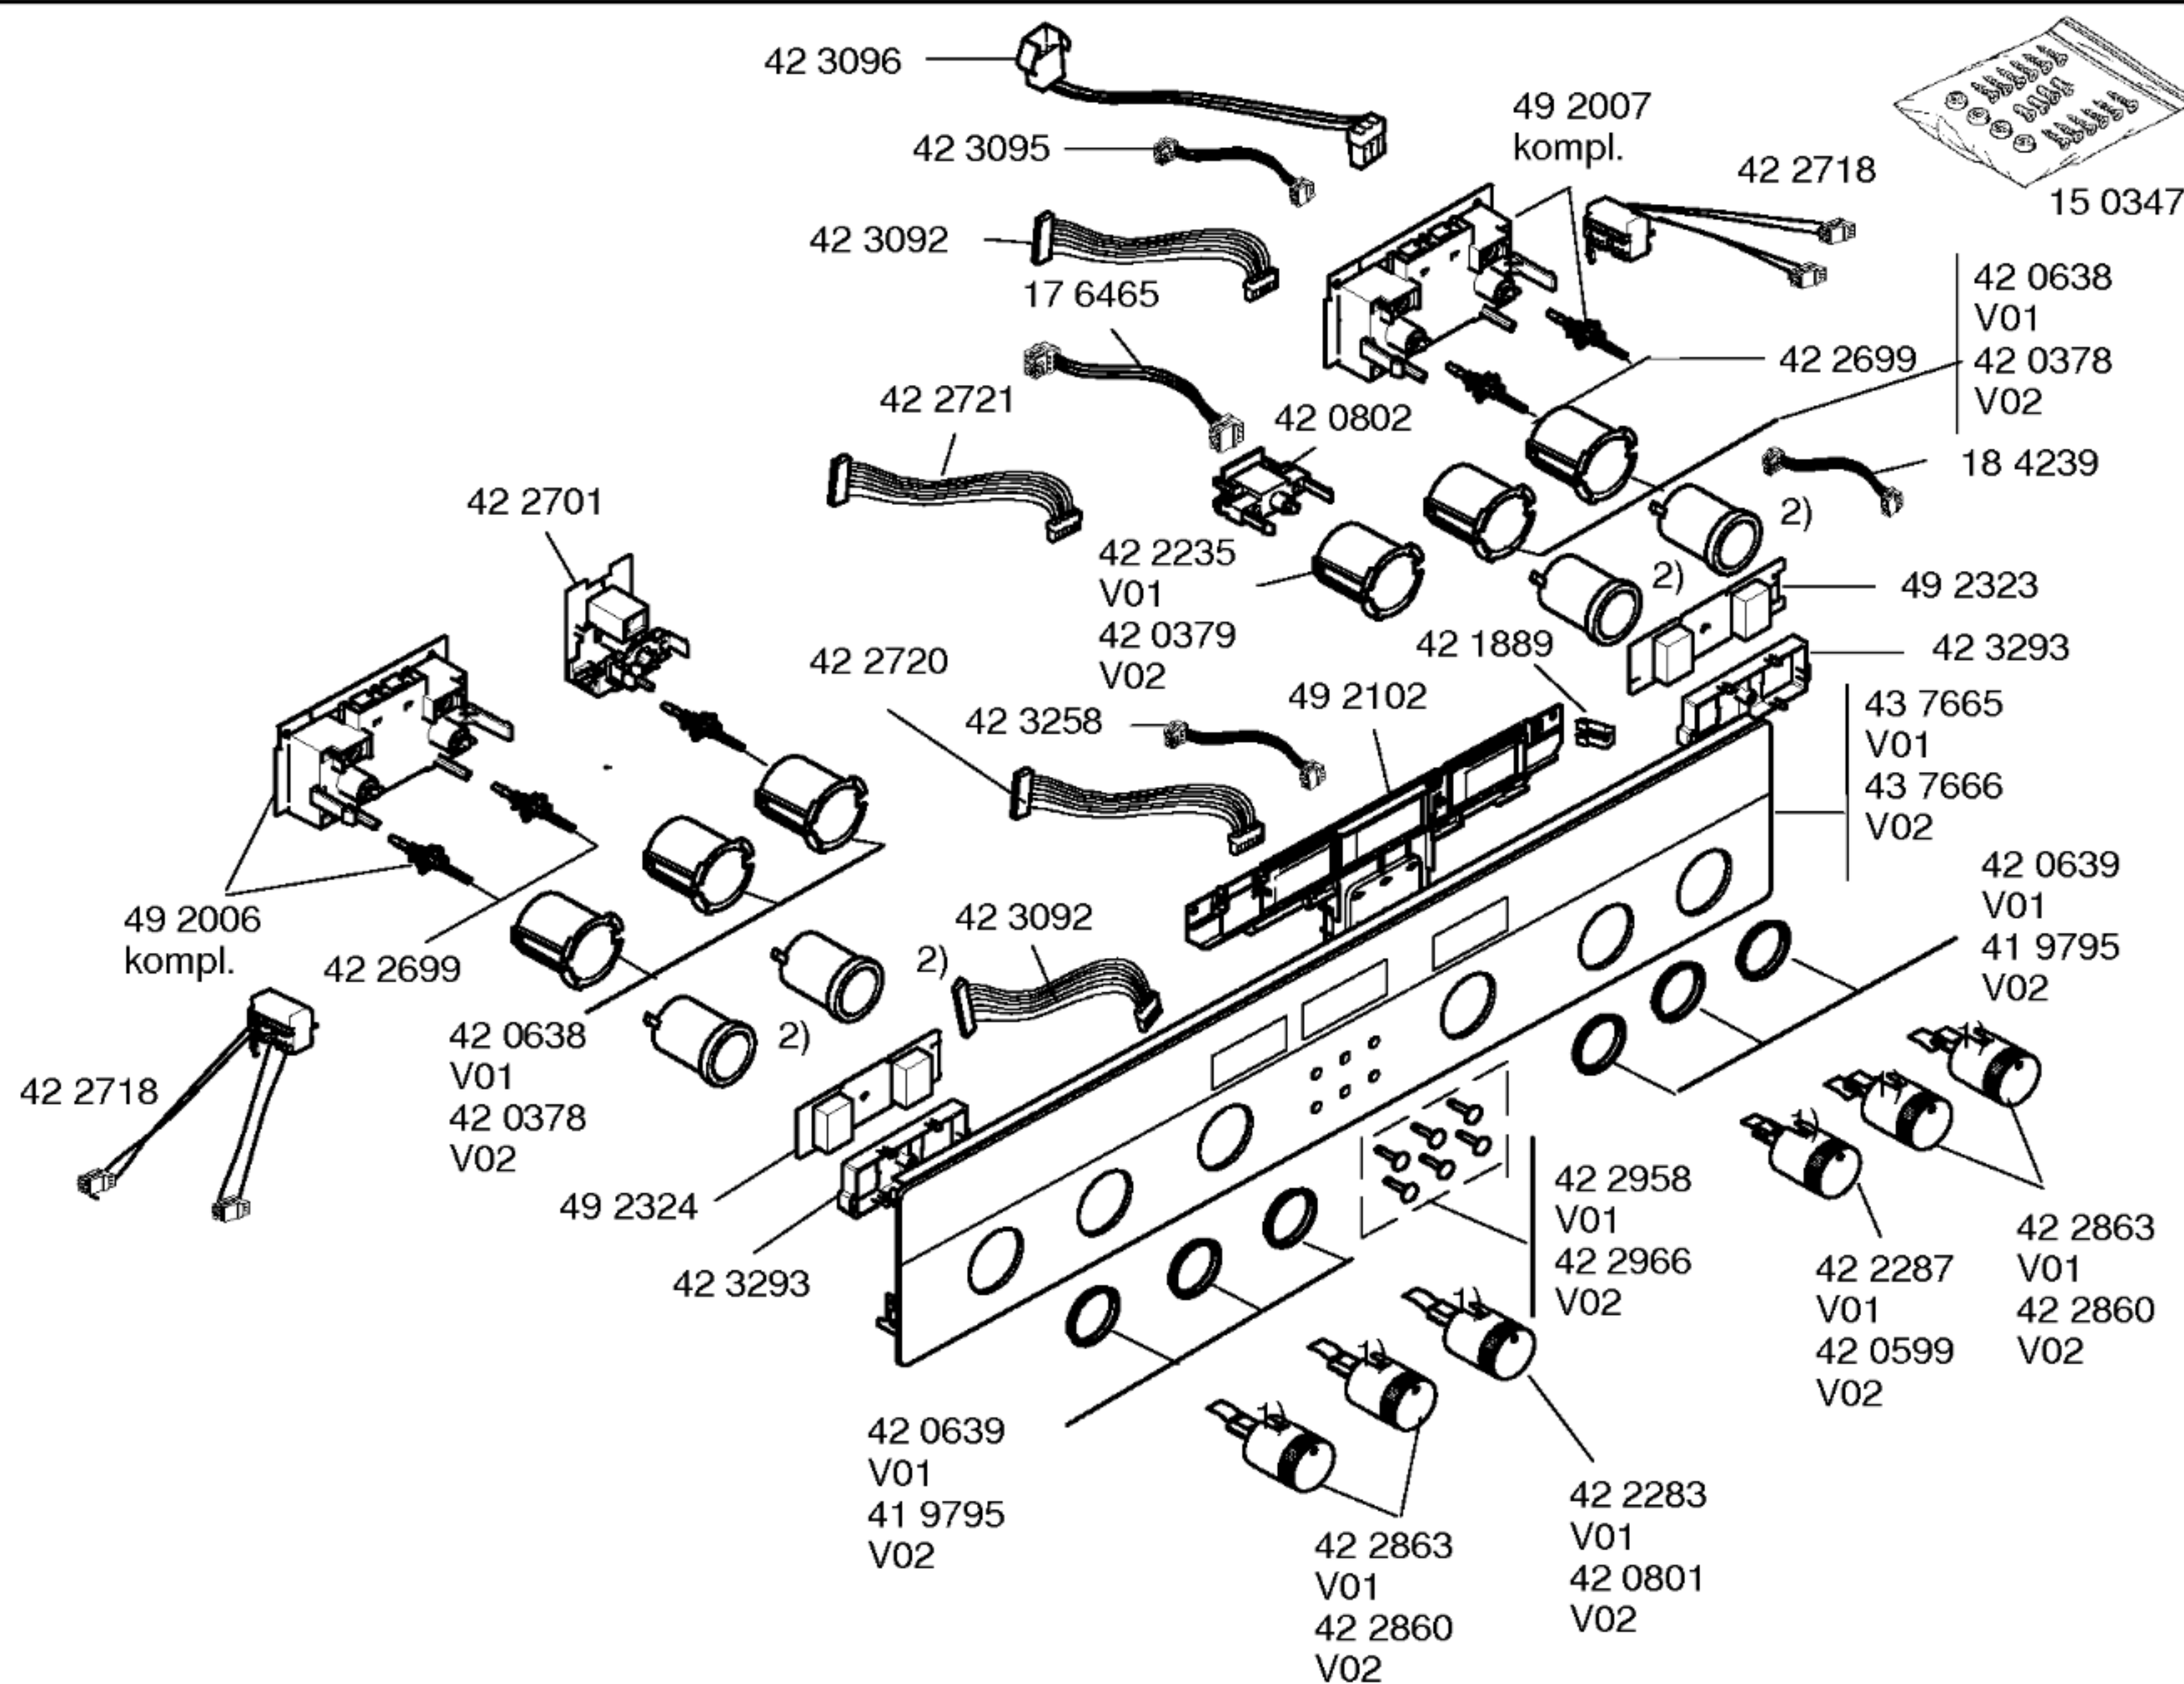

Gebrauchsanweisung  
58 8464 (de)


Infopaket  
58 8272 (de)

Montageanweisung  
58 8262  
(de,en,fr,it,nl,da,sv,no  
fi,es,pt,el,cs,pl,tr,ru)


1) 01 4254  
2) 42 2702

Zubehoer:  
HZ341070  
Backblech emailliert  
HZ341010  
Backblech Antihft  
HZ342070  
Universalpfanne  
HZ342010  
Universalpfanne  
Antihft  
HZ343070  
Profipfanne  
HZ333001  
Deckel f. Profipfanne  
HZ324000  
Kombirost  
HZ344000  
Einlegerost  
HZ325070  
Grillblech 2-teilig




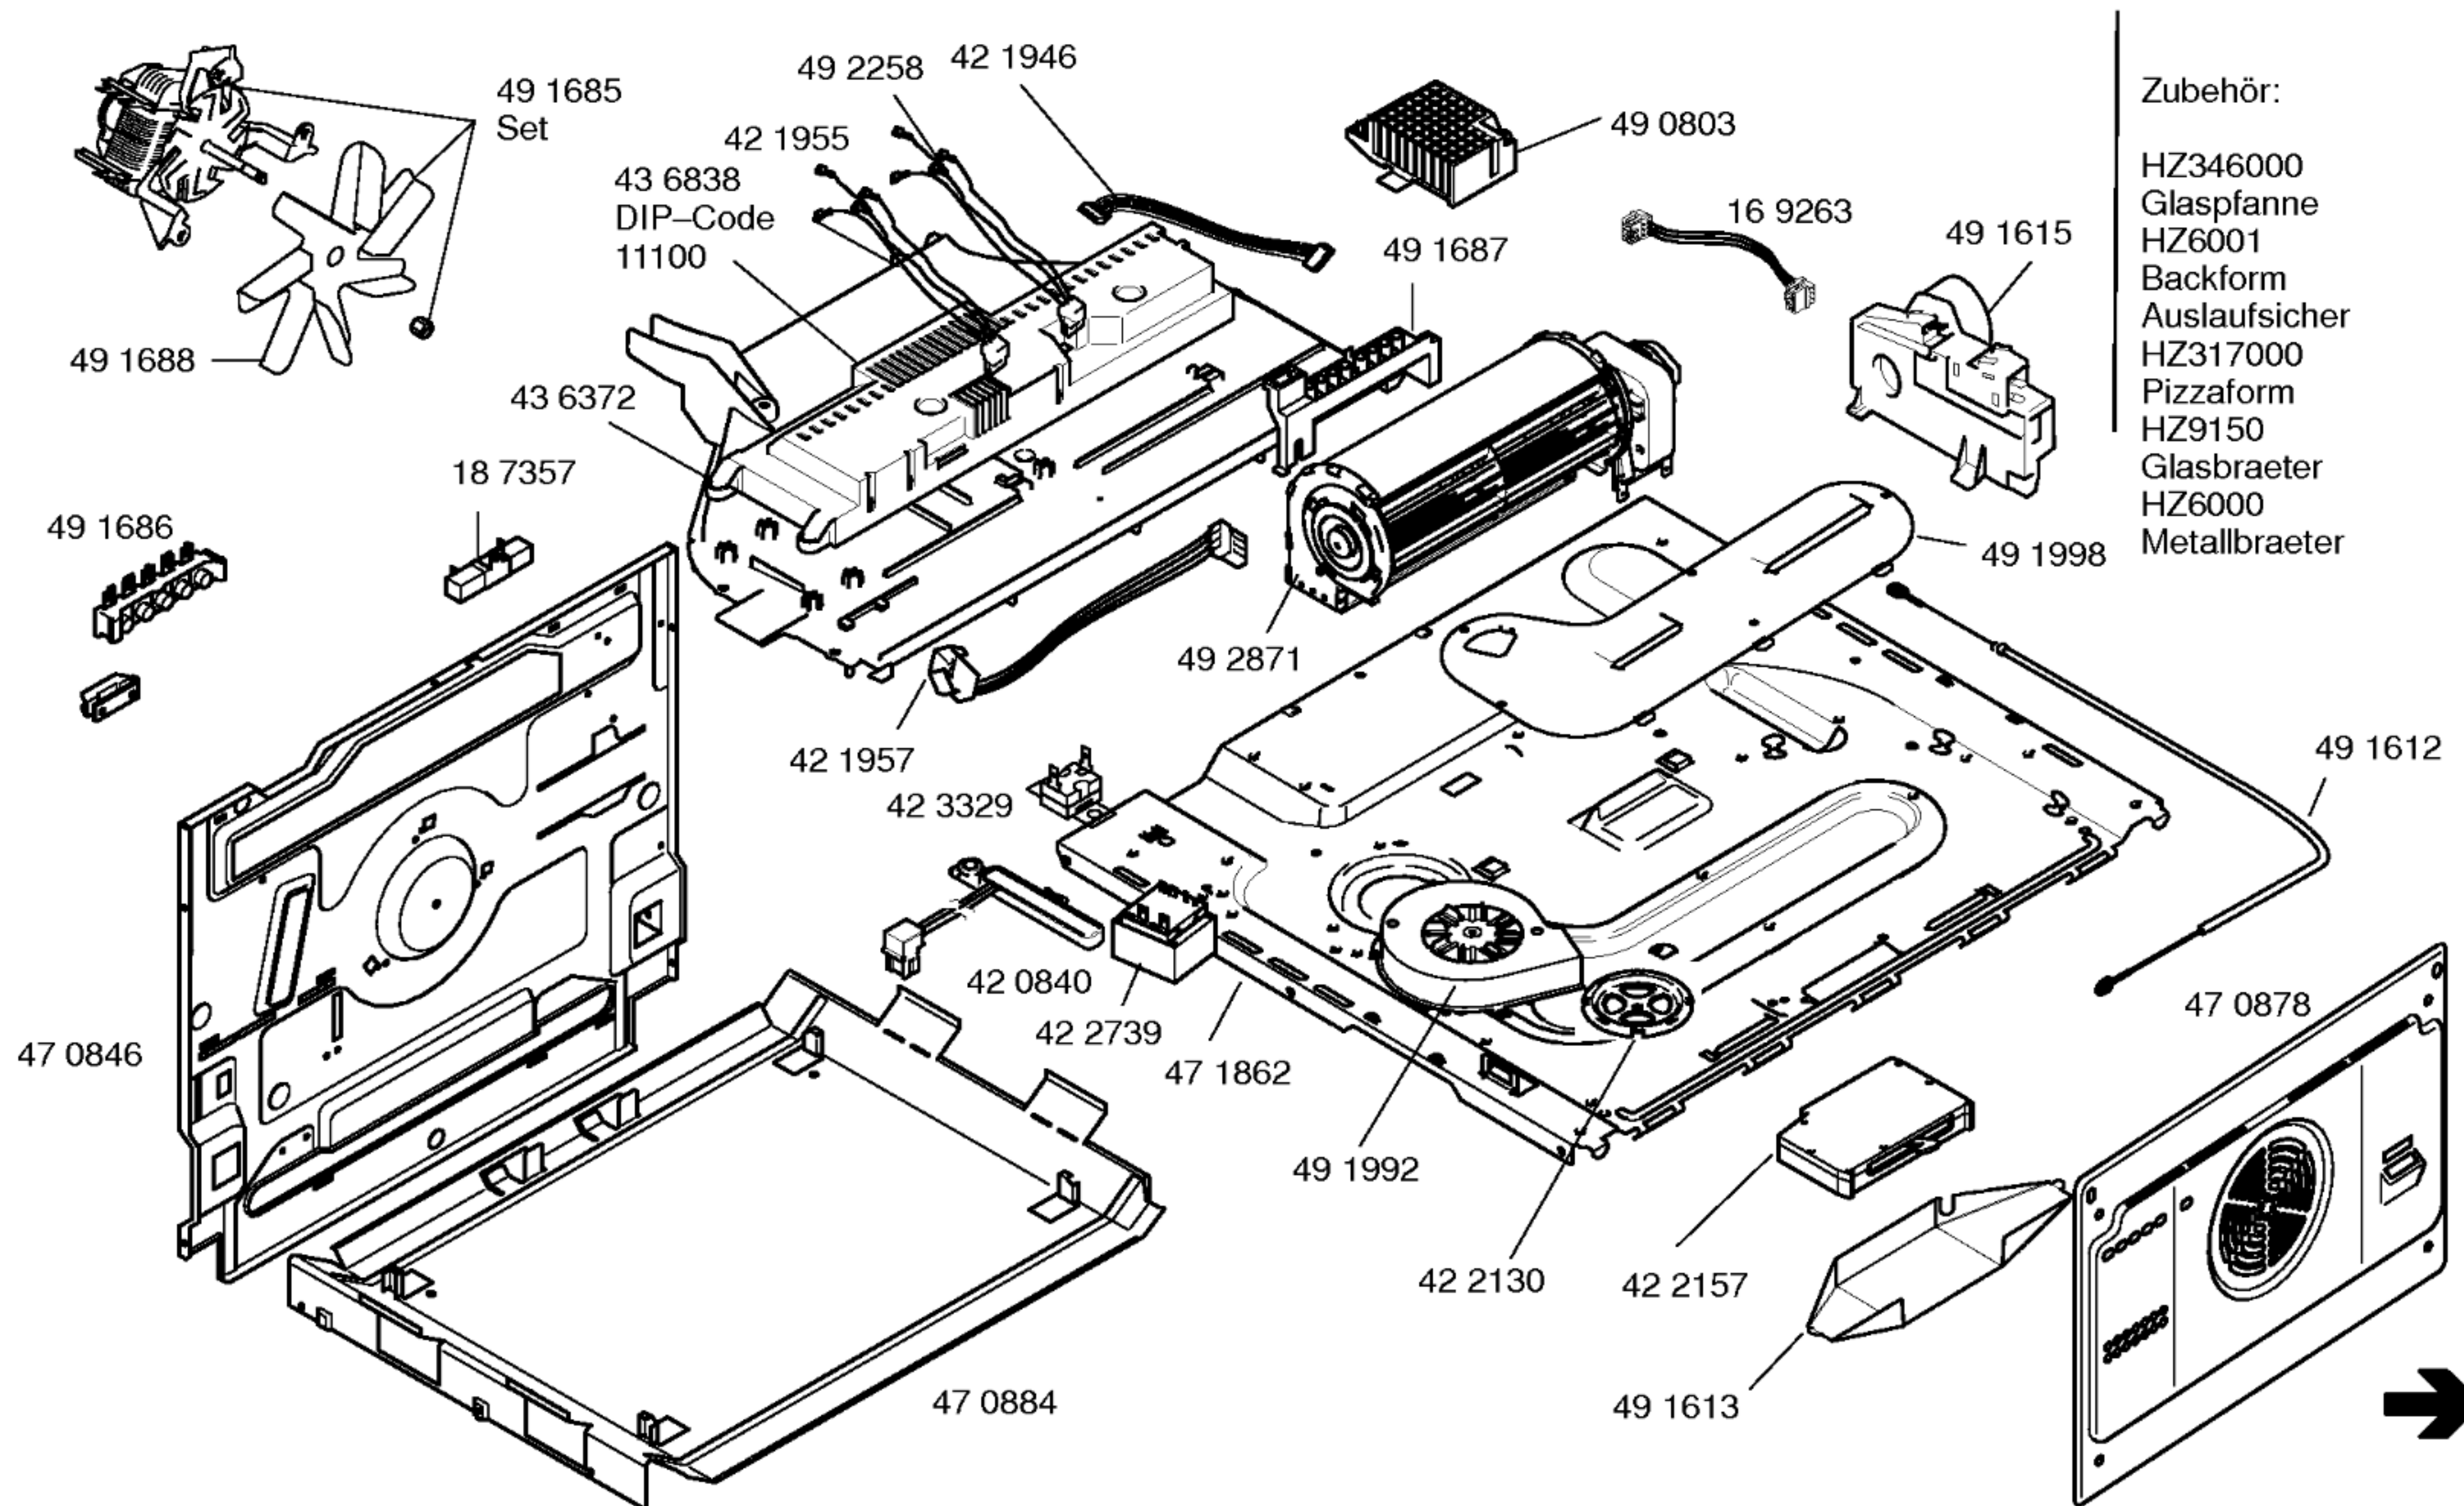



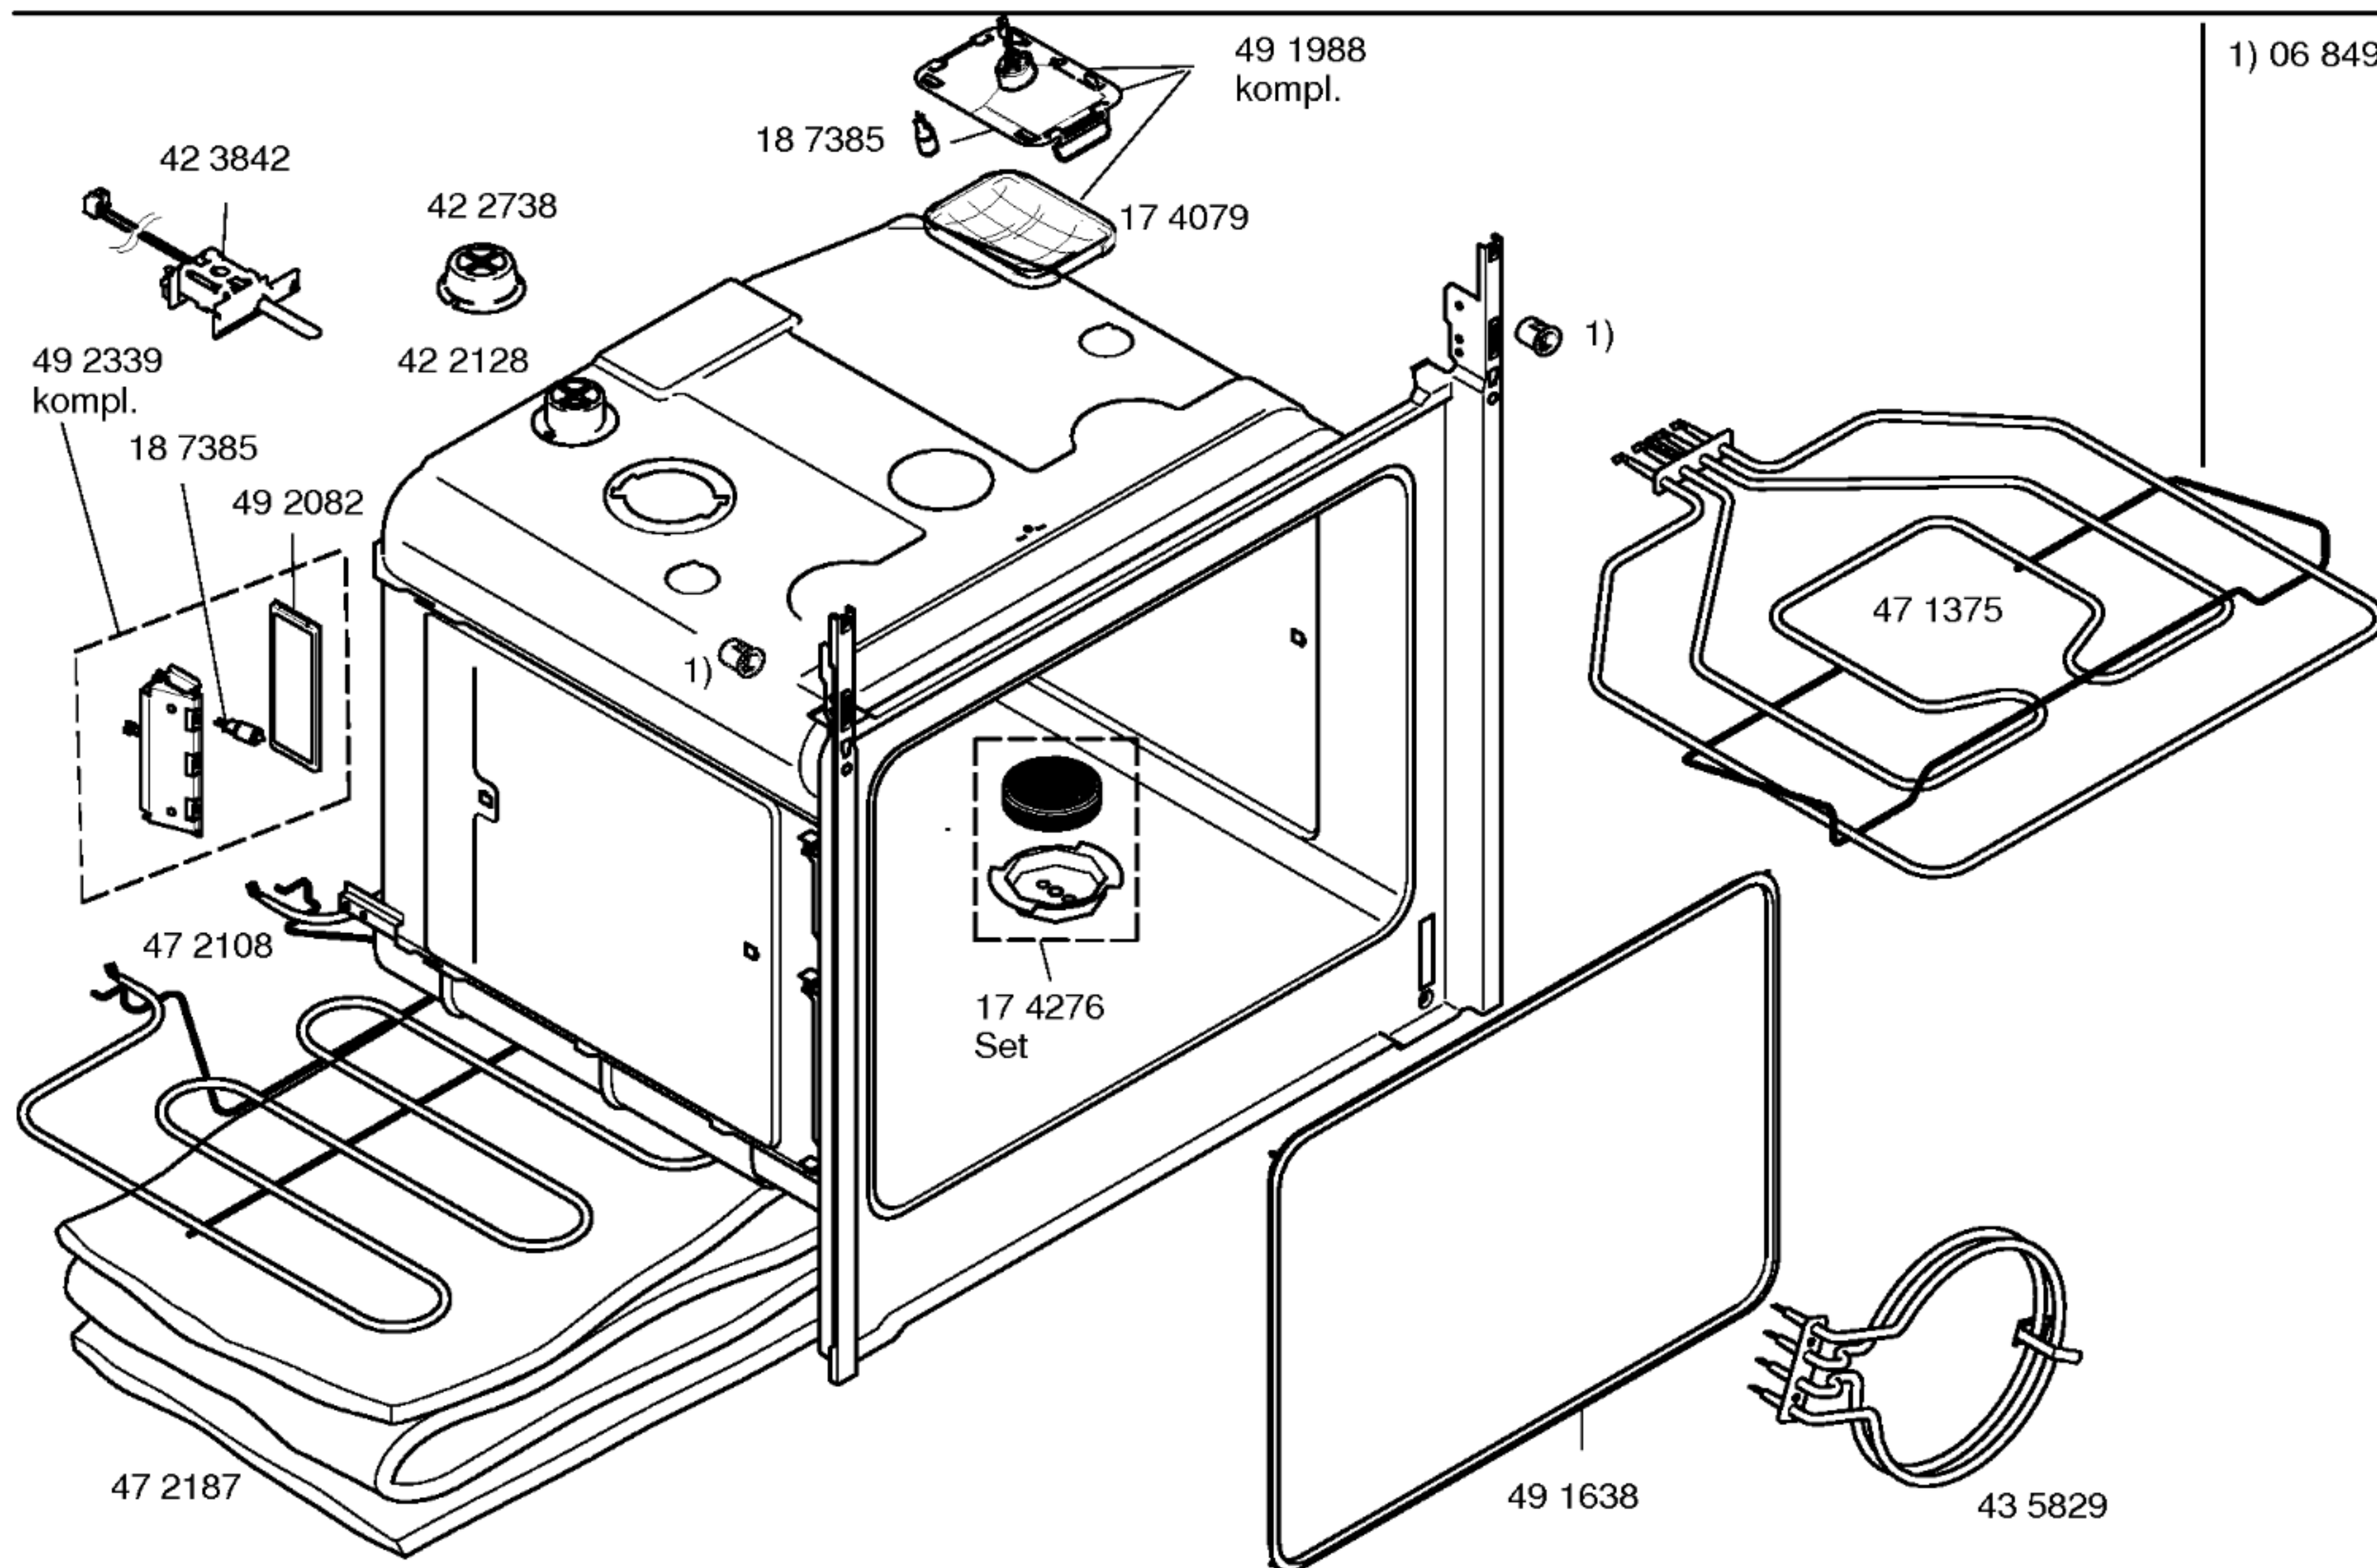



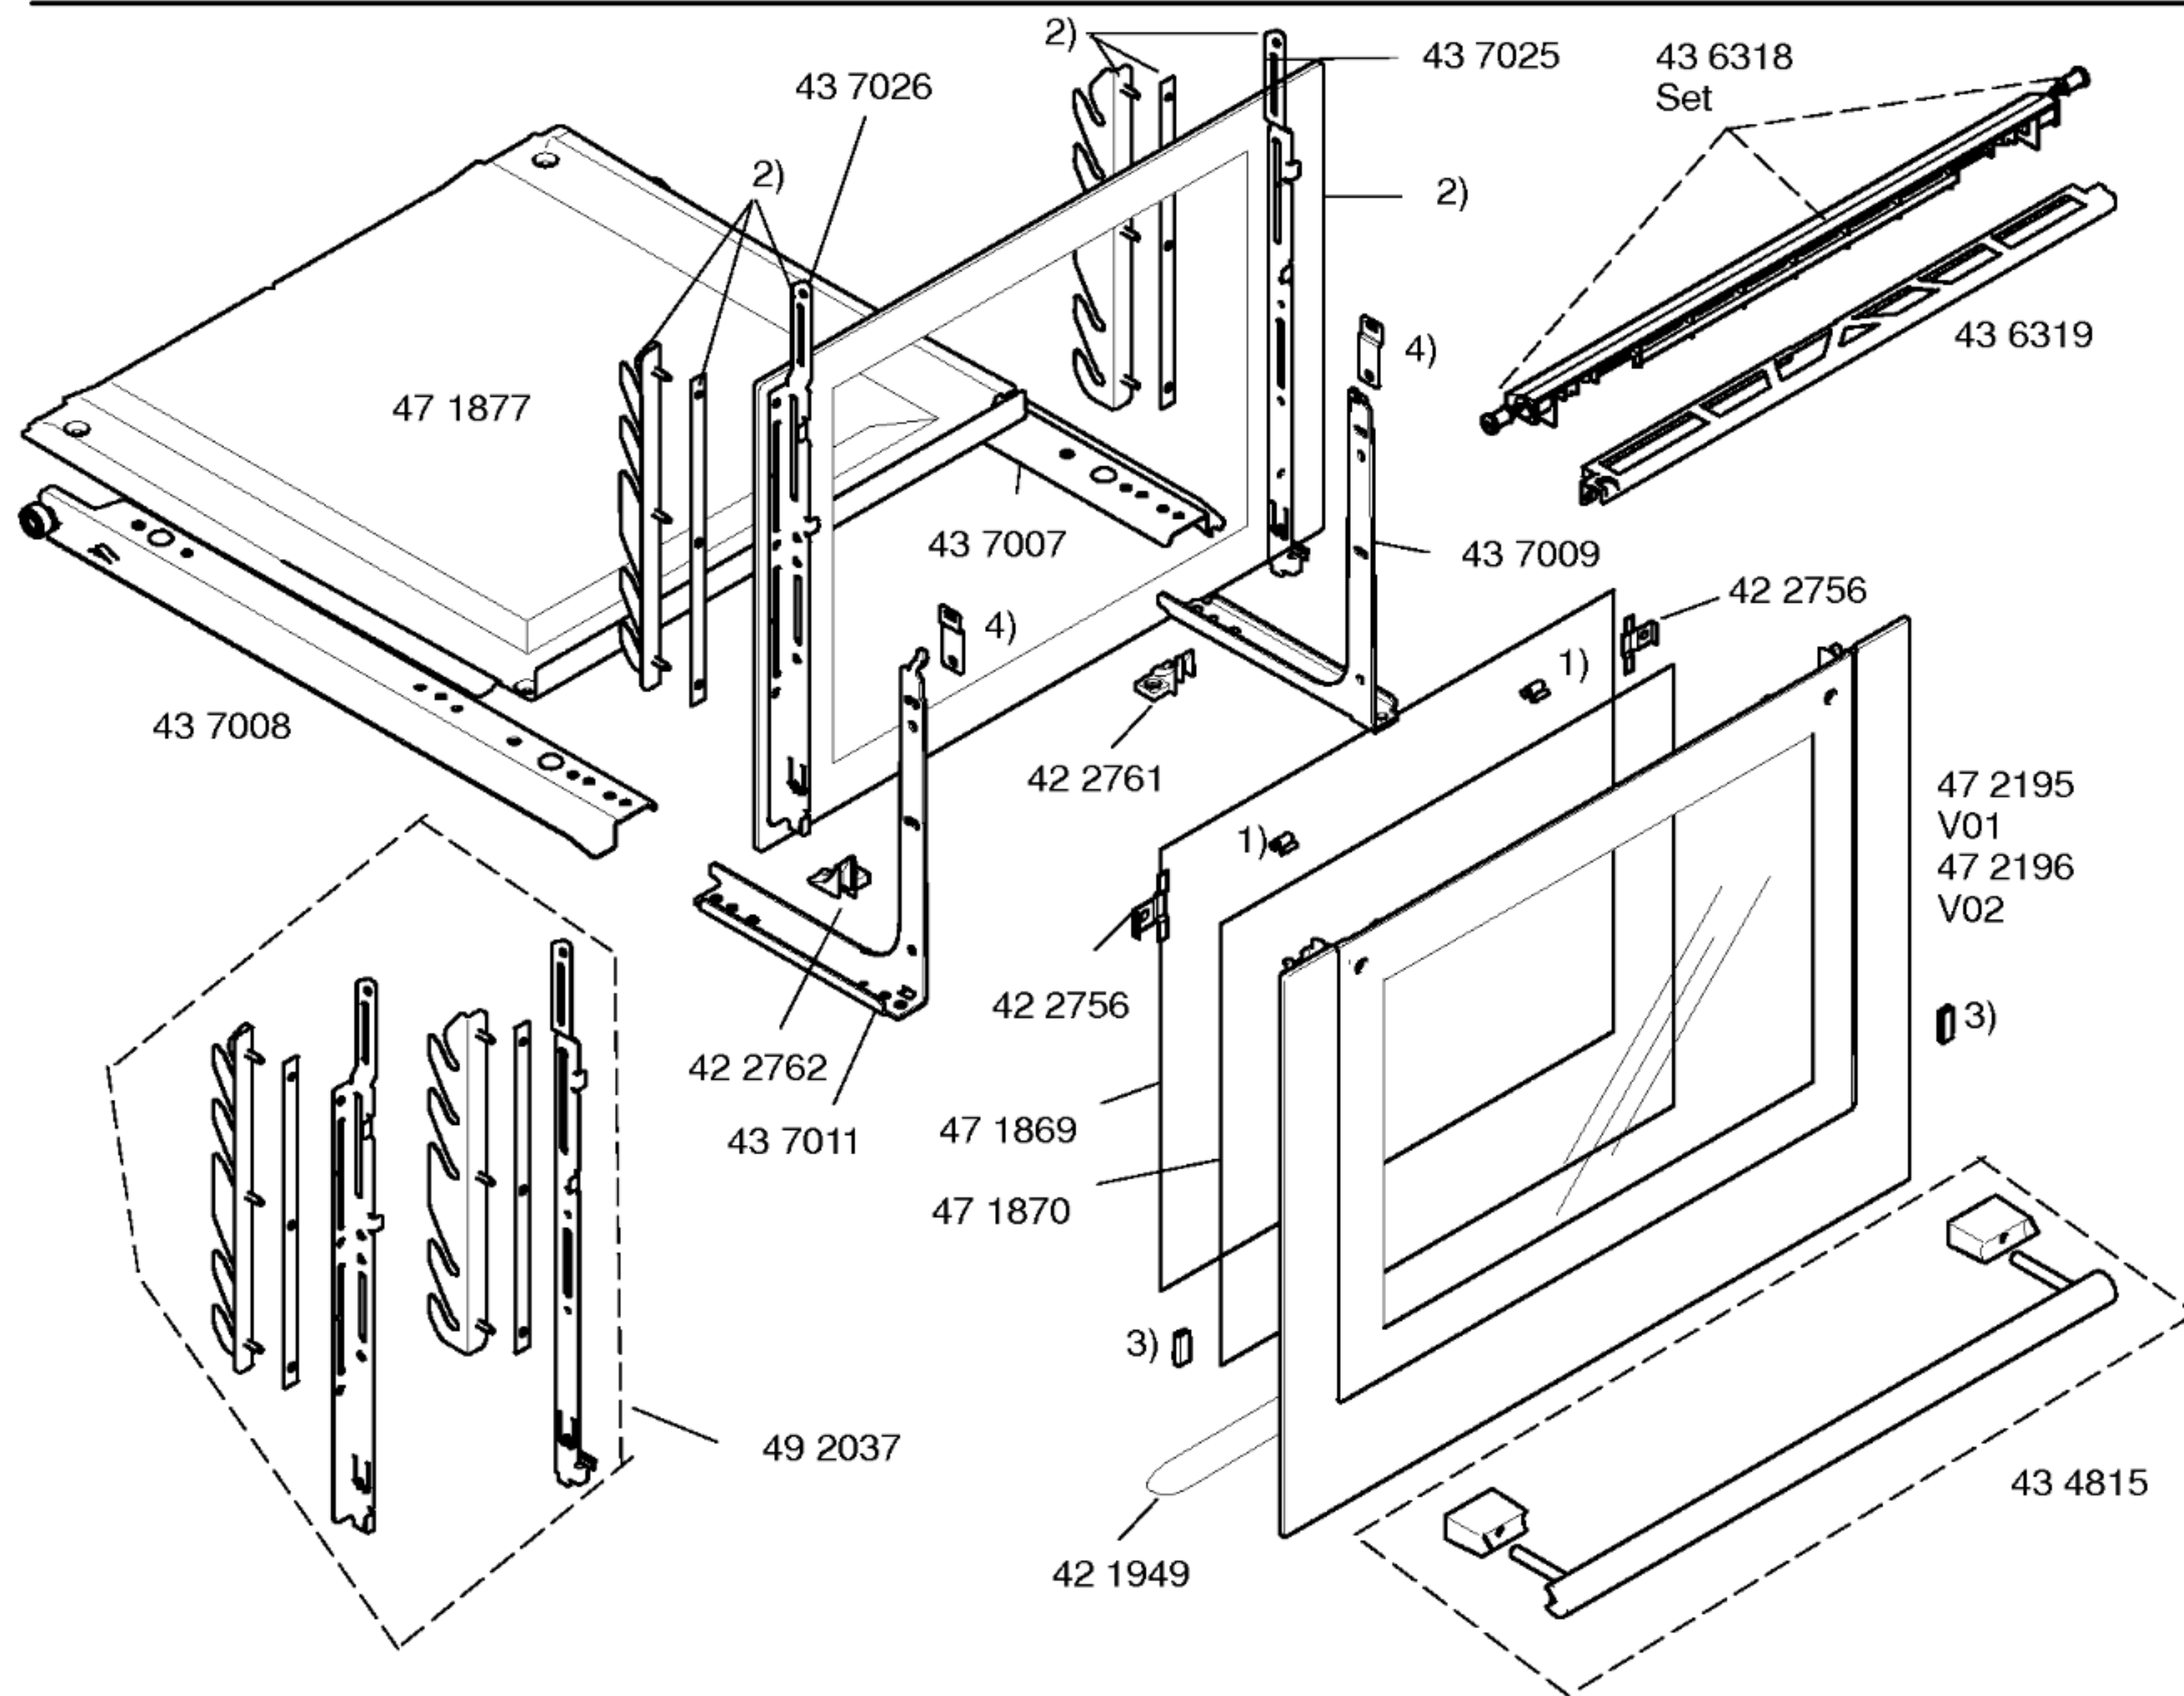

- 1) 42 2707
- 2) 47 1936
- 3) 42 2755
- 4) 42 2747

