
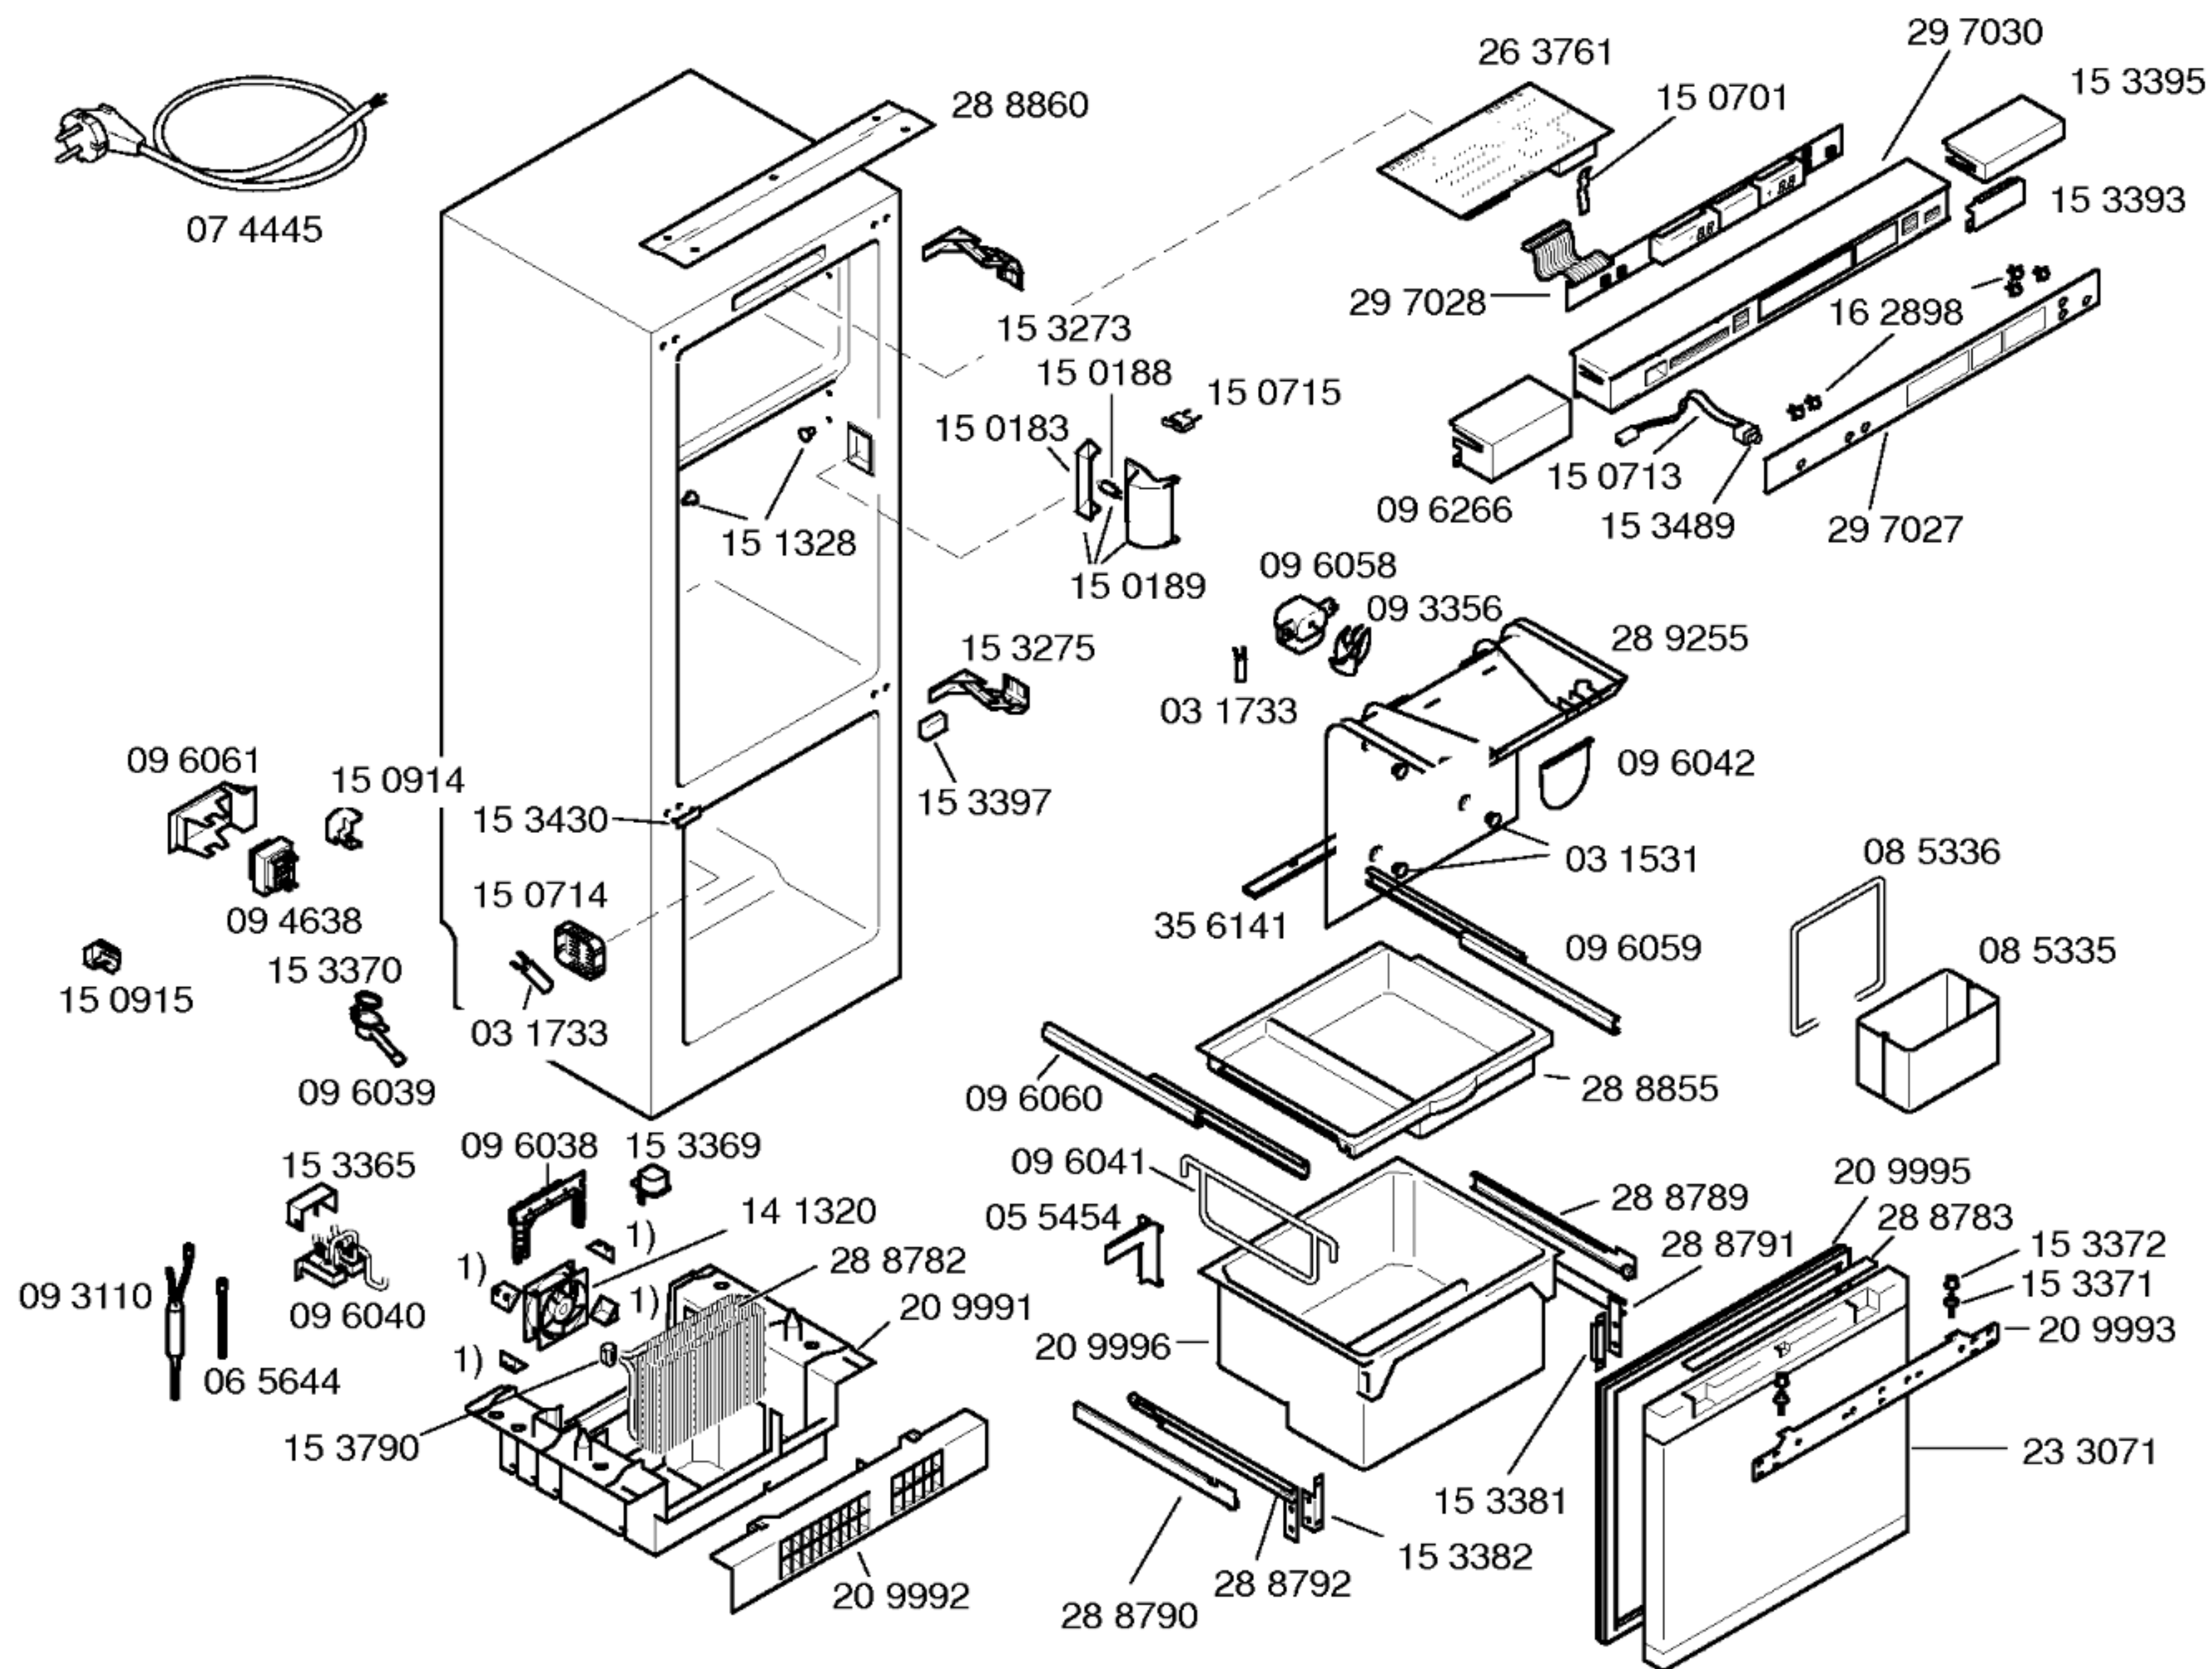


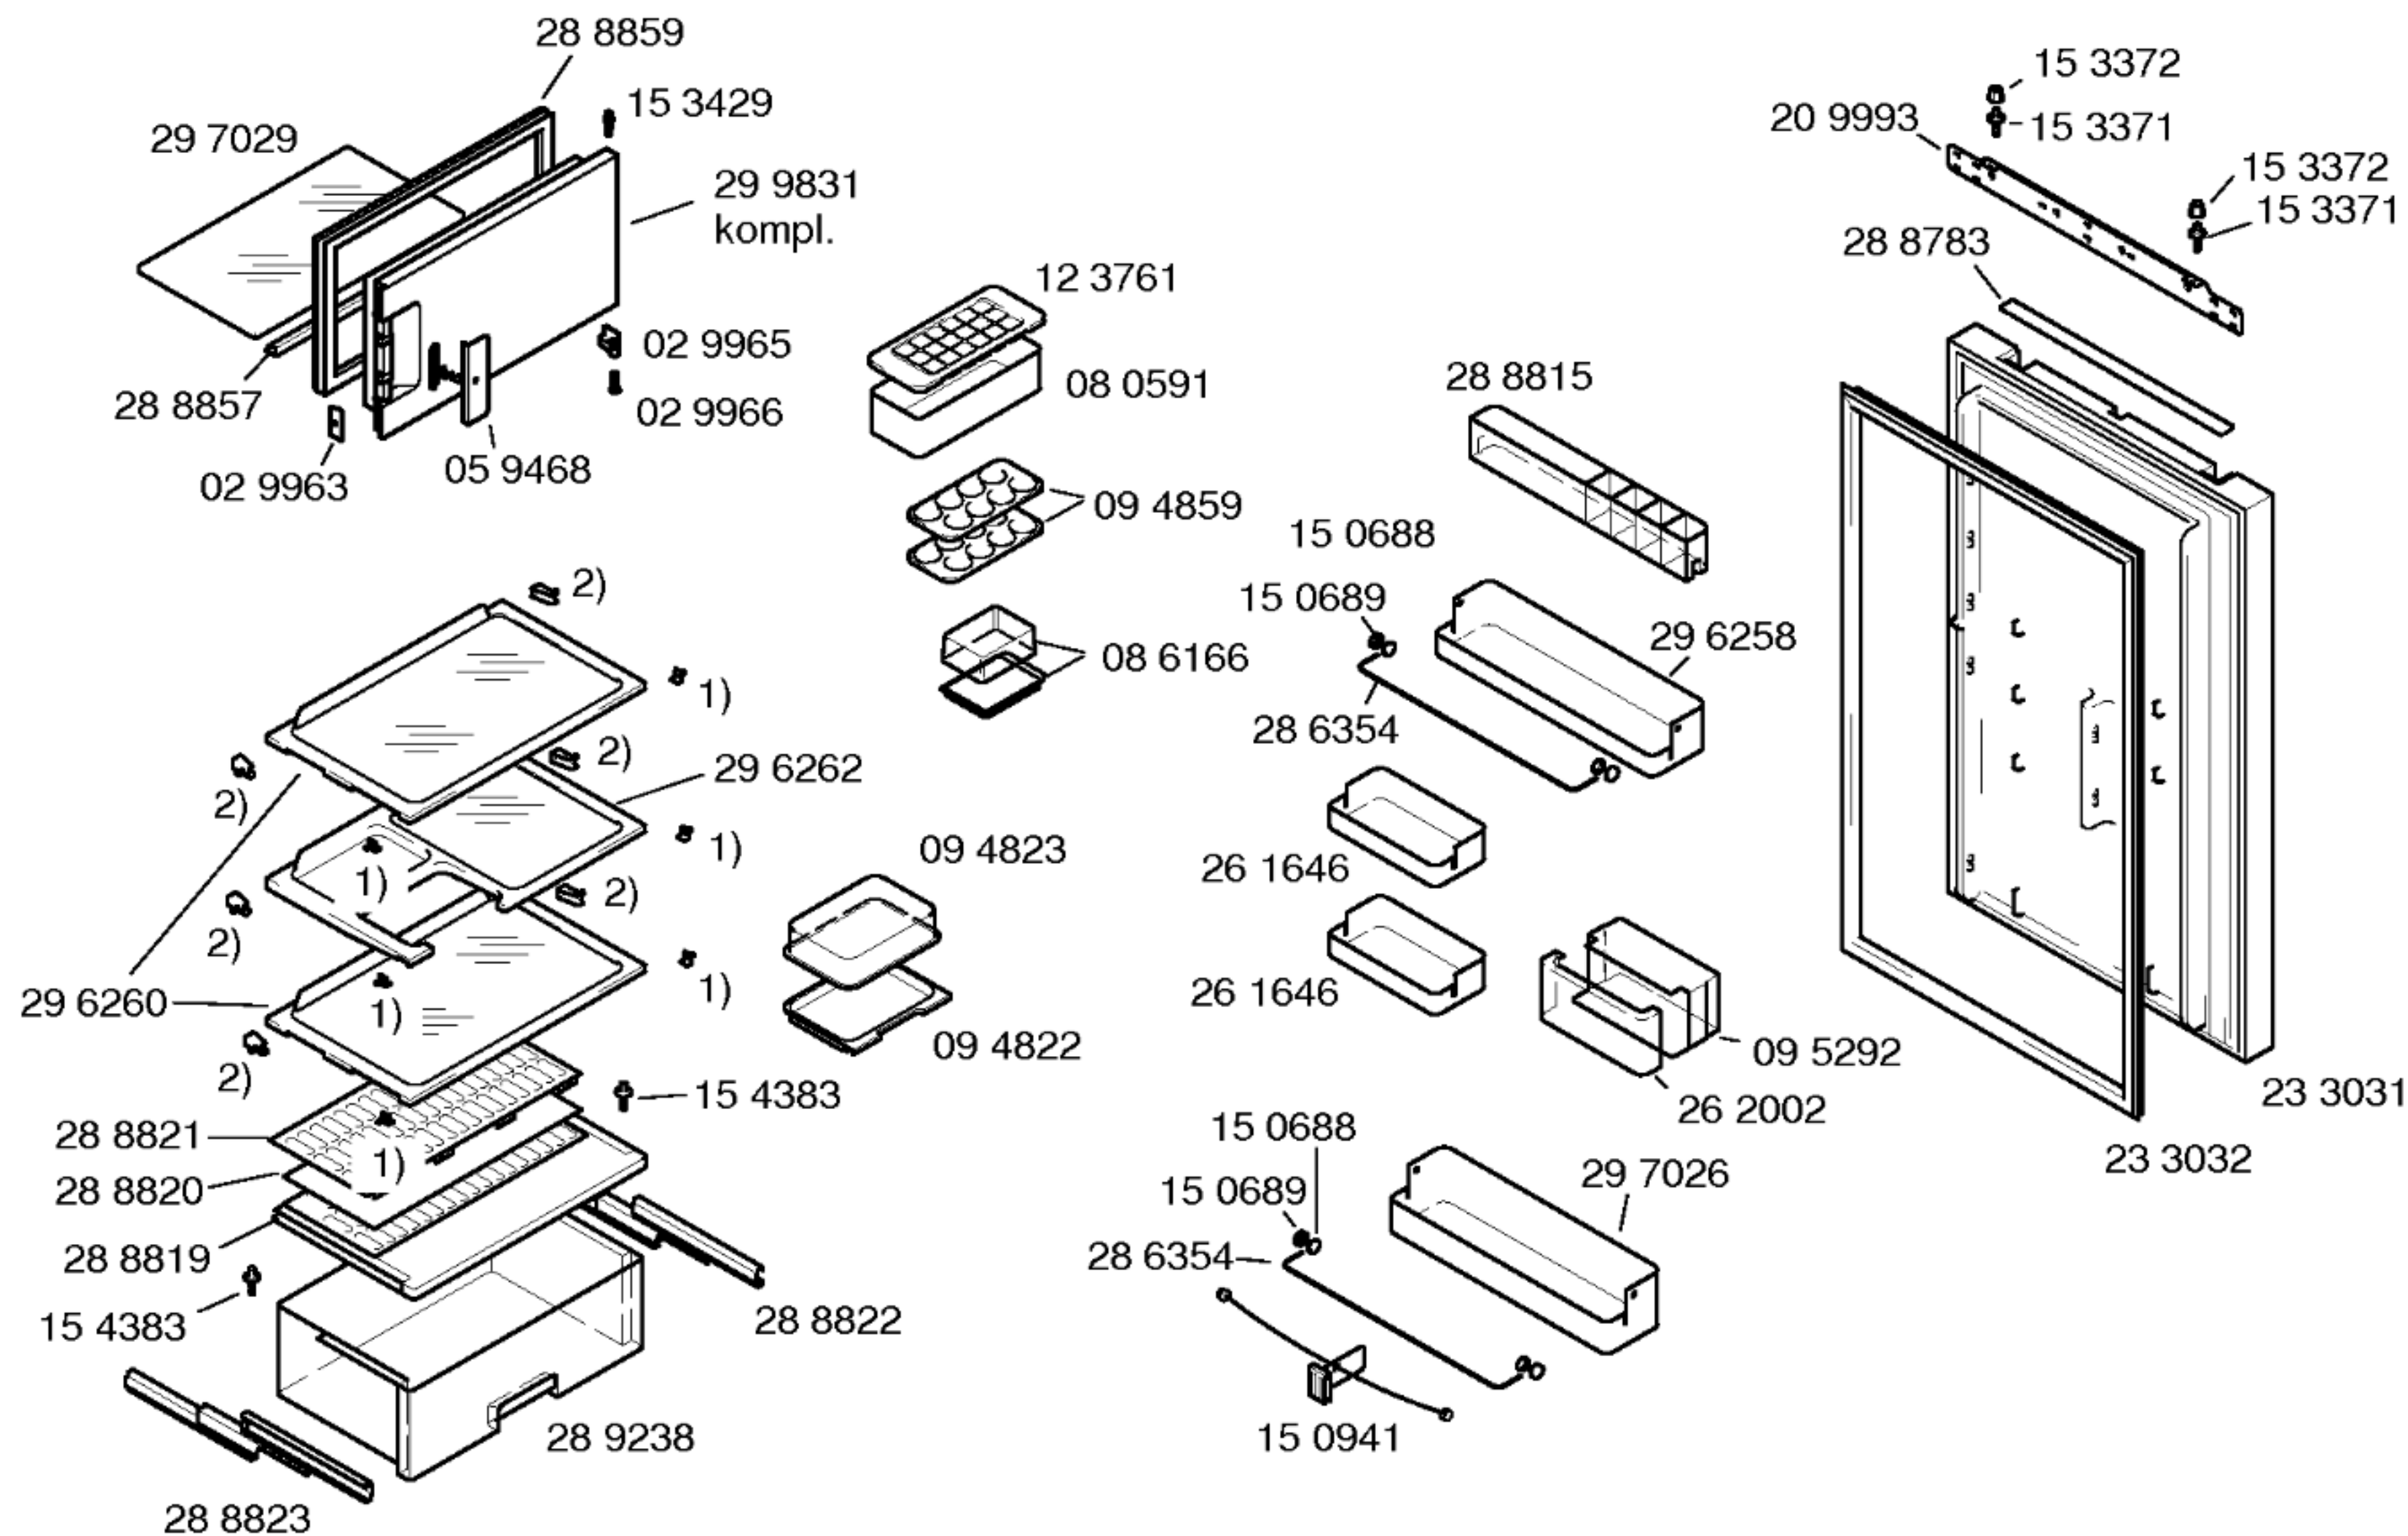


Gebrauchsanweisung
 51 9945
 Montageanleitung
 51 7888

Befestigungssatz
 09 6062

1) 15 3368


 1) 15 0692
 2) 15 3441

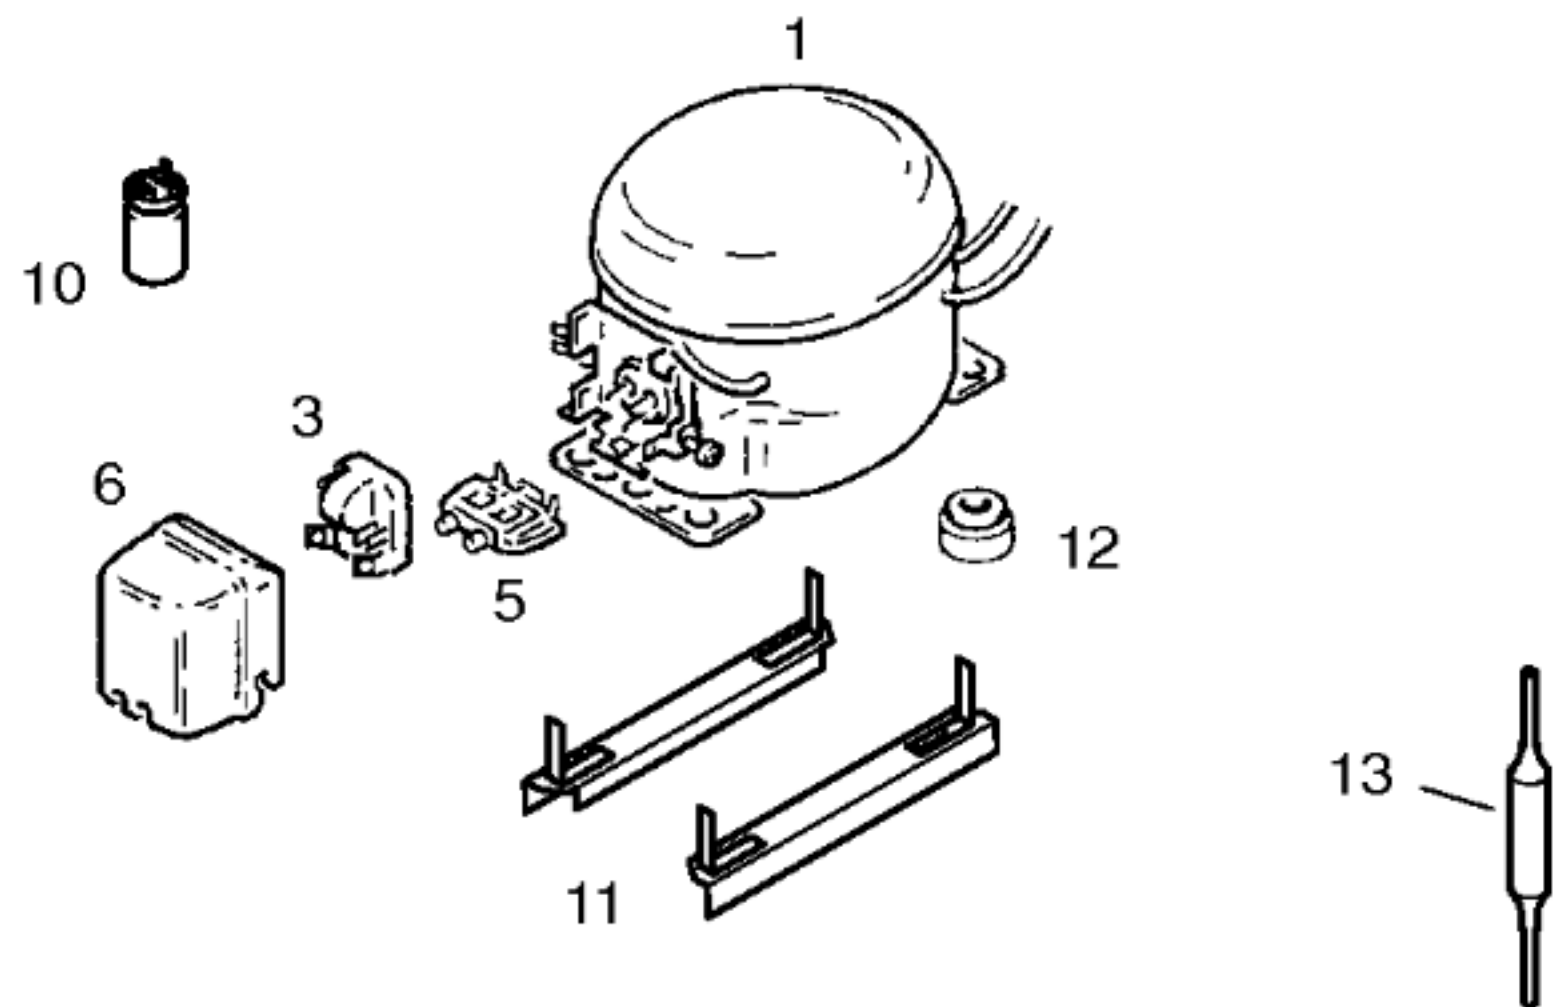

Pos.	V01		
	Matsushita		
	DA 110 E		
1	14 1324		
2			
3	05 8506		
4			
5	16 2549		
6	05 8458		
7			
8			
9			
10	15 3367		
11	15 3365		
12	15 3364		
13	35 0026		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Matsushita		
Typ/Type	DA 110 E		
Förderleistung/Delivery/Débit	1980		
Anlaufstrom/Starting current/Cour de démarrage	A		
Widerstand/Resistance/Résistance	Ha/main/prin.		
	Hi/aux		
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“	°C	
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	112	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild