



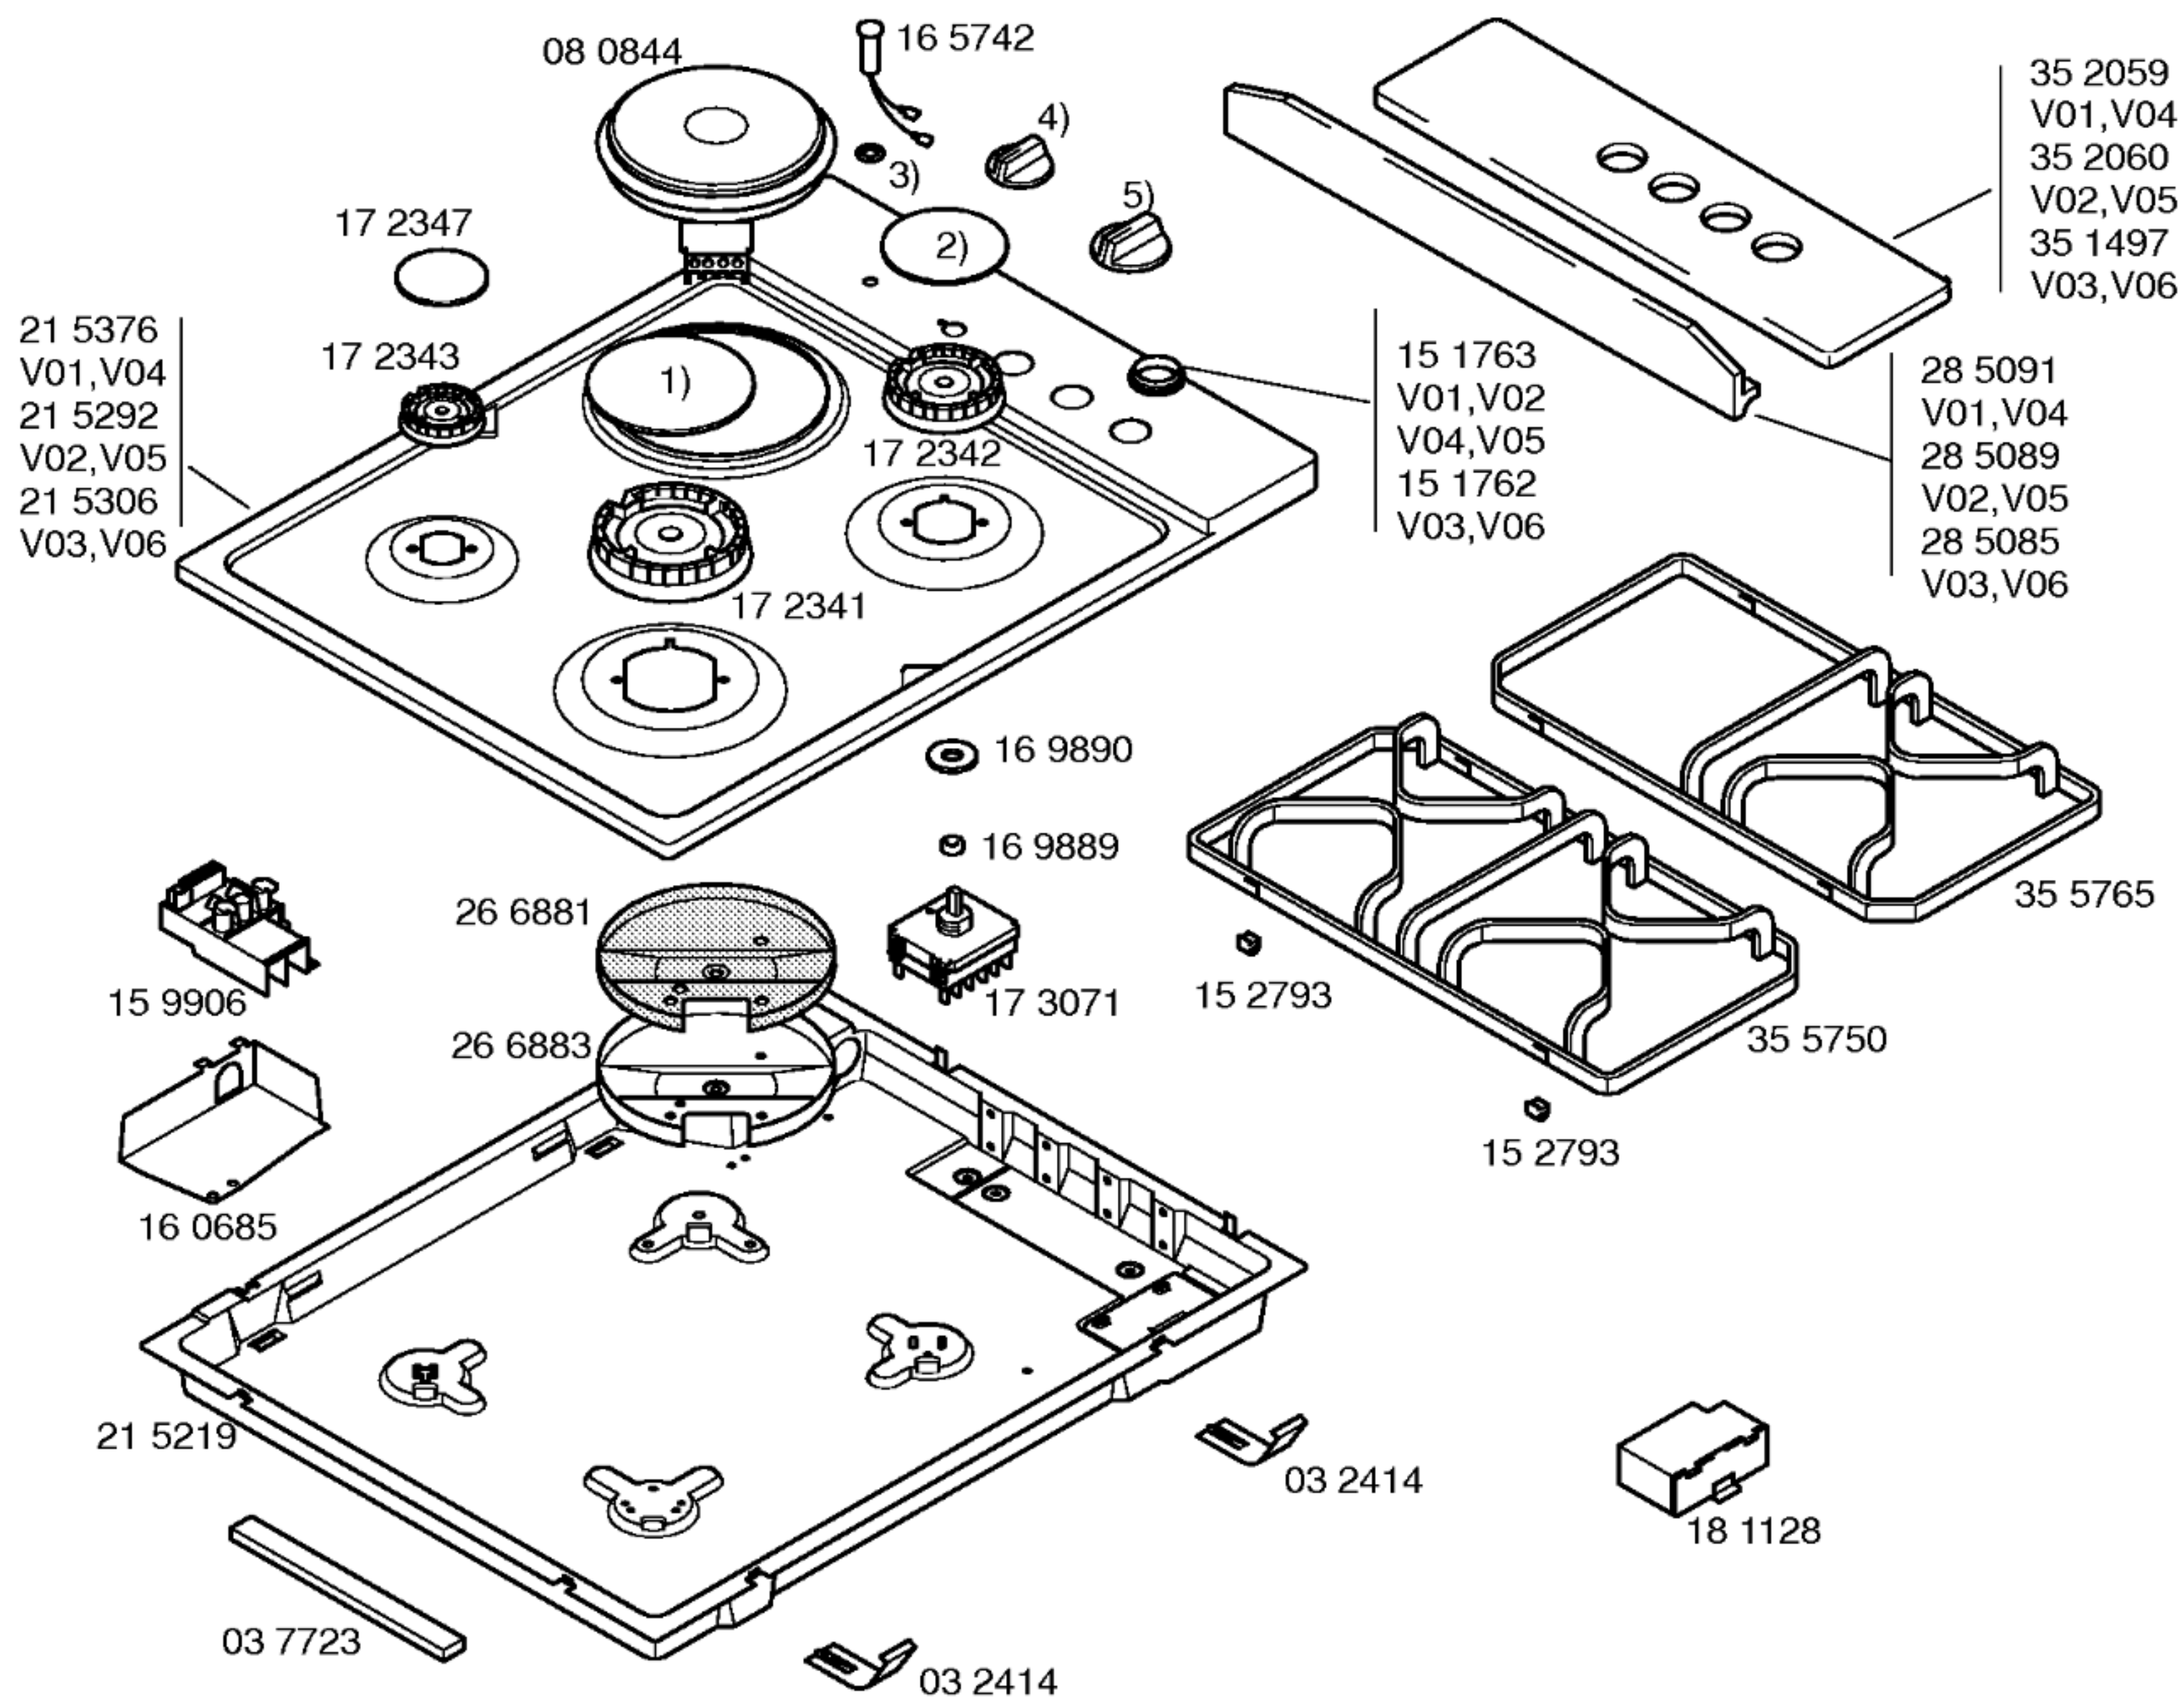

Gebrauchsanweisung
52 3871
(de,en,fr,it,nl,es,pt)

- 1) 17 2345
- 2) 17 2346
- 3) 15 3993
- 4) 18 1027 V01,V04
18 1025 V02,V05
18 1023 V03,V06
- 5) 18 1028 V01,V04
18 1026 V02,V05
18 1024 V03,V06

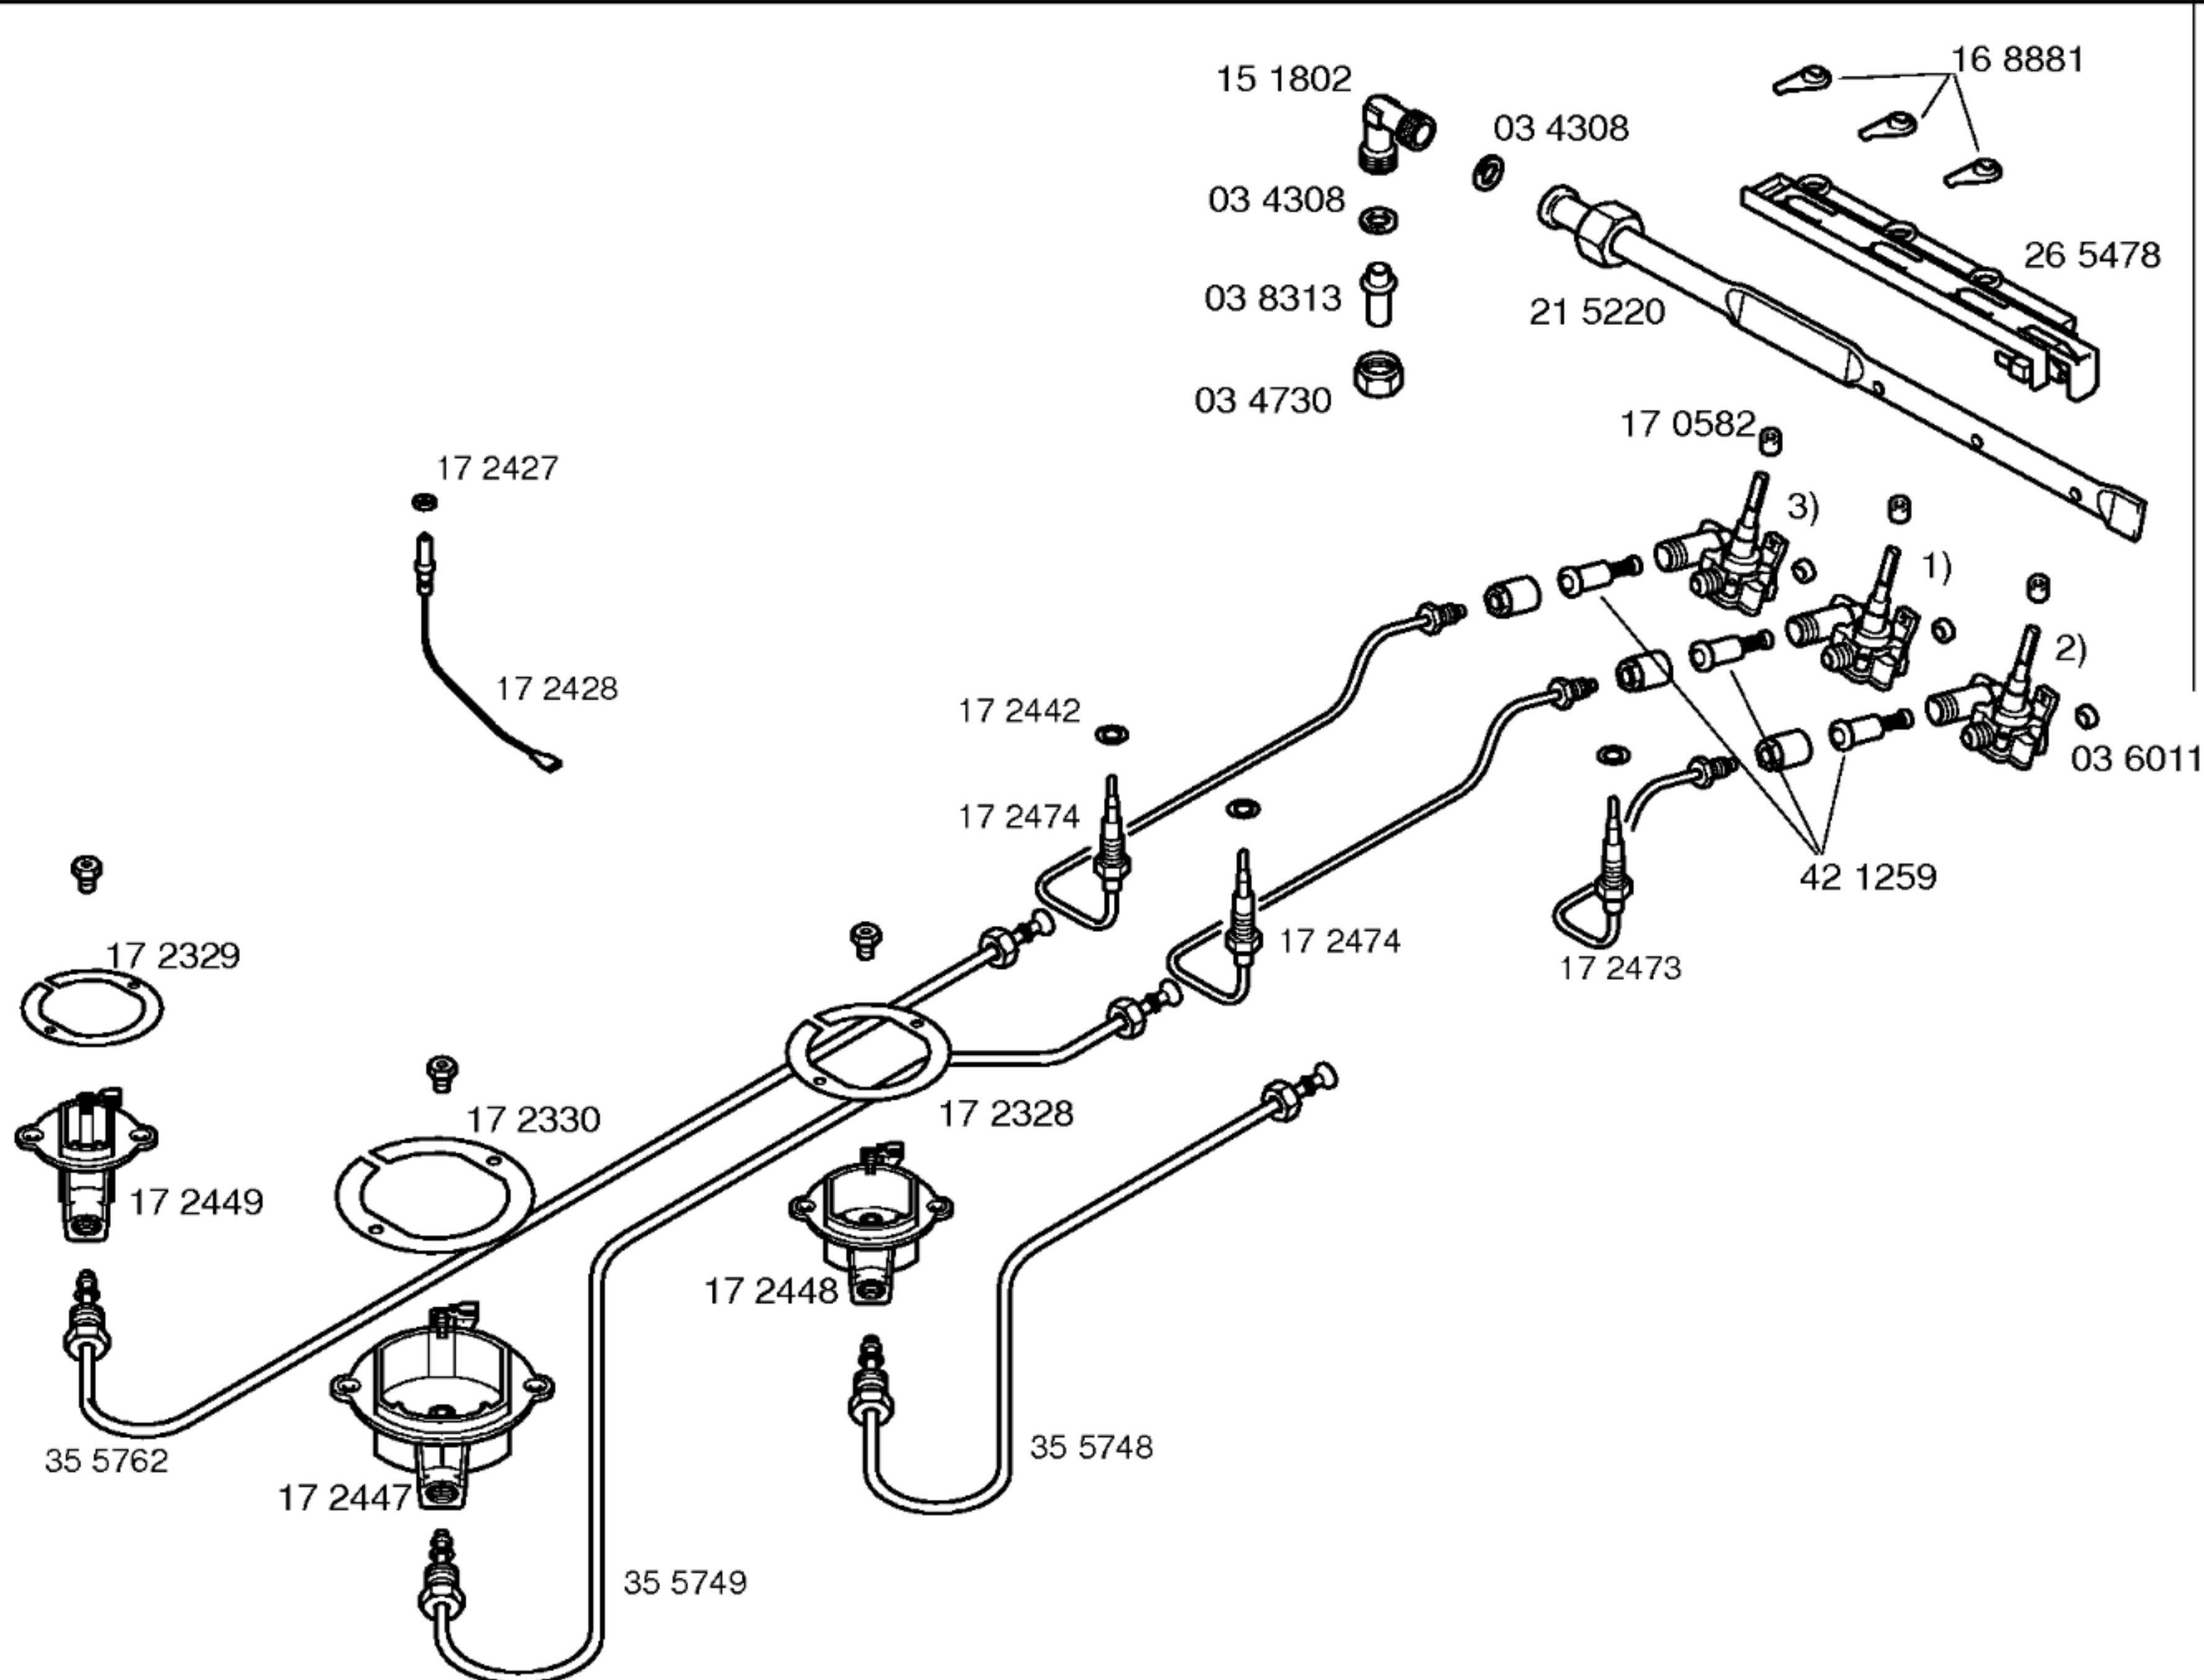

Düsensatz Für:
Erdgas EE20mBar
17 2390
Flüssiggas 28 mBar
15 9769

- 1) 17 3060
- 2) 17 3061
- 3) 17 3062