


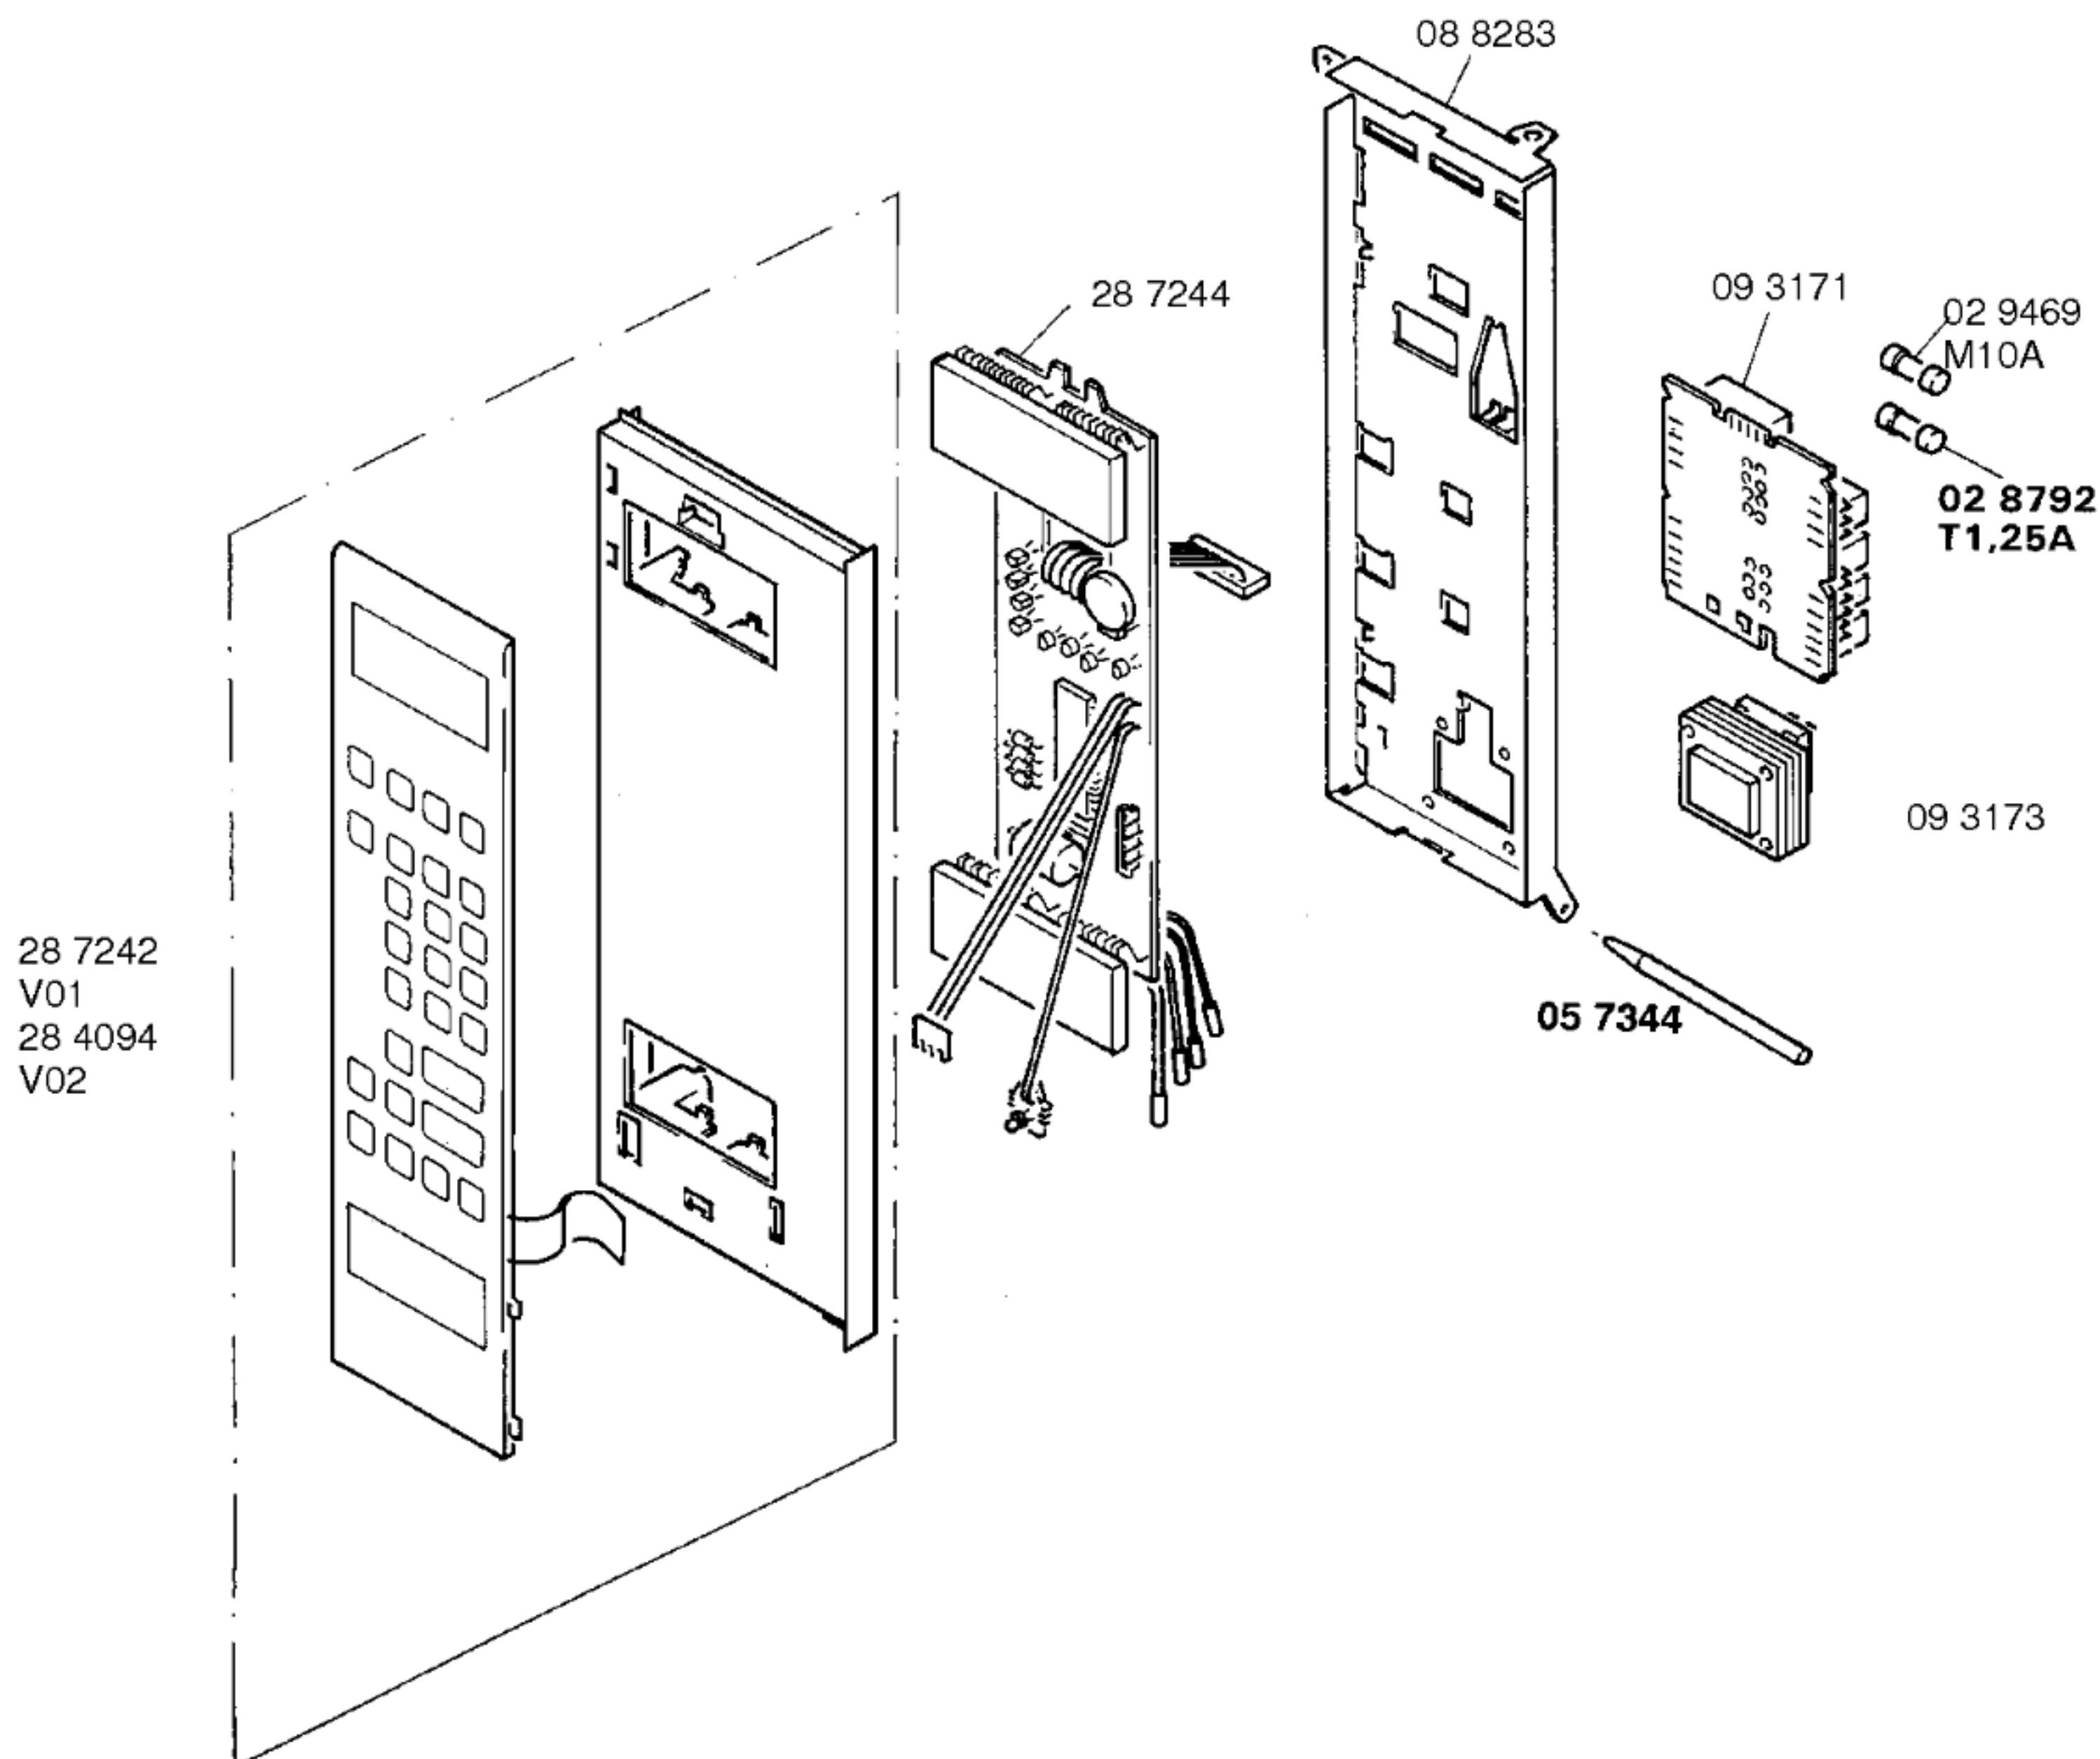

Gebrauchsanweisung
51 9745
(GB)


Montageanleitung
51 6602
(GB)

Kochbuch
51 6059
(D)


Aufkleber Programm-
tabelle
51 6344
(D,GB,F,I,E,N)

Zubehör:


Alu-Backblech
Z6380X0
Glaspfanne
Z6290X0

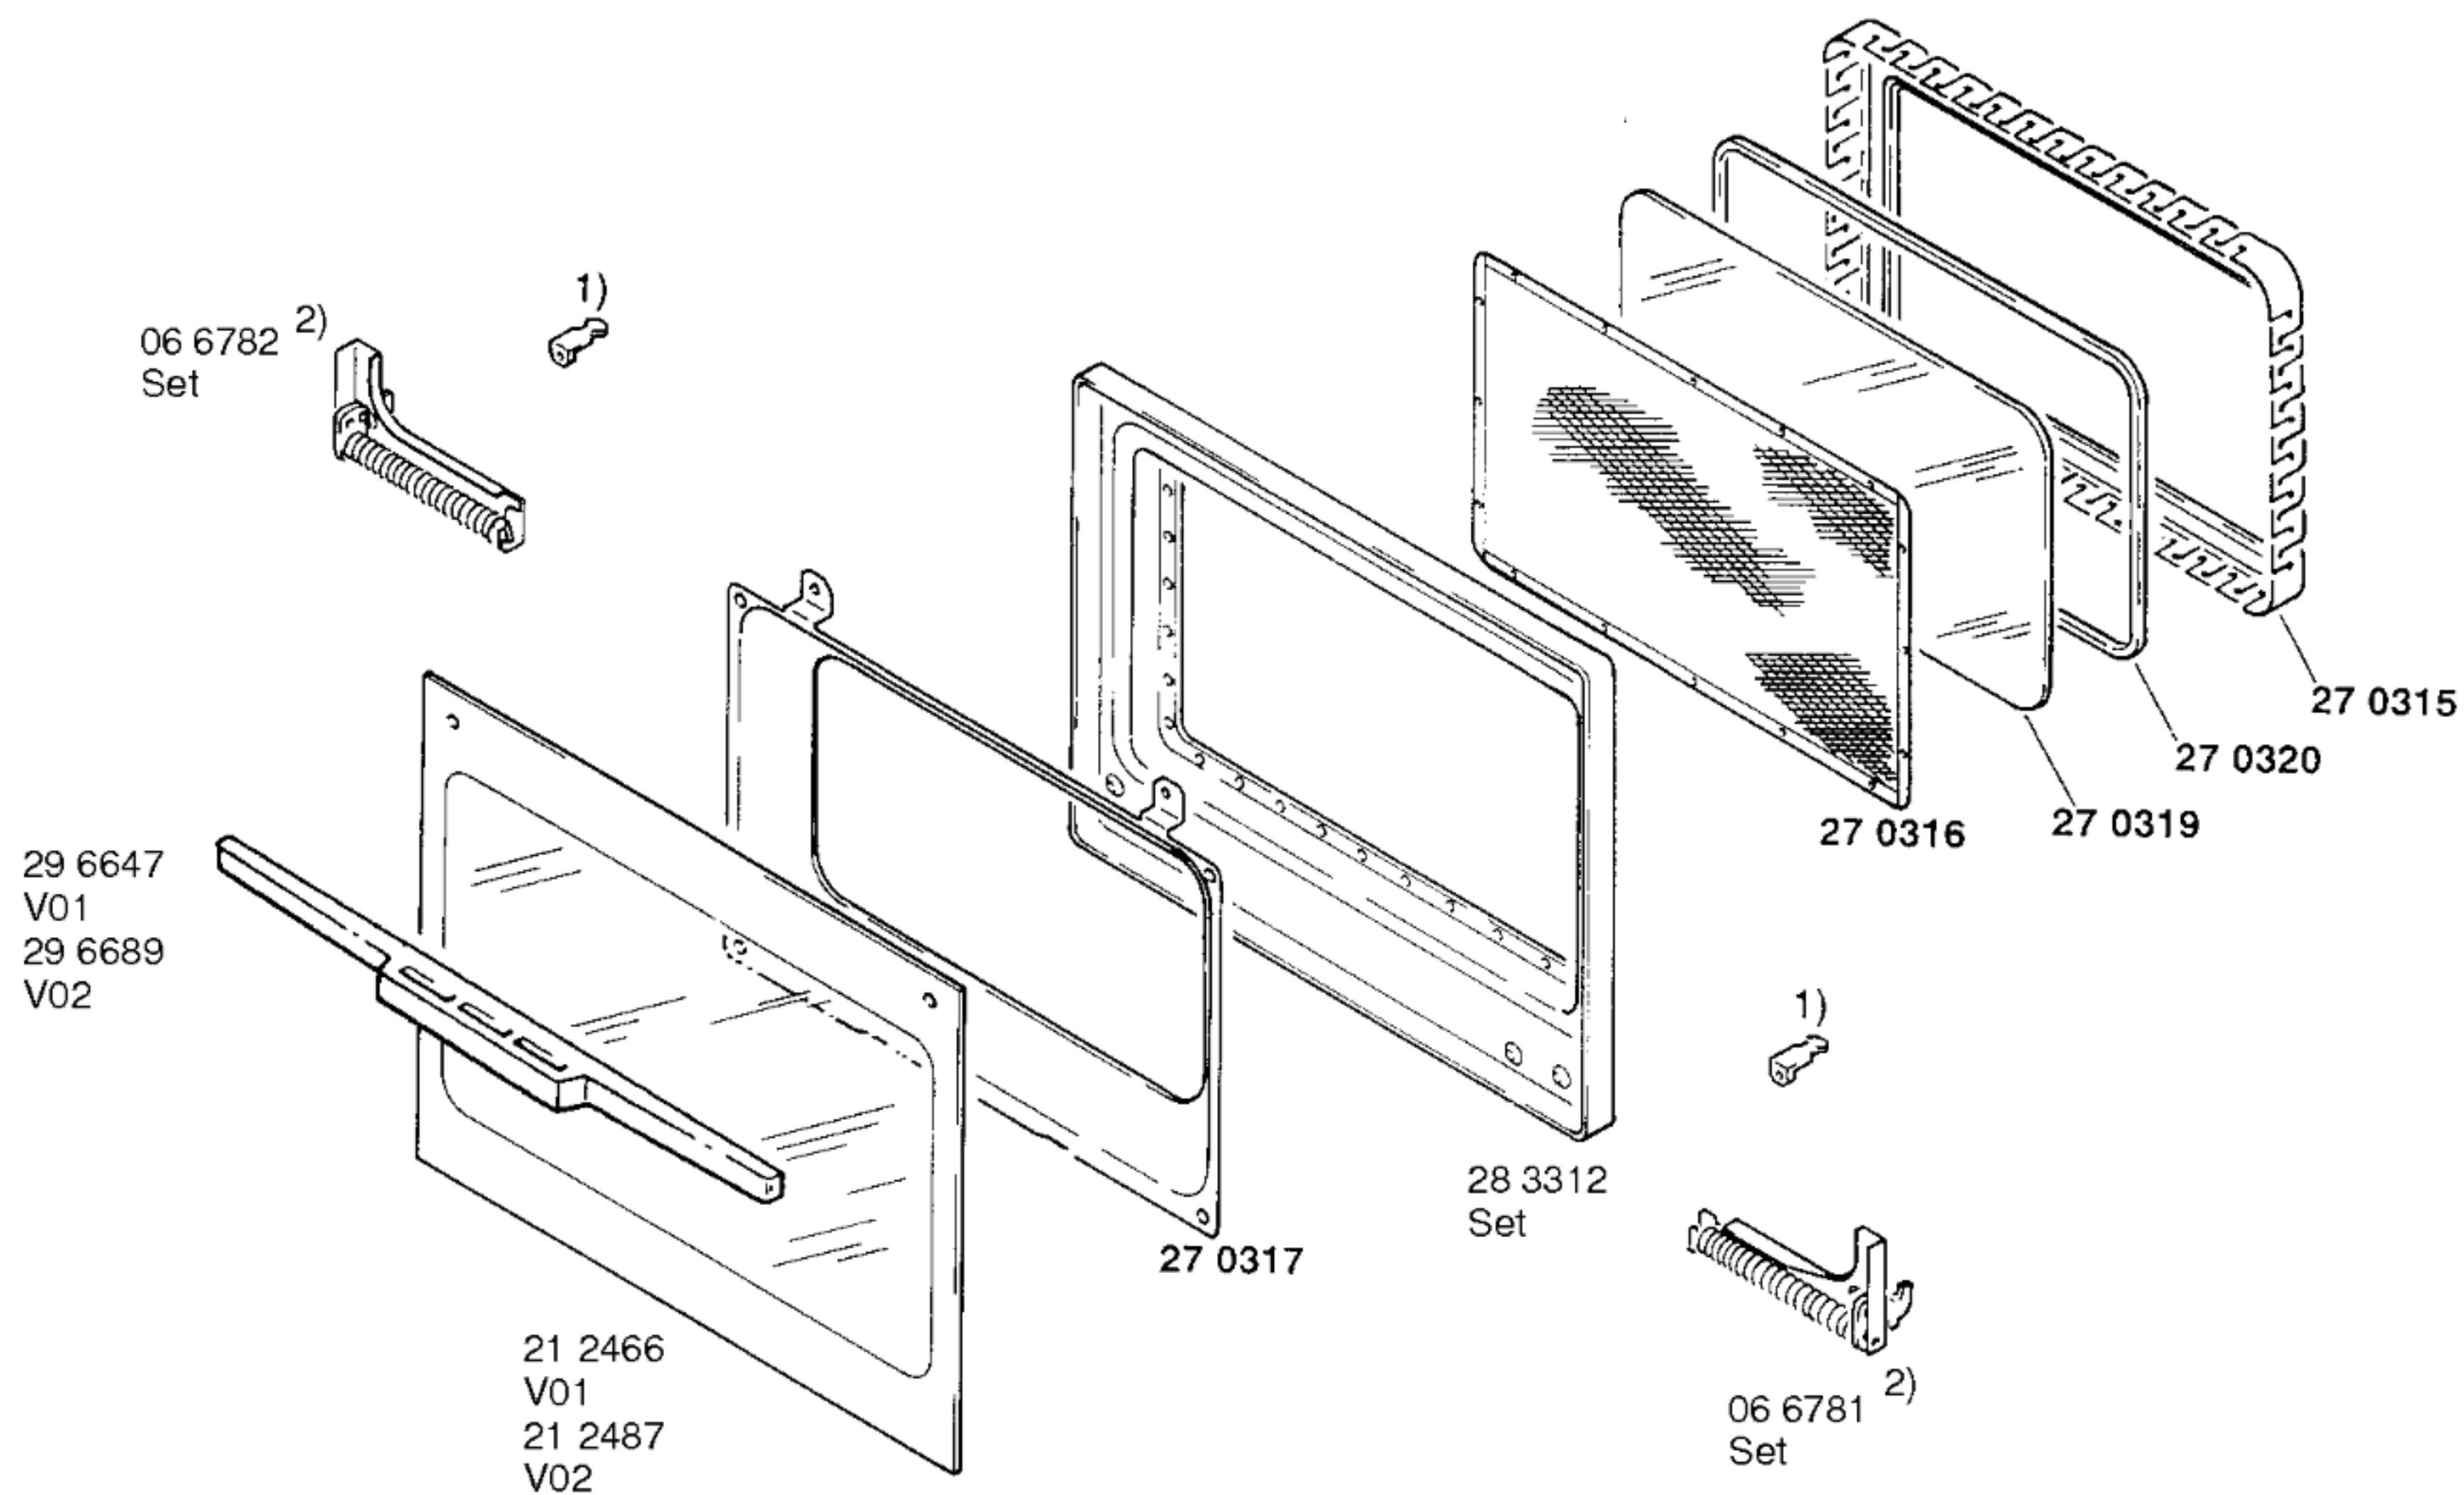

- 1) 03 0671
2) 03 0813
Arretierstift

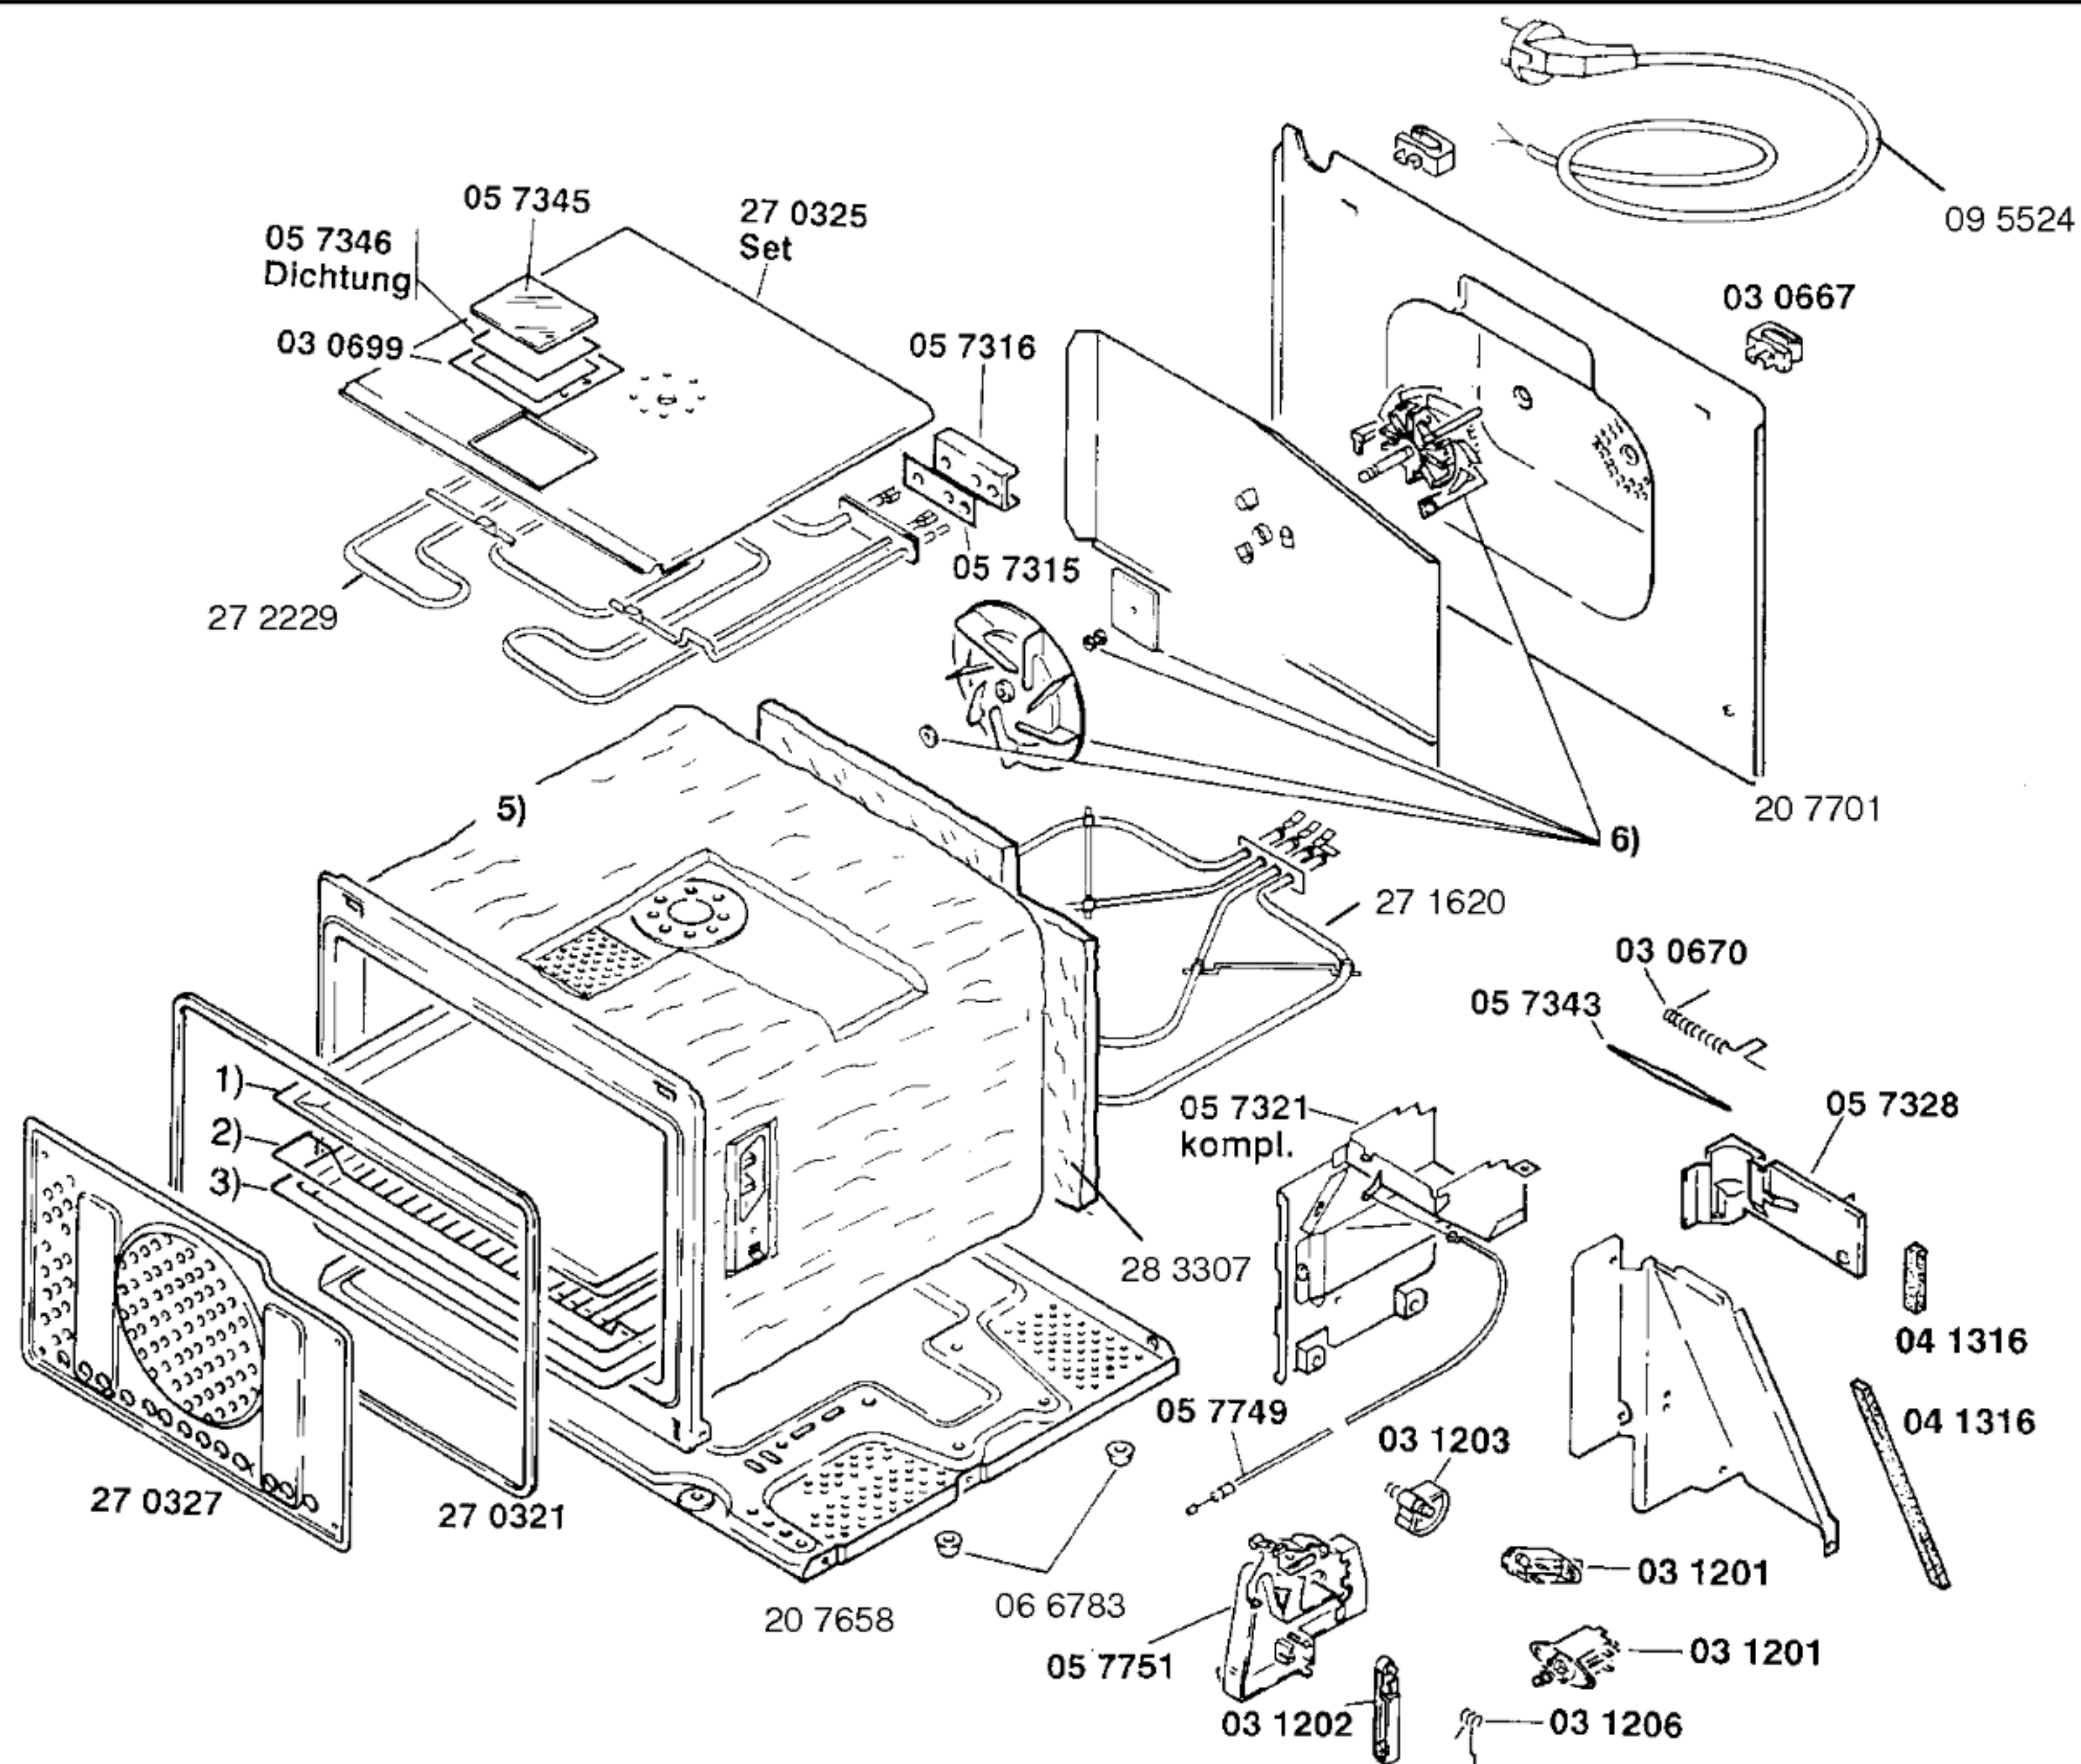

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
02 8732
Anschlag-Backblech
- 5) 23 2269
- 6) 09 2676
kompl.

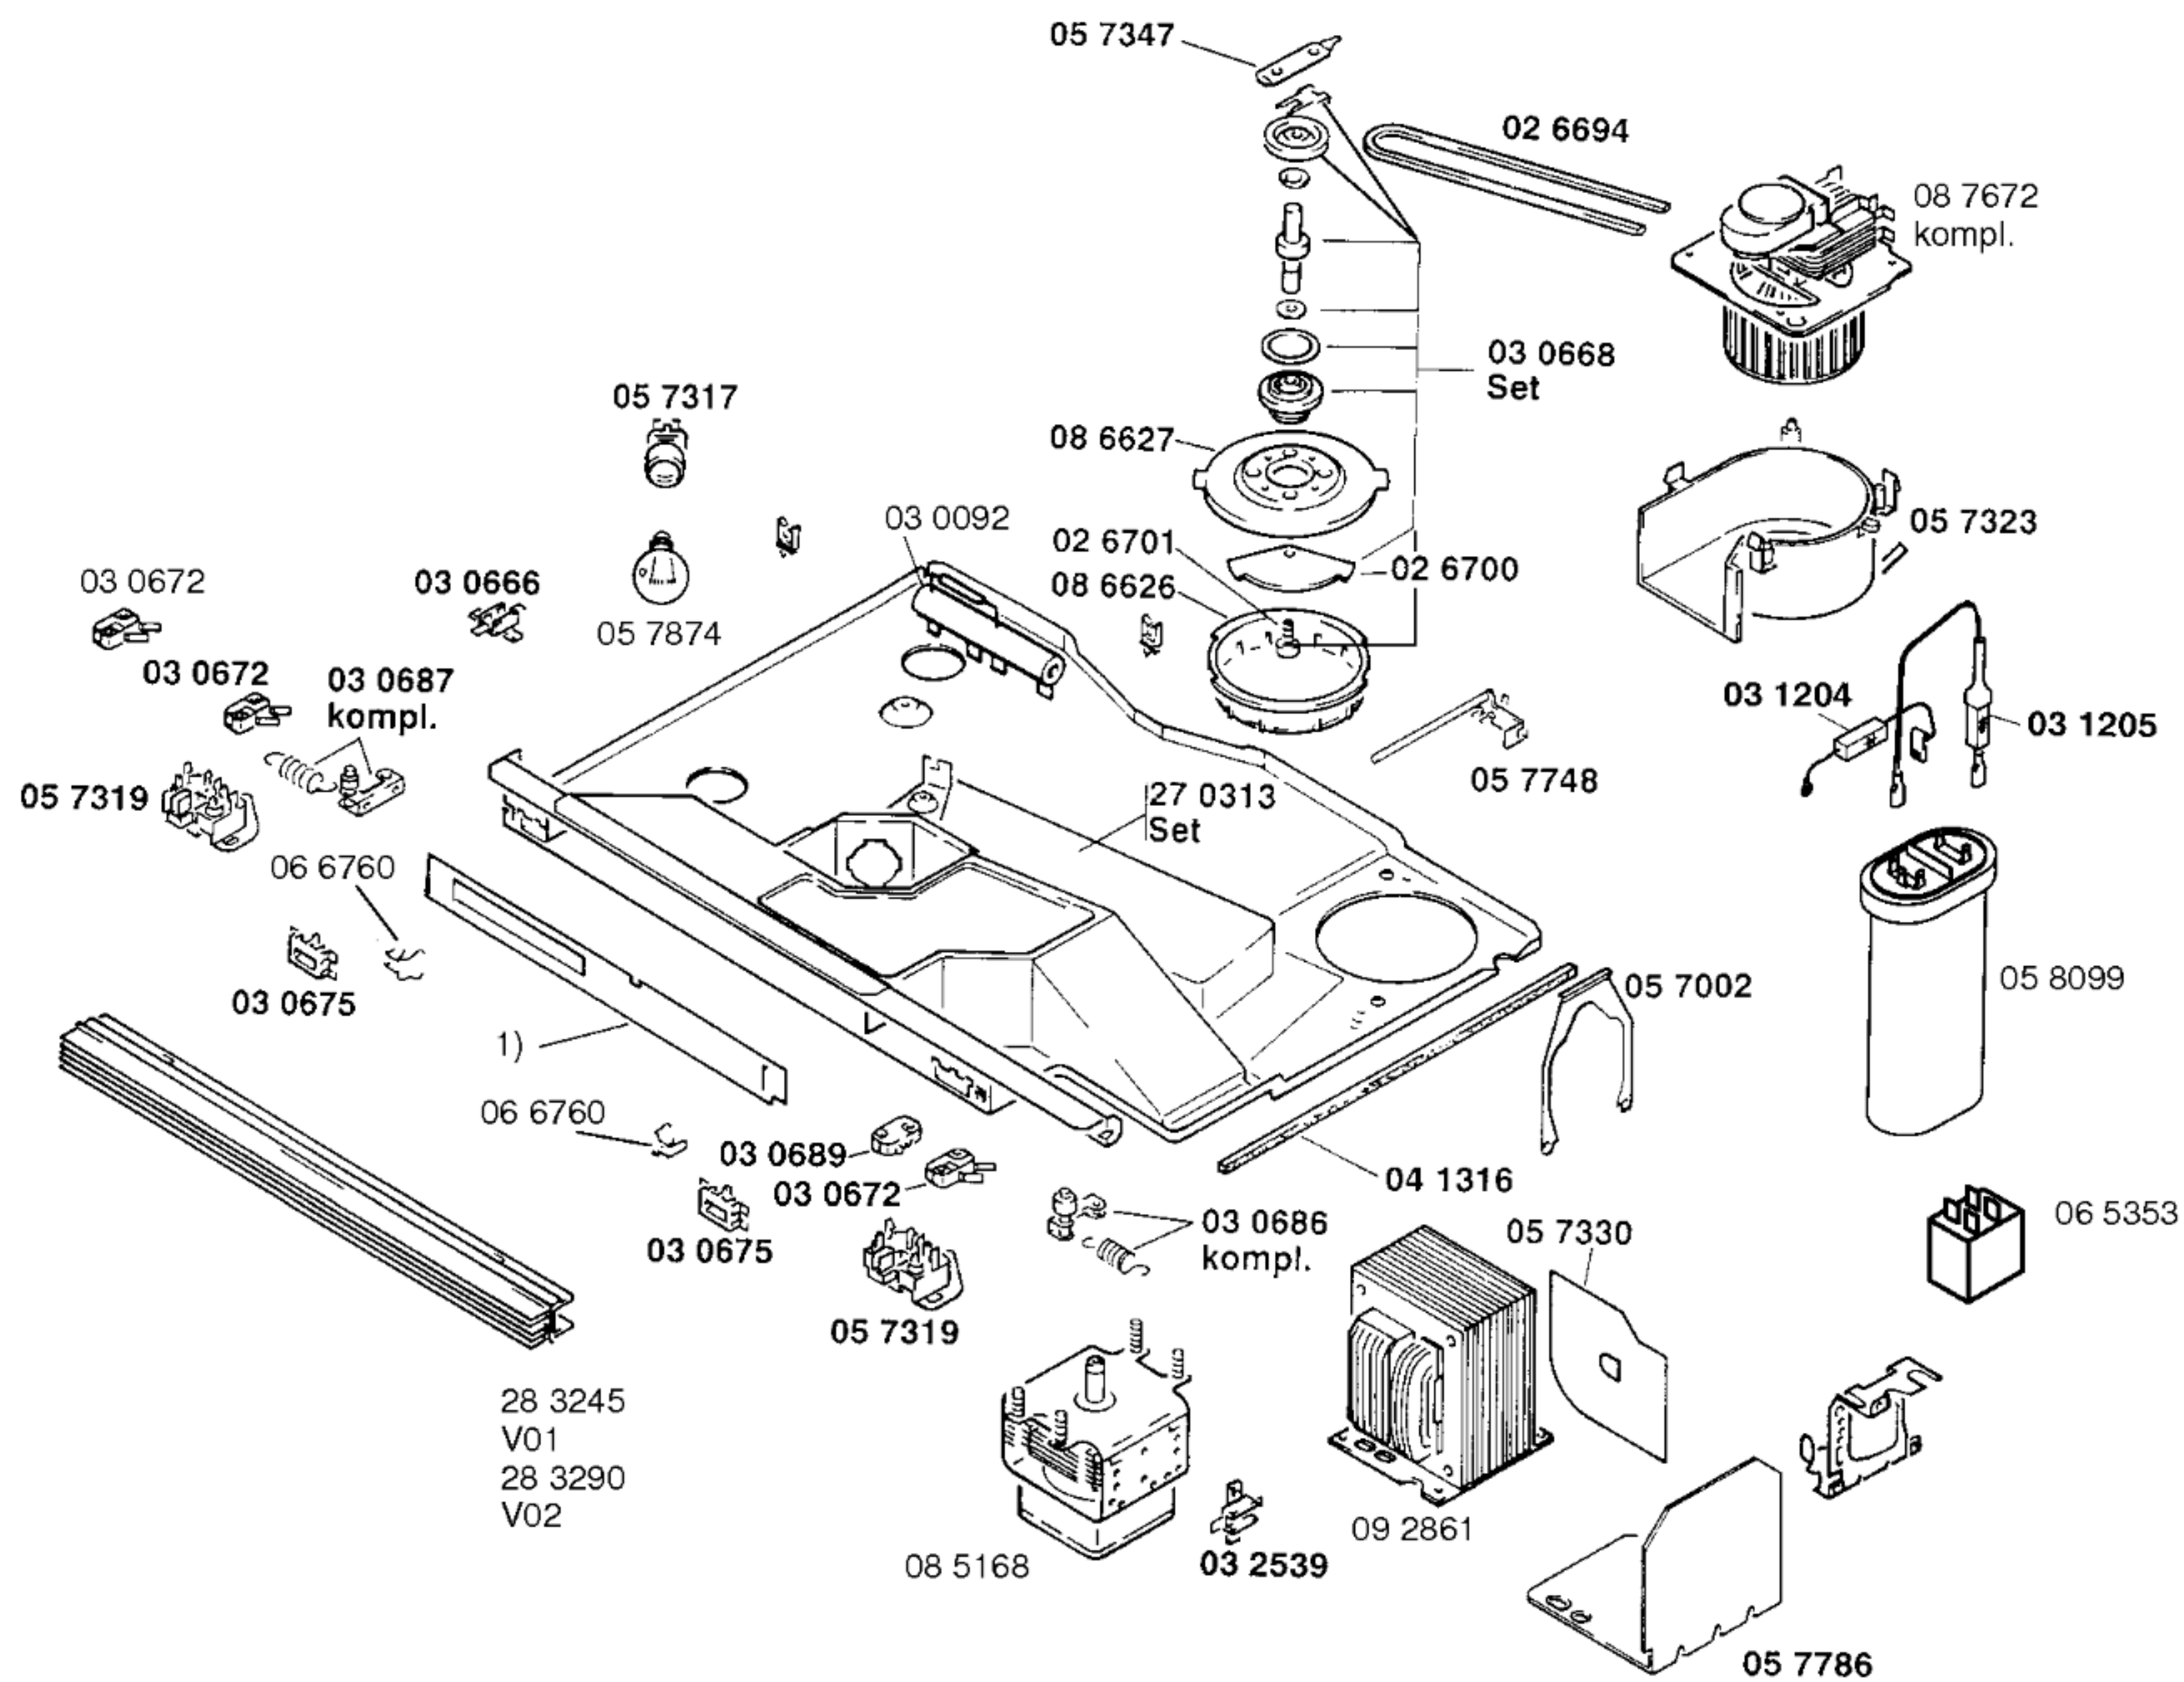

1) 28 2469

1) 06 6979

