


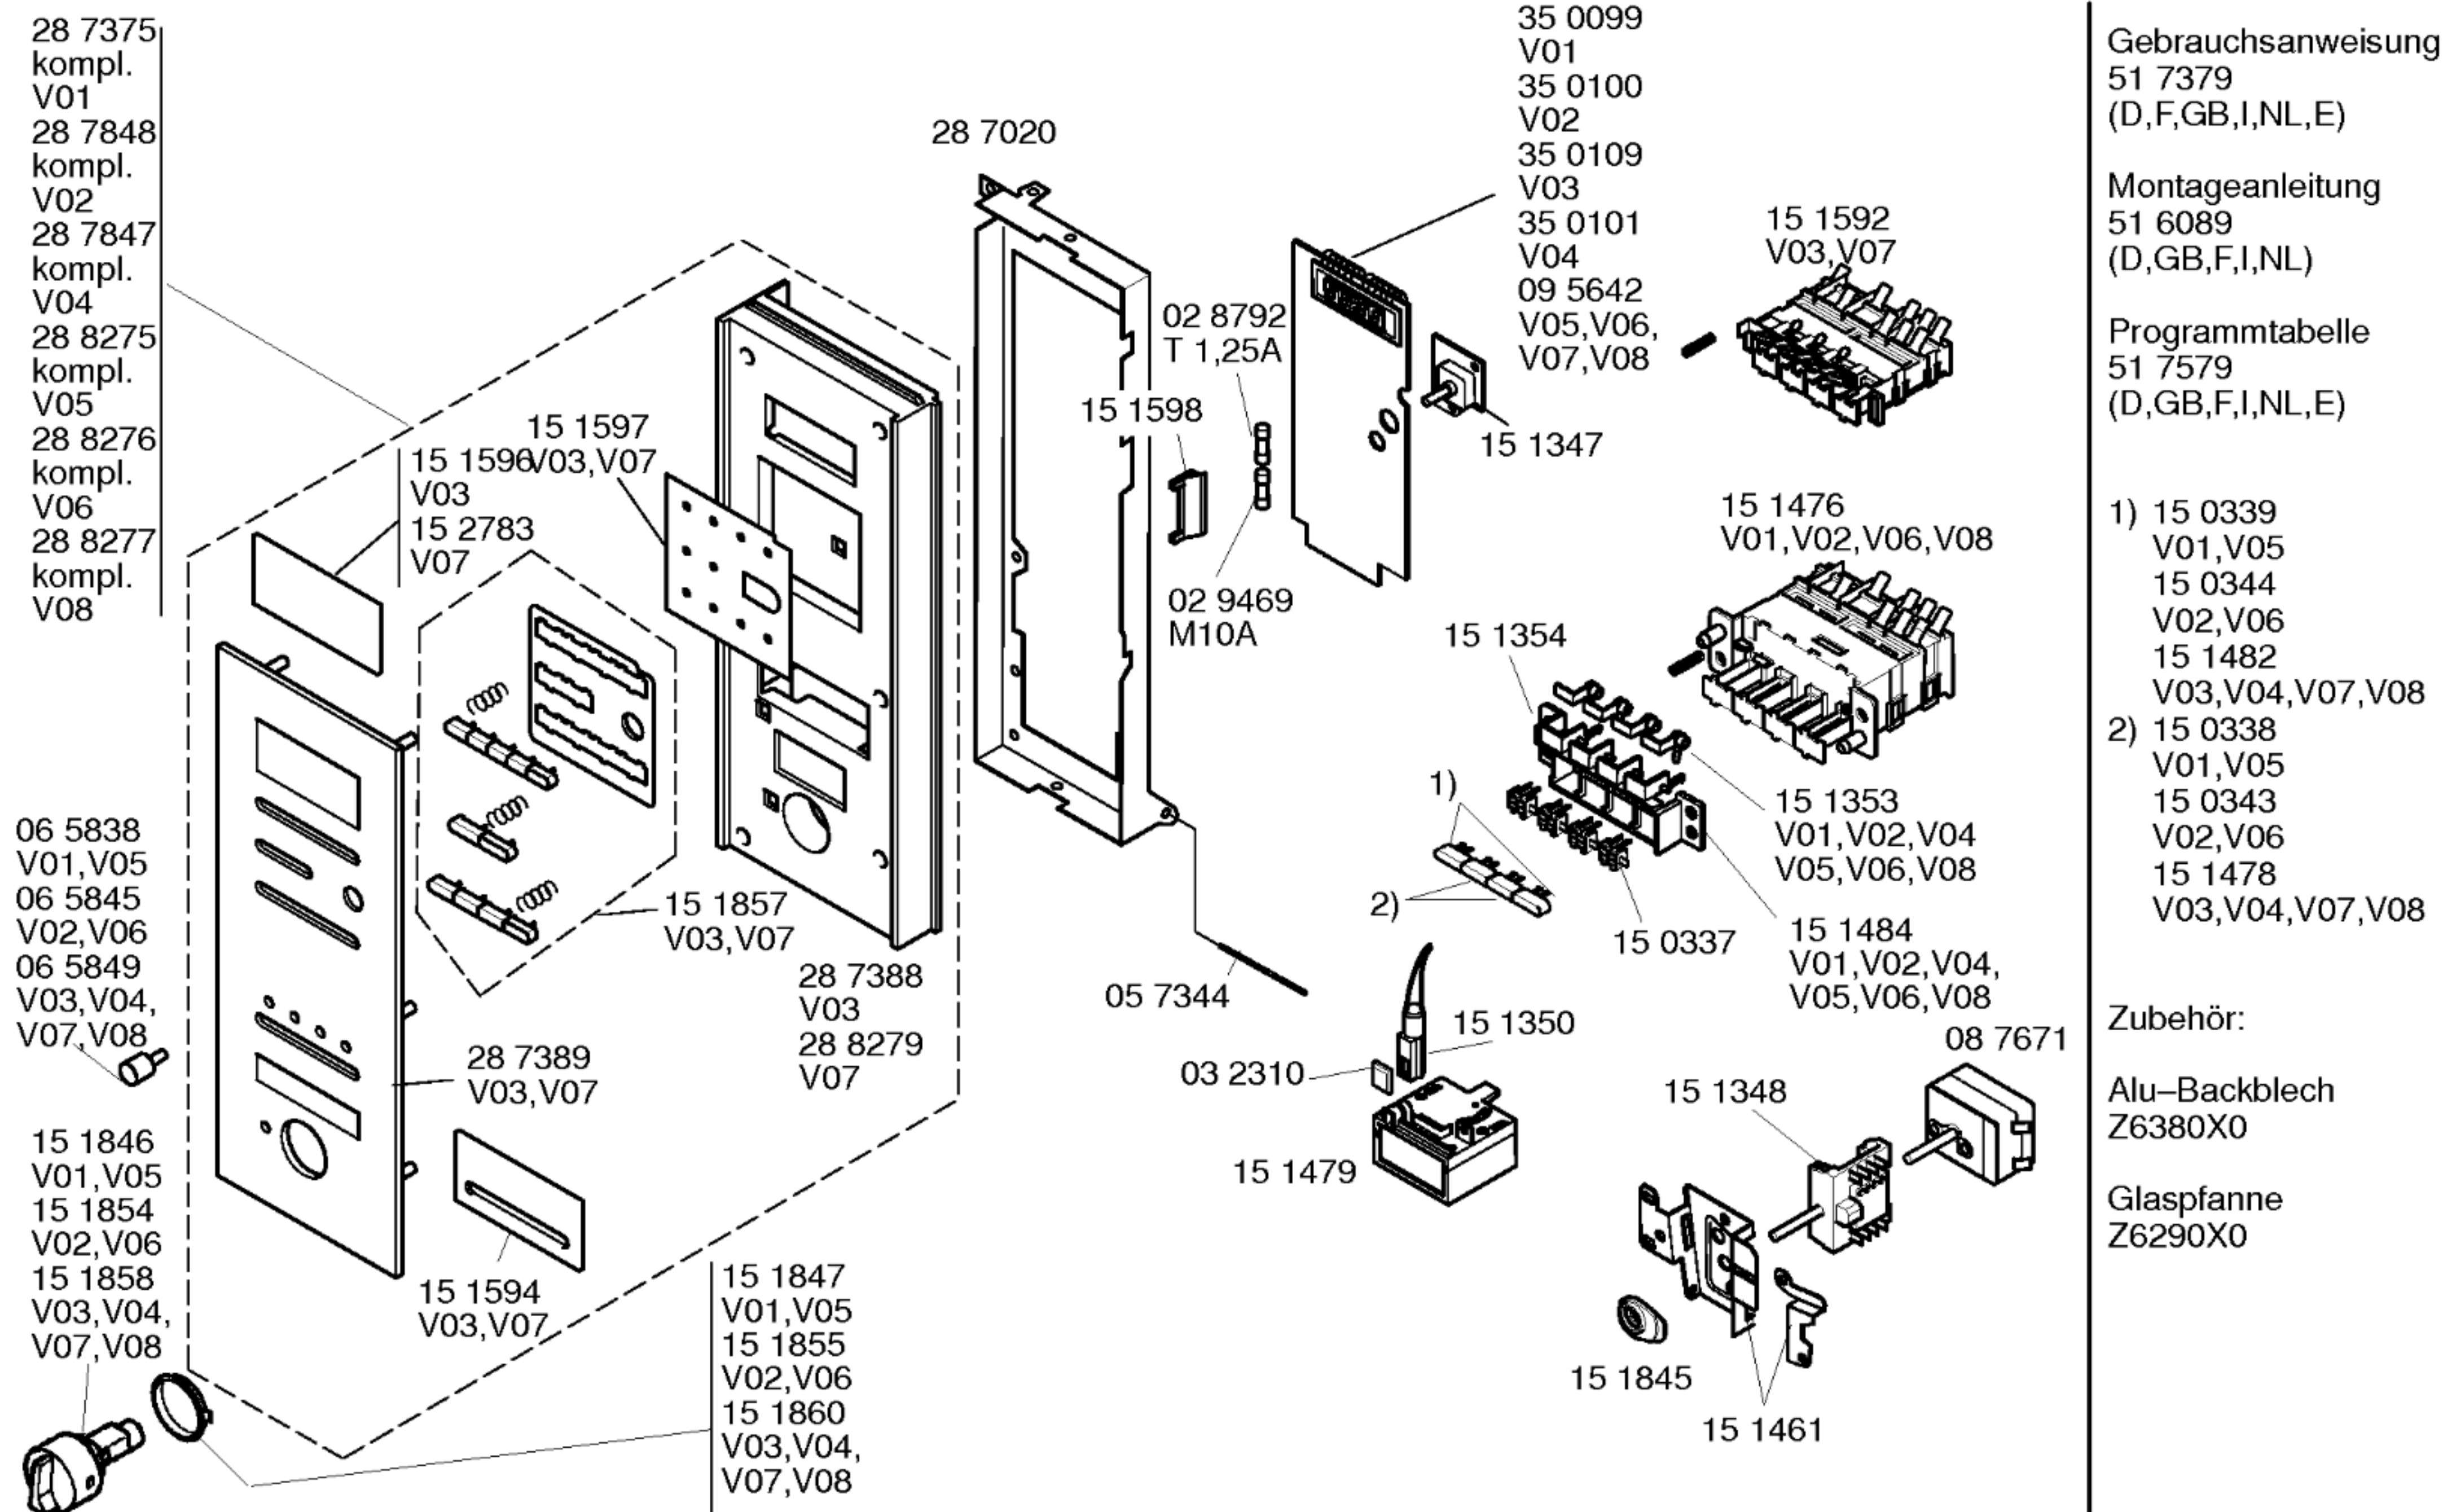


Gebrauchsanweisung
 51 7379
 (D, F, GB, I, NL, E)

Montageanleitung
 51 6089
 (D, GB, F, I, NL)


Programmtabelle
 51 7579
 (D, GB, F, I, NL, E)

- 1) 15 0339
 V01, V05
 15 0344
 V02, V06
 15 1482
 V03, V04, V07, V08
- 2) 15 0338
 V01, V05
 15 0343
 V02, V06
 15 1478
 V03, V04, V07, V08

Zubehör:
 Alu-Backblech
 Z6380X0
 Glaspfanne
 Z6290X0

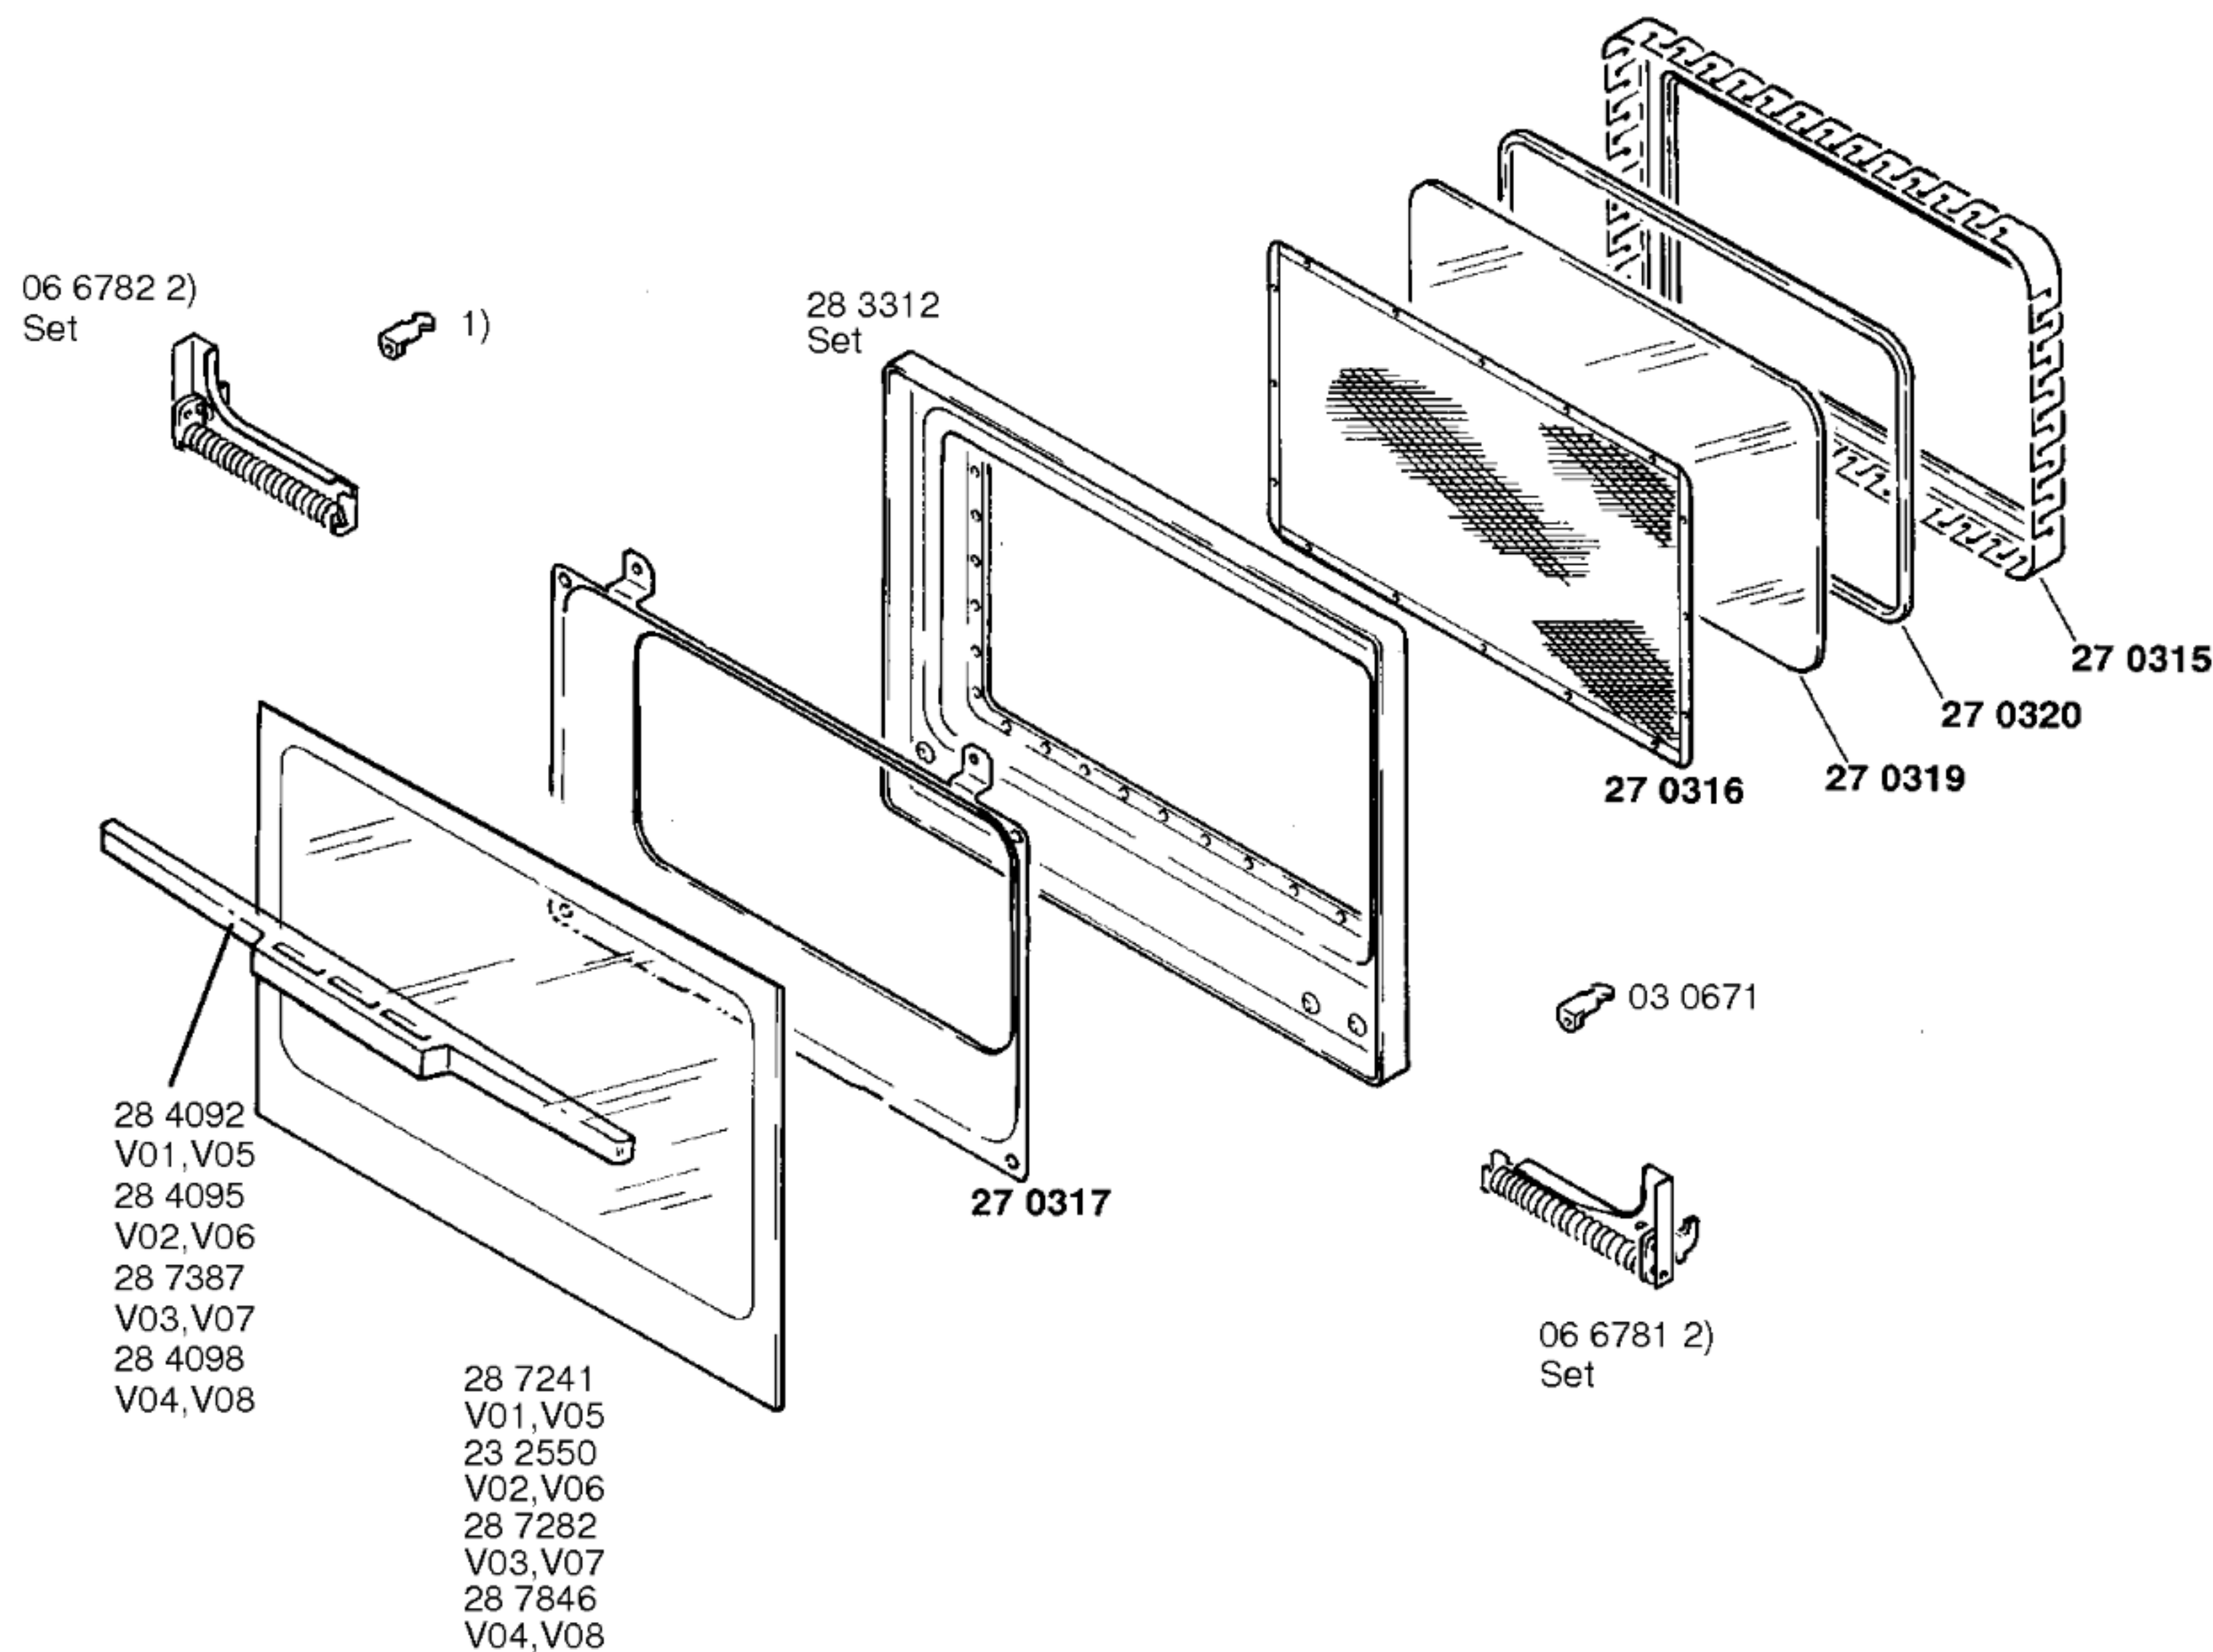


- 1) 03 0671
Stößel
 2) 03 0813
Arretierstift

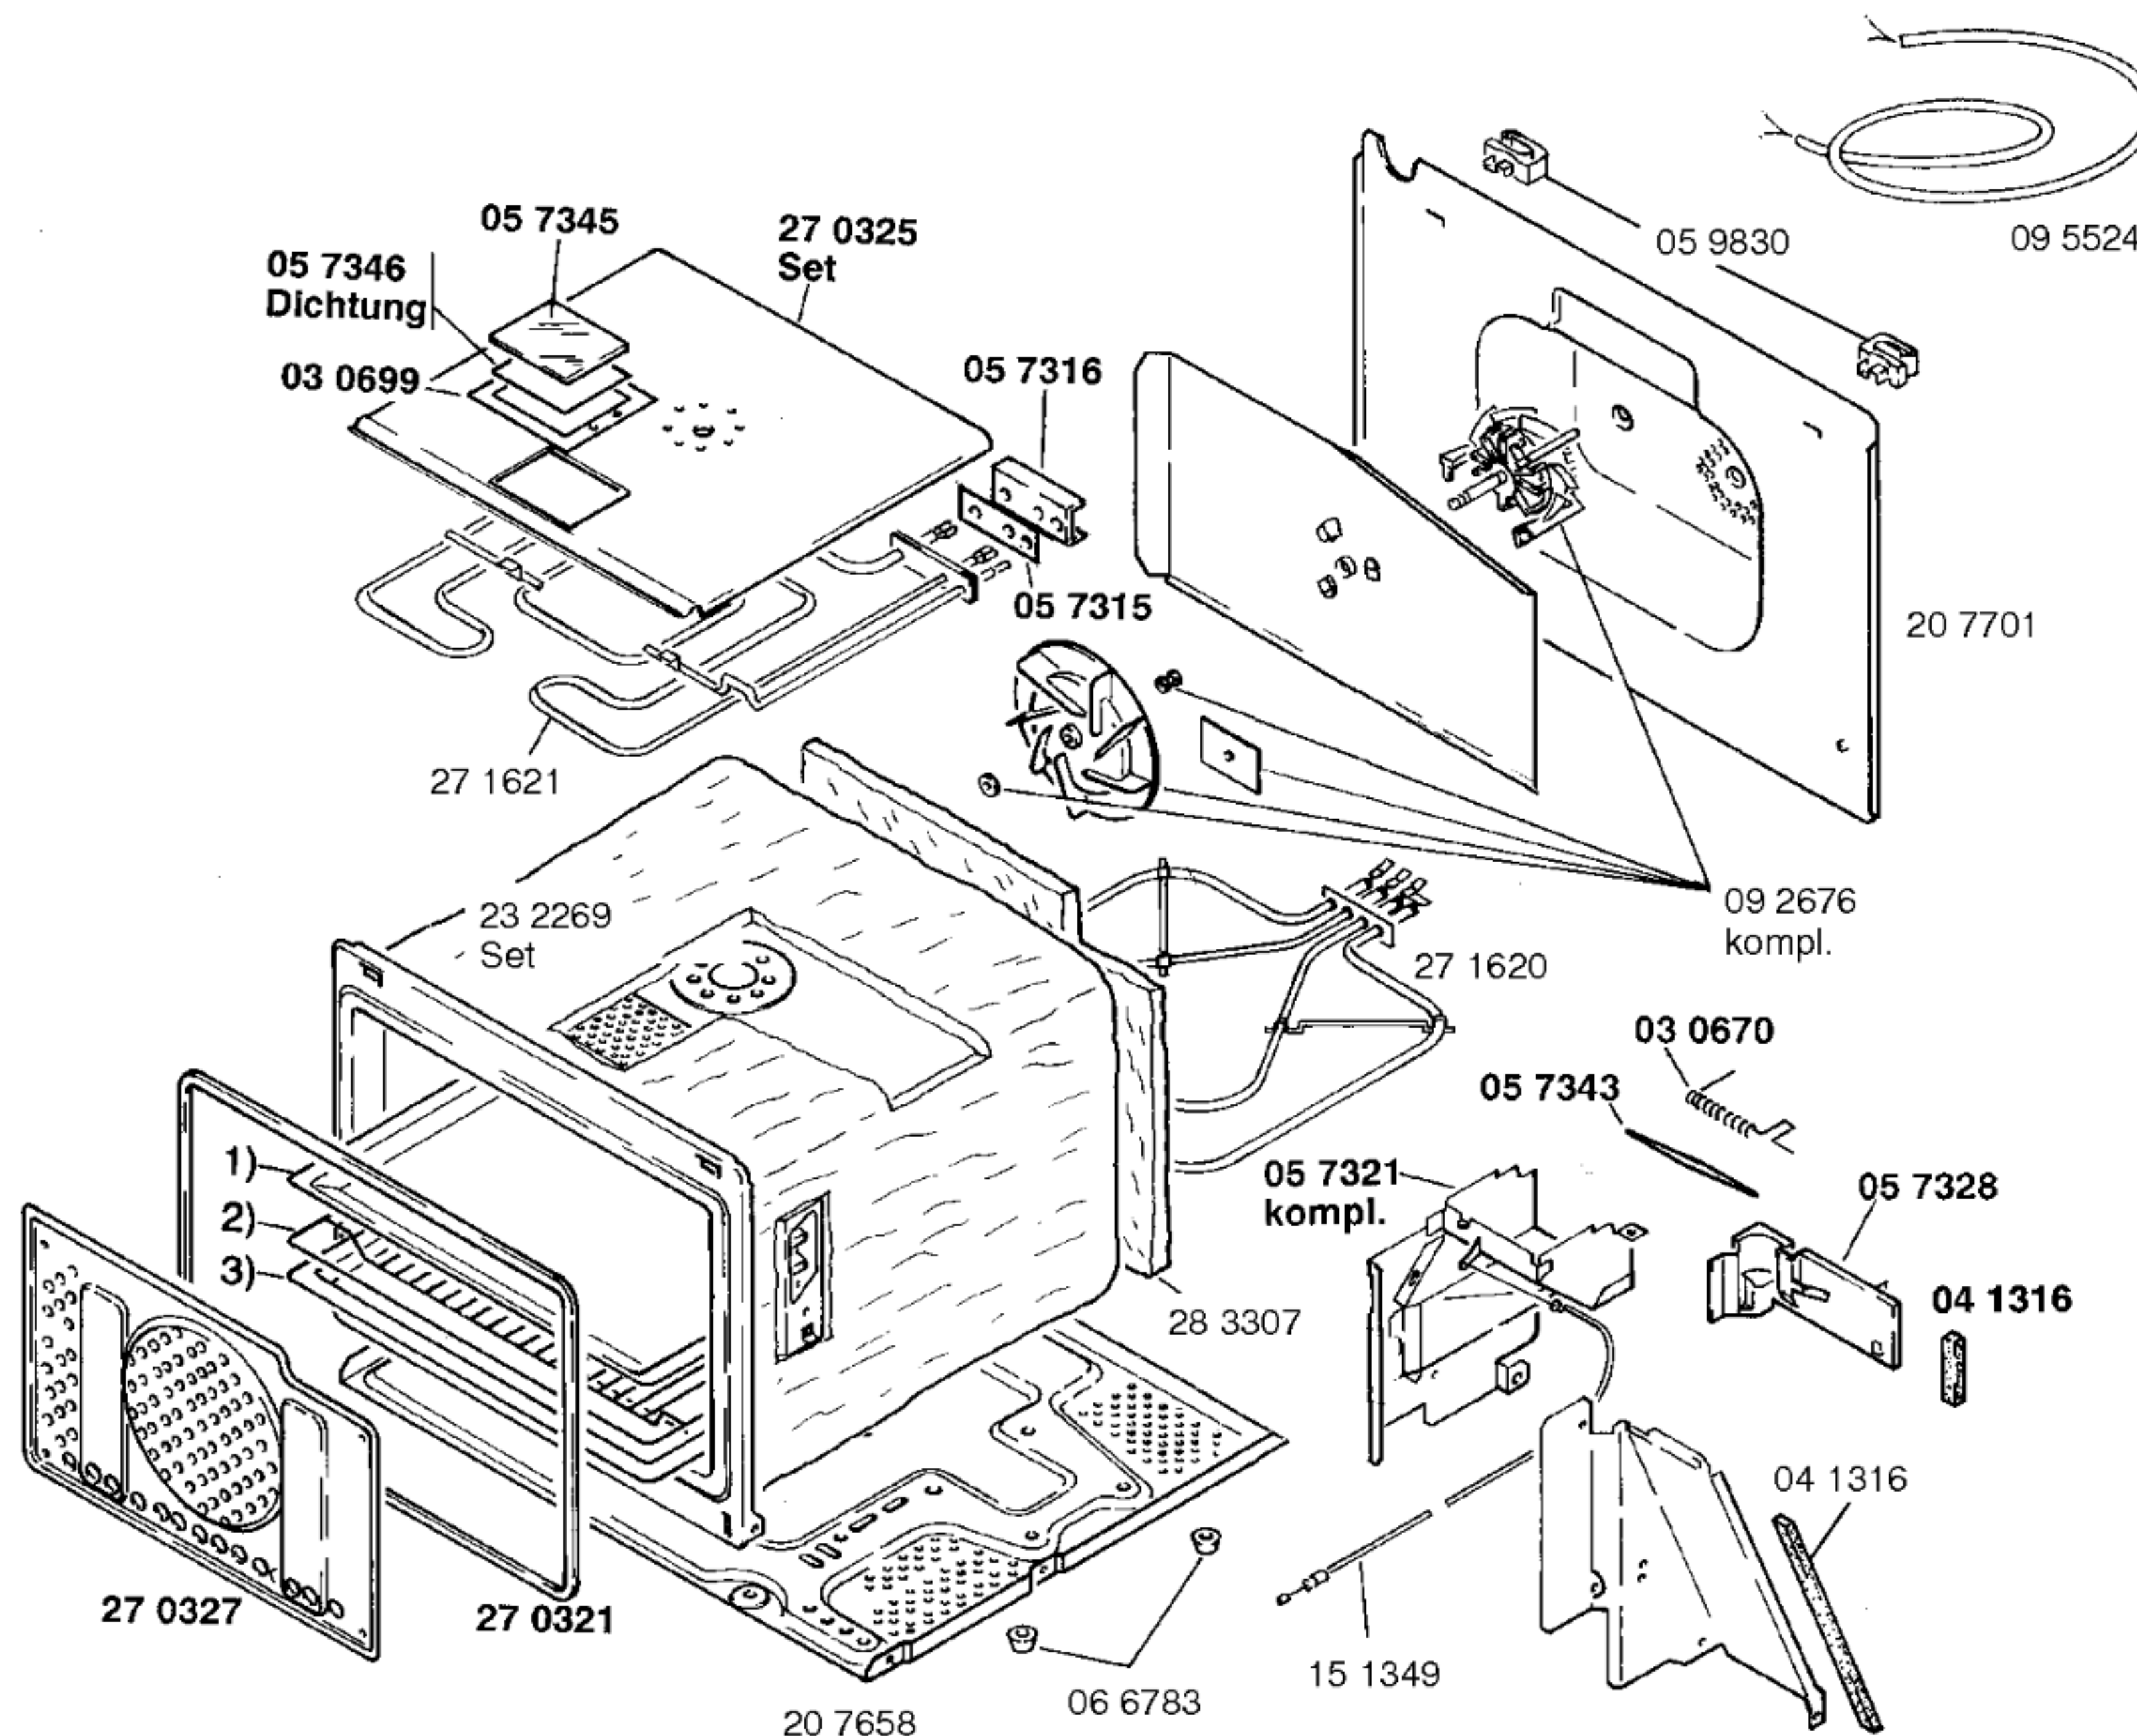

- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale

02 8732
 Anschlag für Backblech

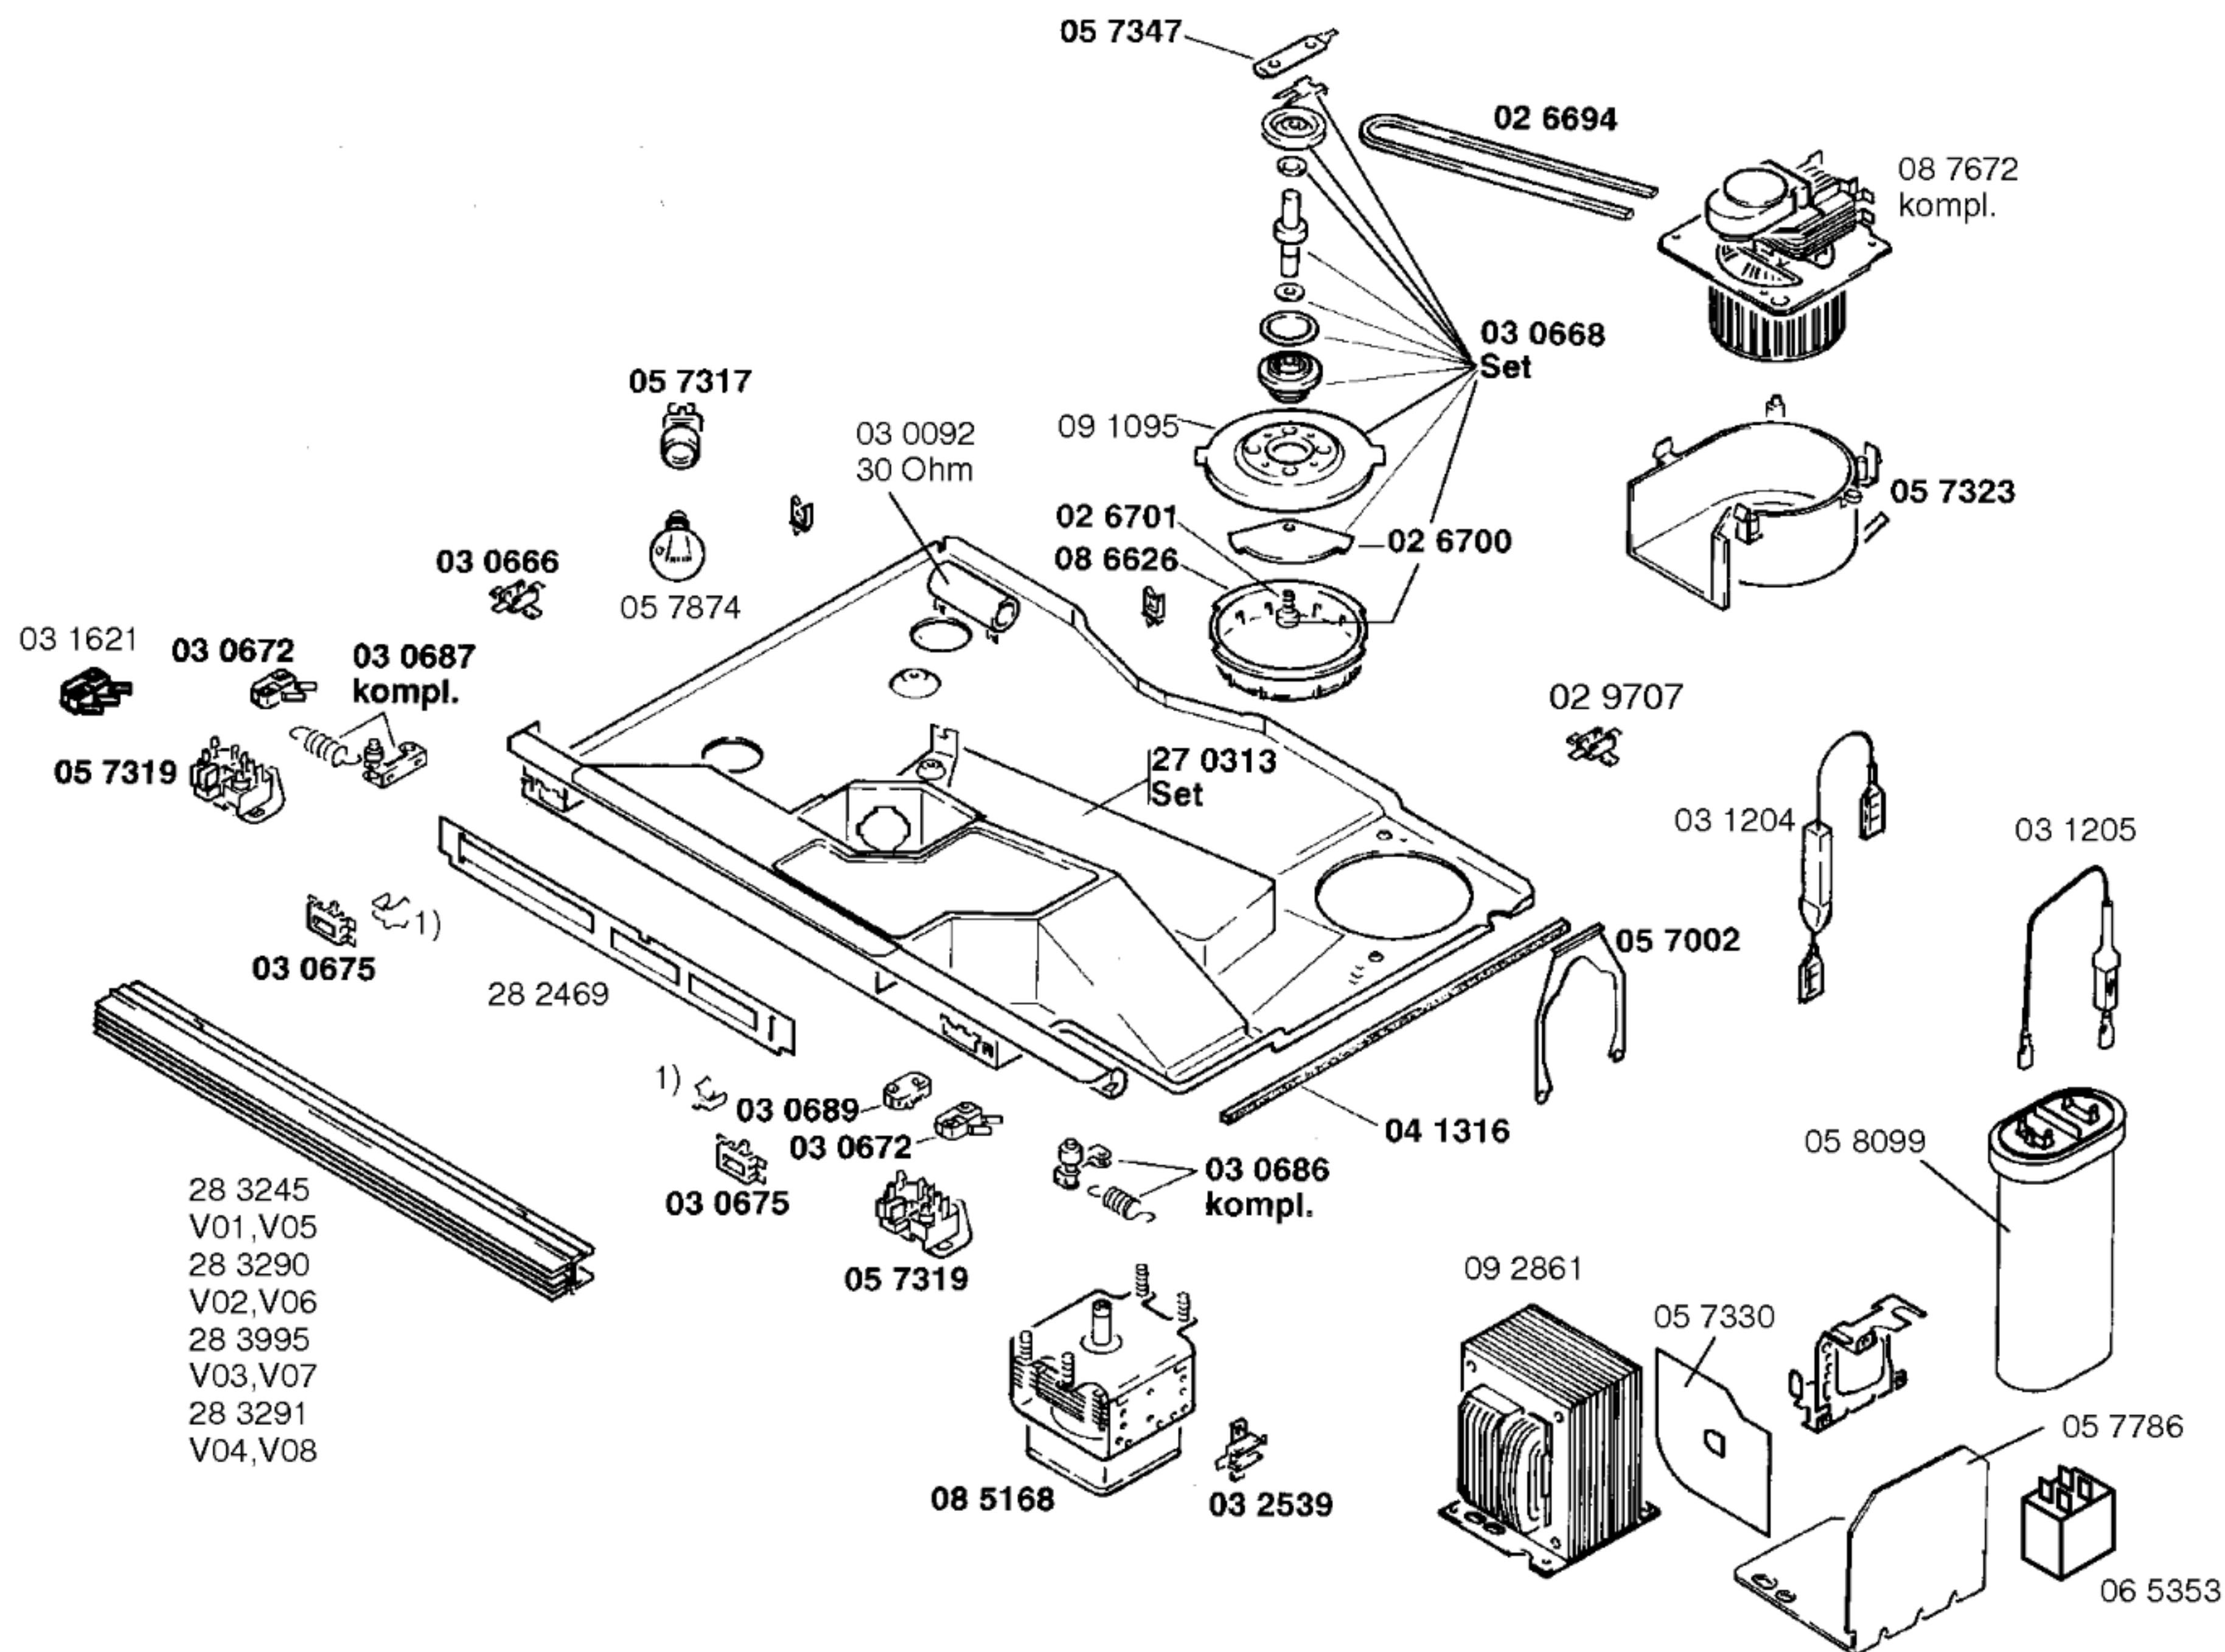

1) 06 6979

