




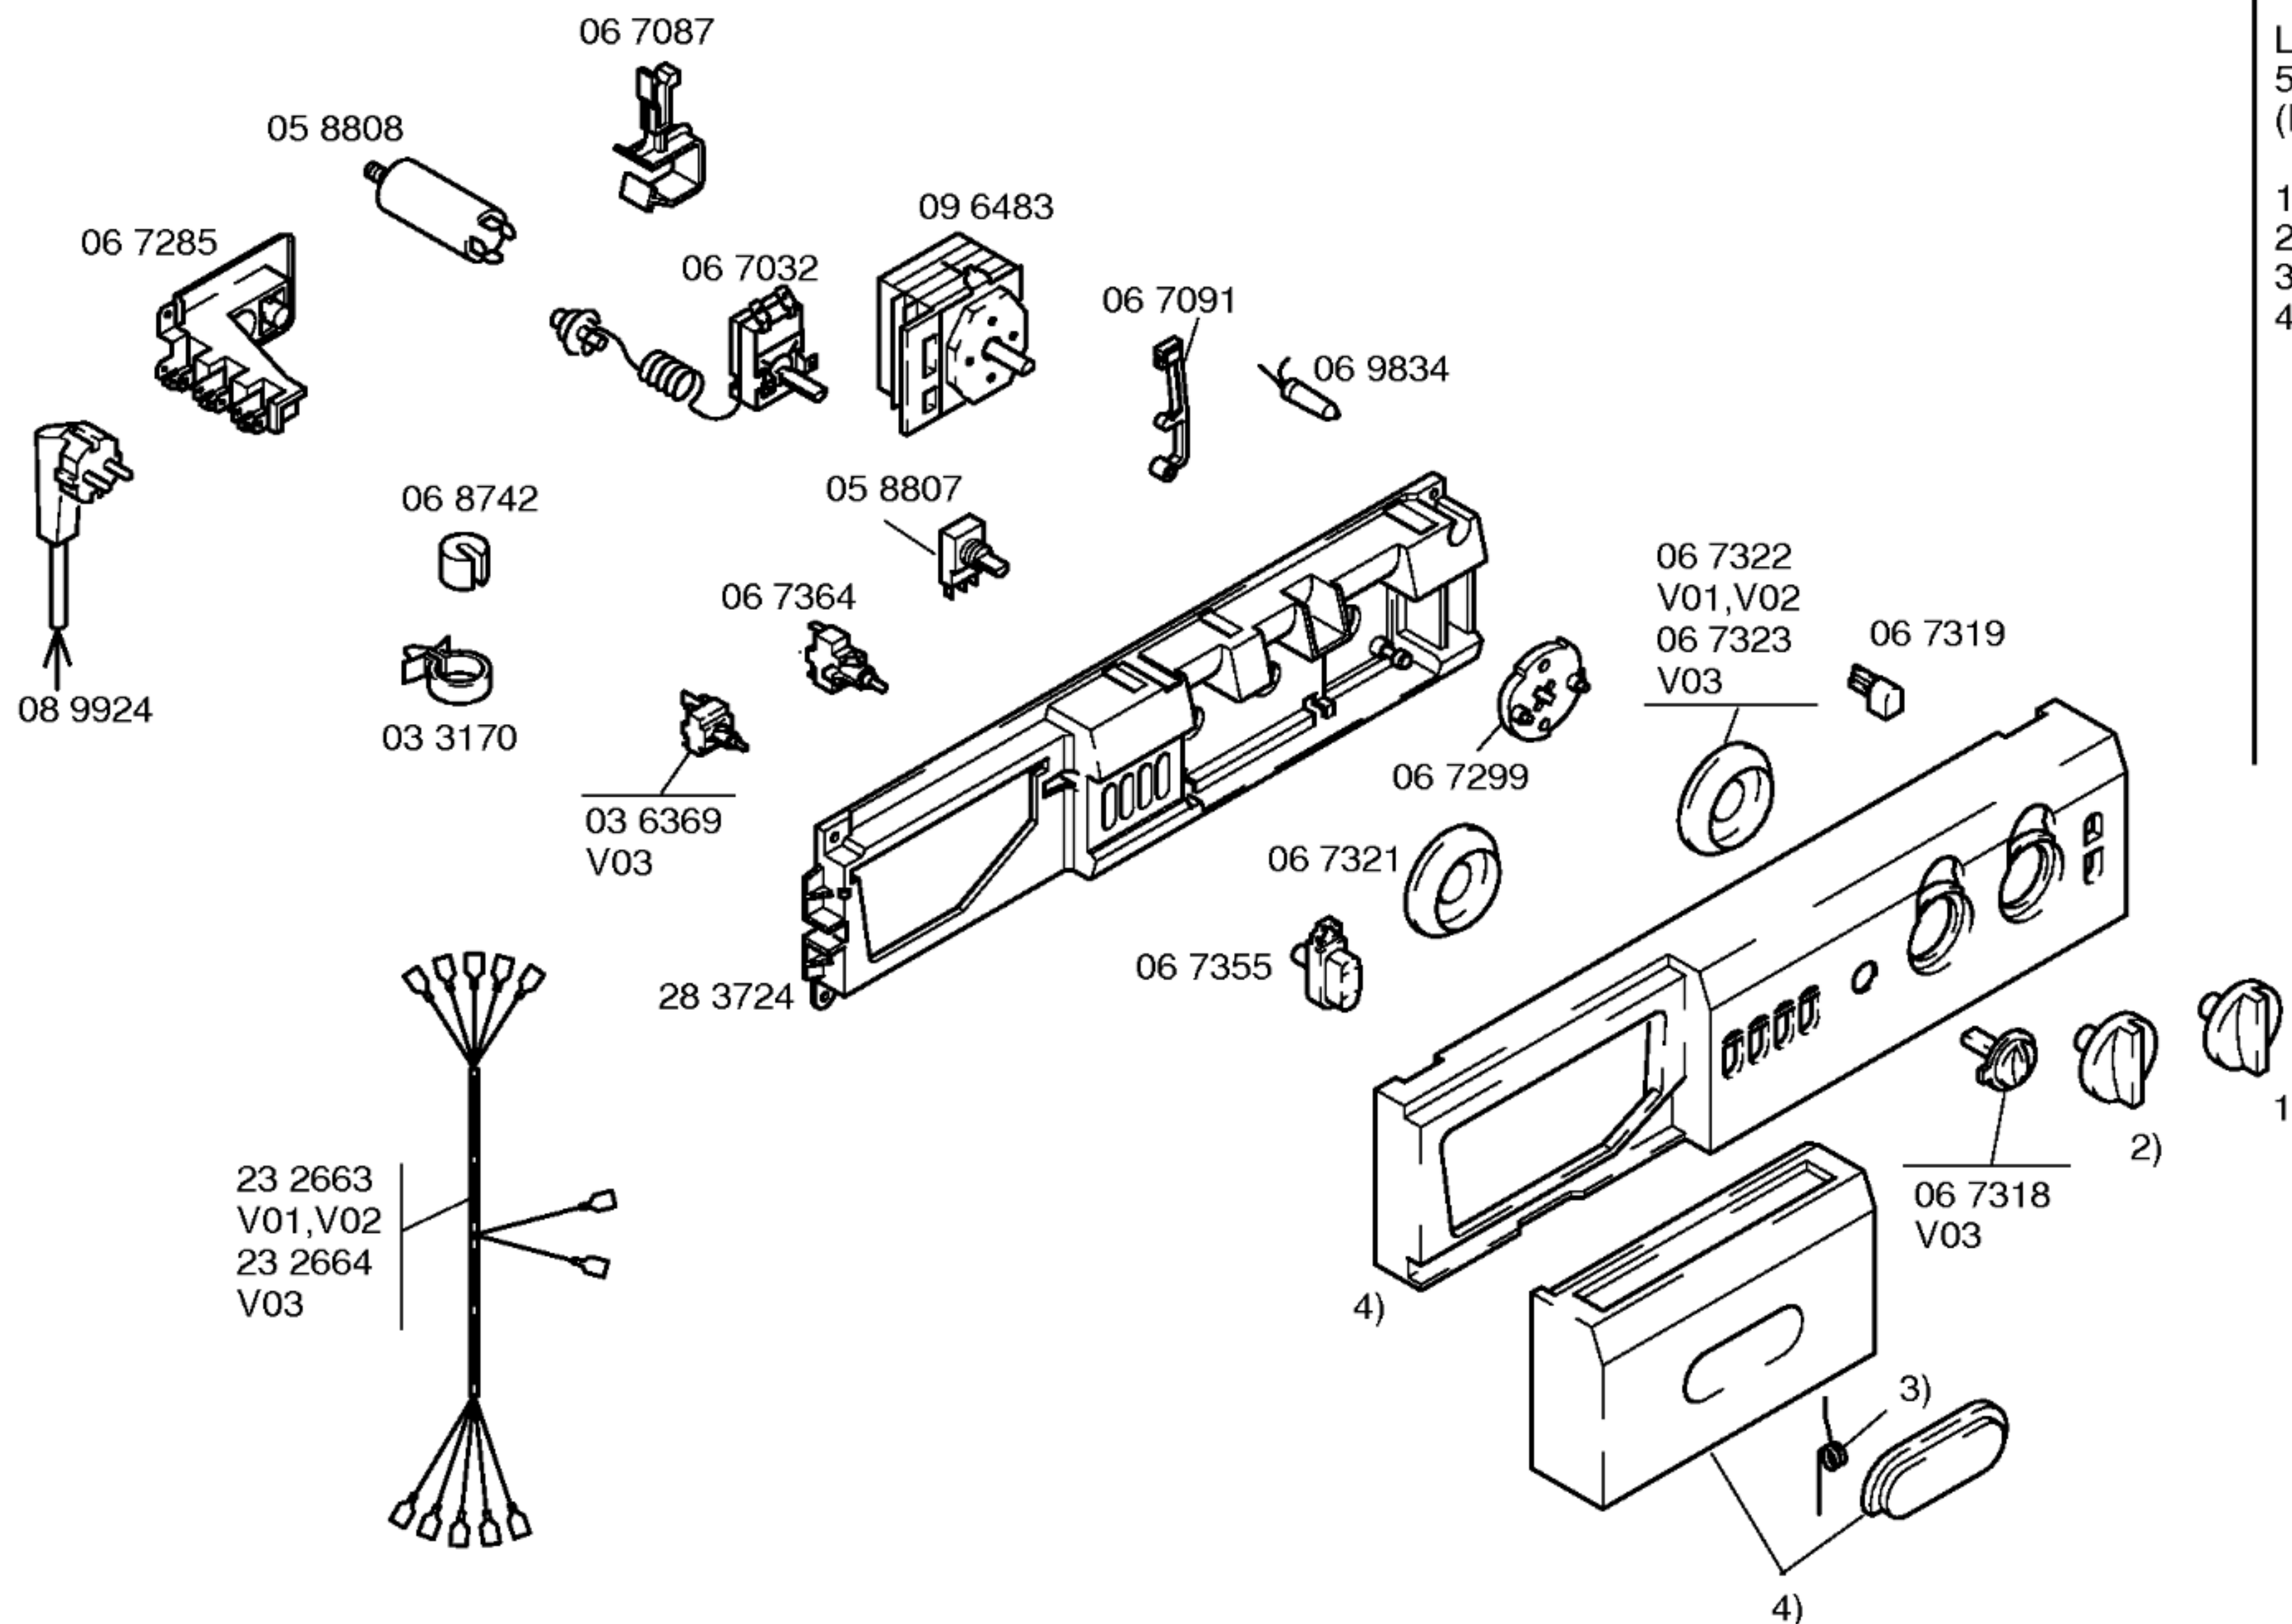


Libro de instrucciones
51 9790
(E)


- 1) 06 7317
- 2) 06 7320
- 3) 06 9523
- 4) 23 2434
V01
23 2430
V02
23 2432
V03

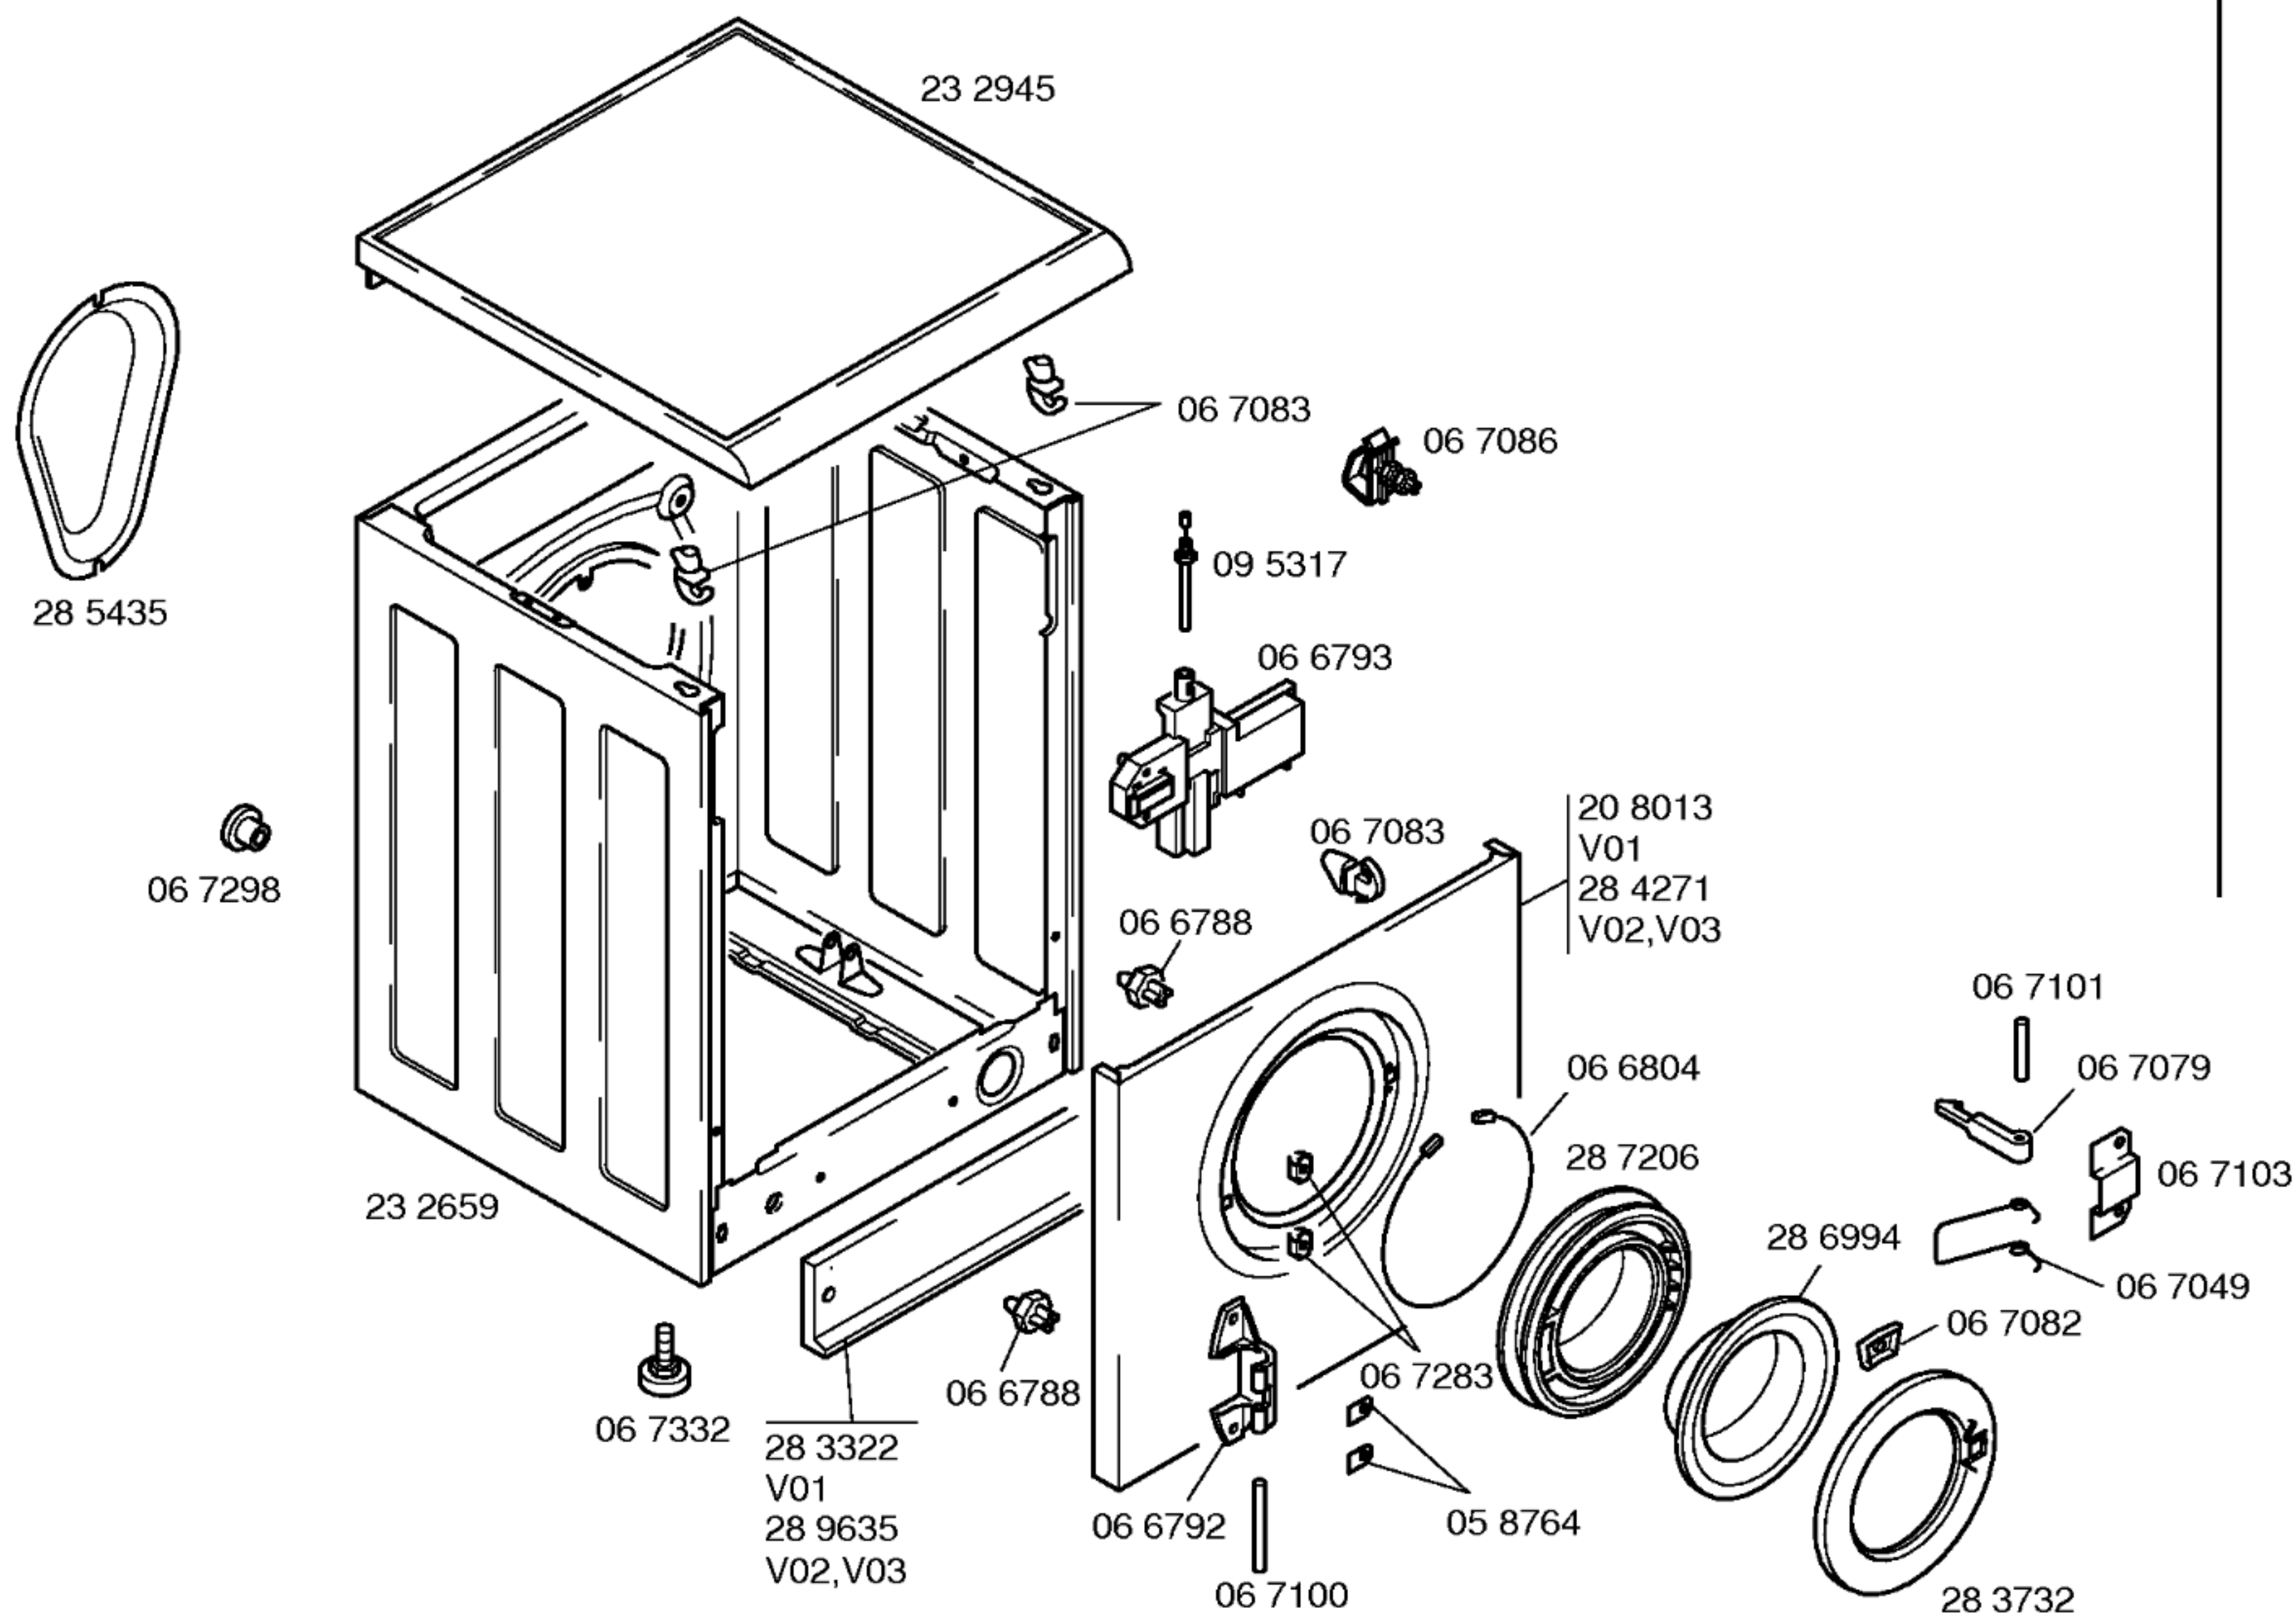

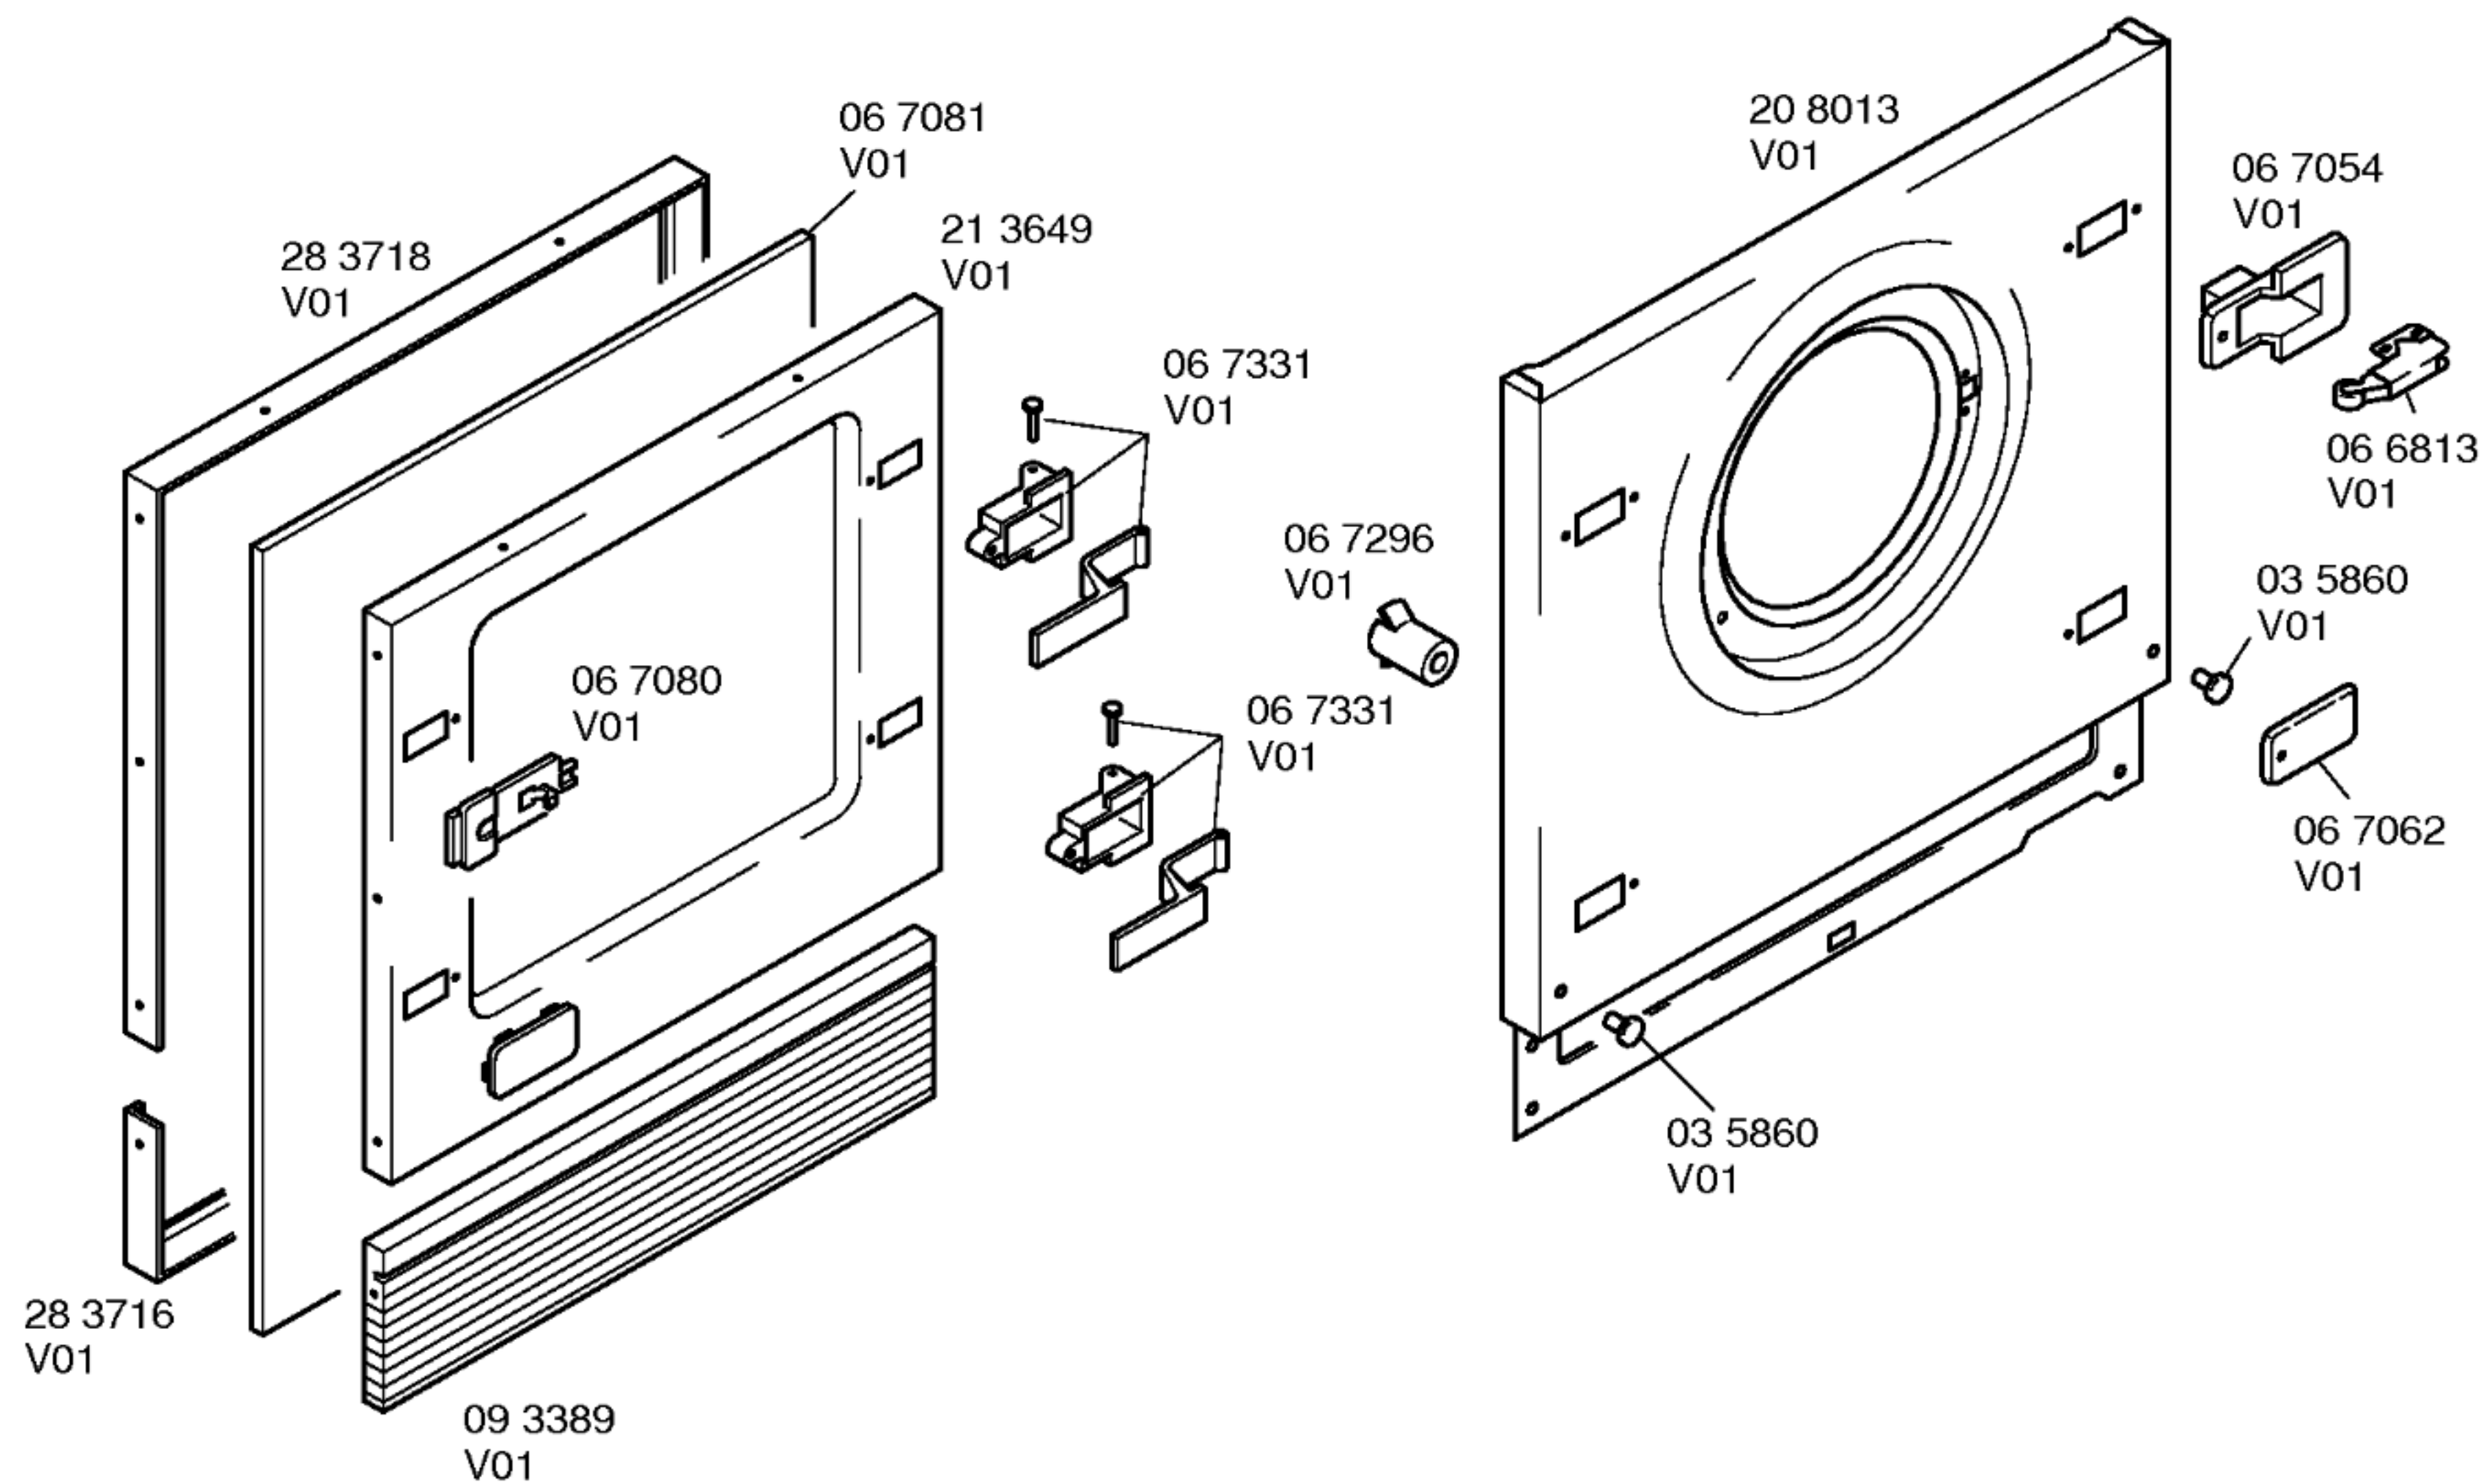

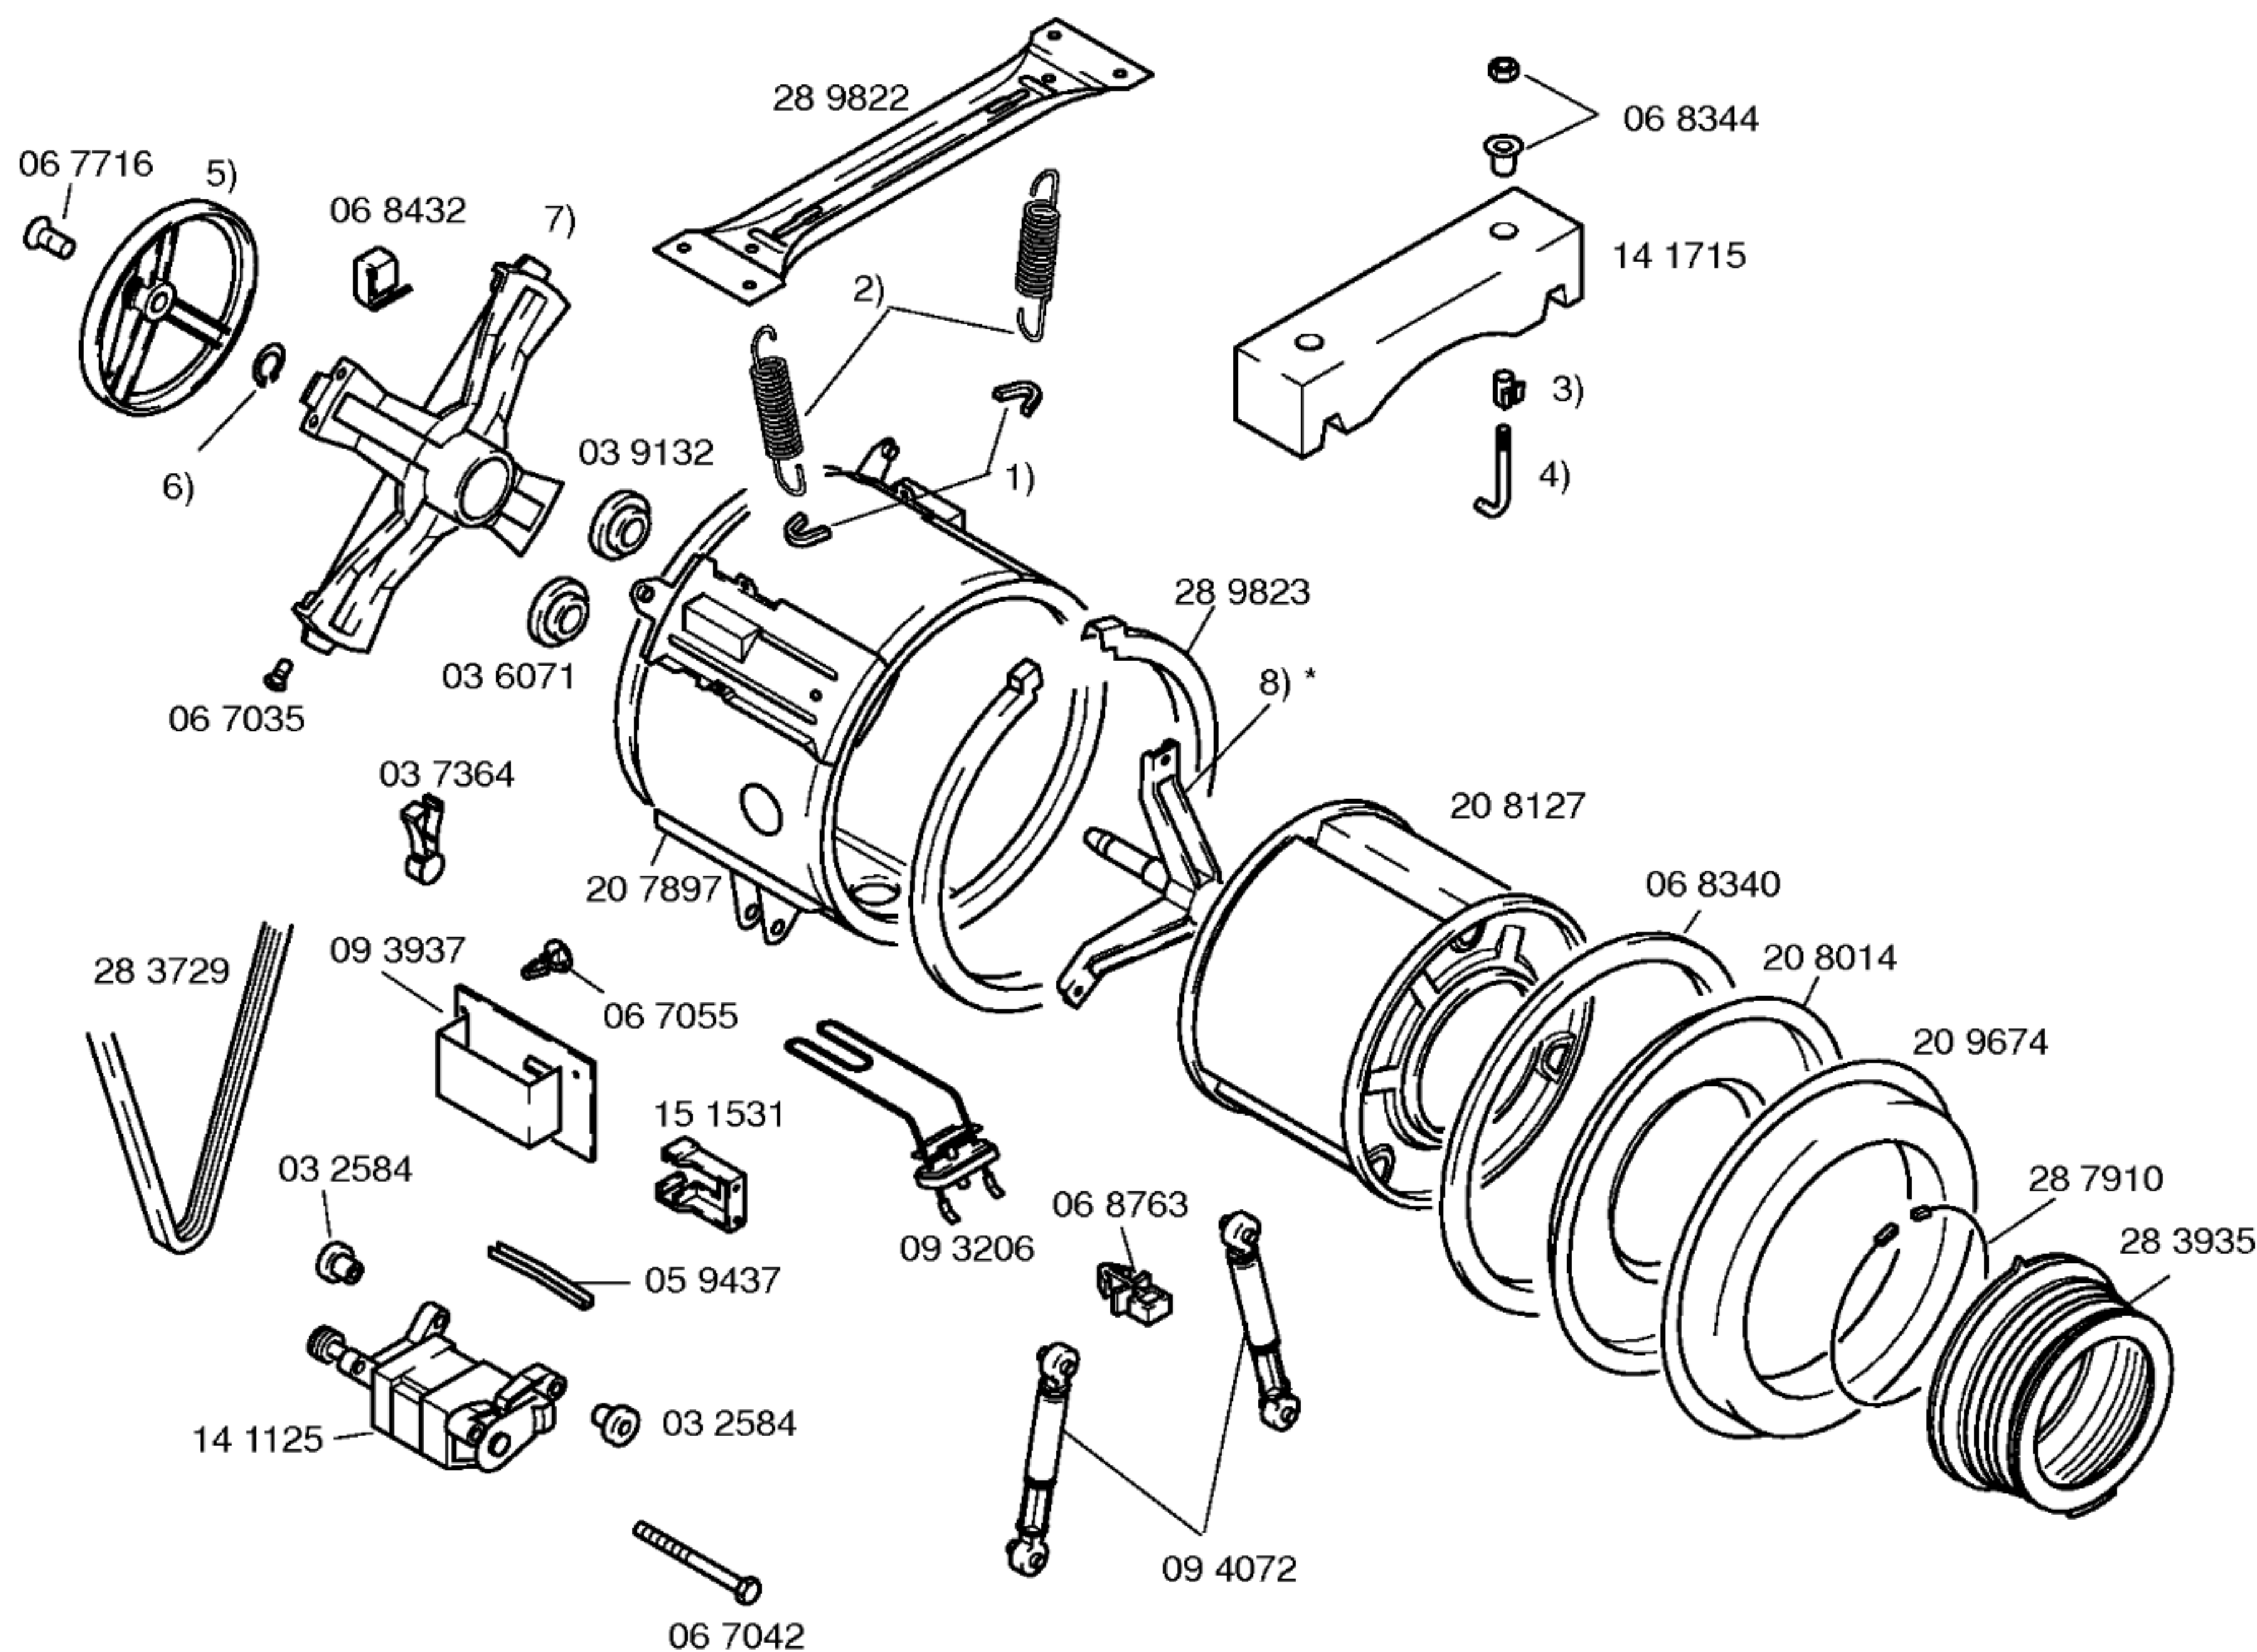

- 1) 06 7297
 - 2) 06 9605
 - 3) 06 7060
 - 4) 06 8344
 - 5) 09 3390
(850 r.p.m.)
V01,V02
09 3391
(1200 r.p.m.)
V03
 - 6) 06 8338
(850 r.p.m.)
V01,V02
06 6789
(1200 r.p.m.)
V03
 - 7) 28 3725
(850 r.p.m.)
V02,V01
28 3726
(1200 r.p.m.)
V03
 - 8) 28 3710
(850 r.p.m.)
V01,V02
28 3711
(1200 r.p.m.)
V03
- * Conj. tornill. tambor
05 9132

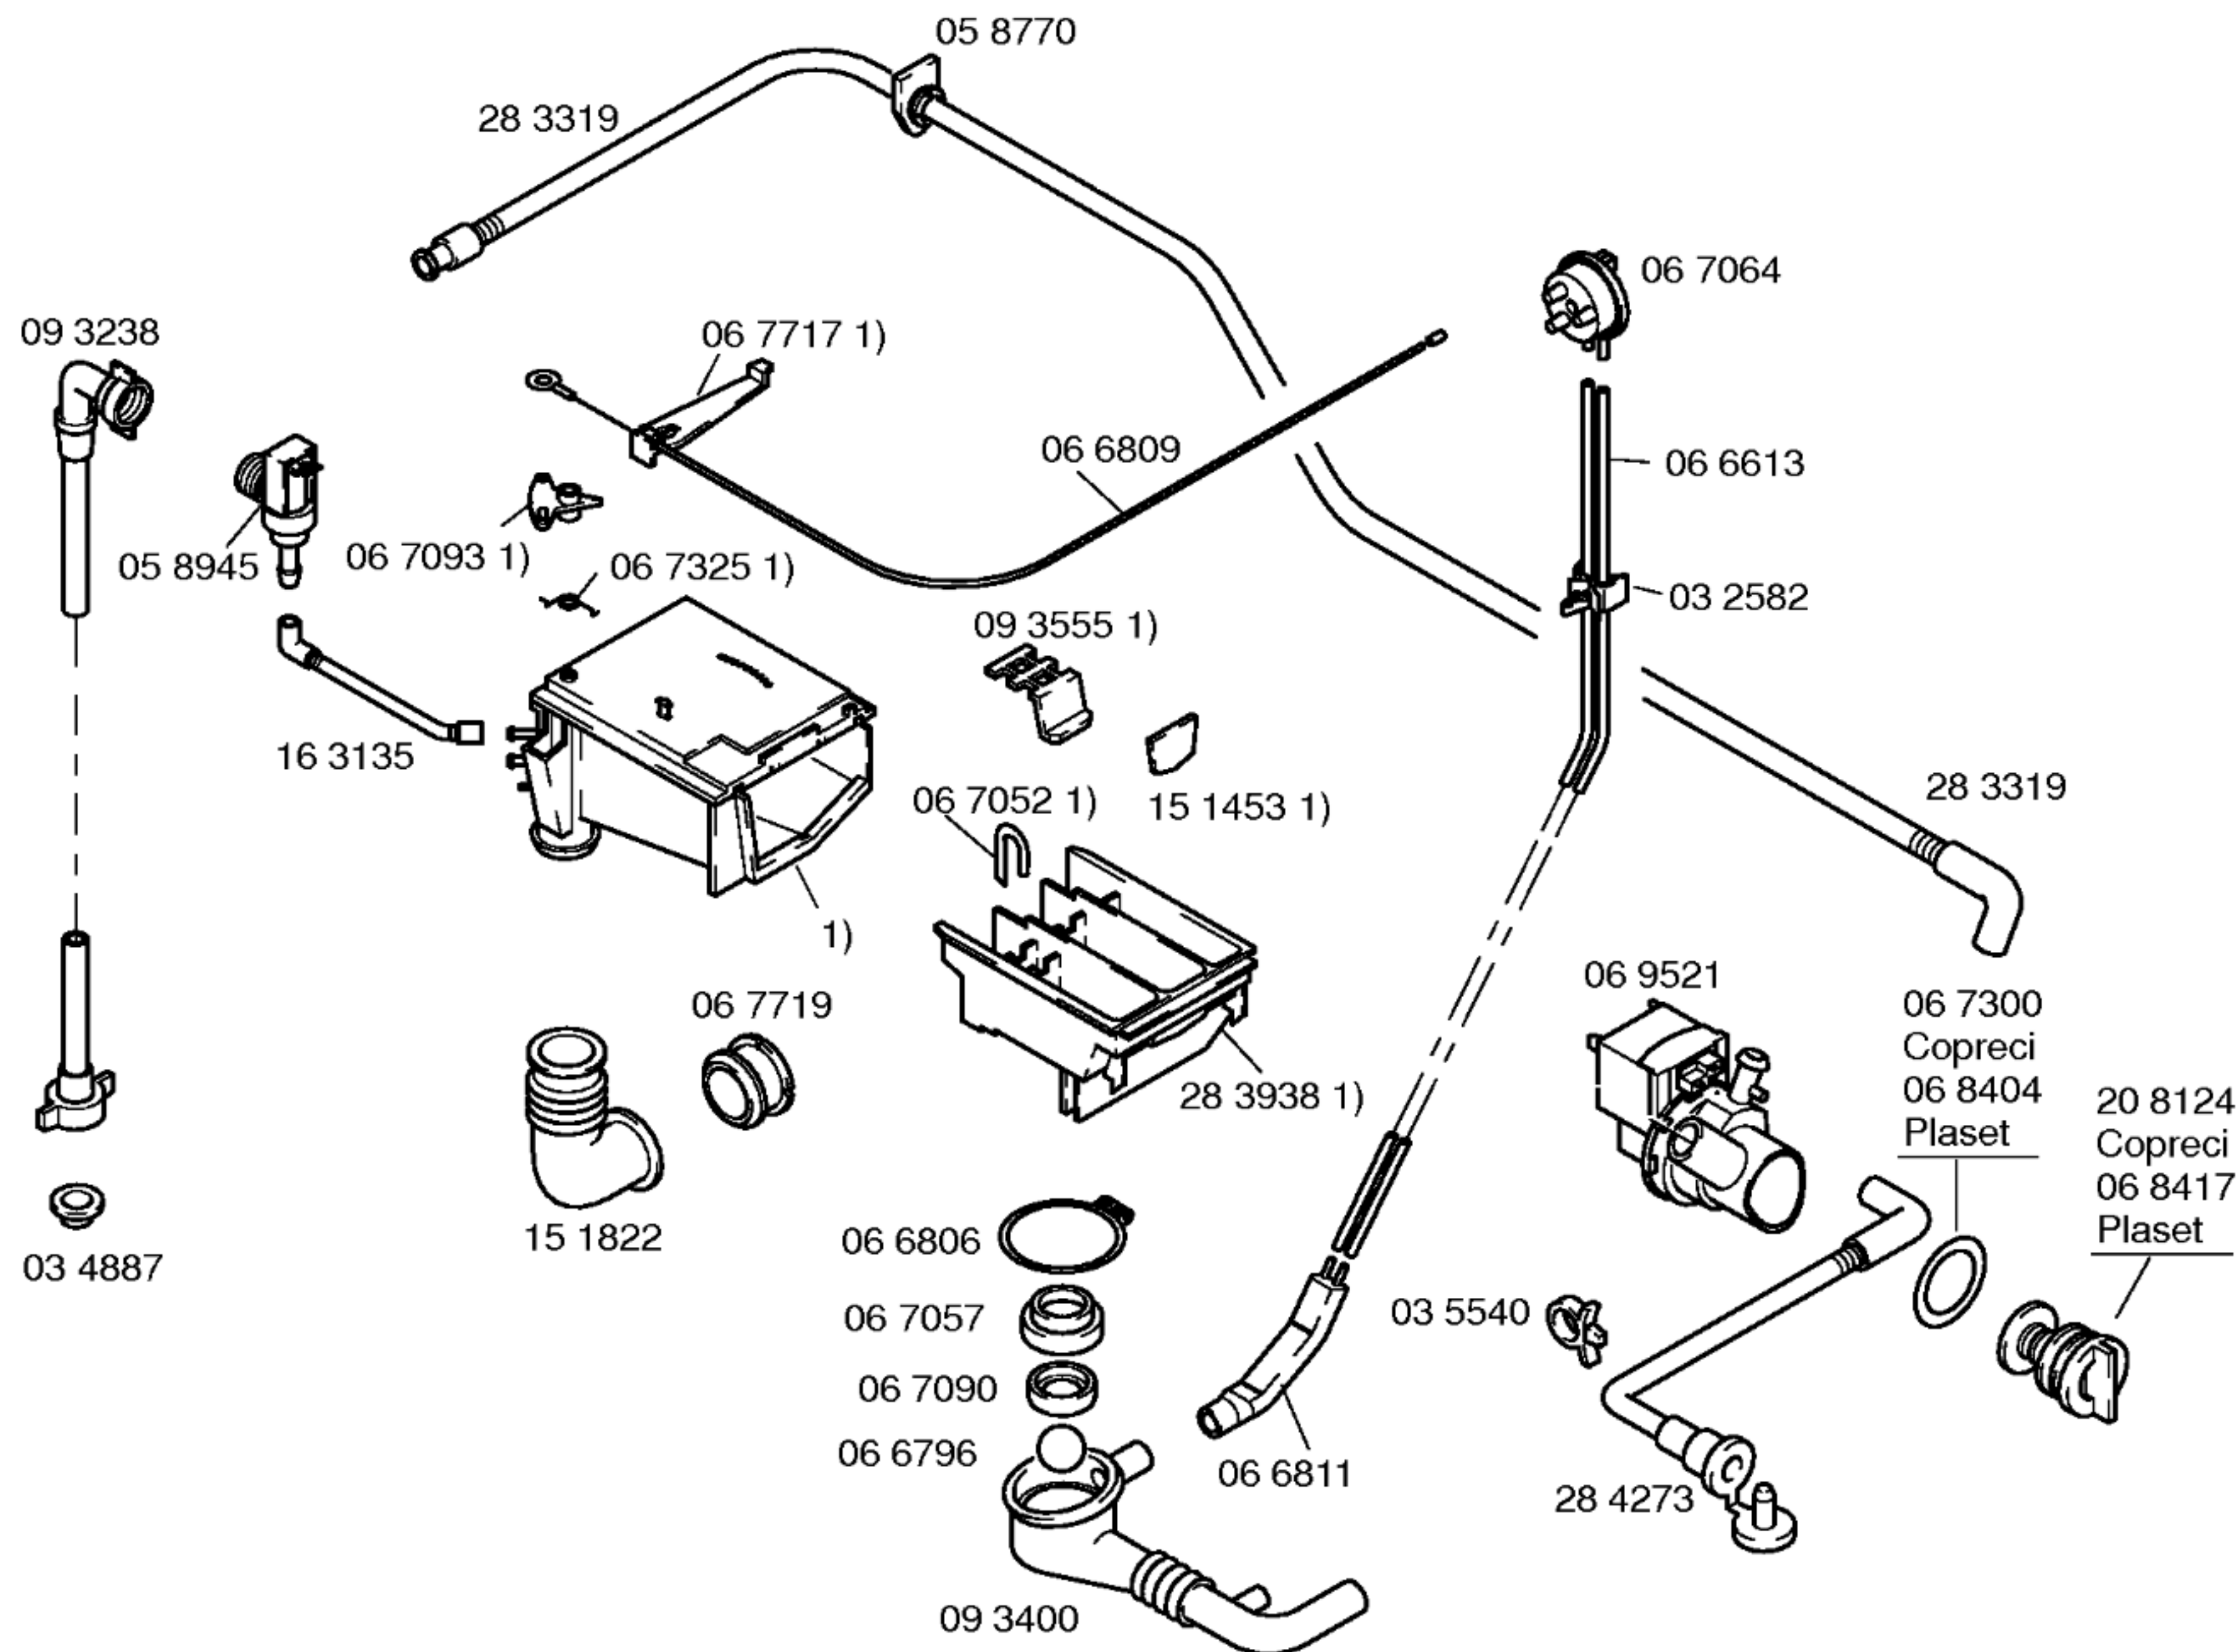

1) 28 7065