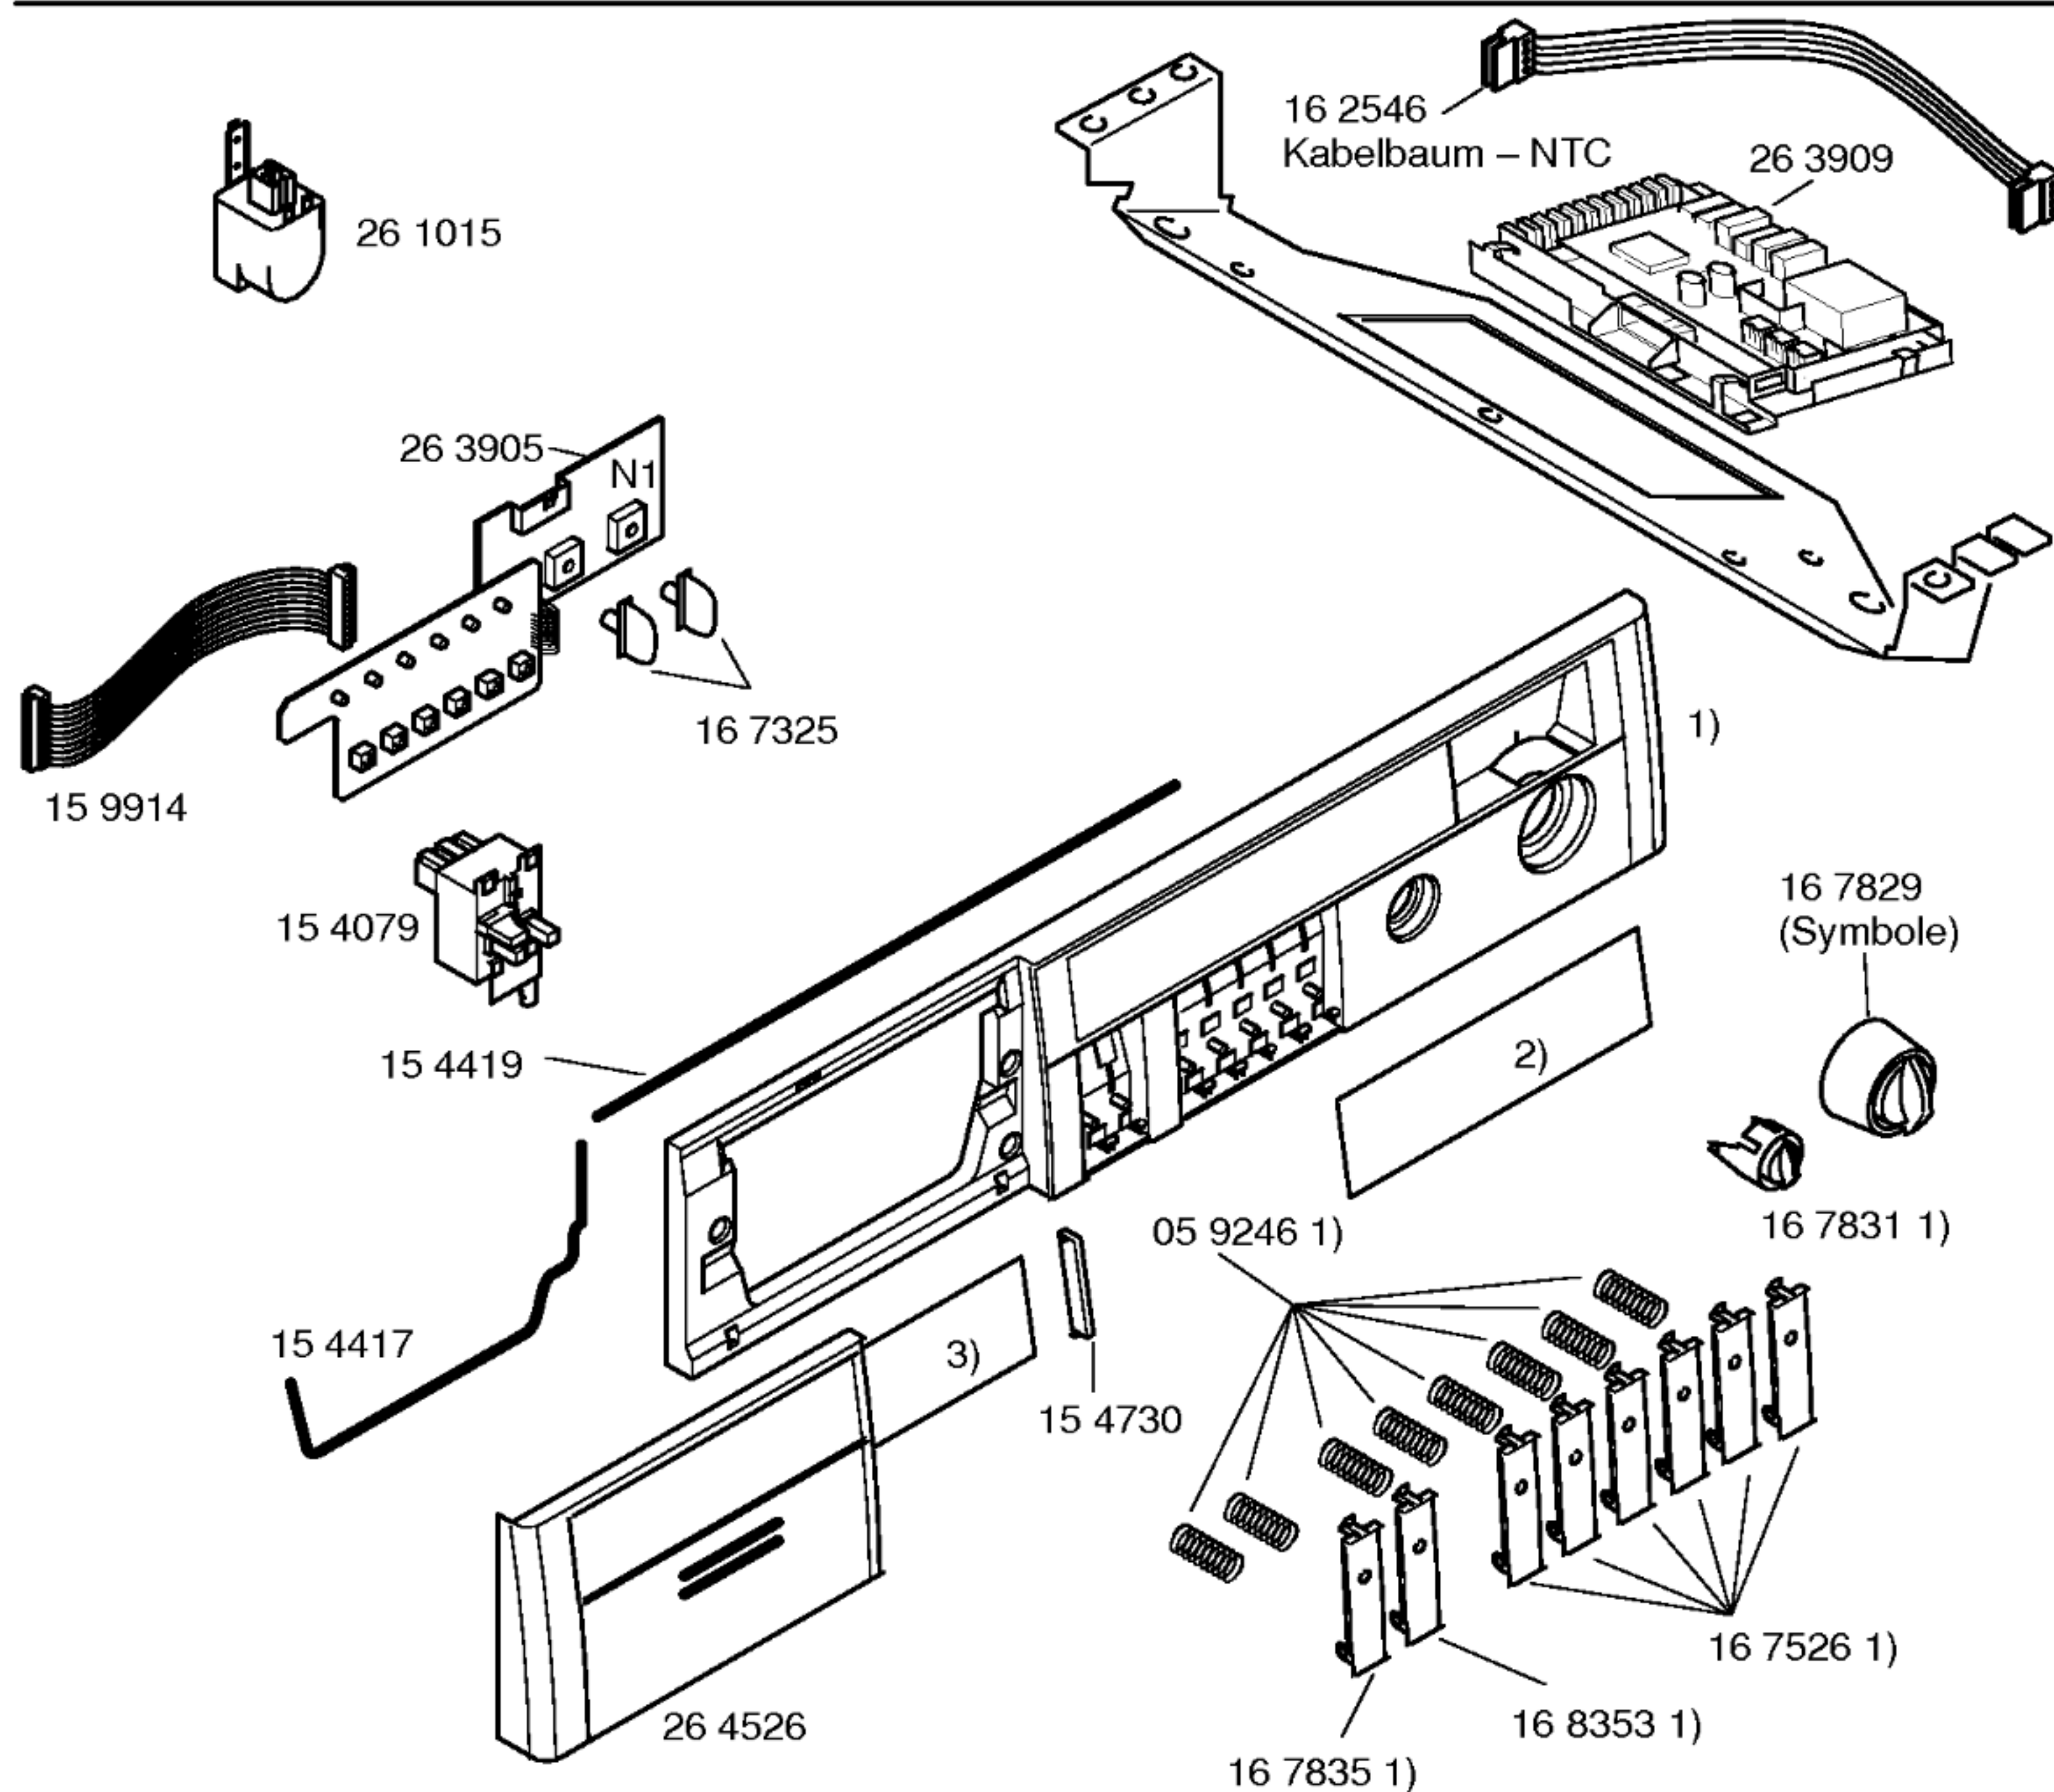




Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 1342 (S) 52 1344 (SF)
52 1343 (N) 52 1345 (DK)

Aufstellanweisung
52 0467 (S,N,SF,DK)

Programmtabelle
52 1346 (S) 52 1348 (SF)
52 1347 (N) 52 1349 (DK)

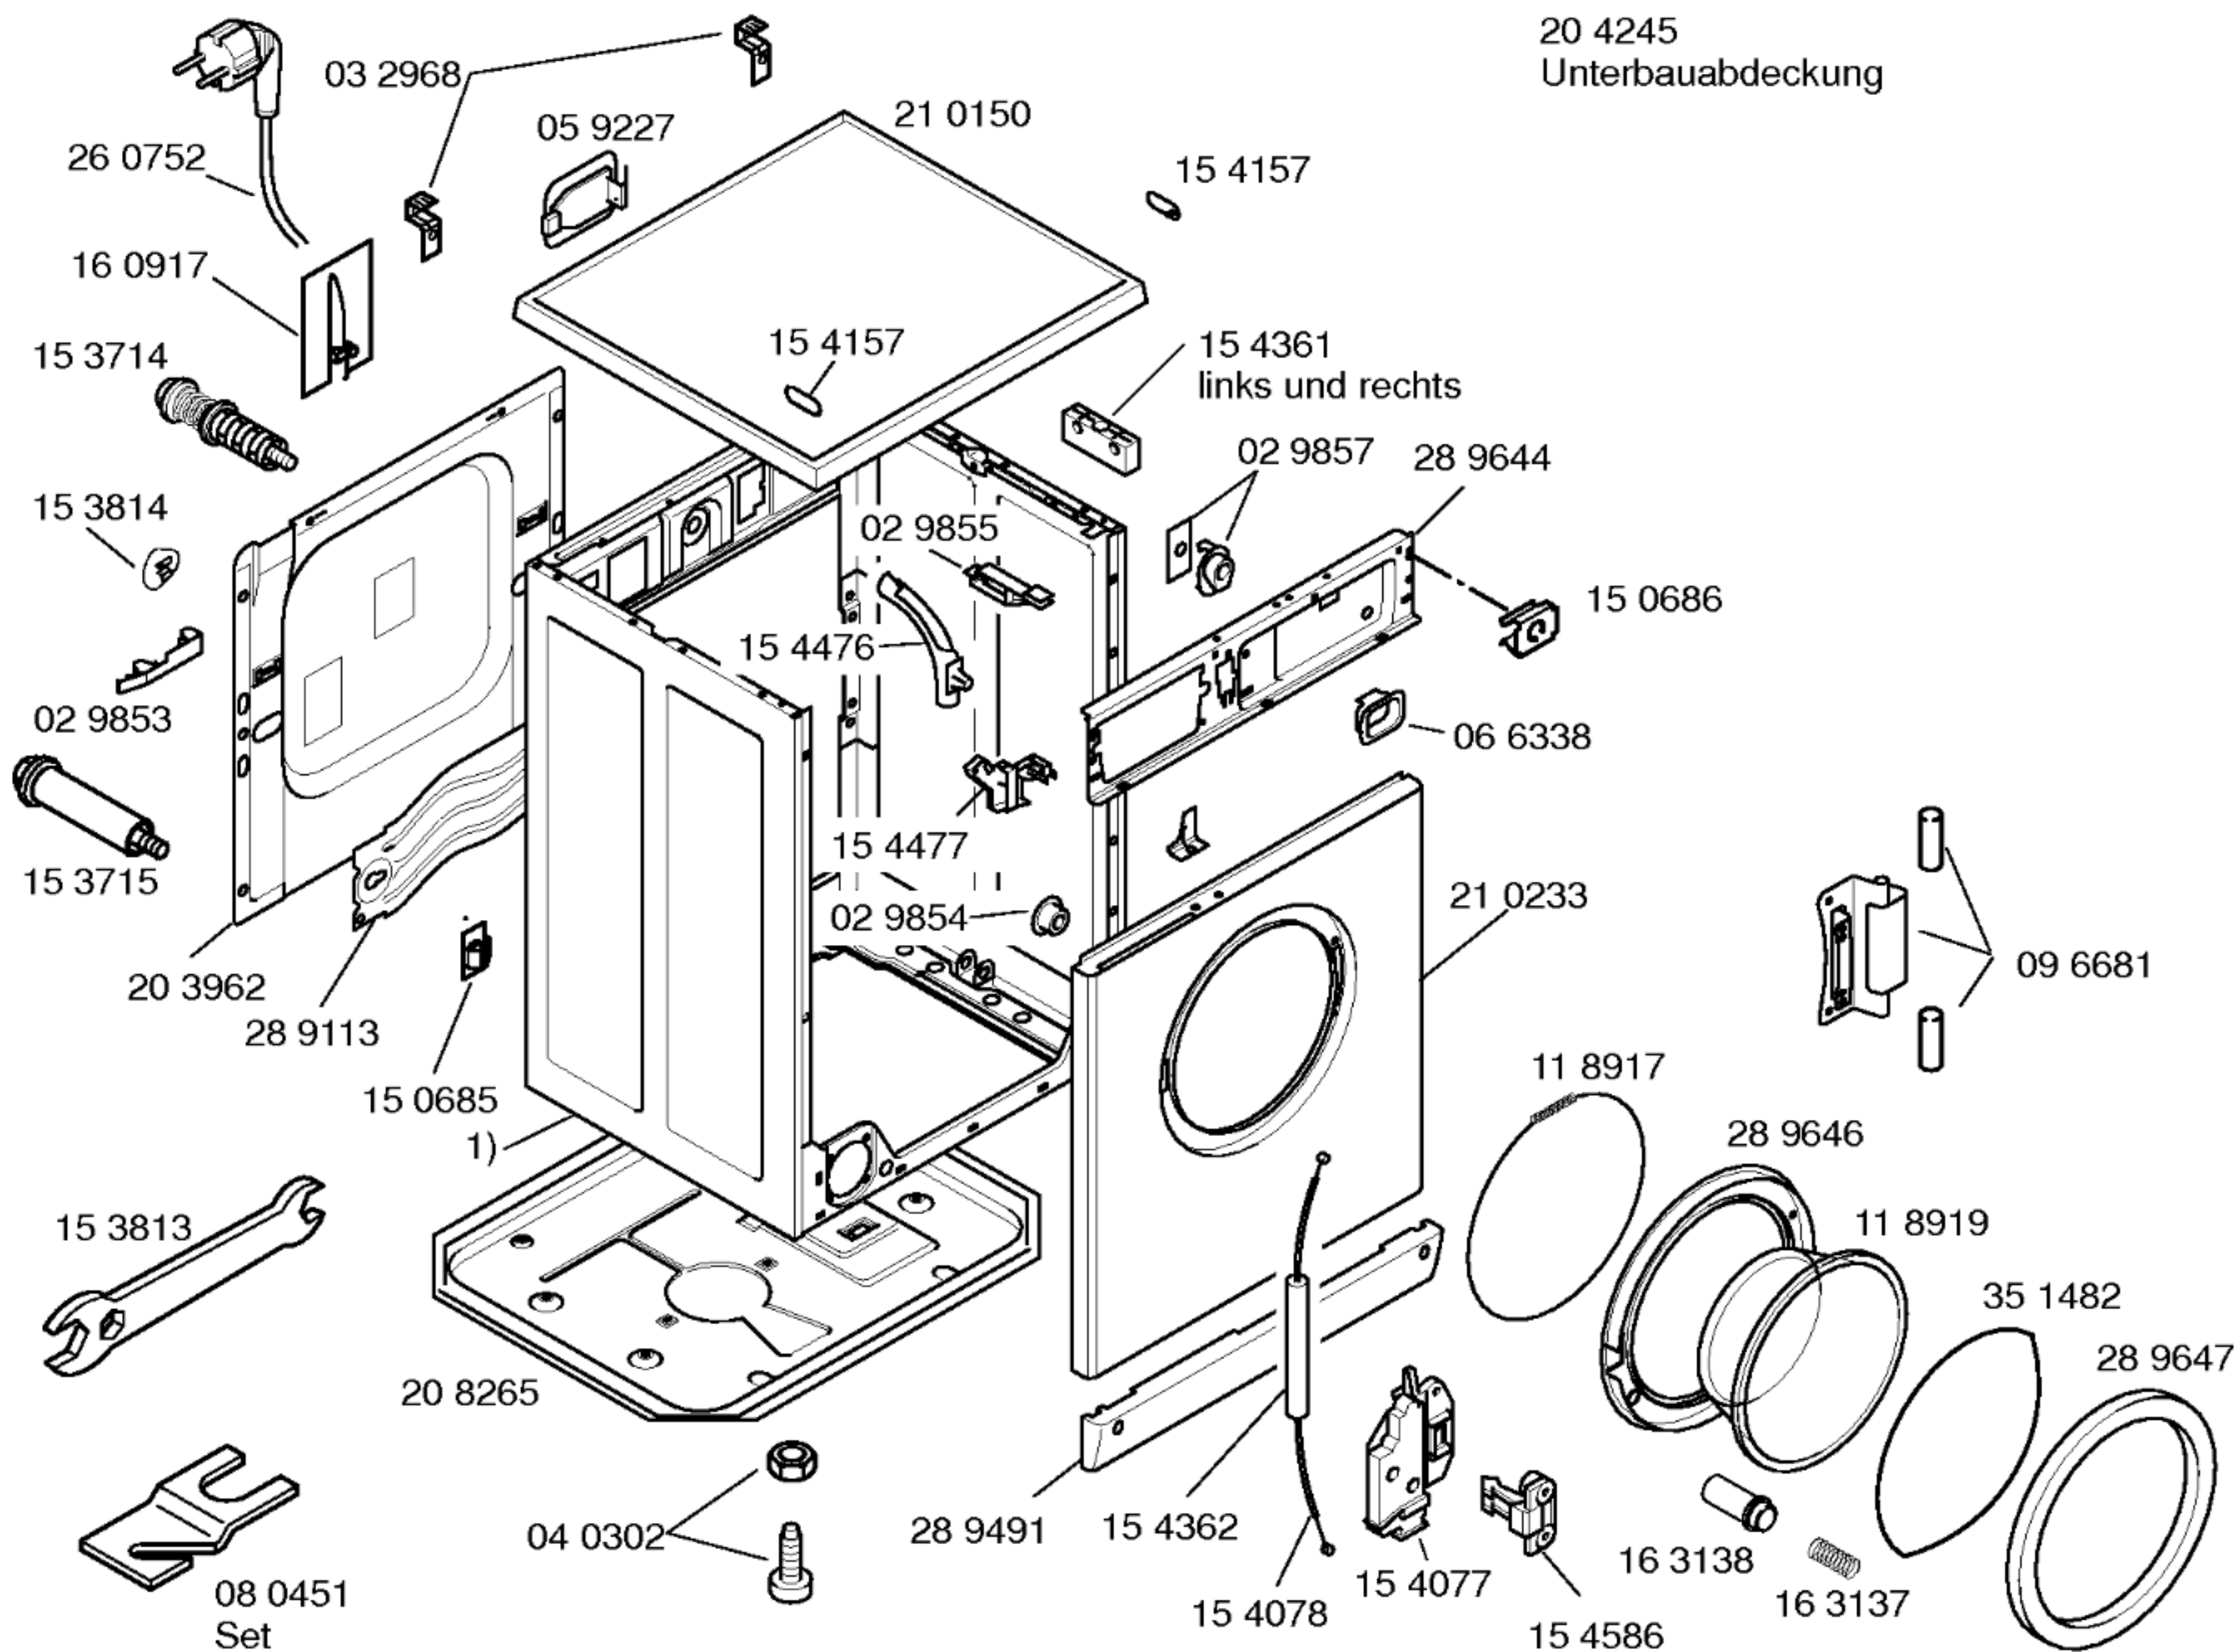
1) Blende komplett
35 1807
Blendeneinlage 2)
mitbestellen

2) 35 1808 (S)
35 1809 (N)
35 1810 (SF)
35 1811 (DK)

3) 26 4527 (S)
26 4528 (N)
26 4529 (SF)
26 4530 (DK)

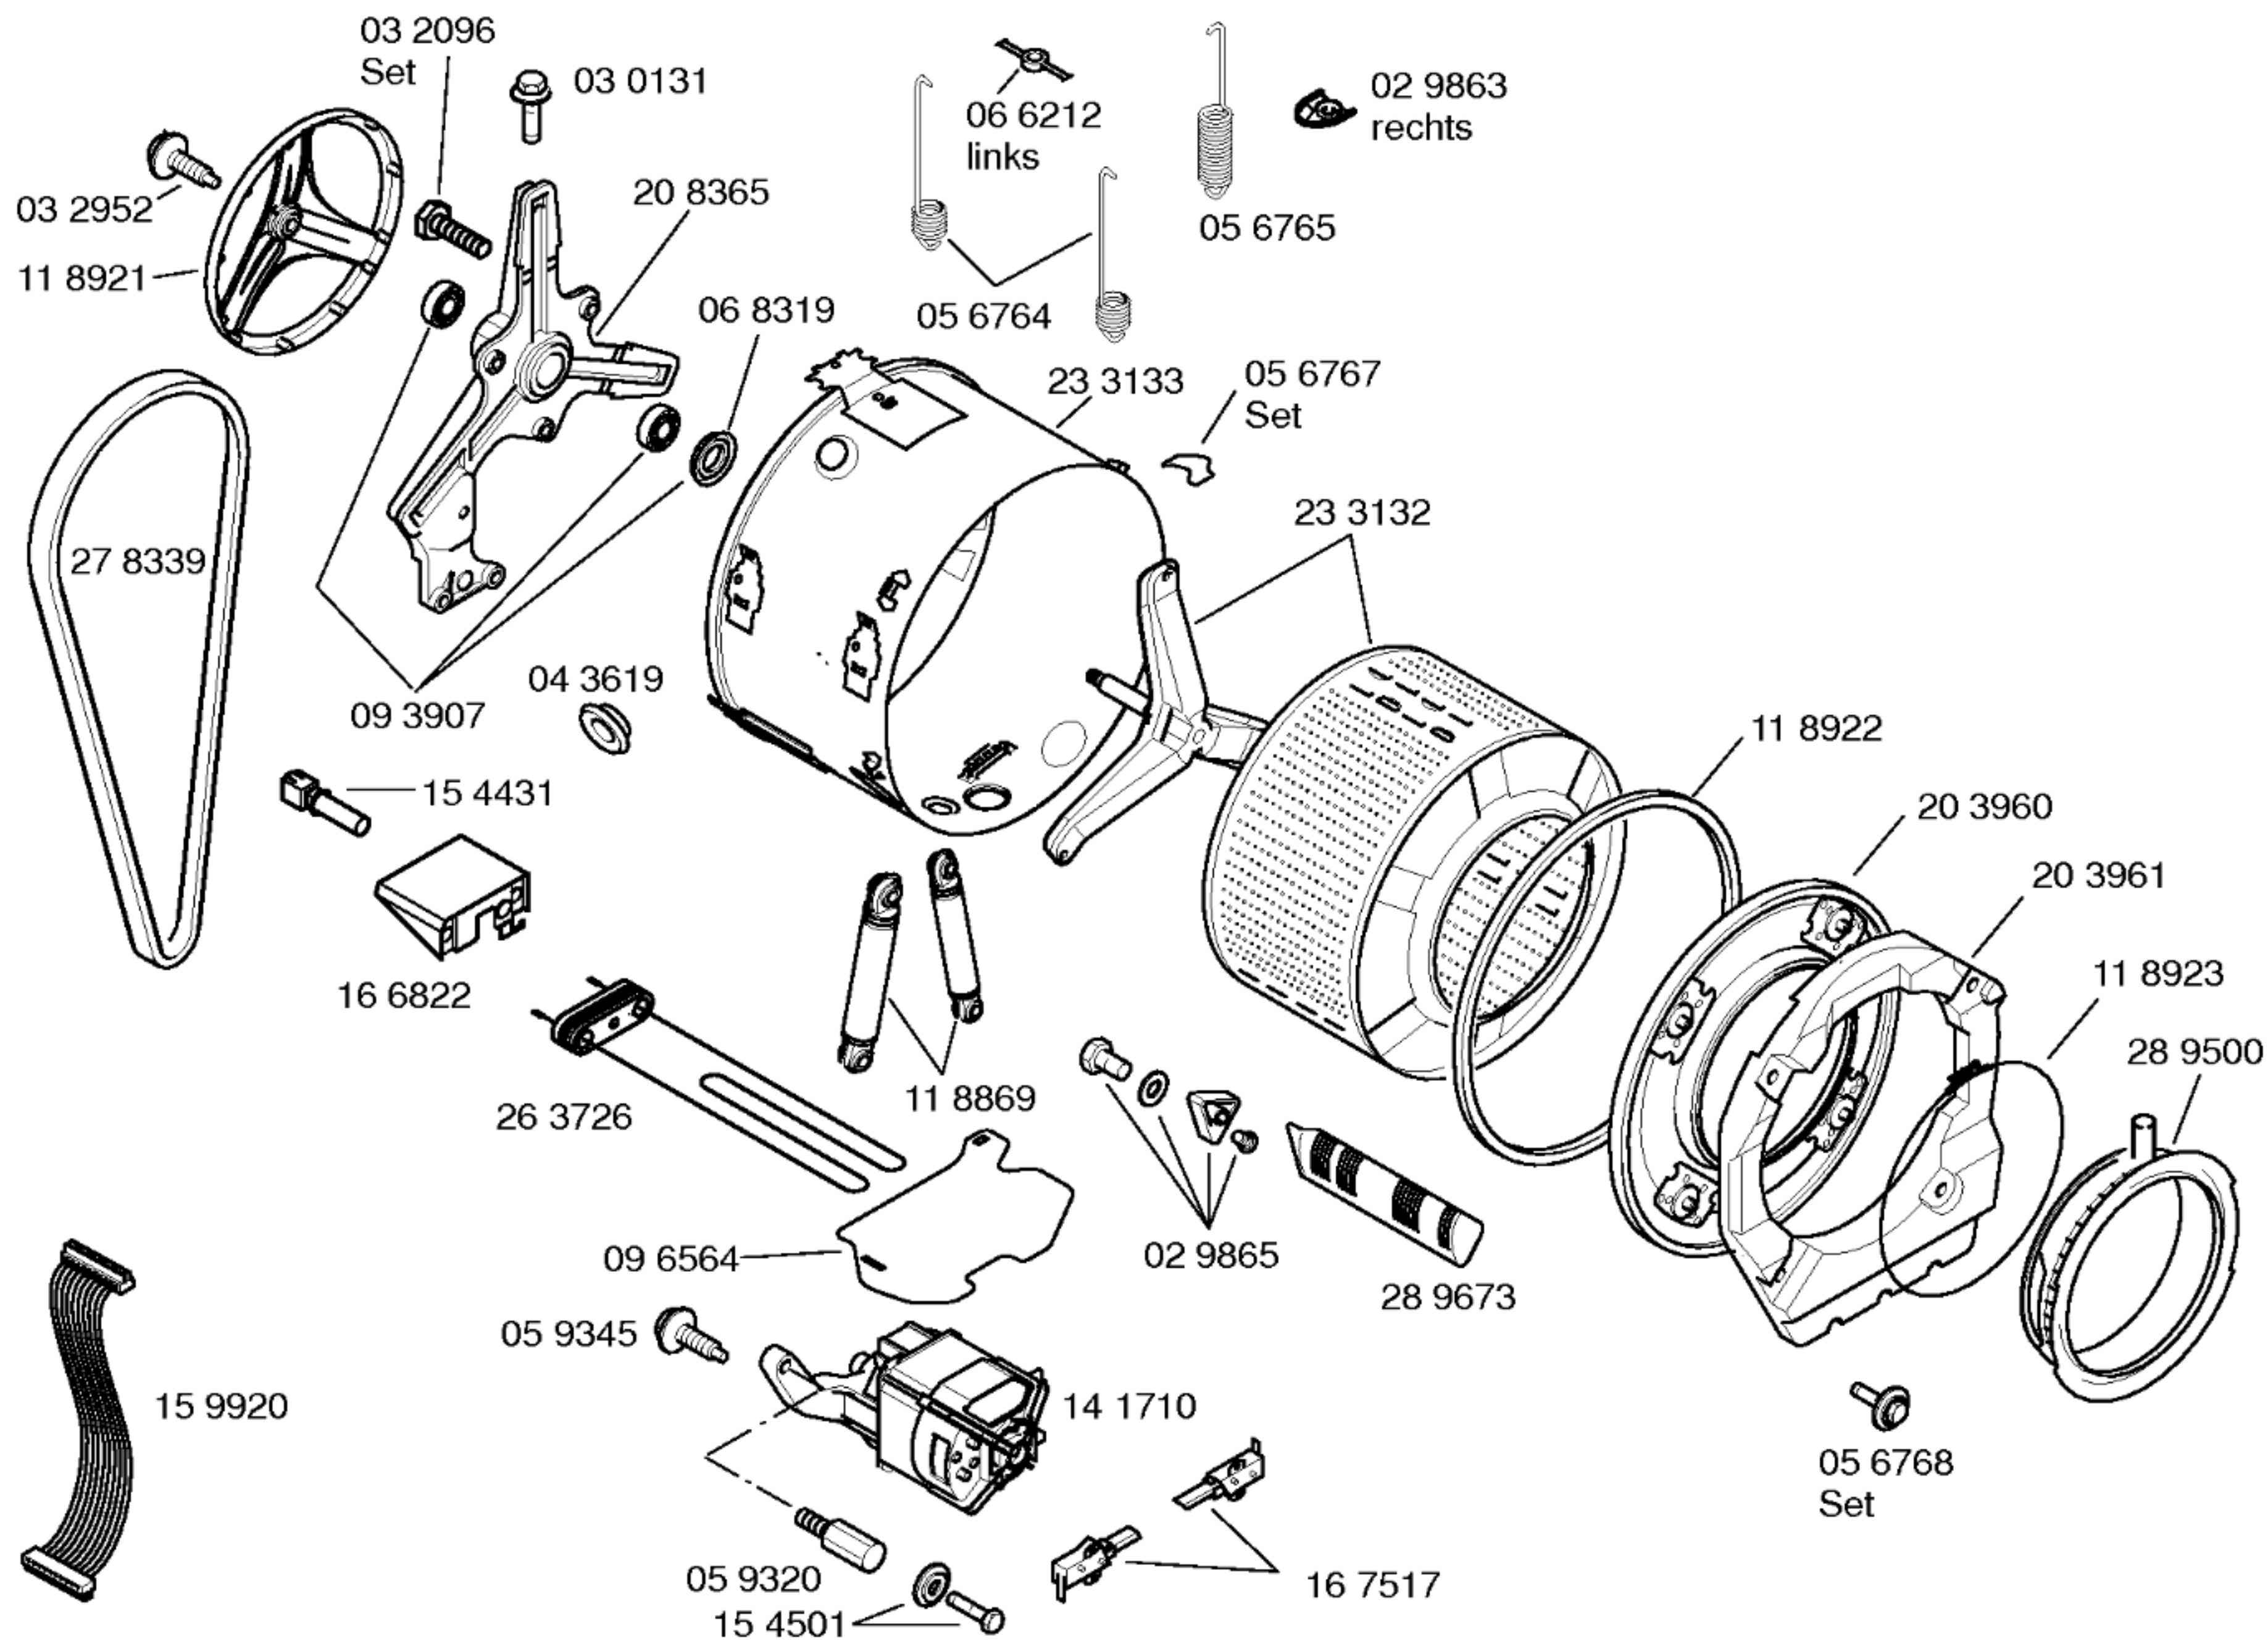
**BOSCH**

Exclusive F1100 – WFK2281SN/01

WASCHGERÄTE
Waschvollautomaten

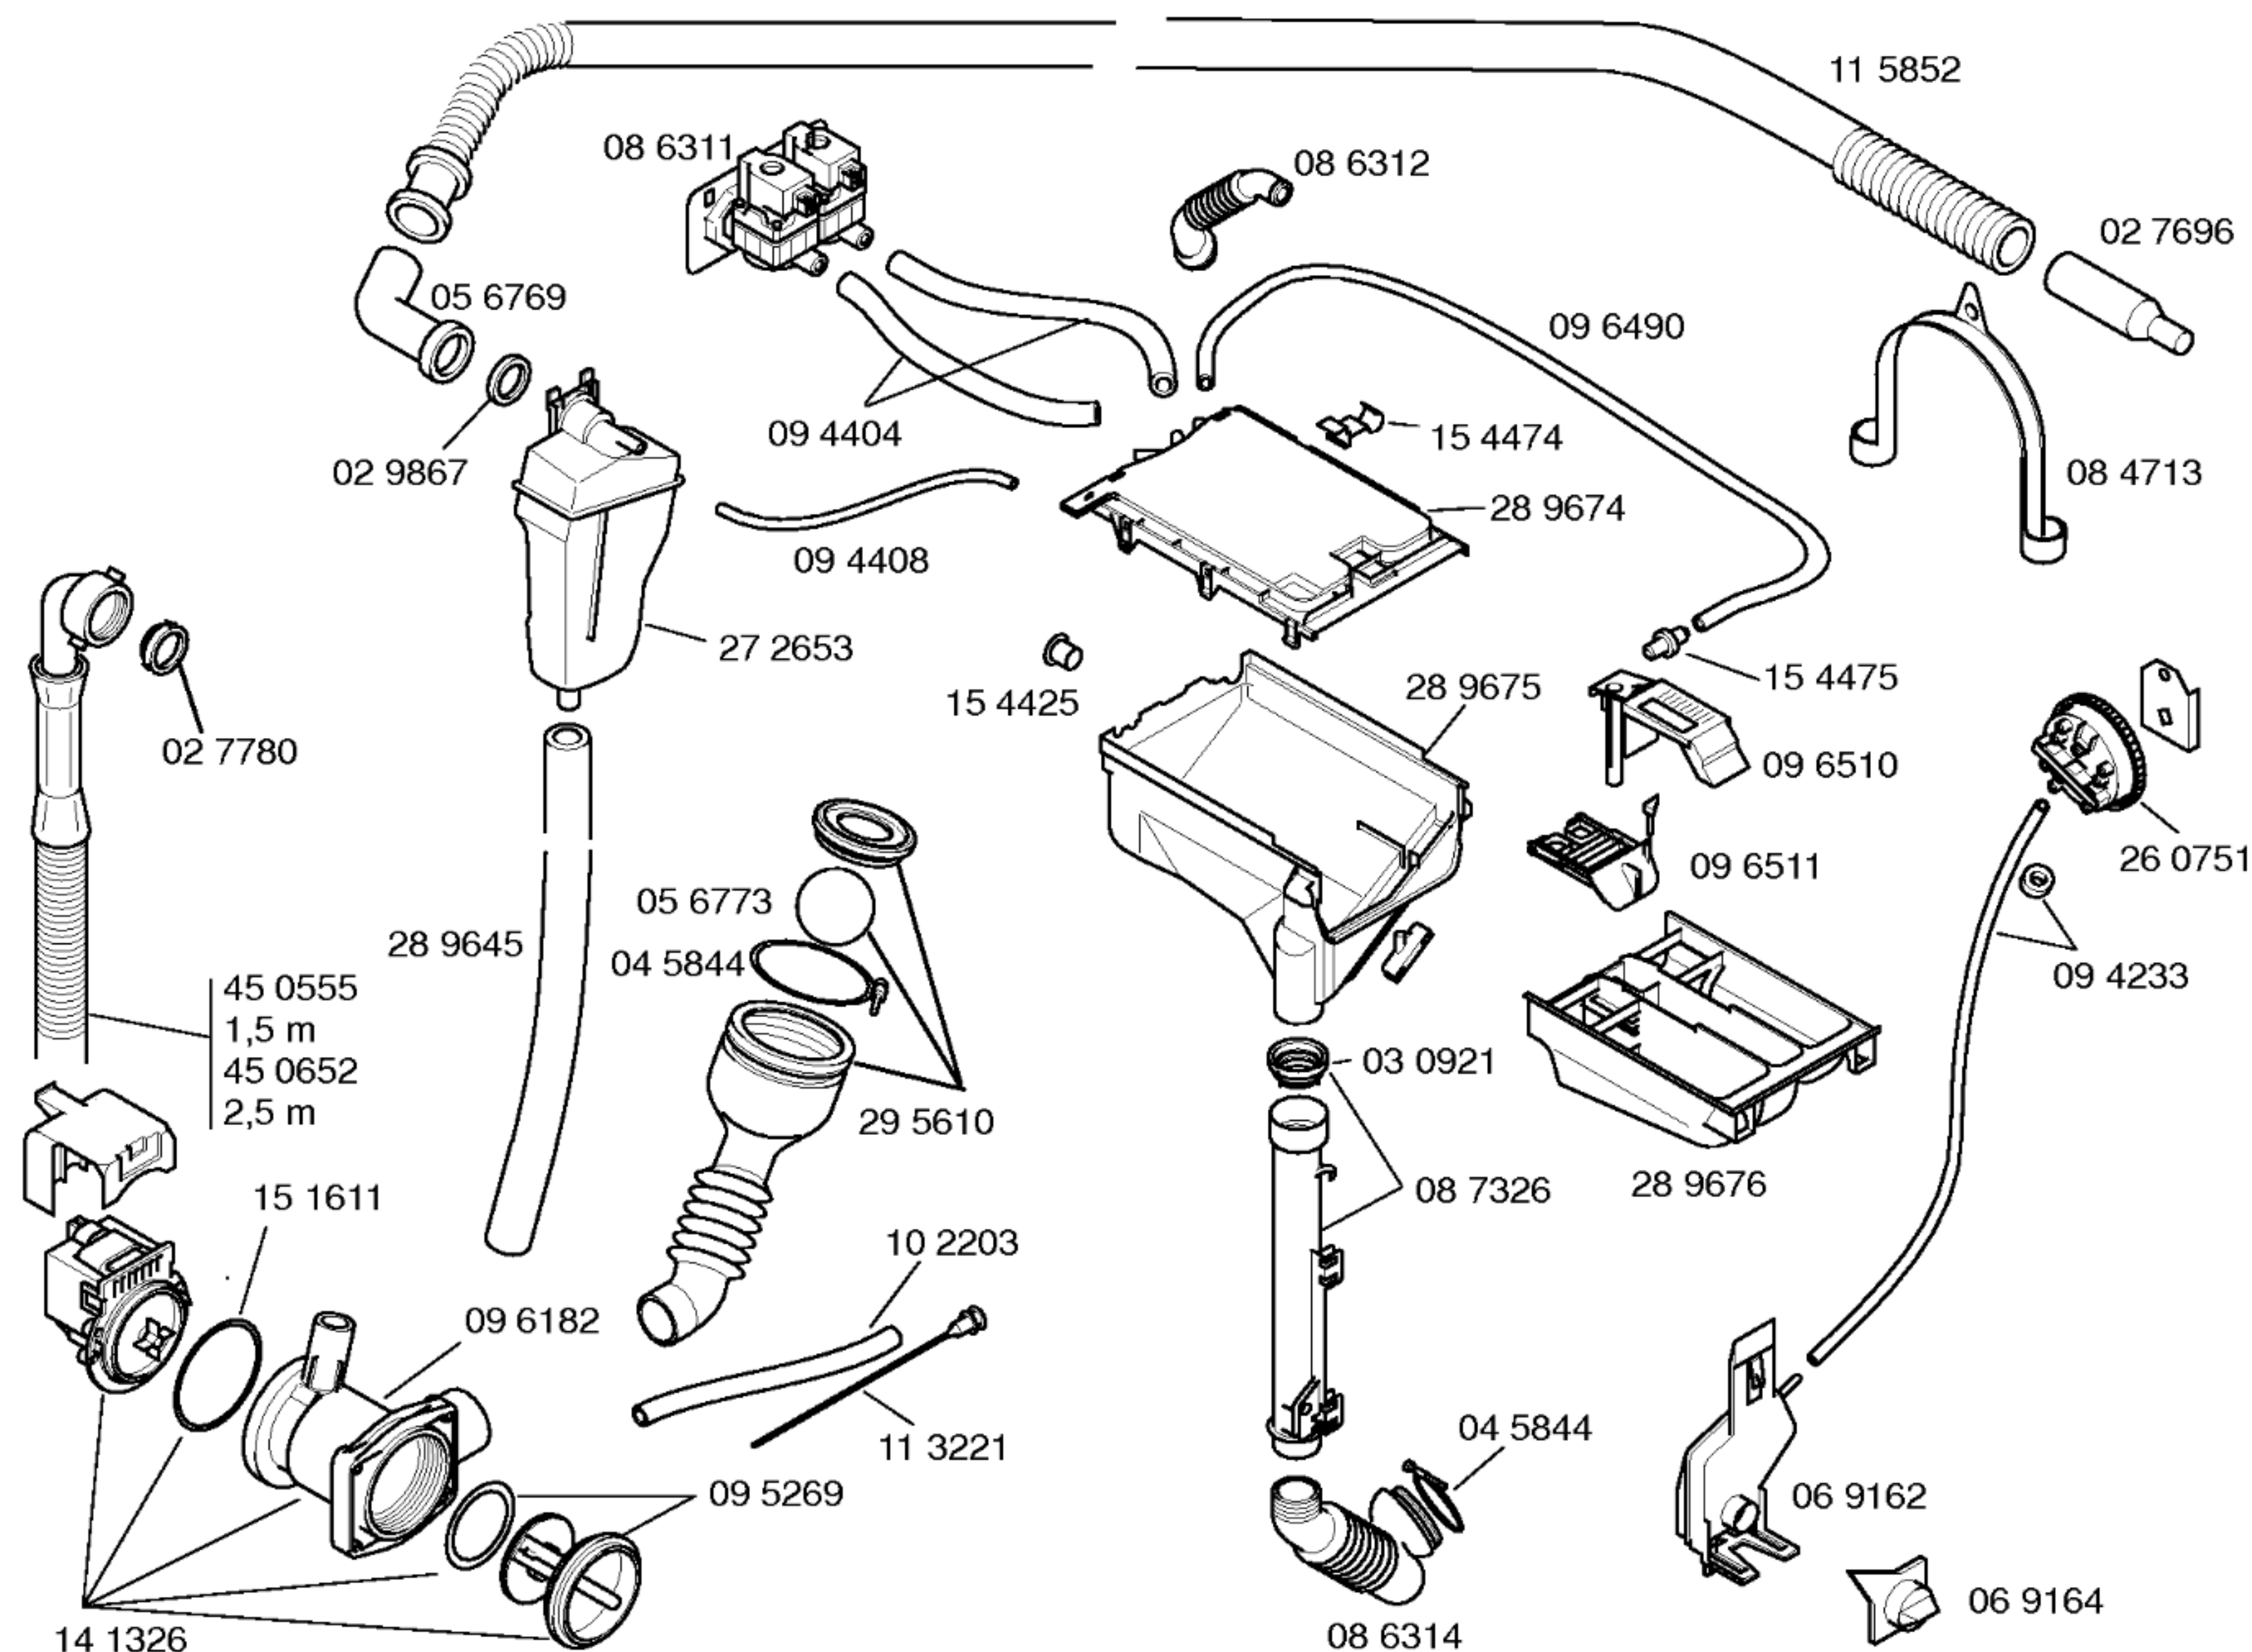
**BOSCH**

Exclusive F1100 – WFK2281SN/01

WASCHGERÄTE
WaschvollautomatenMat. – Nr. – Konstante
3740

**BOSCH**

Exclusive F1100 – WFK2281SN/01

WASCHGERÄTE
WaschvollautomatenMat. – Nr. – Konstante
3740