


**BOSCH**

WFK 2430 – WFK2430/12-V01
 WFK 2430 – WFK2430DD/12-V02
 WFK 2430 – WFK2430FG/12-V03
 WFK 2430 – WFK2430EE/12-V04

WFK 2430 – WFK2430CH/12-V05
 WFK 2430 – WFK2430NL/12-V06
 WFK 2430 – WFK2430IE/12-V07

WASCHGERÄTE
 Waschvollautomaten

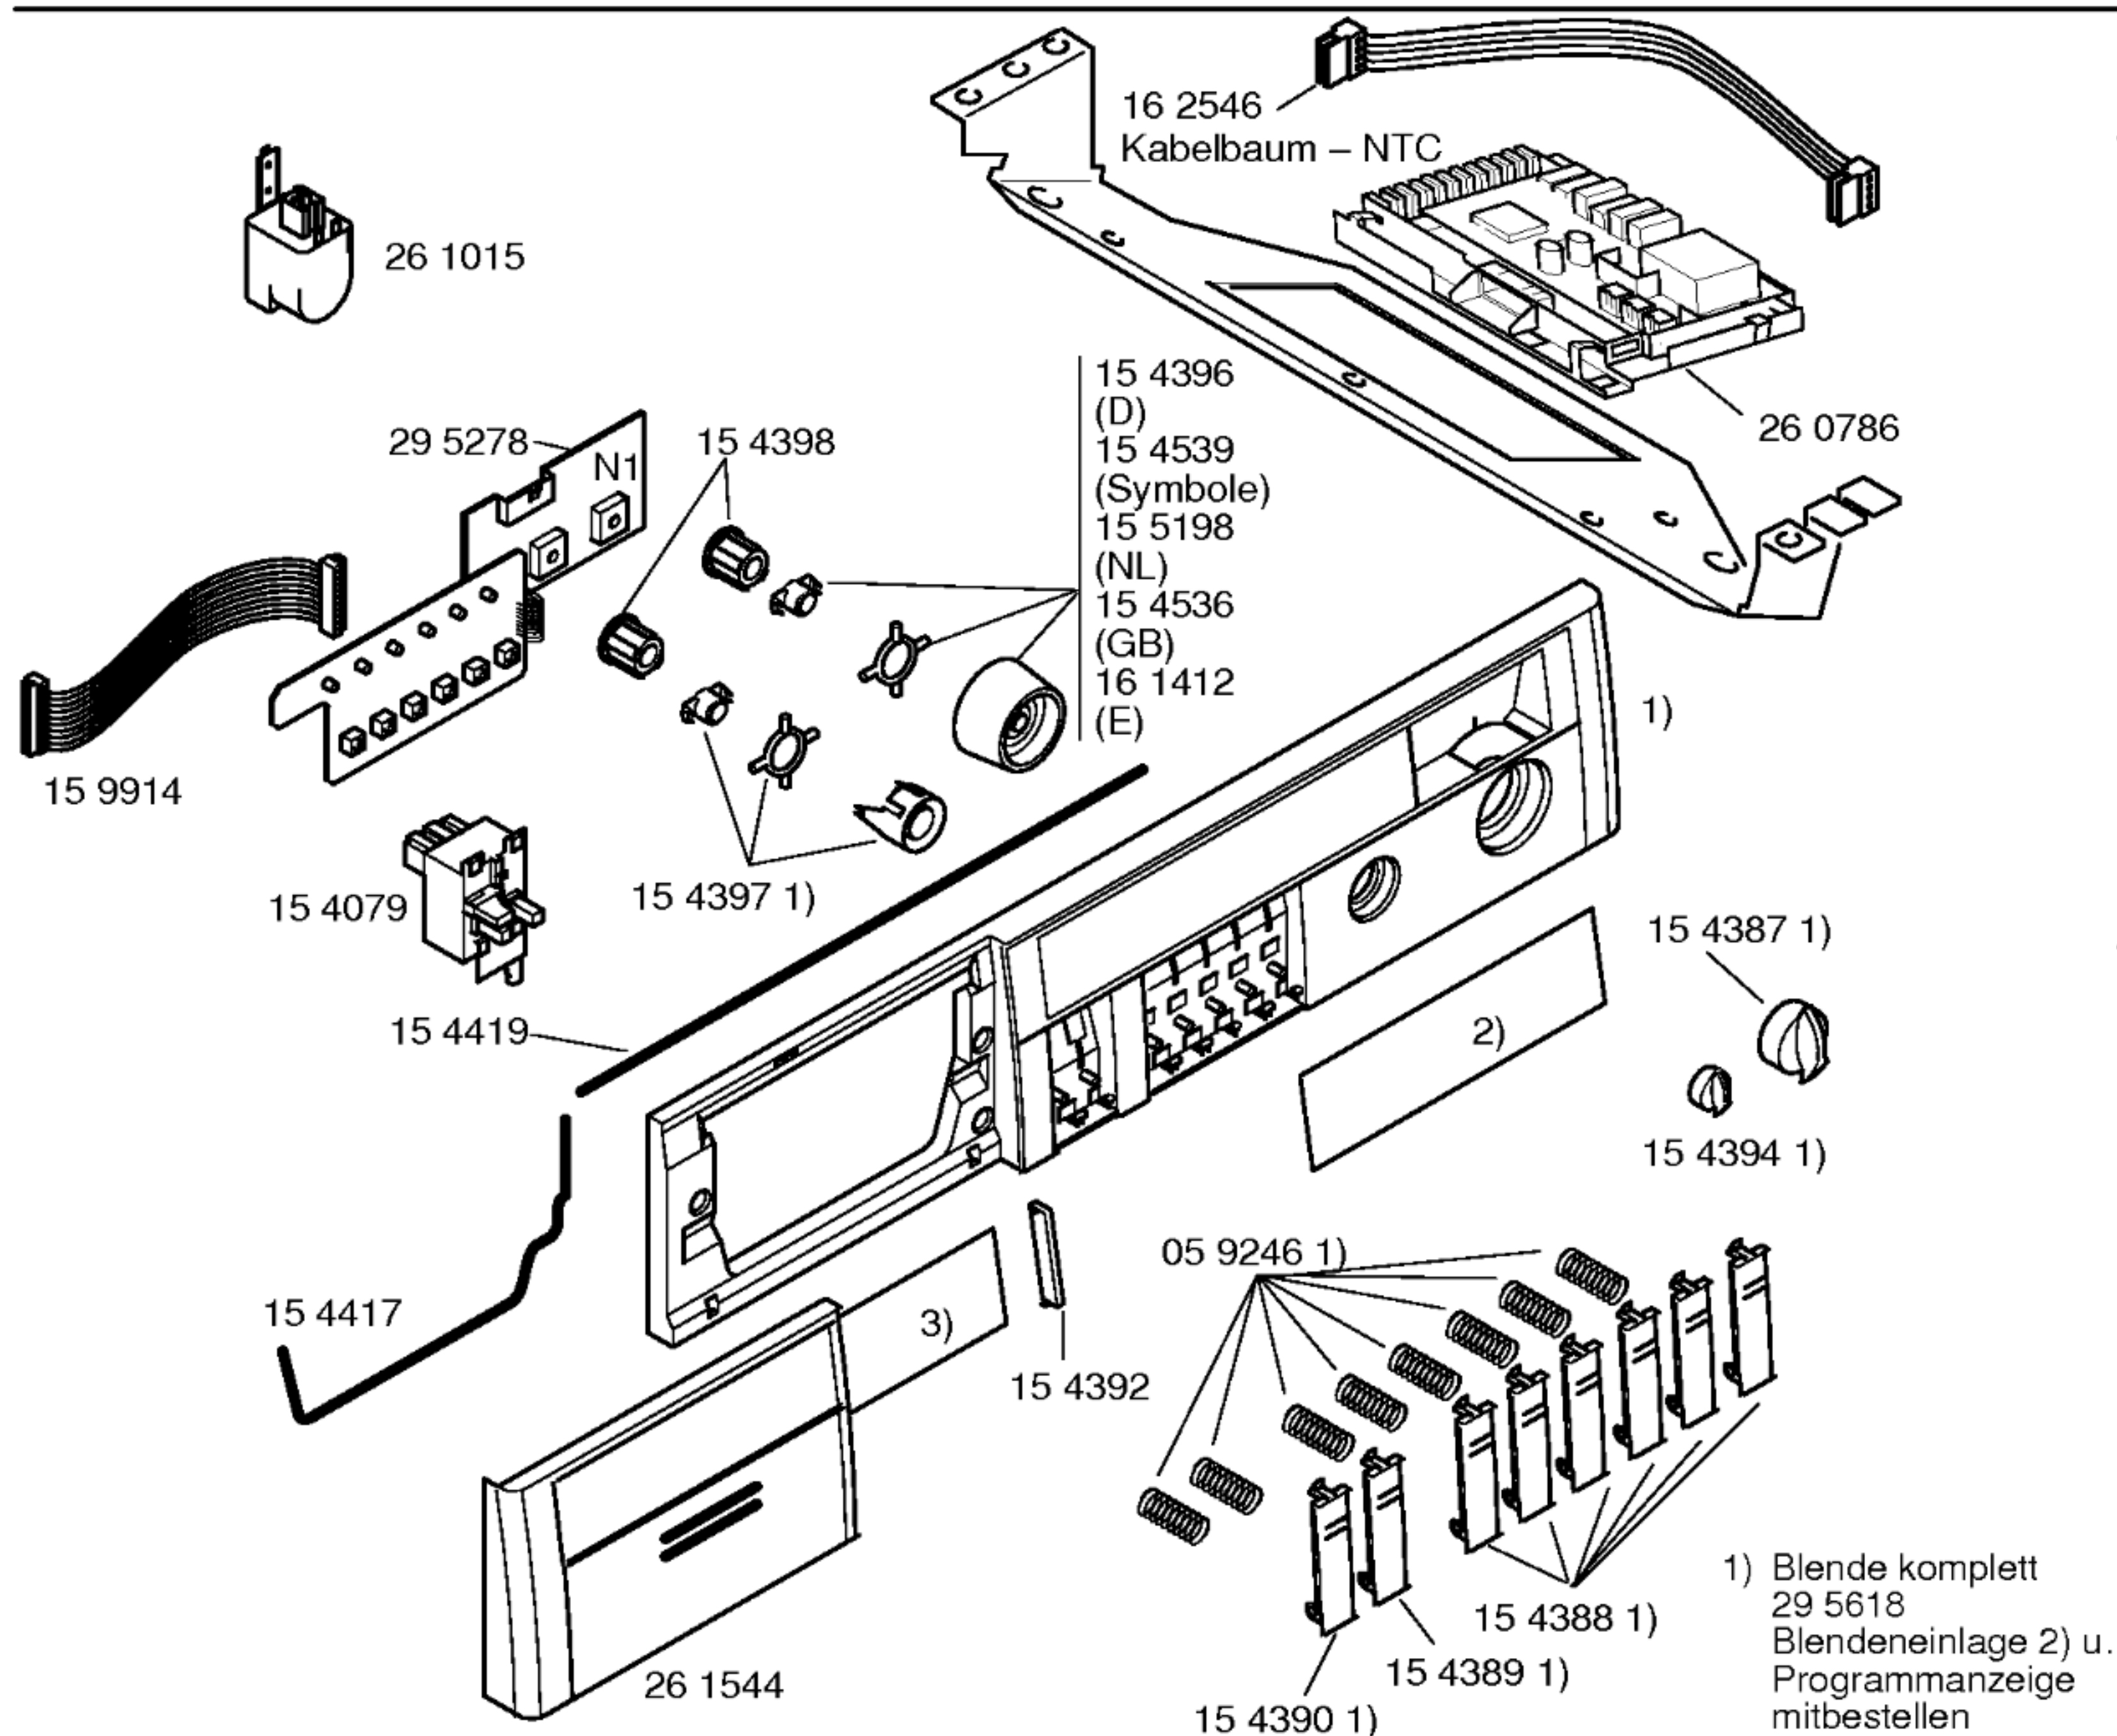

1) Blende komplett
 29 5618
 Blendeneinlage 2) u.
 Programmanzeige
 mitbestellen

- 2) 26 0810 (D)
 26 0811 (NL)
 26 0812 (S)
 26 0813 (N)
 26 0814 (SF)
 26 0815 (DK)
 26 1058 (F)
 26 1545 (I)
 26 1711 (P)
 26 1712 (E)
 26 1057 (GB)
 3) 09 6507 (D)
 26 1060 (GB)
 26 1062 (NL)
 09 6603 (N)
 09 6604 (SF)
 09 6605 (S)
 09 6606 (DK)
 26 1061 (F)
 26 1529 (I)
 09 6945 (P)
 26 1710 (E)

Mat. – Nr. – Konstante
 3740

Gebrauchsanweisung
 51 8379 (D)
 51 8380 (NL)
 51 8381 (SF,N,S,DK)
 51 9057 (N)
 51 9431 (D,F,I)
 51 8885 (DK)
 51 8885 (GB,NL,F)
 Aufstellanweisung
 51 8126 (D)
 51 8130 (NL,F,GB)
 51 8127 (I,P,E)
 51 8129 (D,F,I)
 Programmtabelle
 51 8382 (D)
 51 8383 (NL)
 51 8384 (SF)
 51 8385 (S)
 51 8386 (N)
 51 8387 (DK)
 51 8886 (F)
 51 9058 (I)
 51 9432 (E)
 51 9433 (P)


**BOSCH**

WFK 2430 – WFK2430/12-V01
 WFK 2430 – WFK2430DD/12-V02
 WFK 2430 – WFK2430FG/12-V03
 WFK 2430 – WFK2430EE/12-V04

WFK 2430 – WFK2430CH/12-V05
 WFK 2430 – WFK2430NL/12-V06
 WFK 2430 – WFK2430IE/12-V07

WASCHGERÄTE
 Waschvollautomaten

Mat. – Nr. – Konstante
 3740

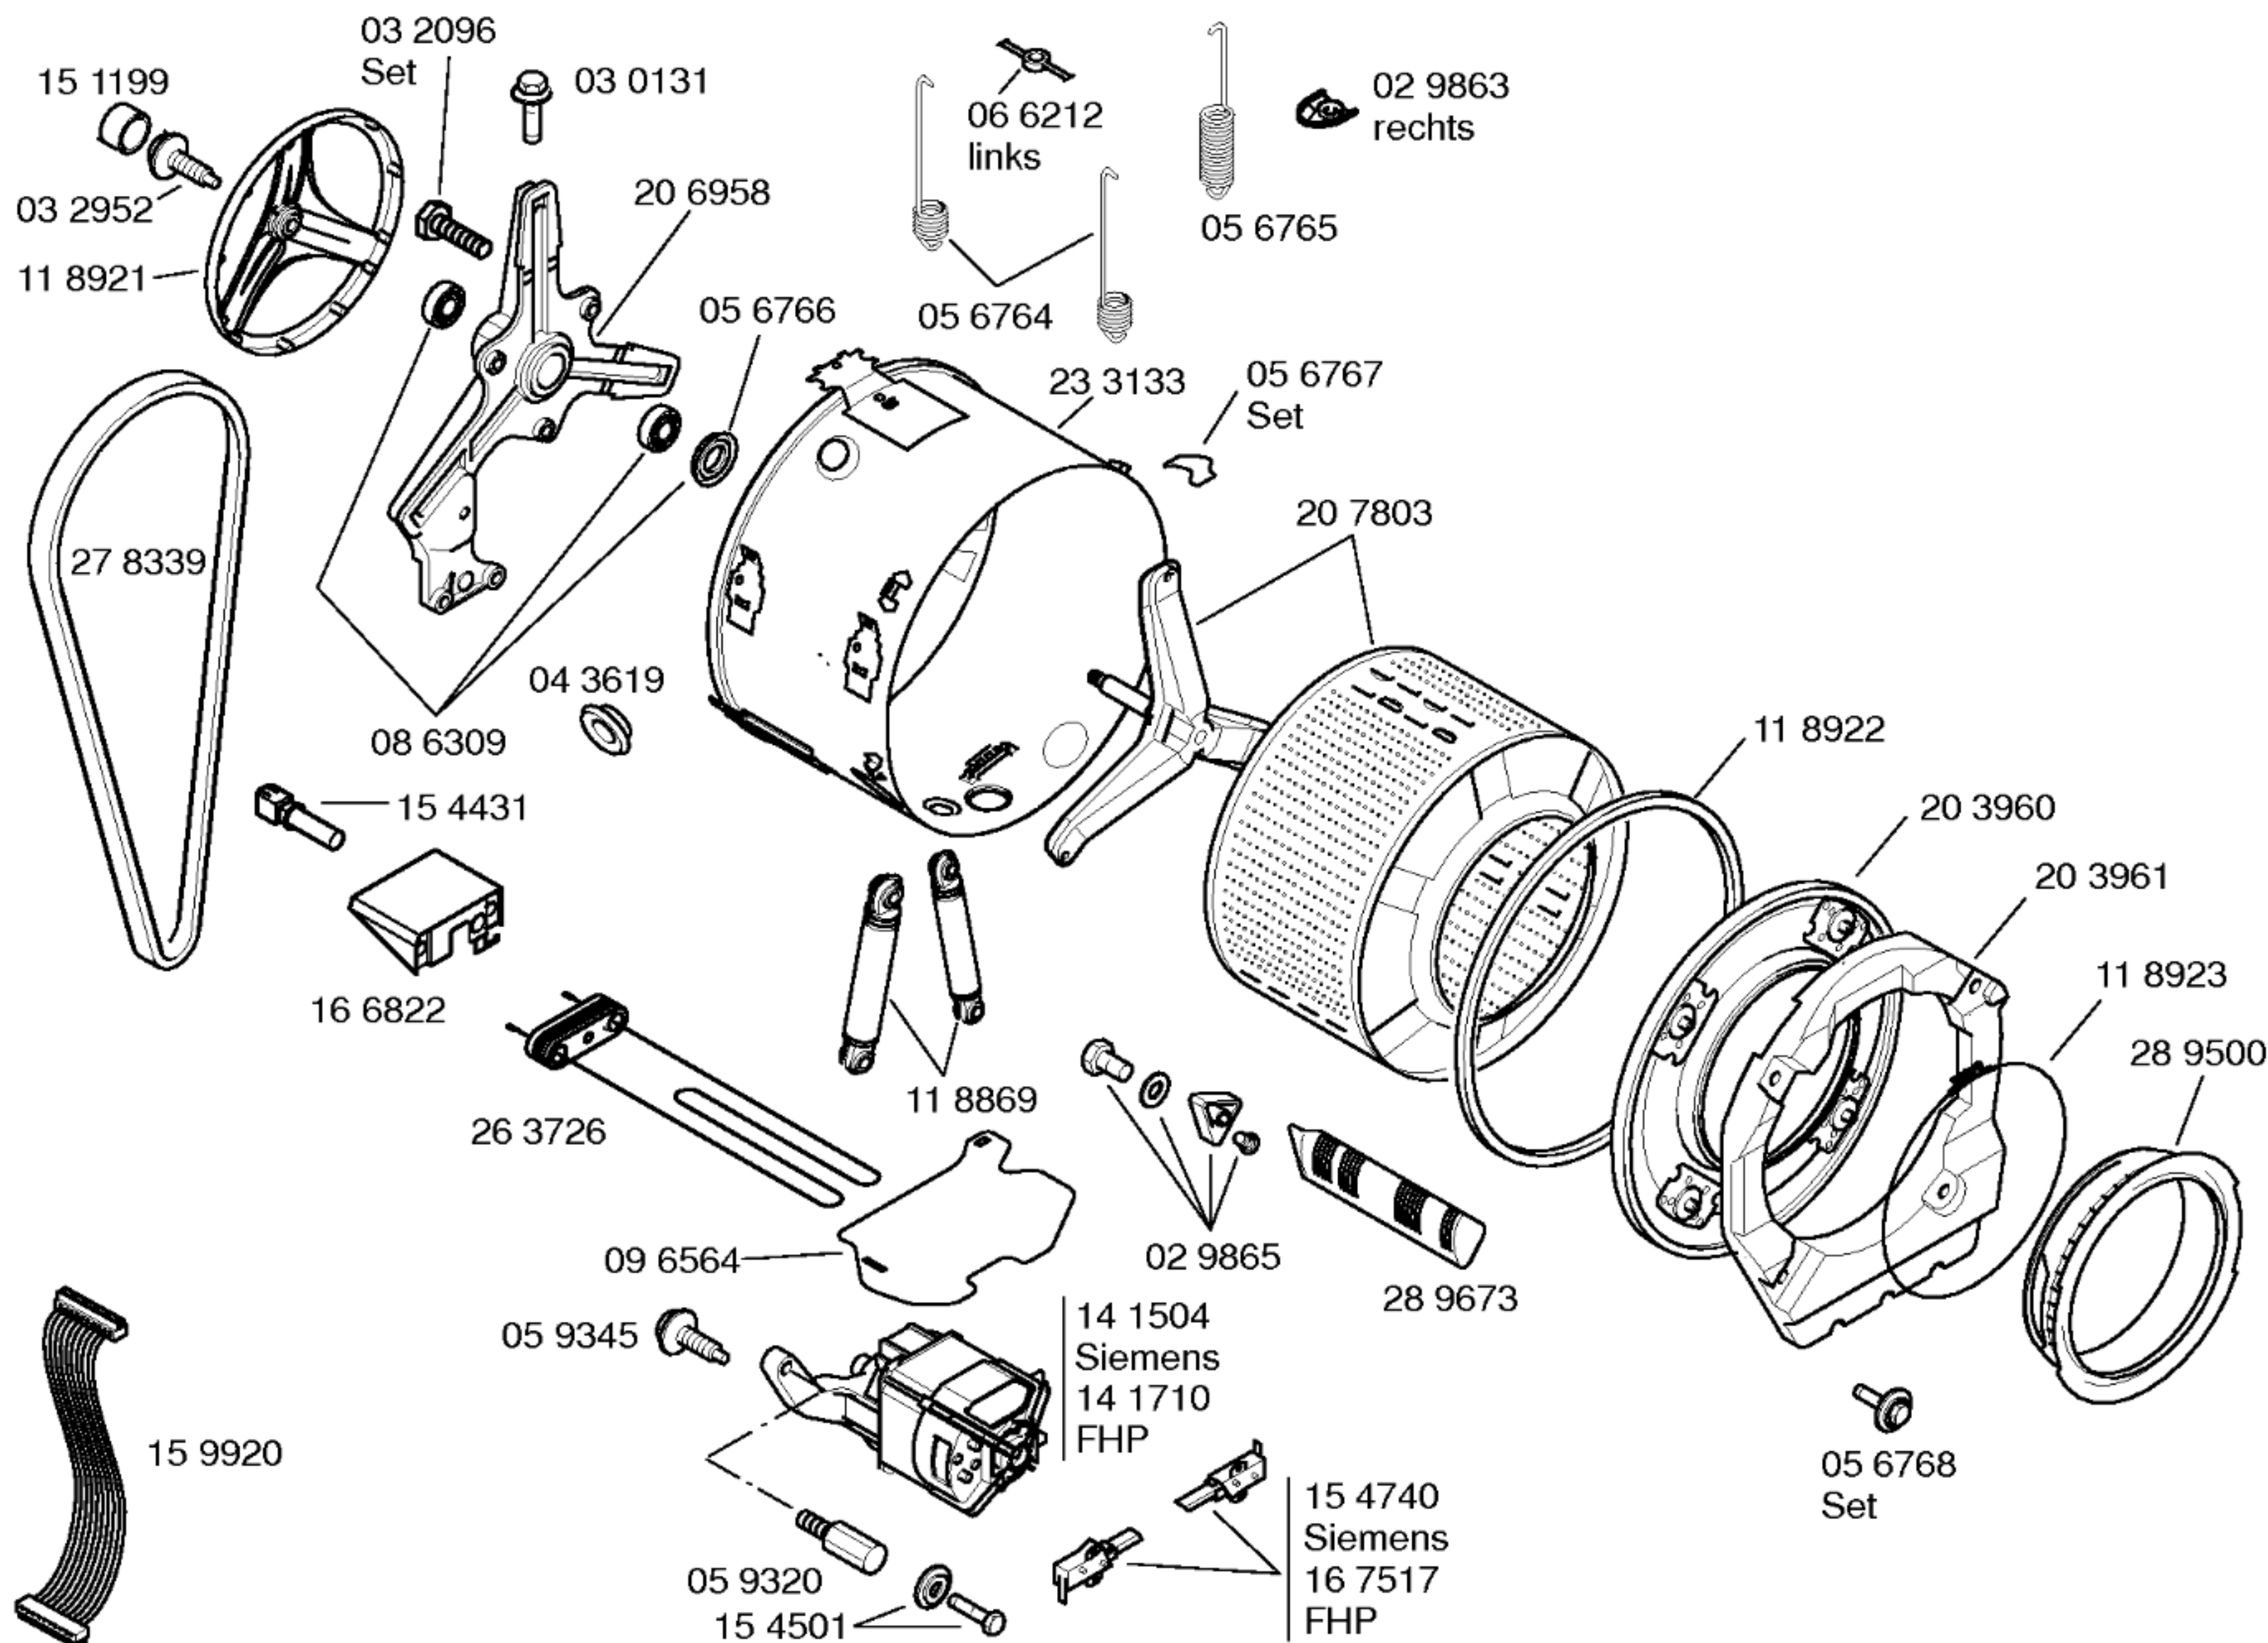


**BOSCH**

WFK 2430 – WFK2430/12–V01
 WFK 2430 – WFK2430DD/12–V02
 WFK 2430 – WFK2430FG/12–V03
 WFK 2430 – WFK2430EE/12–V04

WFK 2430 – WFK2430CH/12–V05
 WFK 2430 – WFK2430NL/12–V06
 WFK 2430 – WFK2430IE/12–V07

WASCHGERÄTE
 Waschvollautomaten

Mat. – Nr. – Konstante
 3740

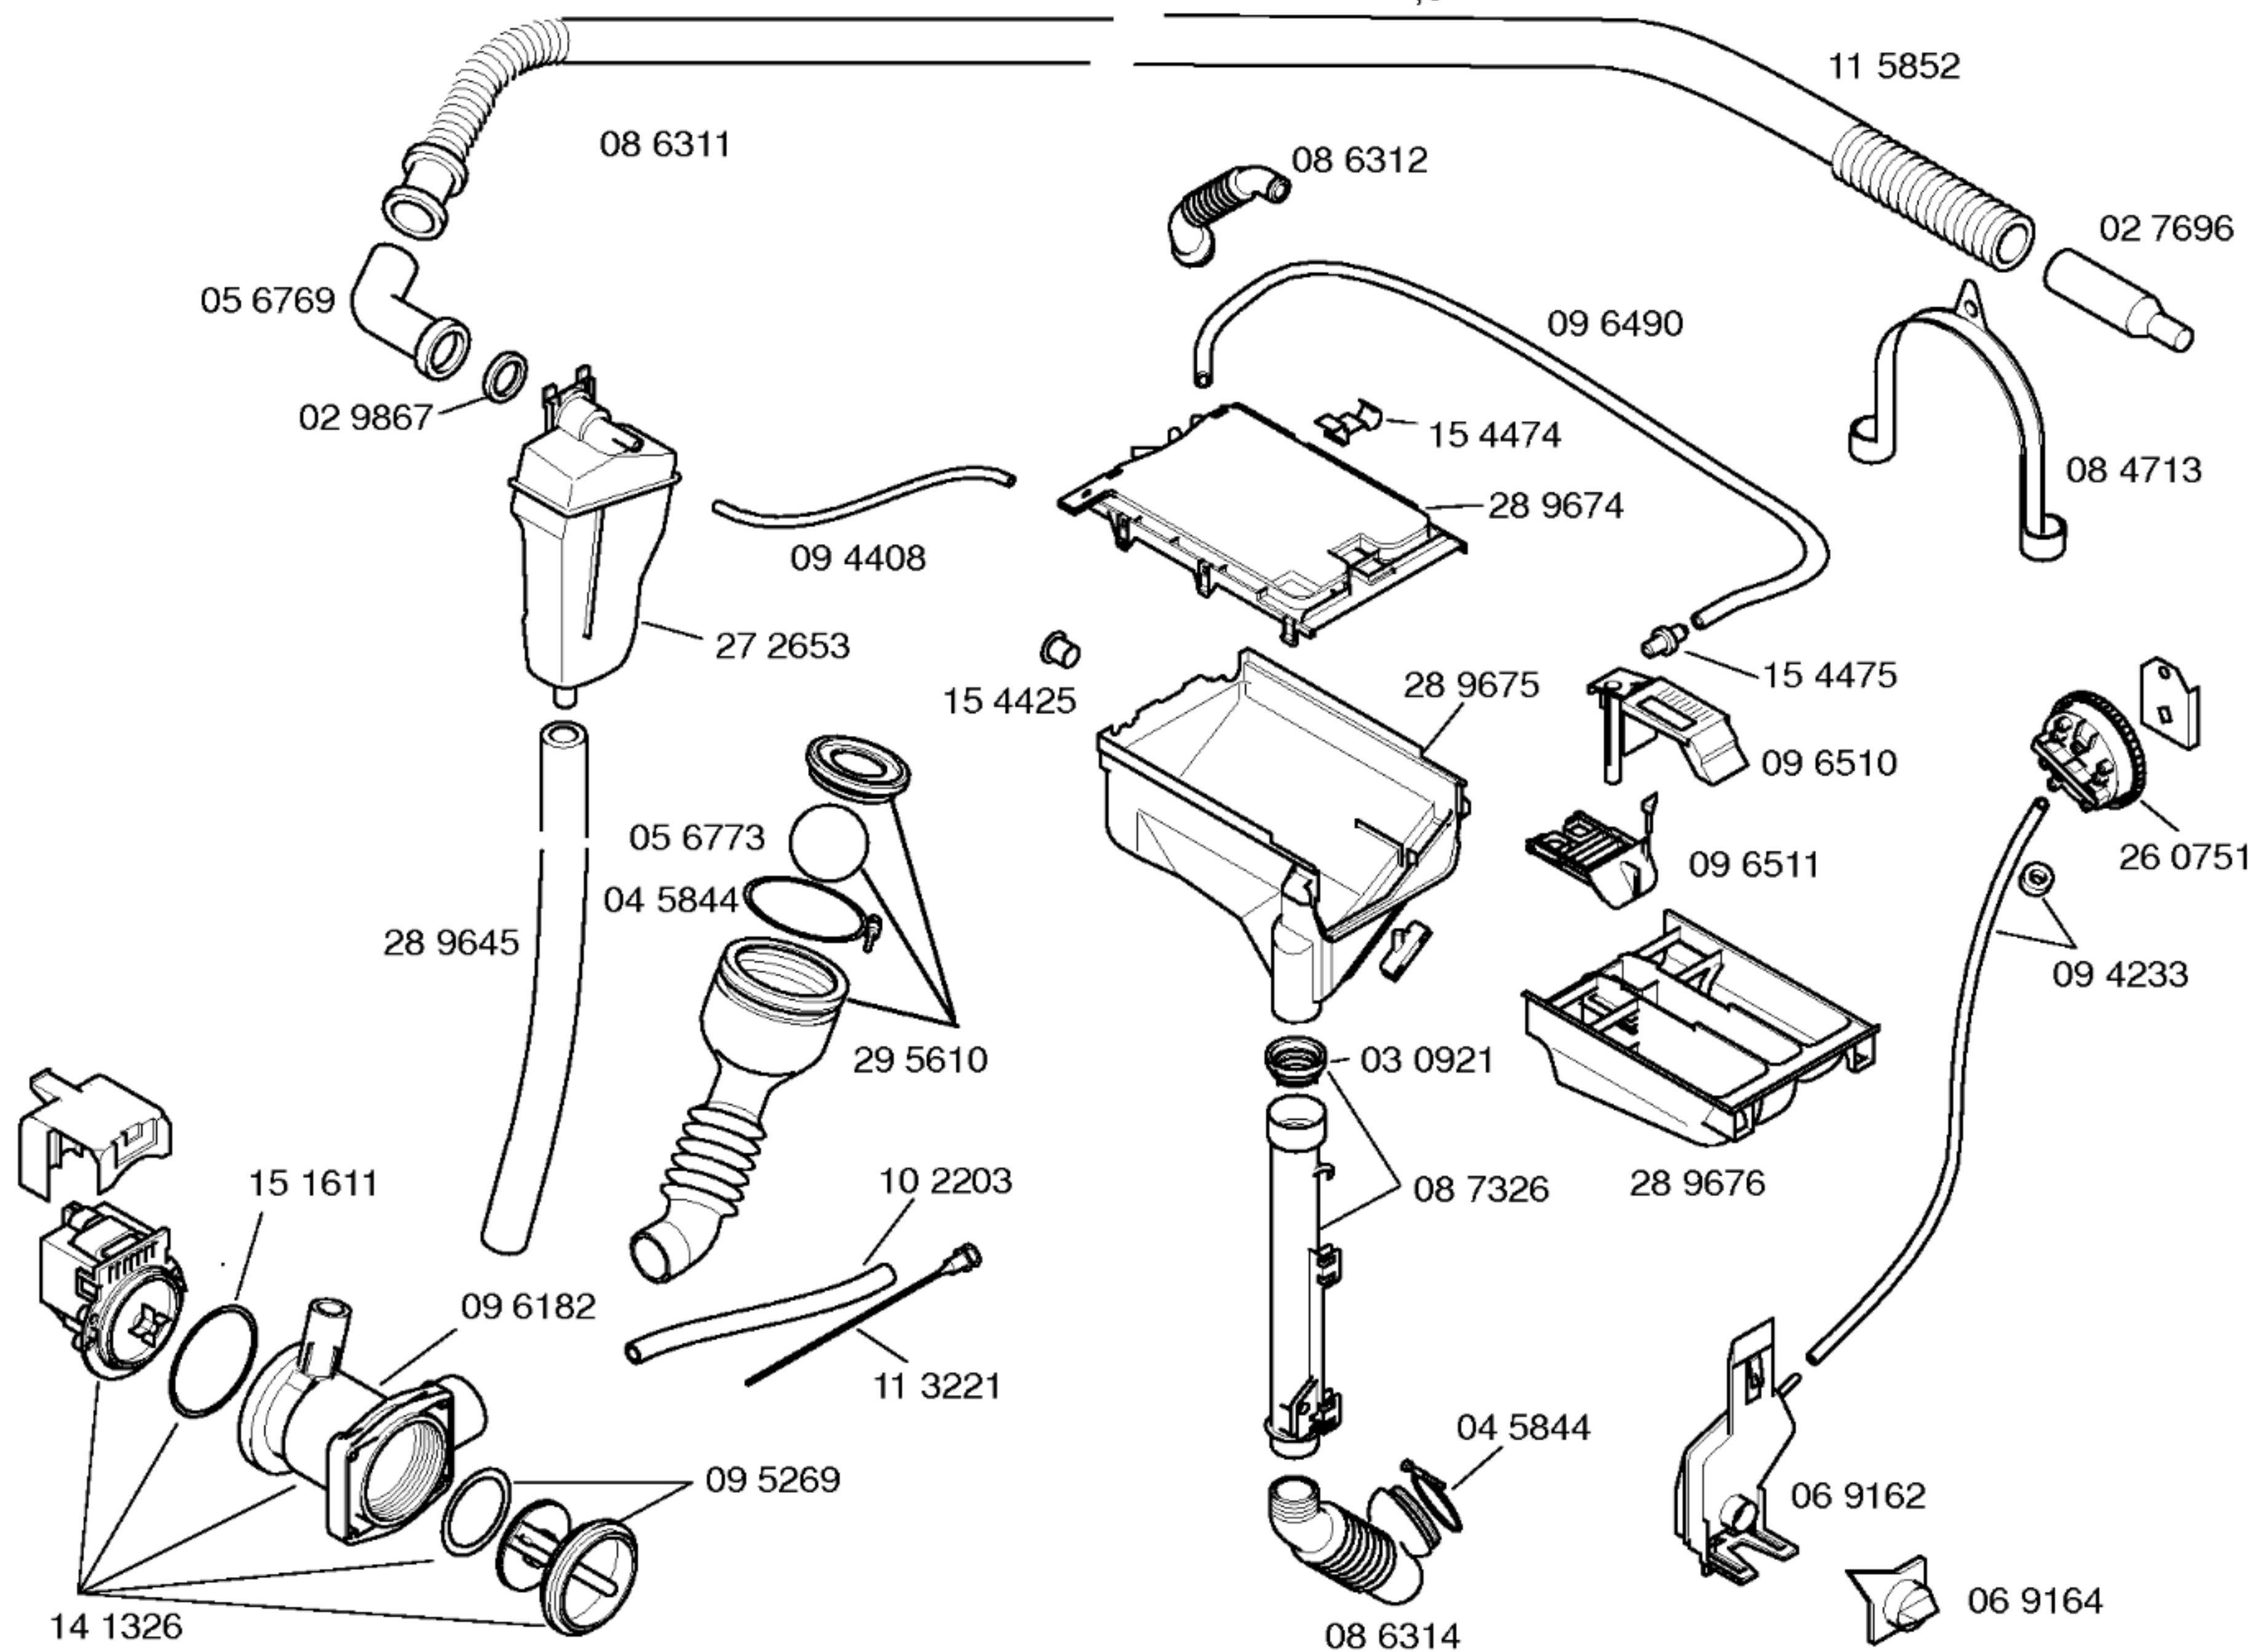

**BOSCH**

WFK 2430 – WFK2430/12–V01
WFK 2430 – WFK2430DD/12–V02
WFK 2430 – WFK2430FG/12–V03
WFK 2430 – WFK2430EE/12–V04

WFK 2430 – WFK2430CH/12–V05
WFK 2430 – WFK2430NL/12–V06
WFK 2430 – WFK2430IE/12–V07

WASCHGERÄTE
Waschvollautomaten

Mat. – Nr. – Konstante
3740

