


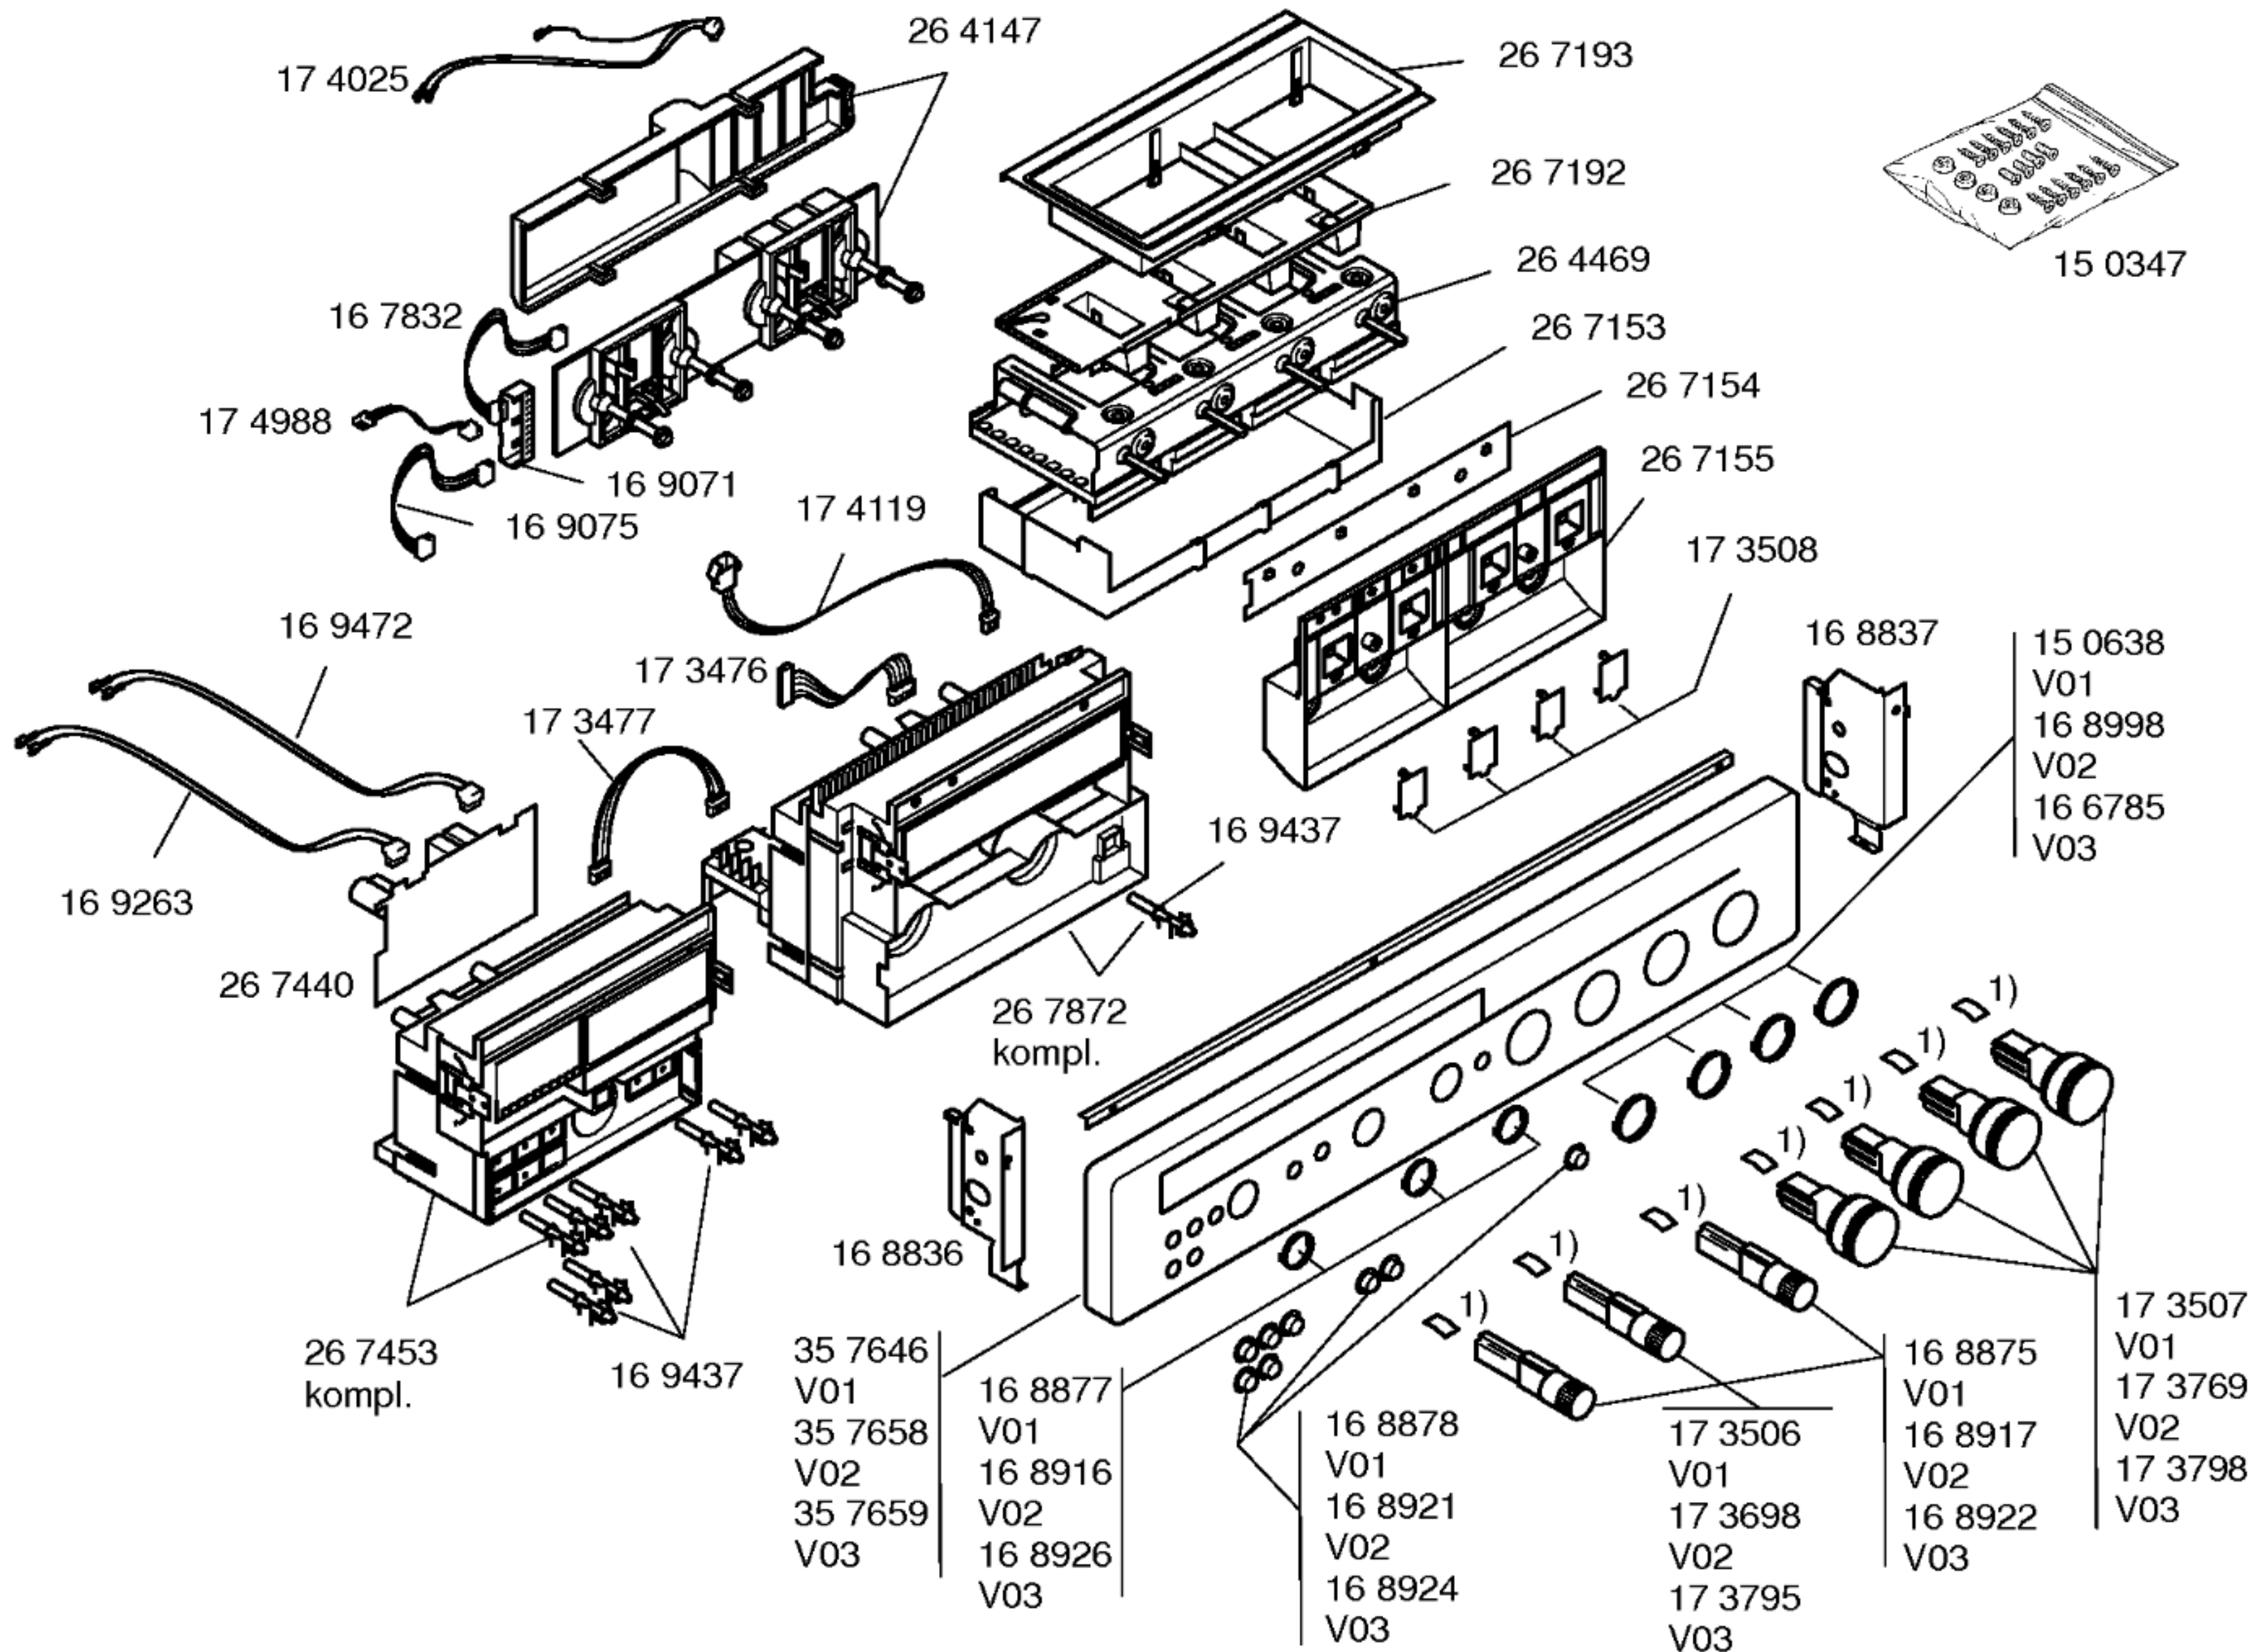


Gebrauchsanweisung
58 1789 (de)
58 1790 (el)
58 6285 (nl)*
* nicht Lieferumfang

Montageanweisung:
52 4061
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)


Broschüre/Kochbuch
52 4336 (de)
52 5481 (en)
52 5482 (fr)
52 5483 (nl)
52 5484 (es)
52 5485 (pt)
52 5486 (it)
52 5487 (el)
52 5488 (cs)
52 5489 (hu)
52 5492 (pl)
52 5493 (ru)
52 5494 (tr)
52 5495 (da)
52 5496 (sv)
52 5497 (no)
52 5498 (fi)


1) 01 4254

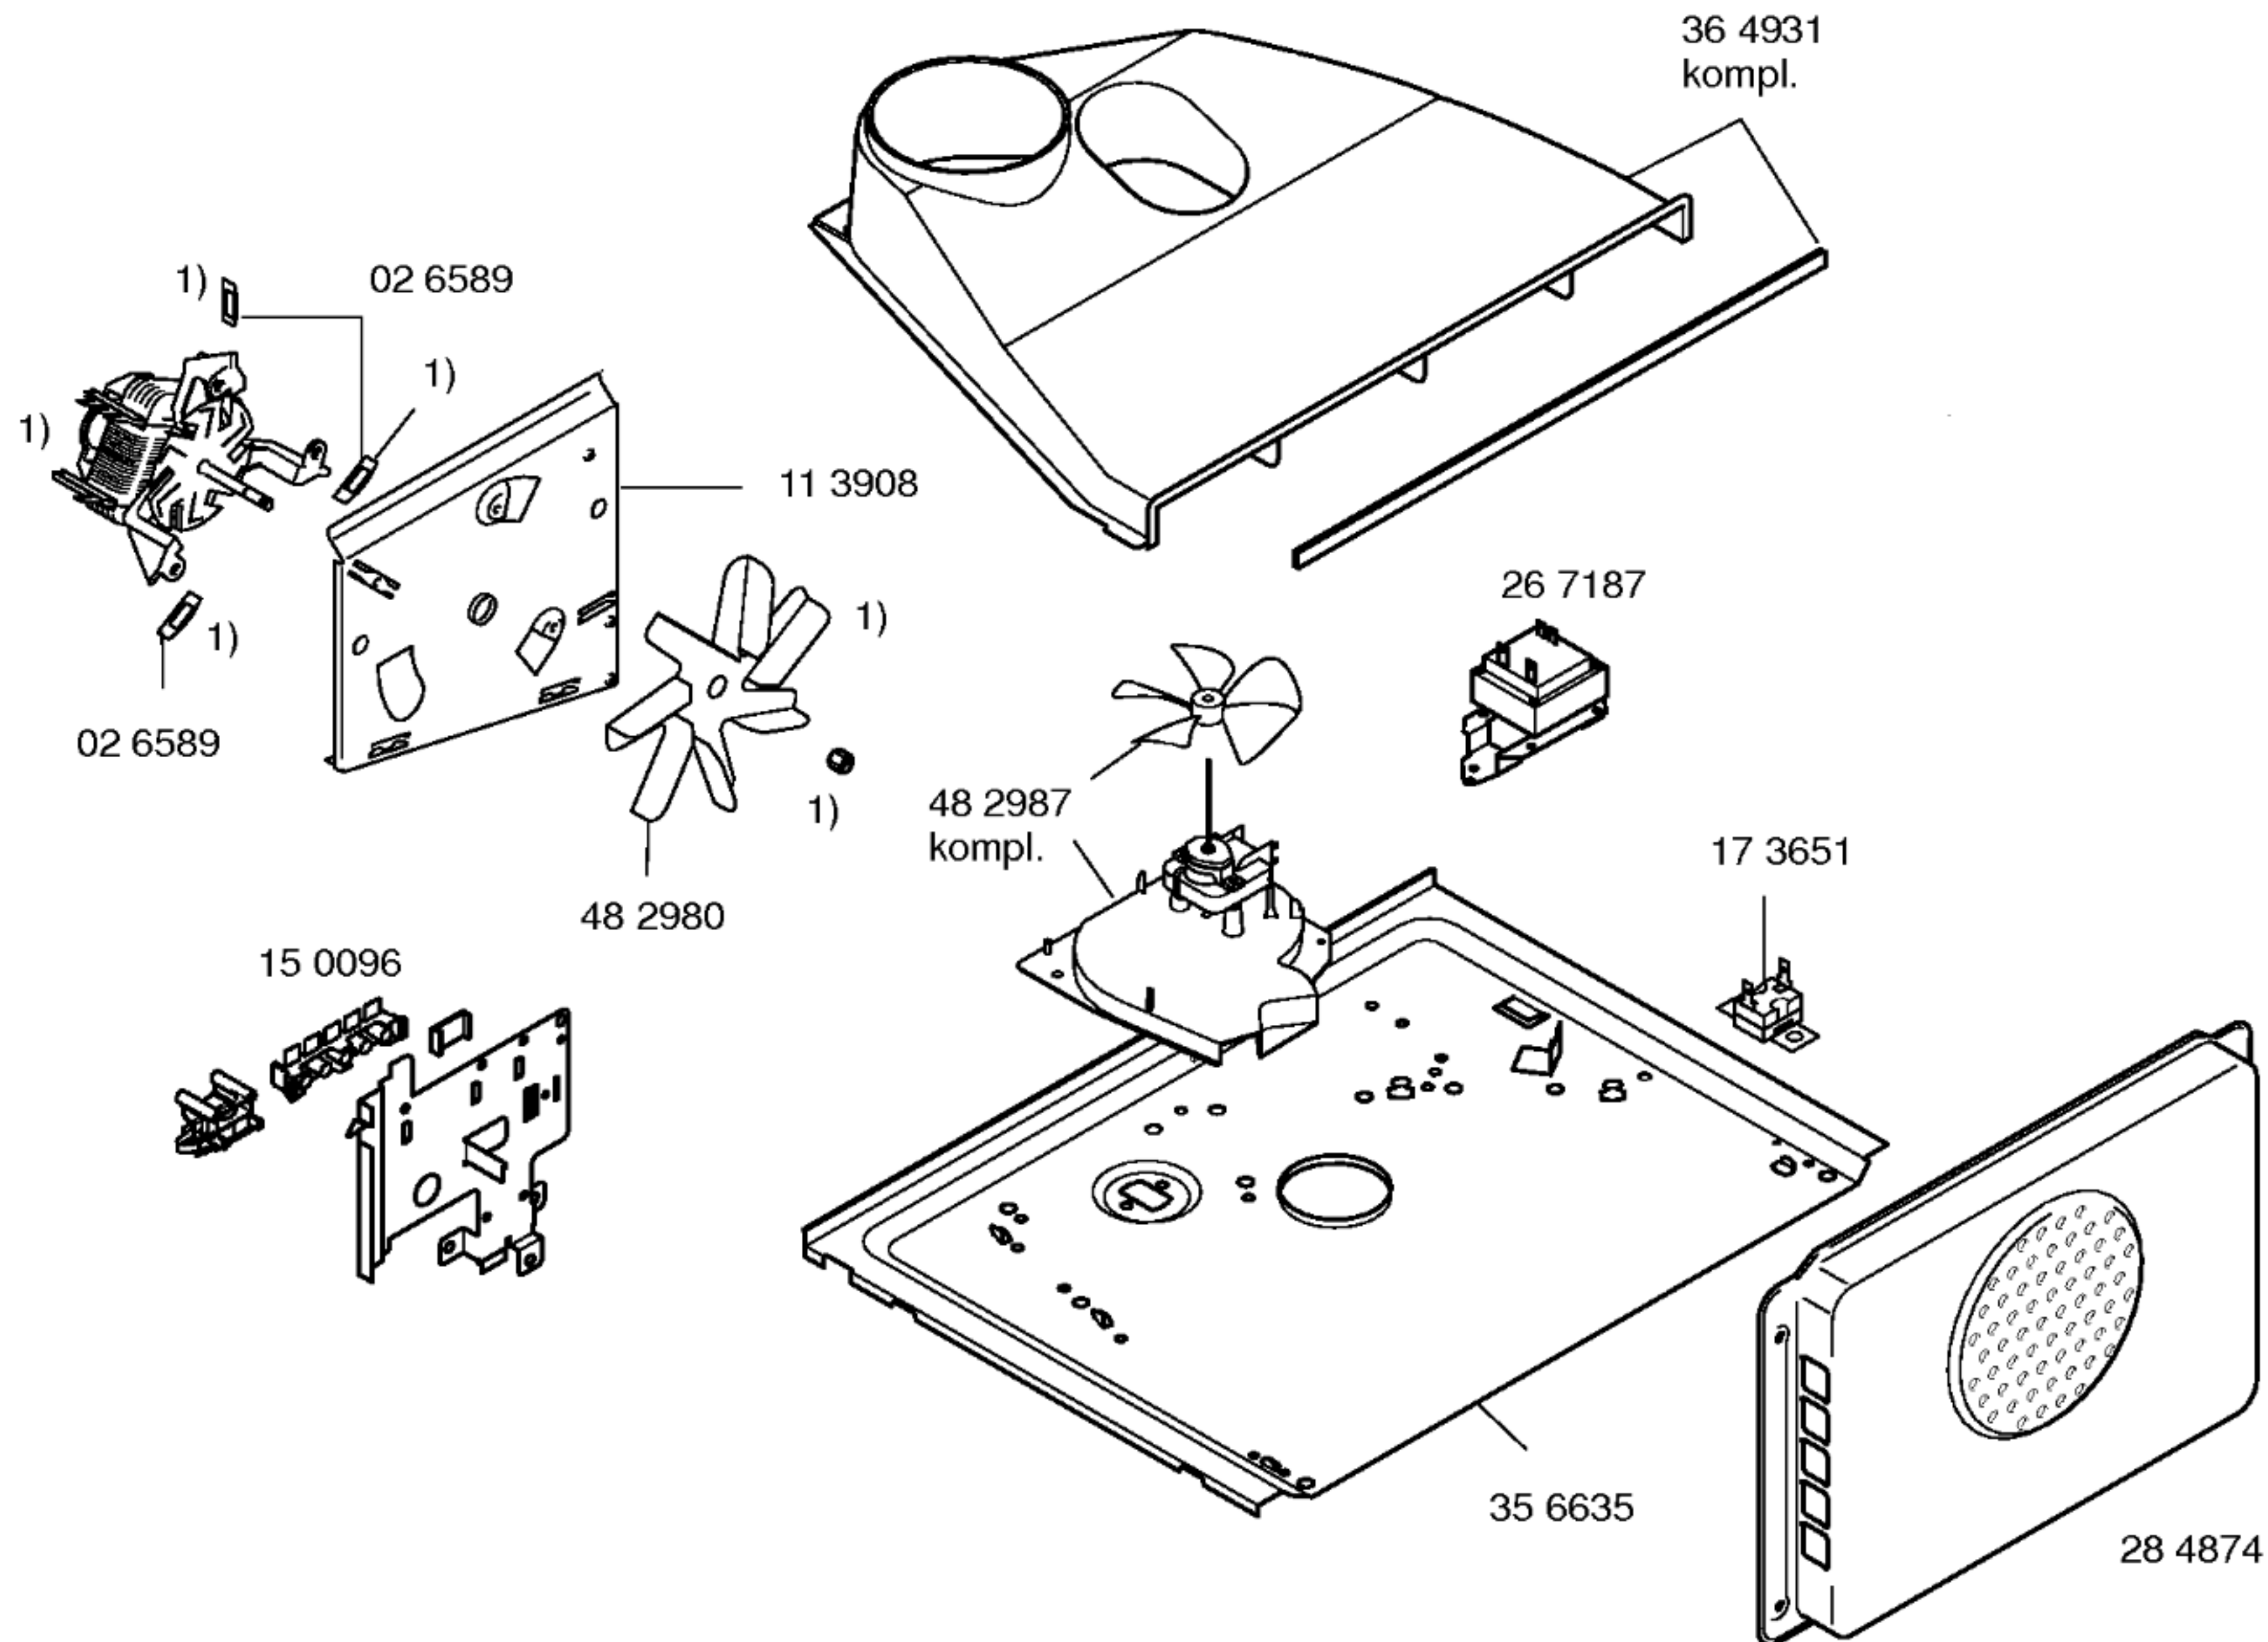



Zubehoer:
HZ23000
Backblech Alu
HZ23100
Backblech emailiert
HZ23300
Universalpfanne
HZ23400
Kombirost
HZ22400
Einlege-Kombirost
HZ23700
Profi-Auszug
HZ23701
Profiauszug + Fett-
pfanne und Grillrost
HZ24701
Deckel f. Profipfanne
HZ22500
Grillblech
HZ9150
Glasbraeter
HZ26000
Metallbraeter

1) 48 1284
Set

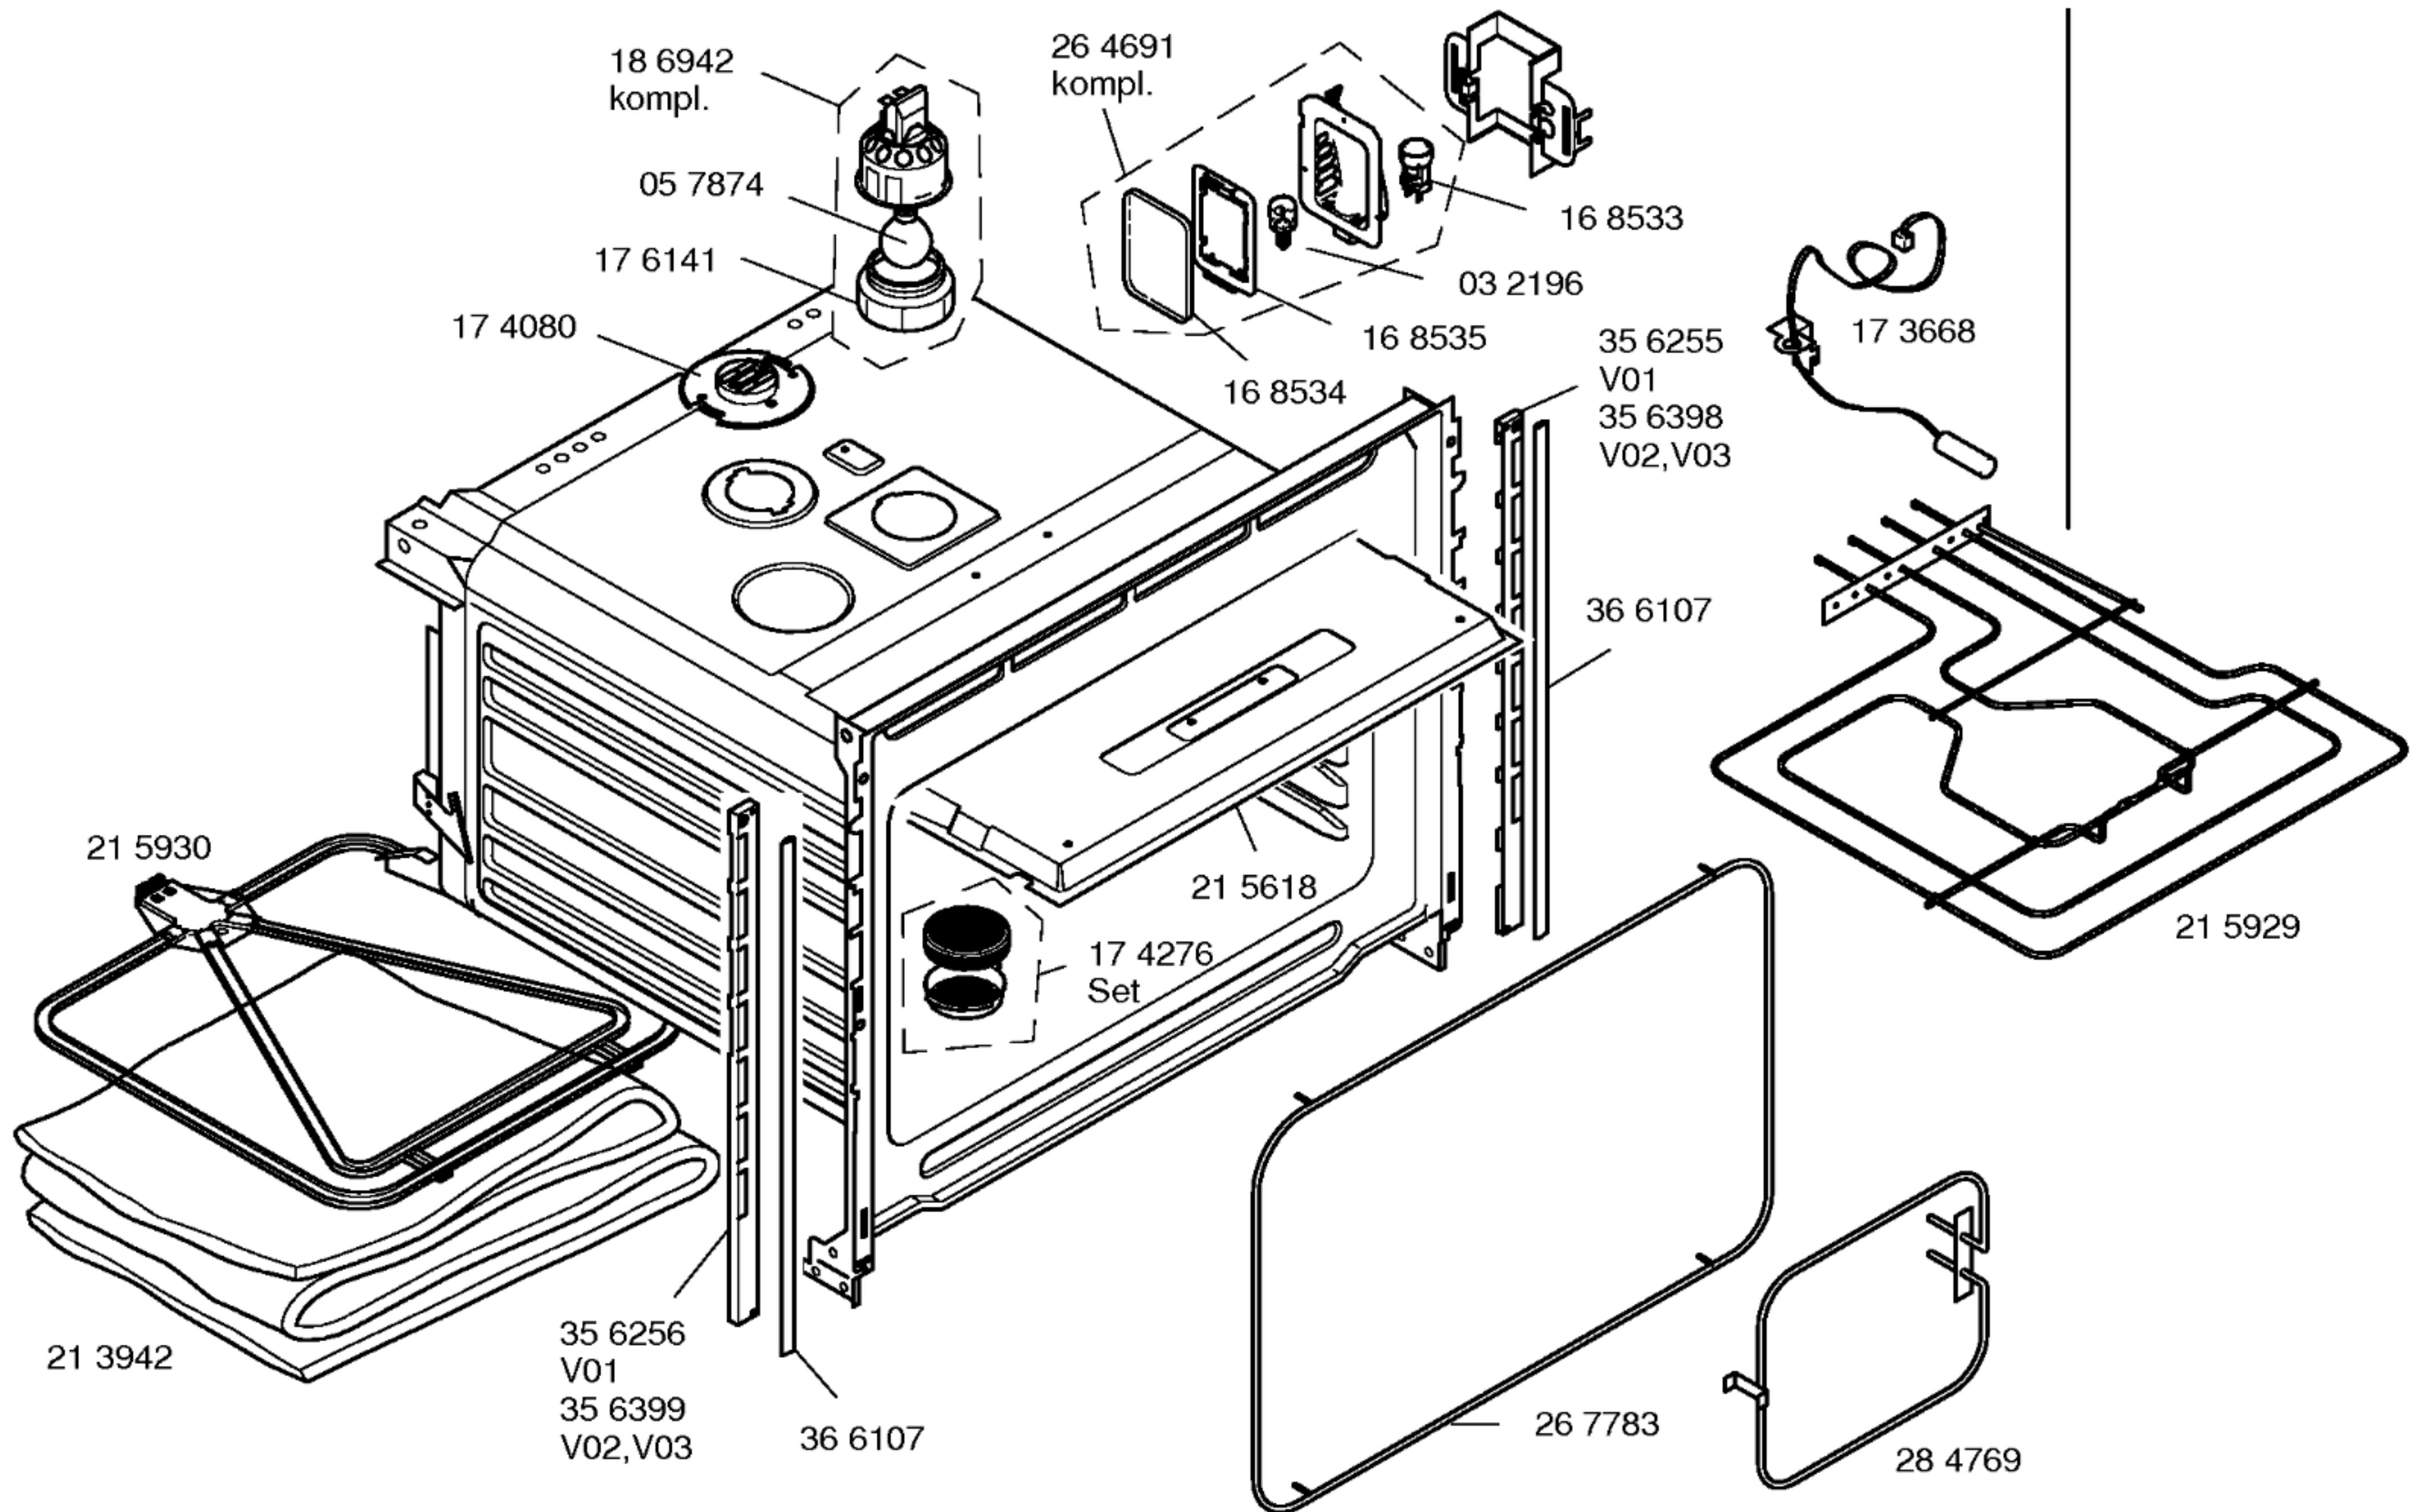

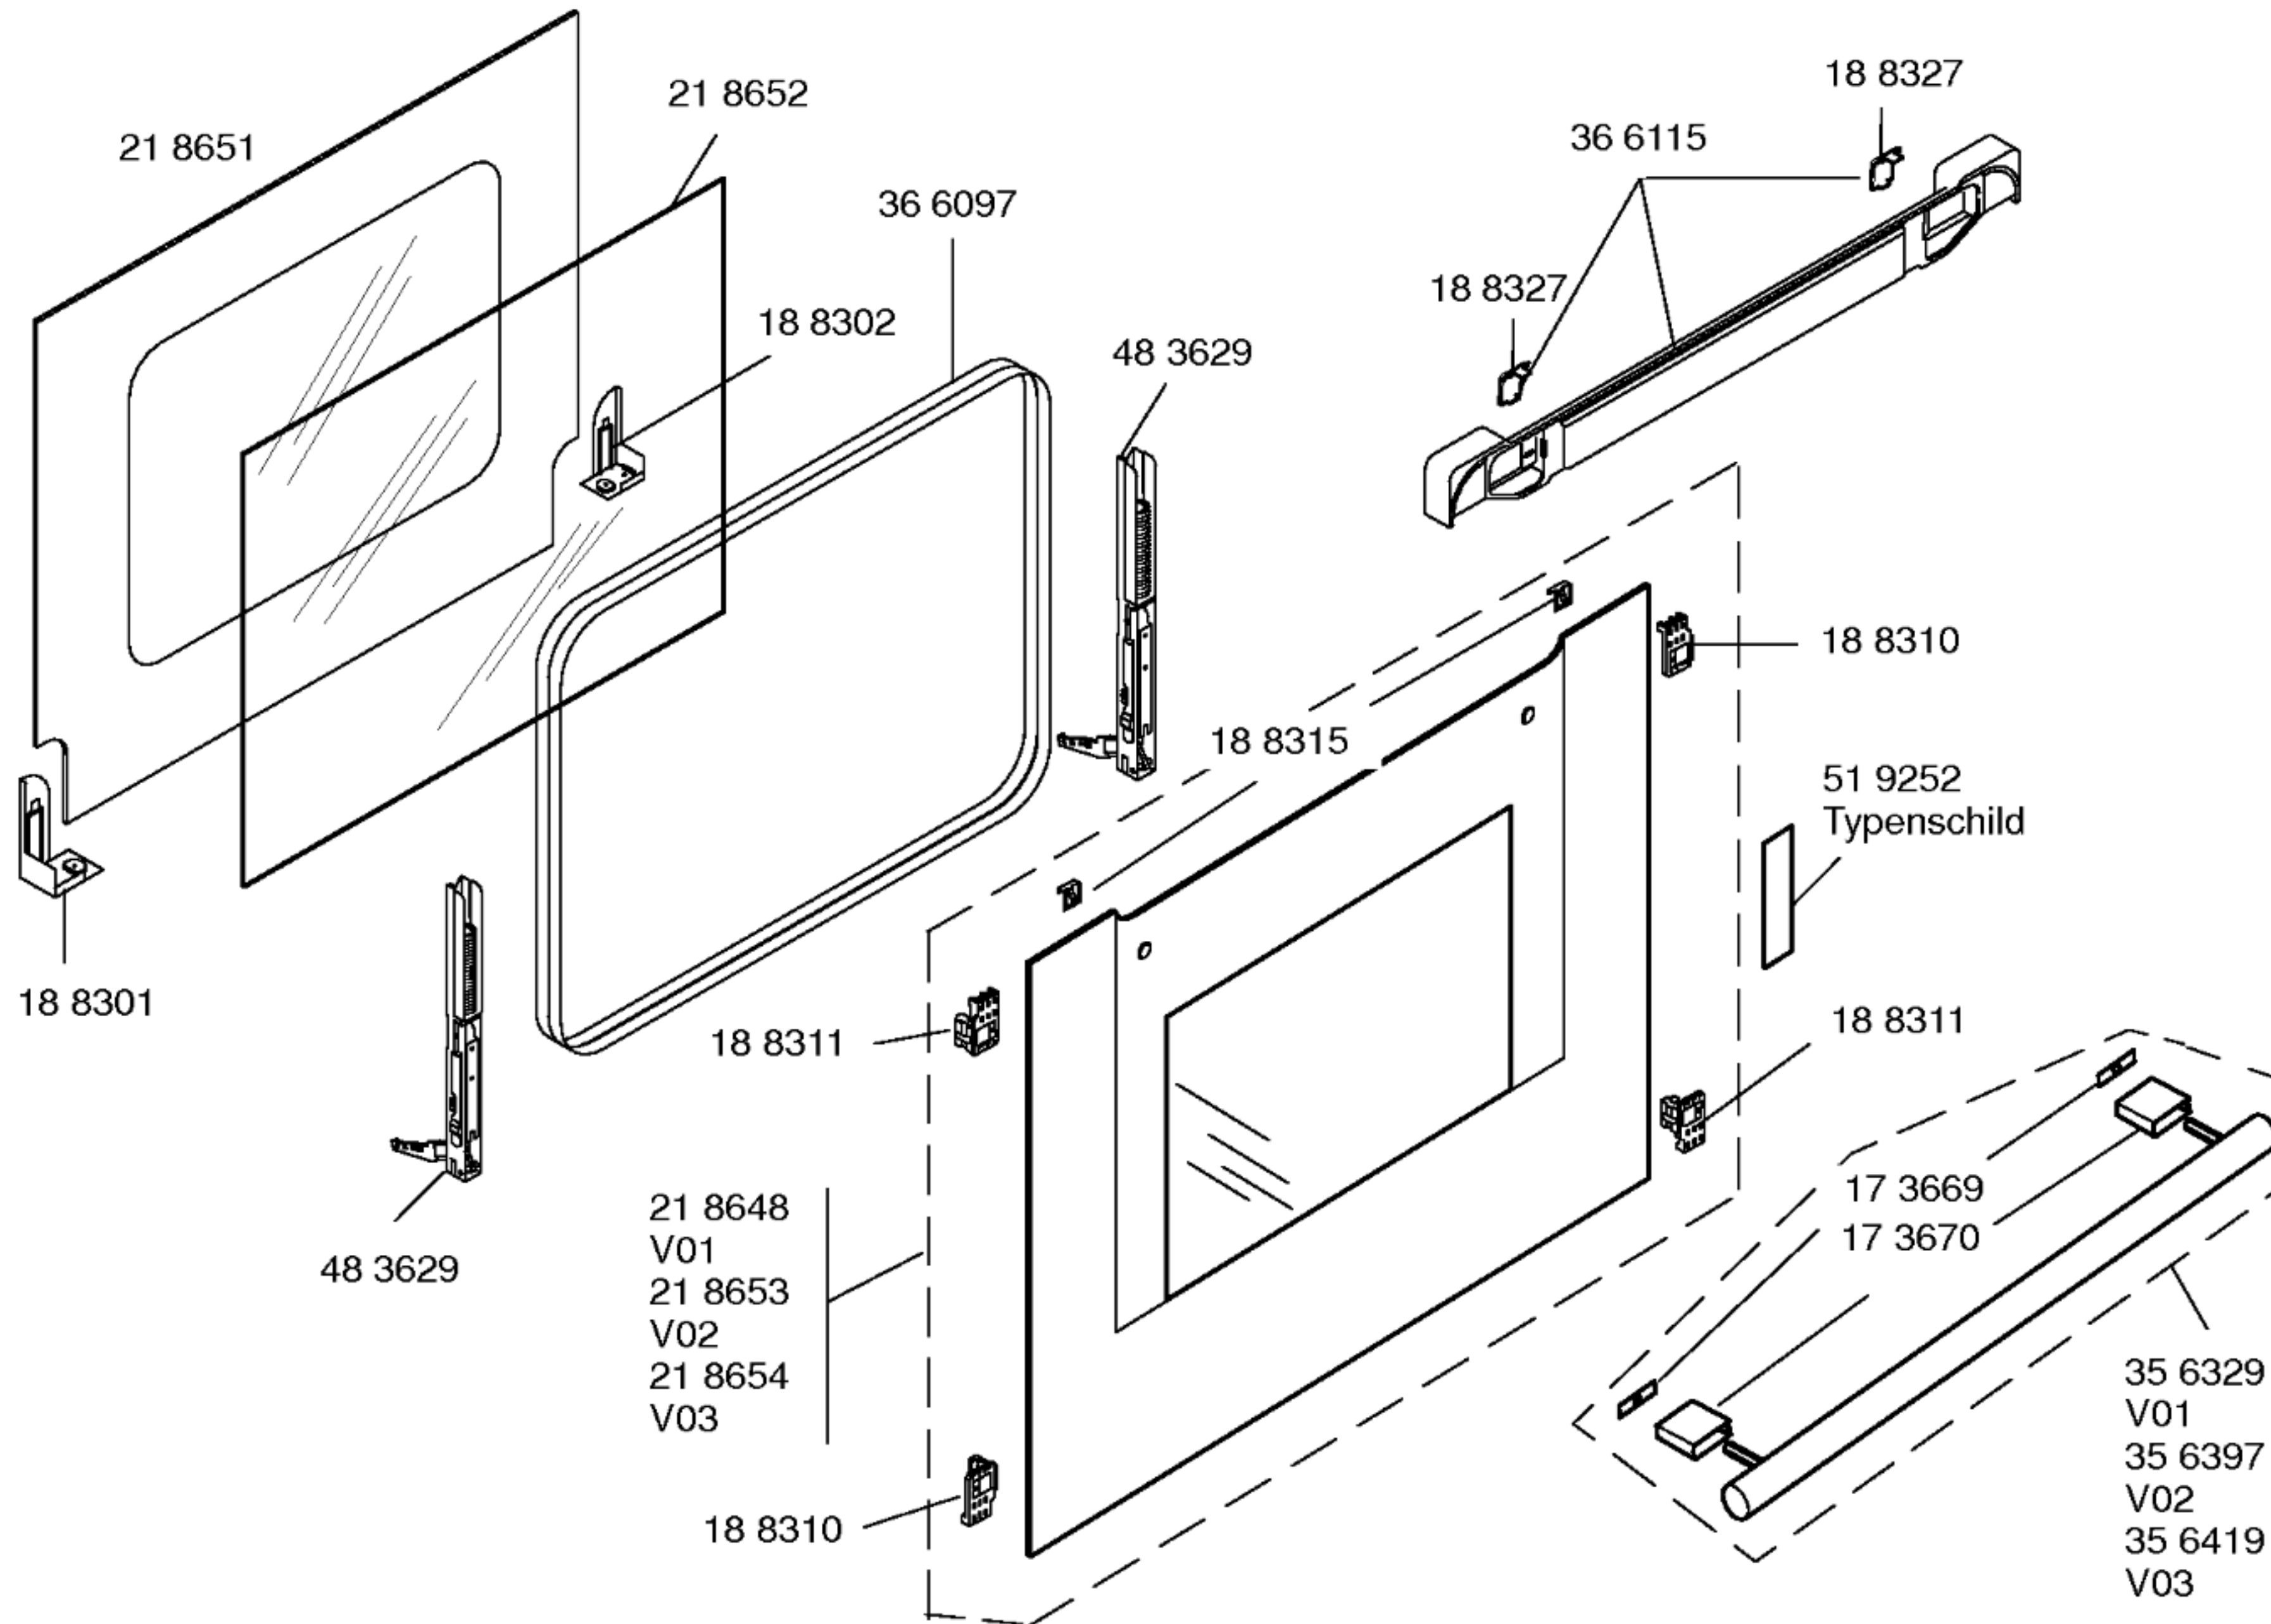

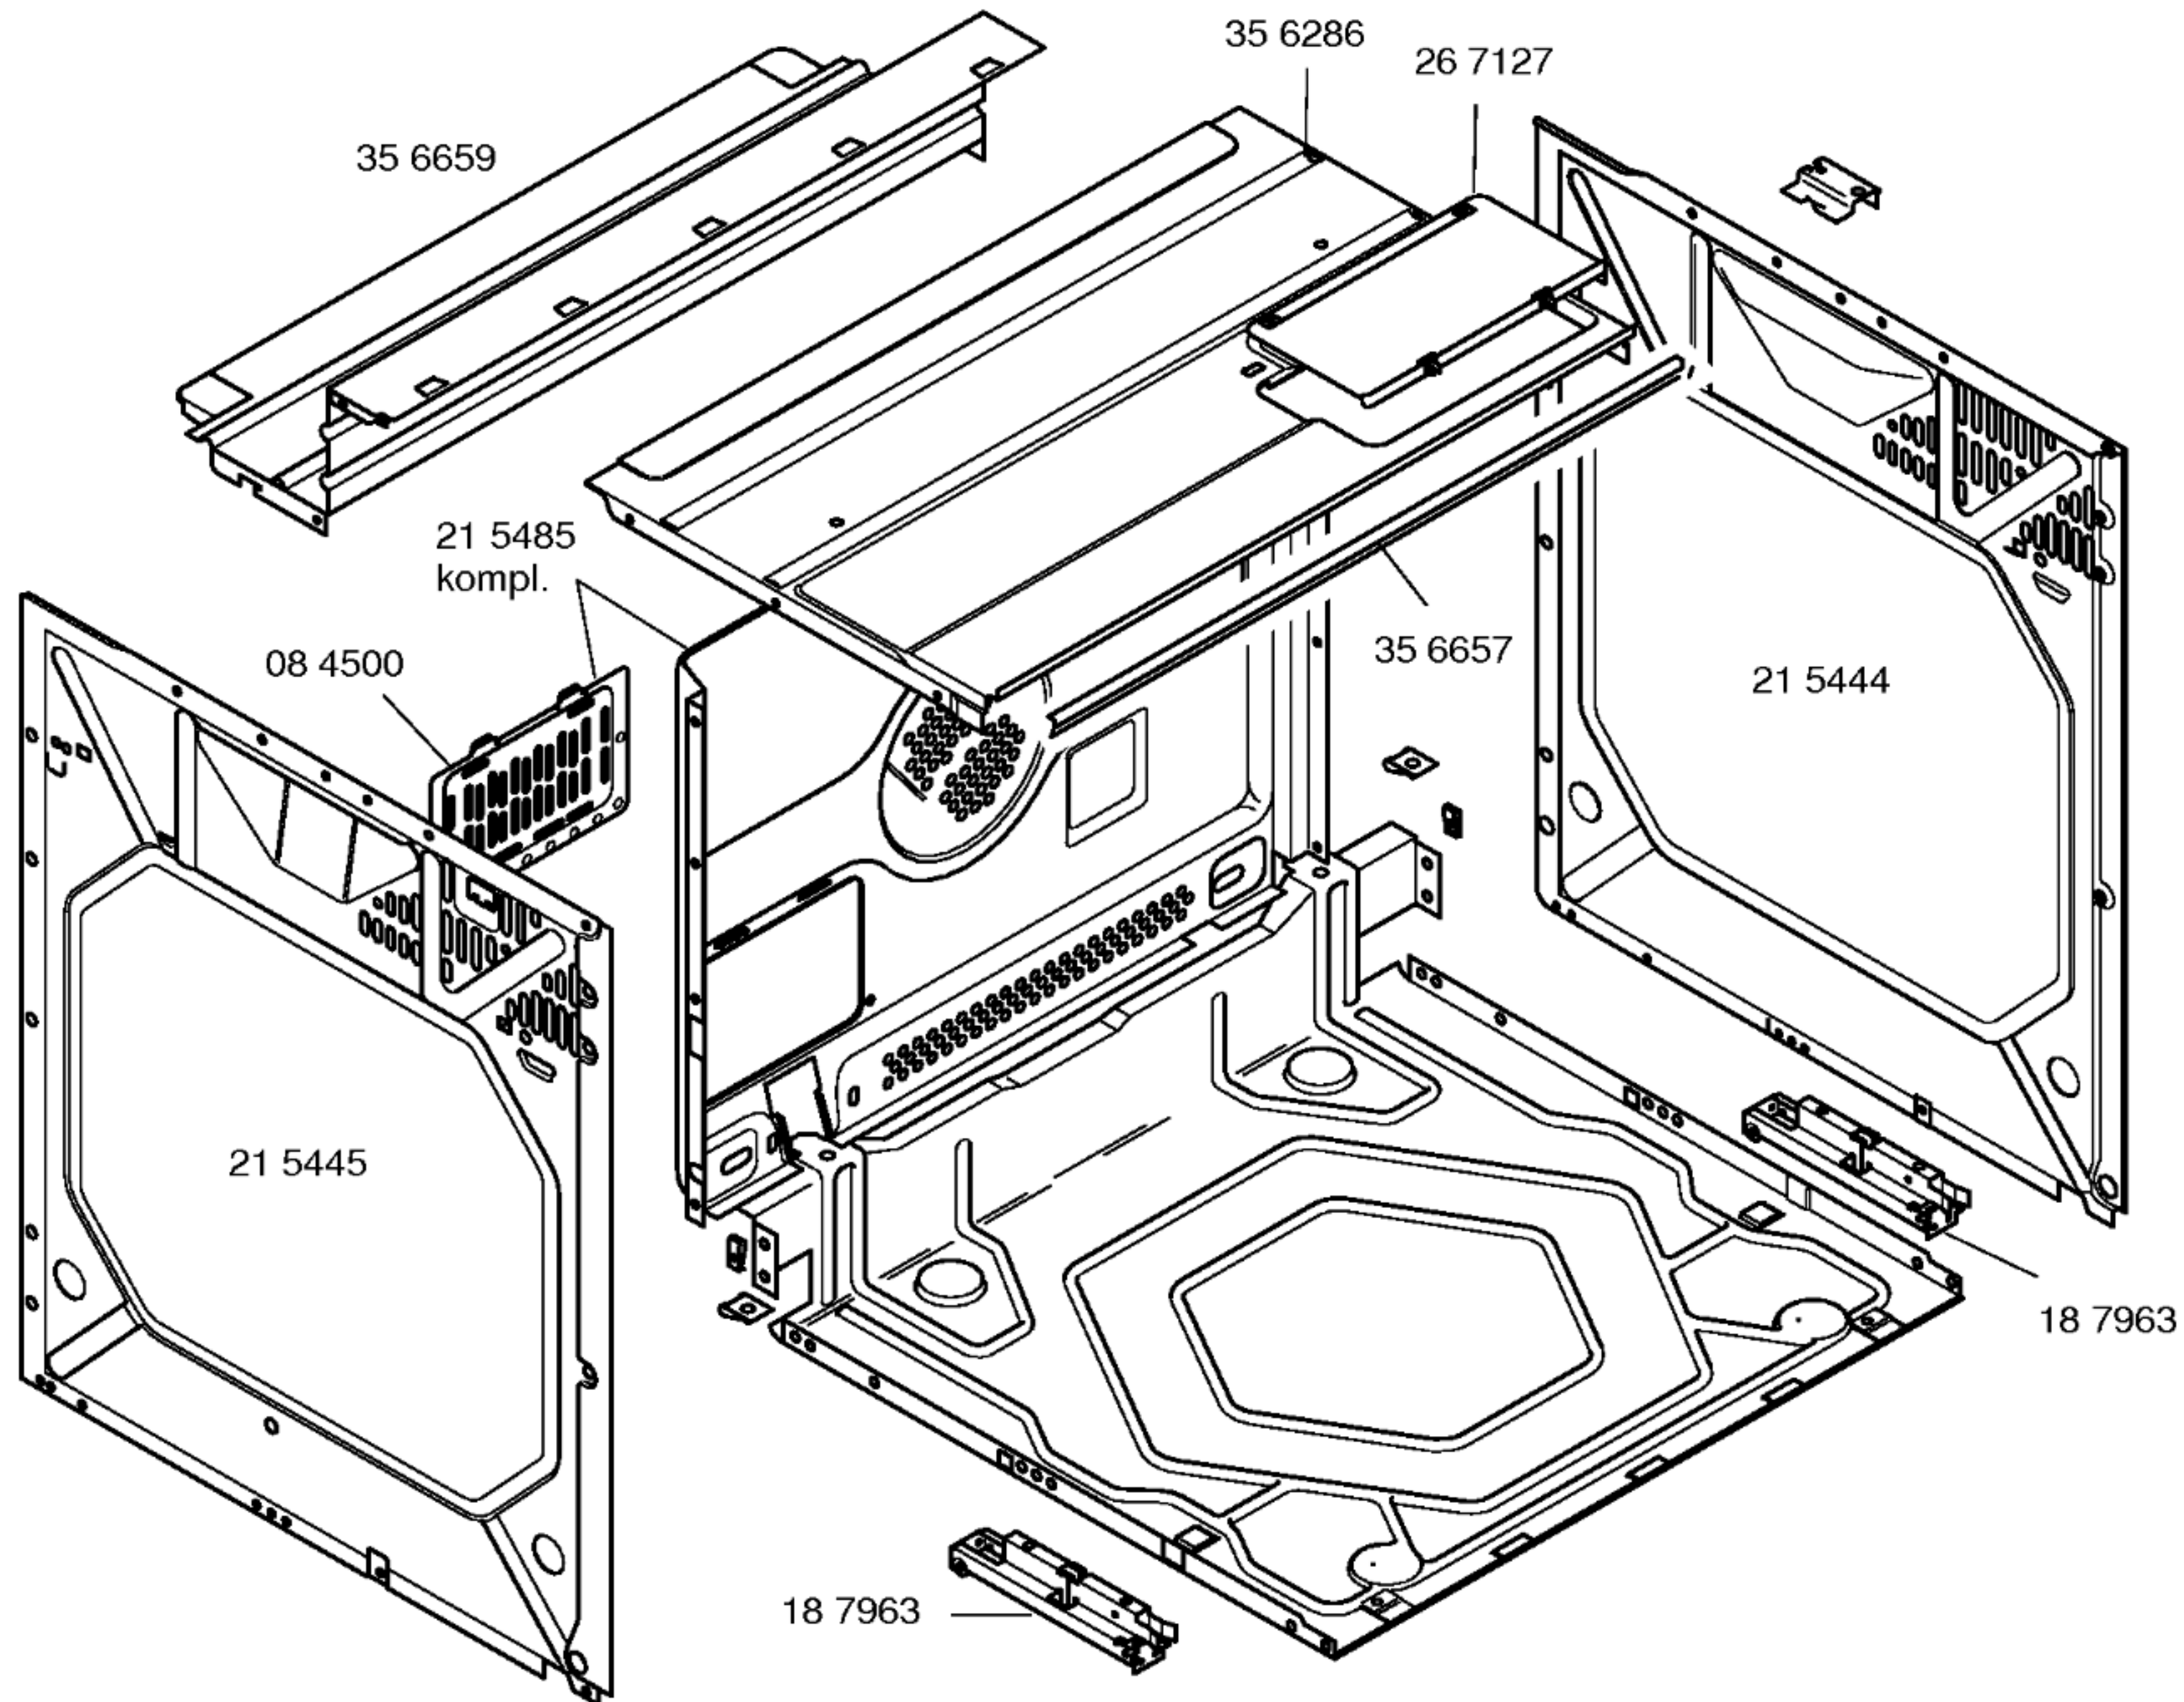

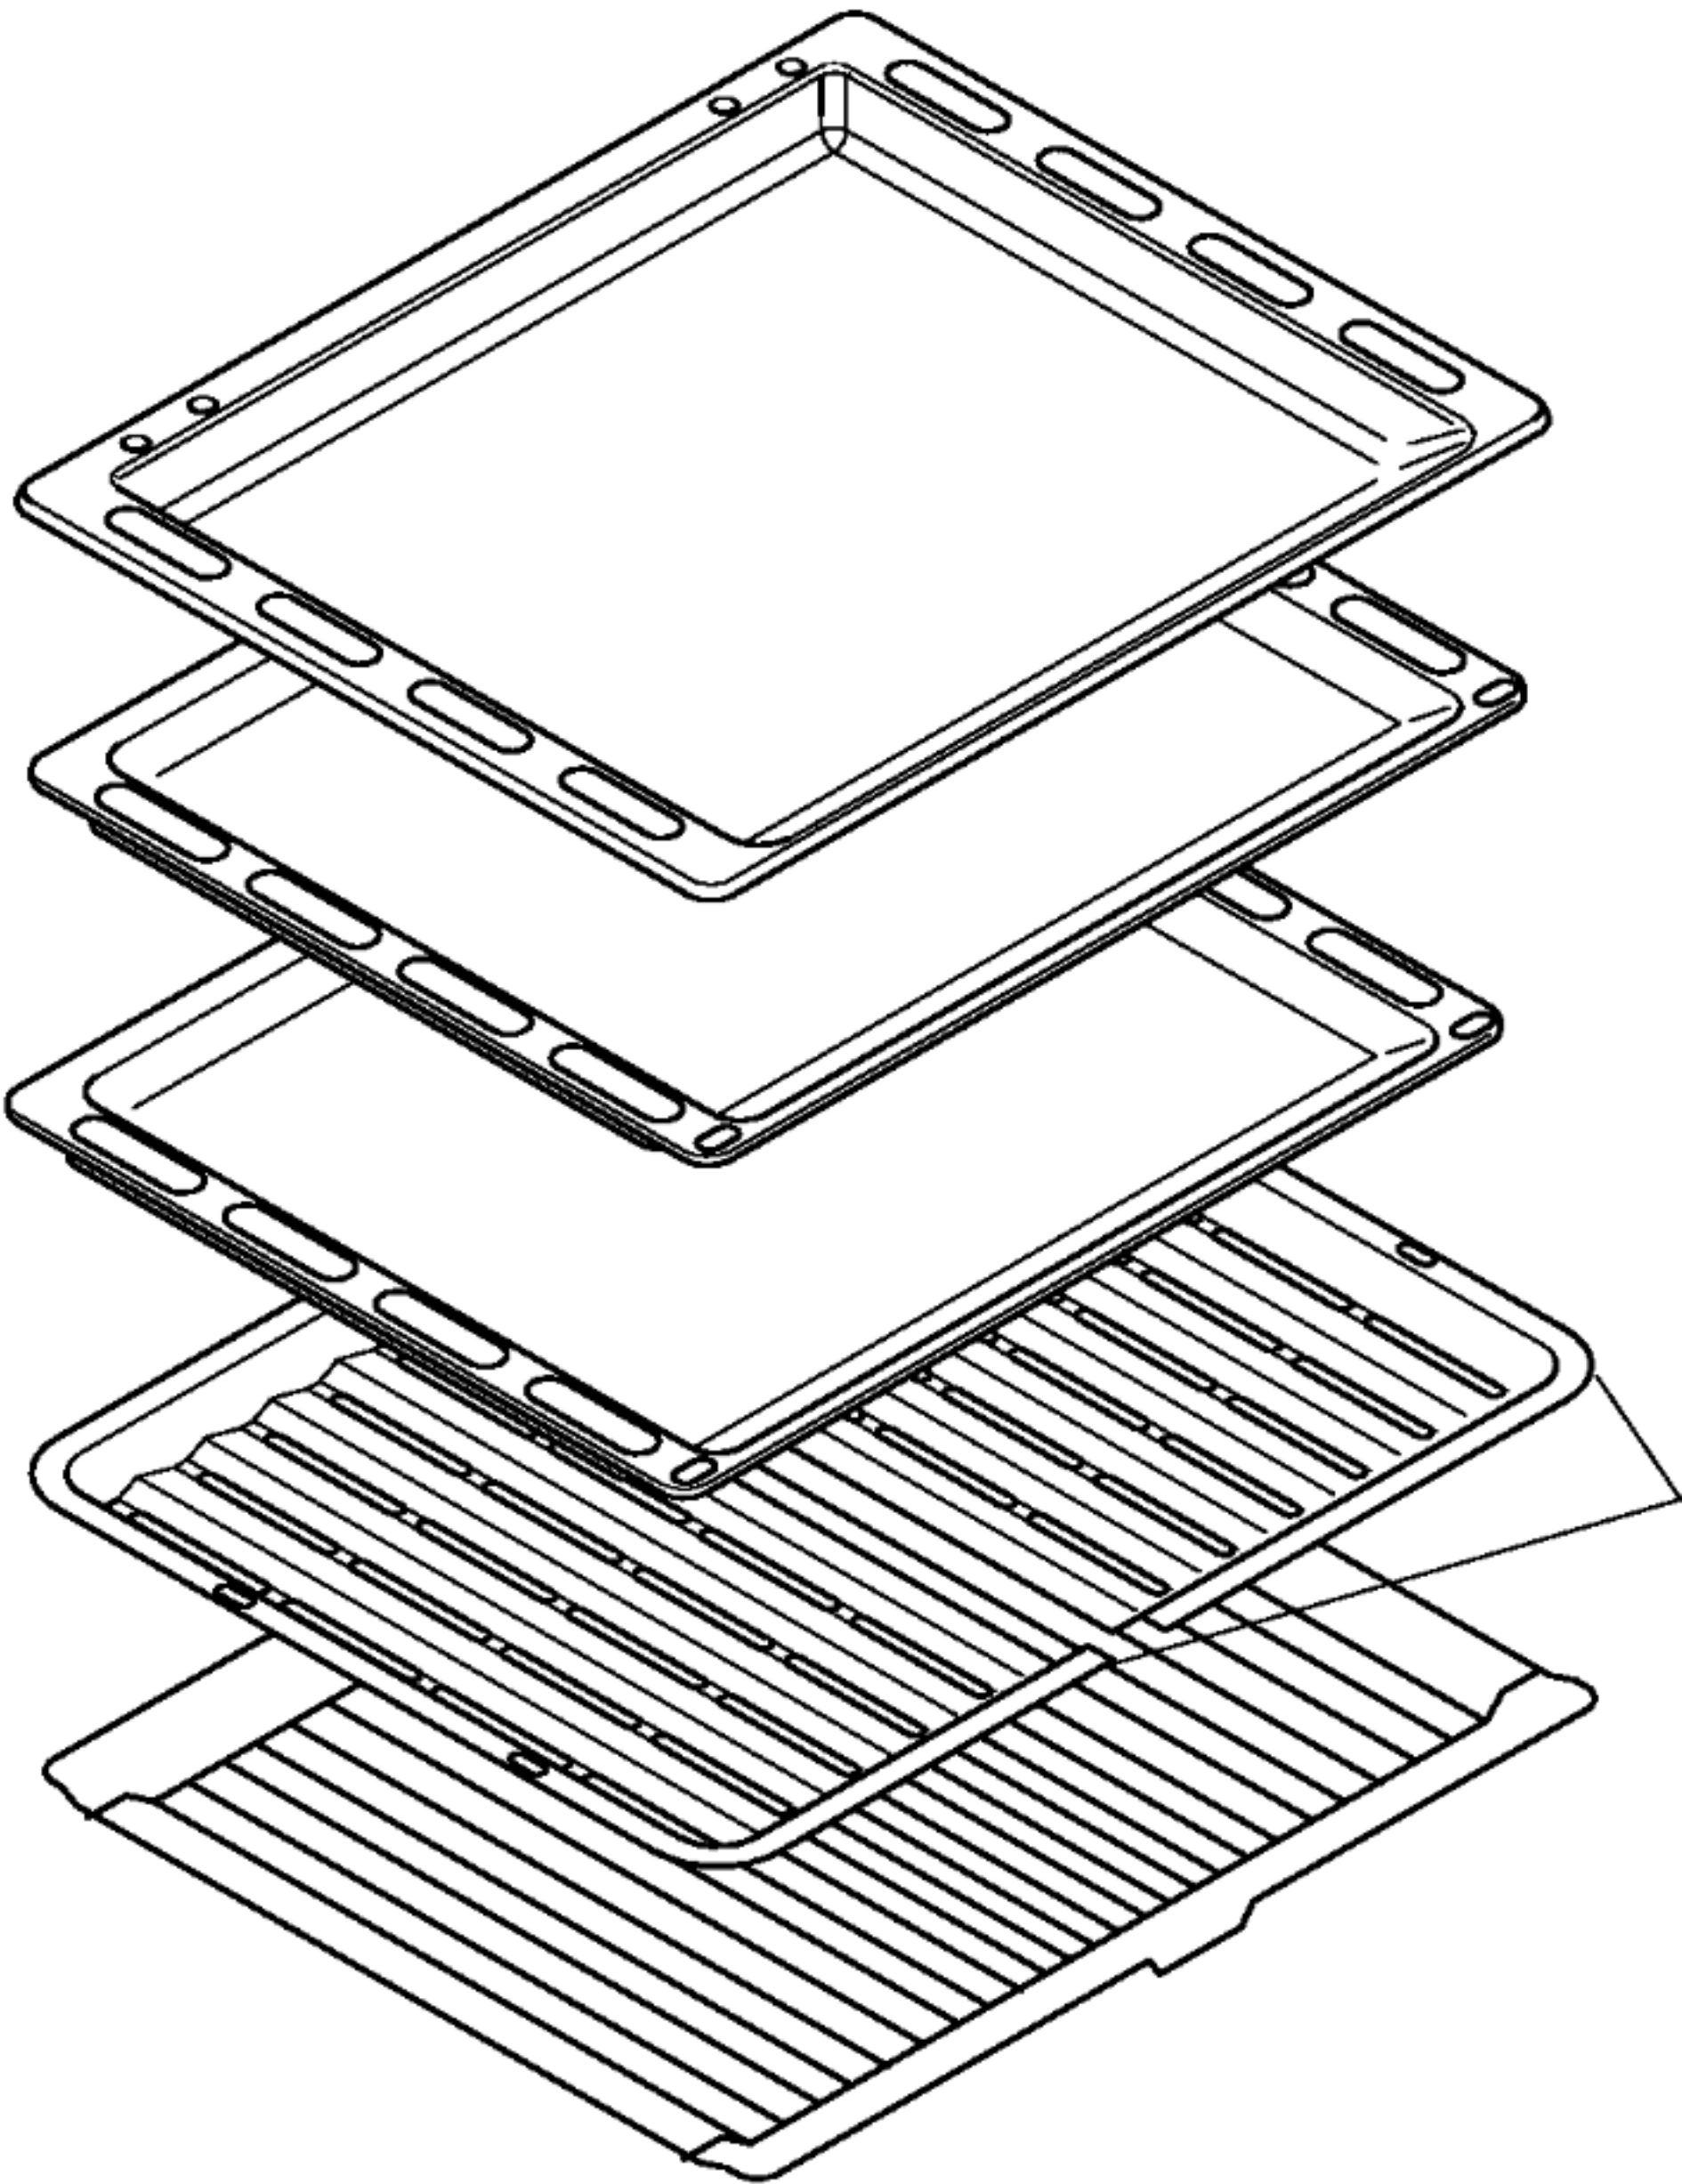

36 4869

36 4867

36 4867

29 0112
Set

28 4723