


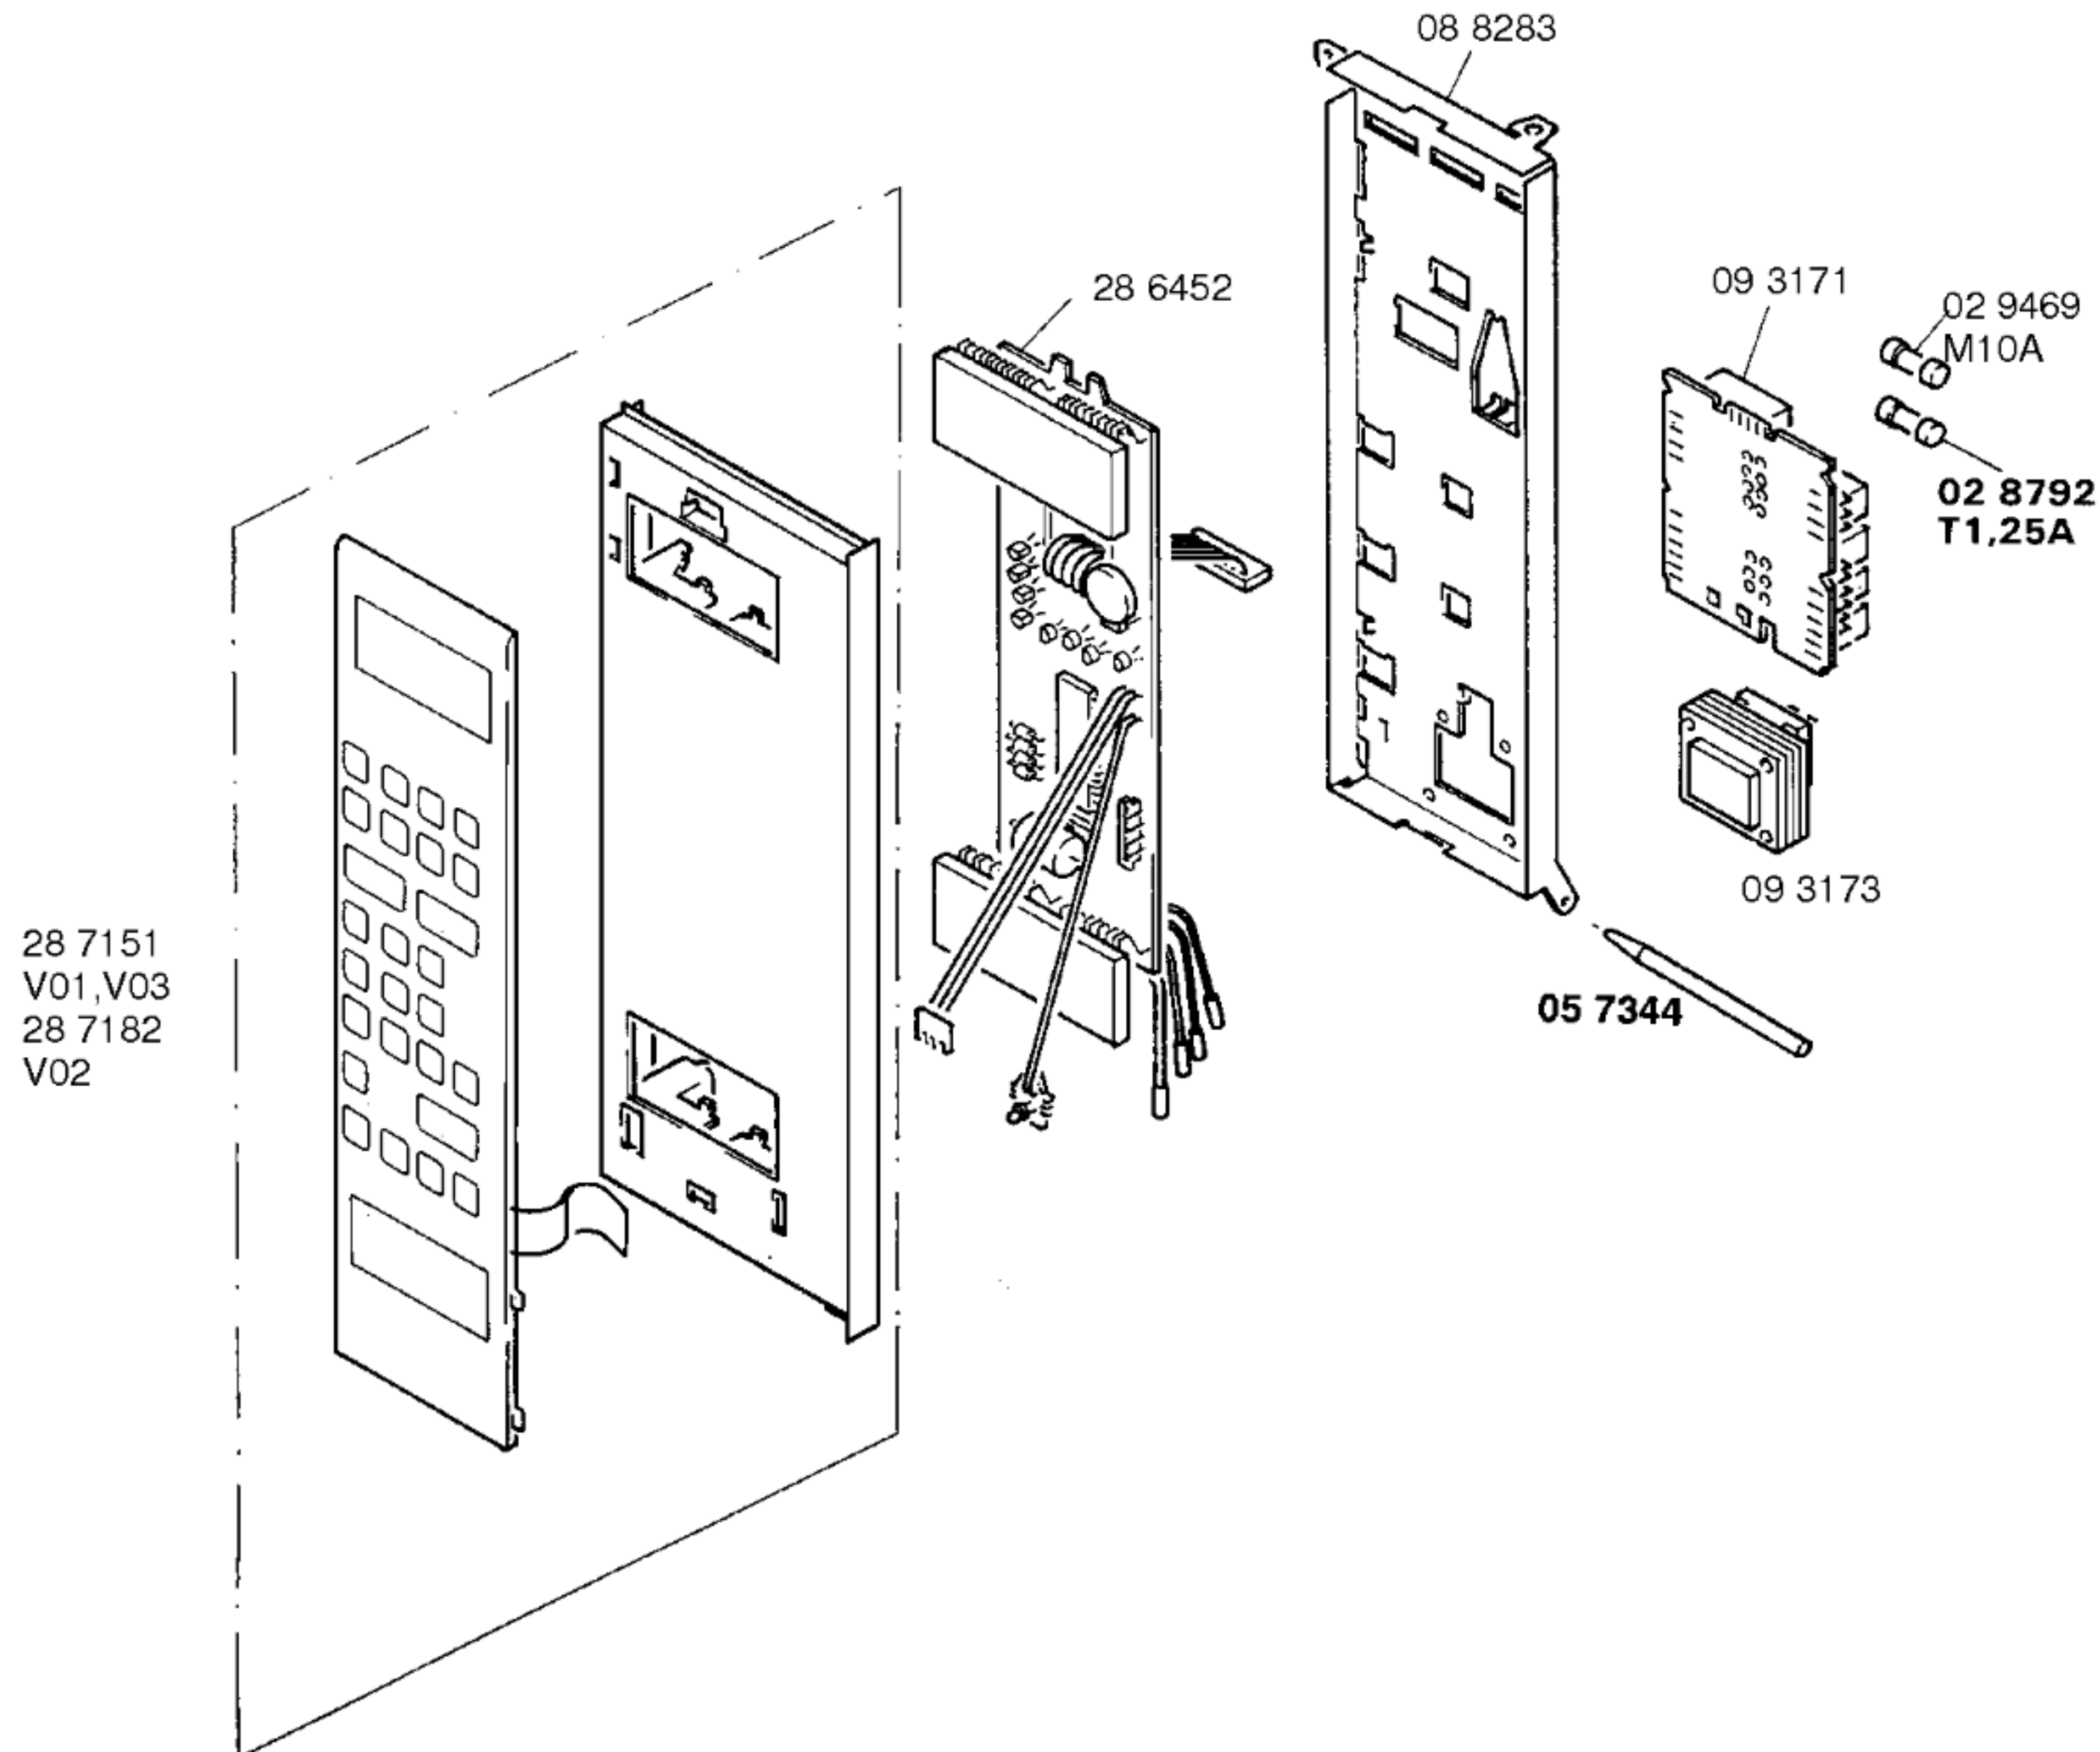

Gebrauchsanweisung
51 7103
(D, GB, F, I, NL, E)

Kurzanweisung
51 7306
(D)

Tips und Rezepte
51 5729
(D)
51 5853
(F)
51 5849
(NL)

Aufkleber Programm-
tabelle
51 6344
(D, GB, F, I, E, N)

Zubehör:


Einbaurahmen
HZ67022

kratzfeste Abdeckung
HZ67720


Alu-Backblech
HZ 8055

Glaspfanne
HZ 8056


Glasbräter
HZ 9150

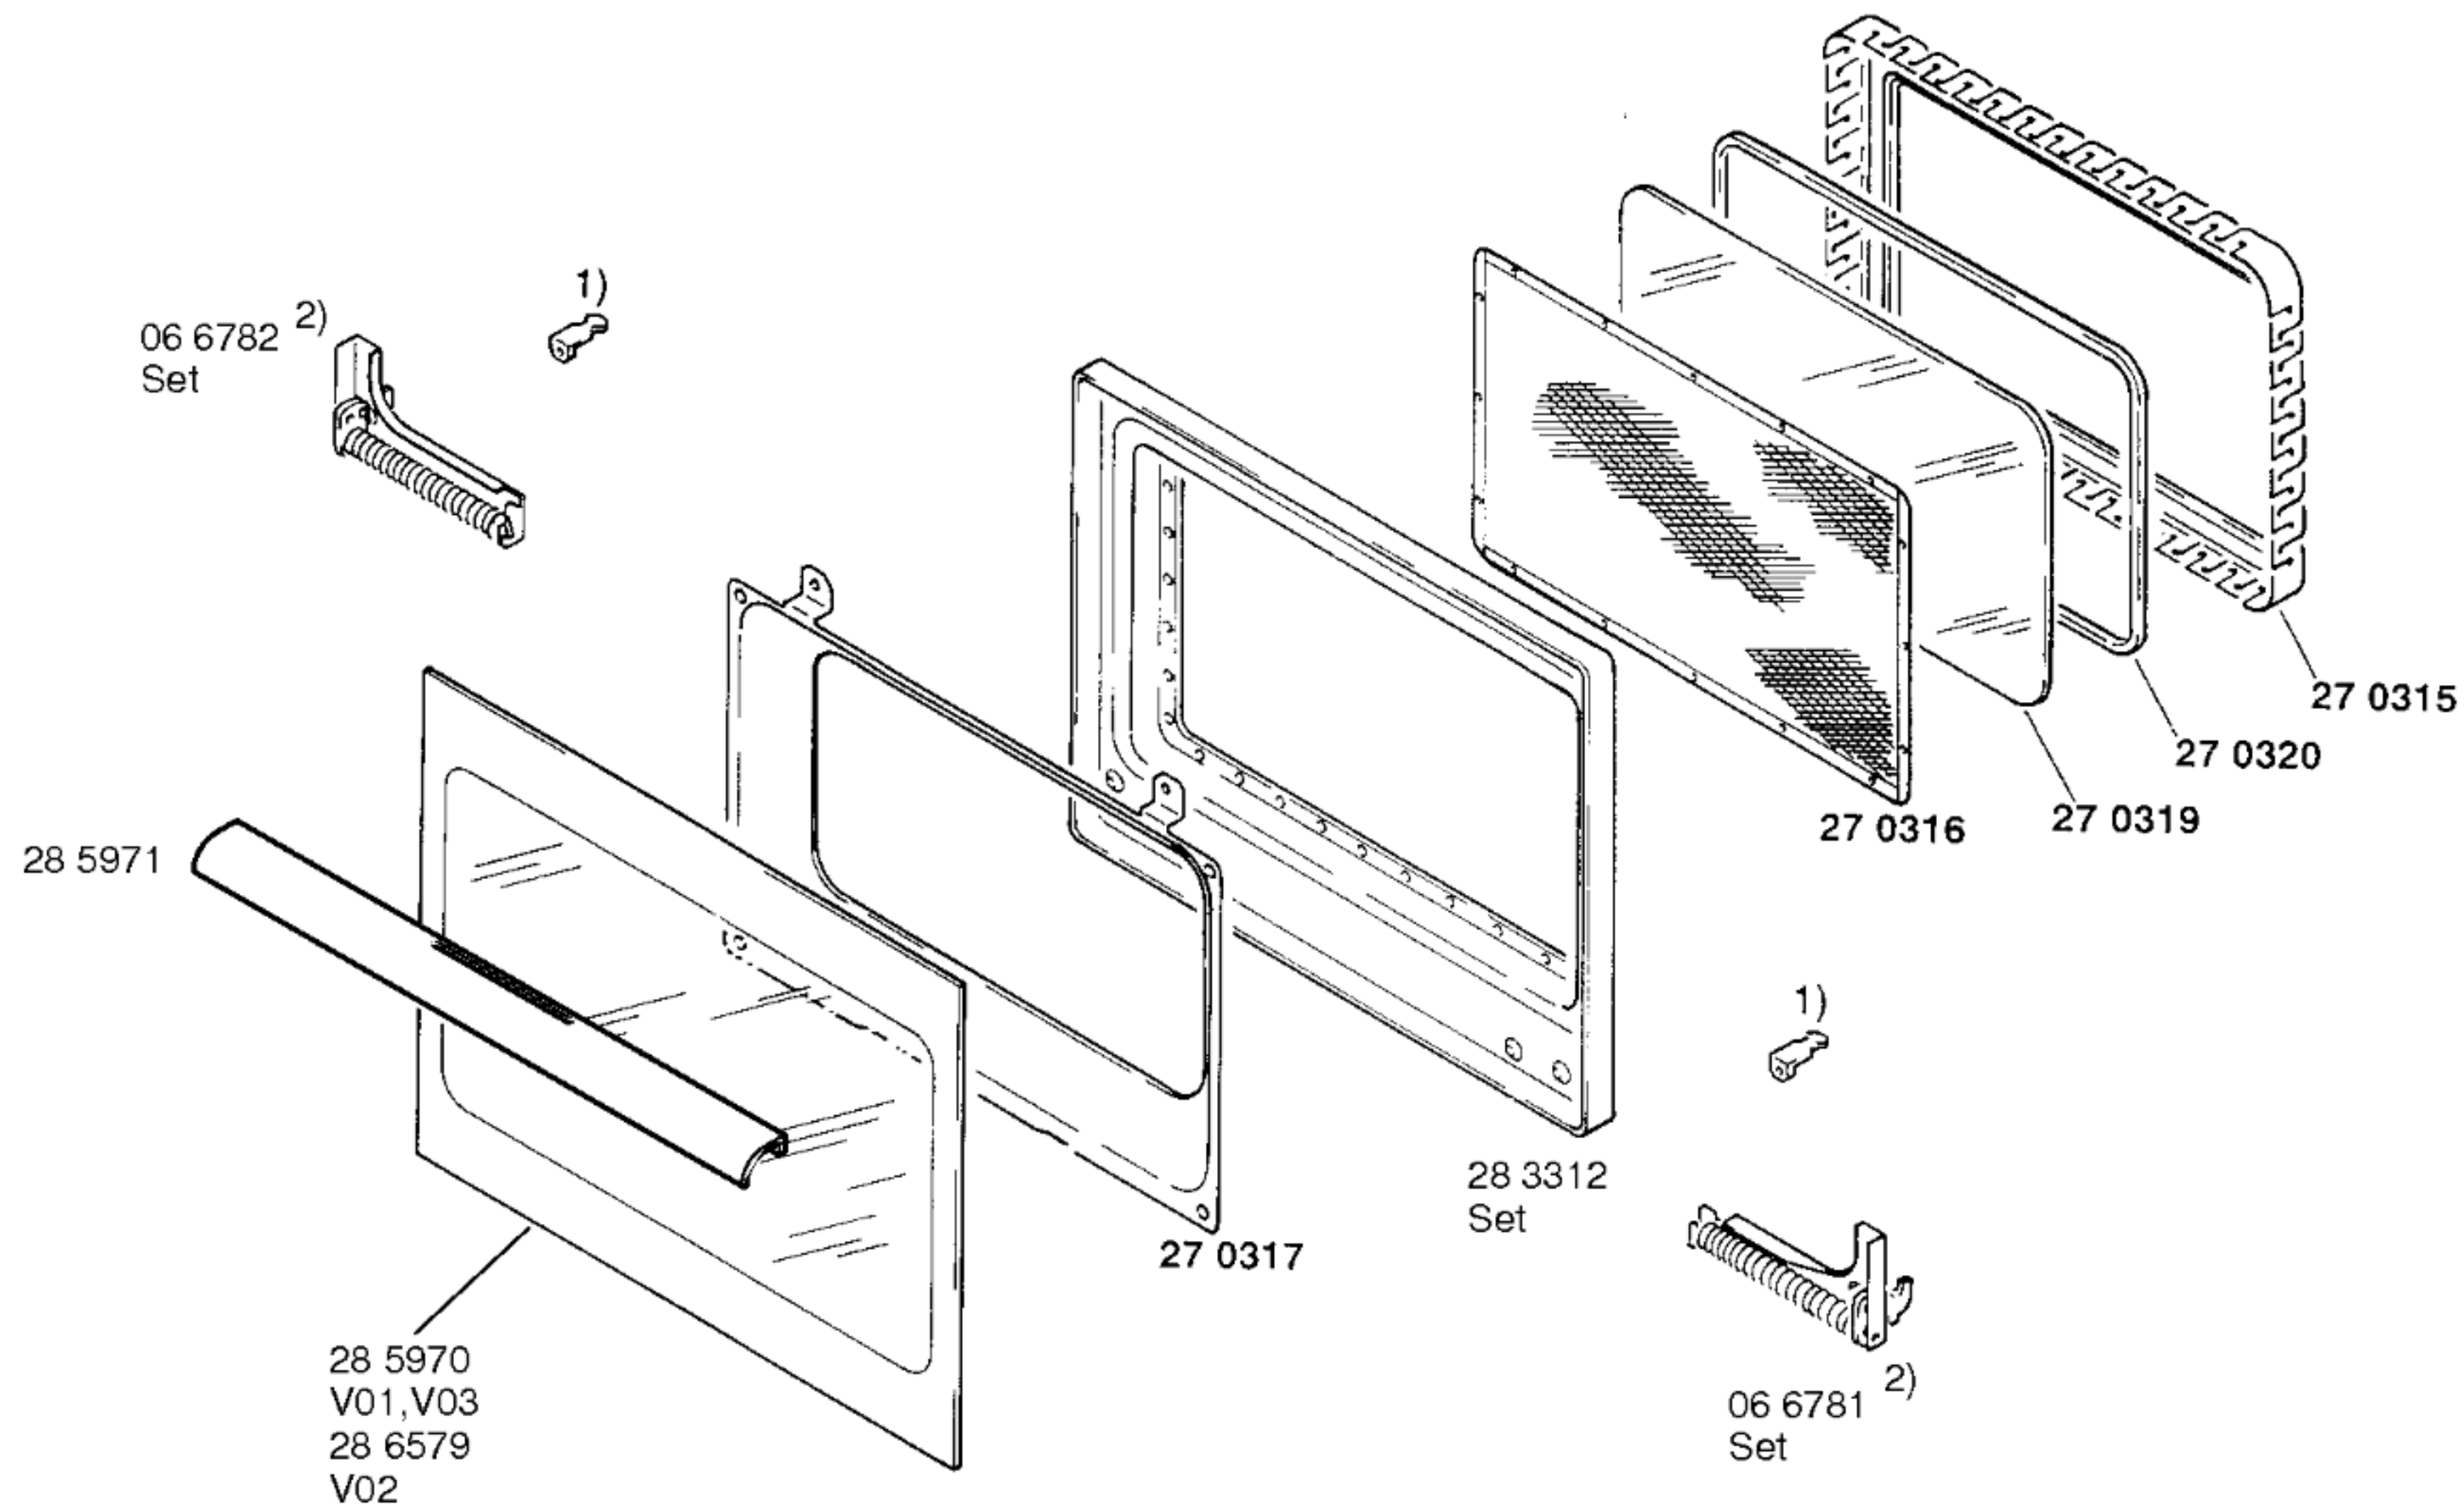

- 1) 03 0671
- 2) 03 0813
- Arretierstift

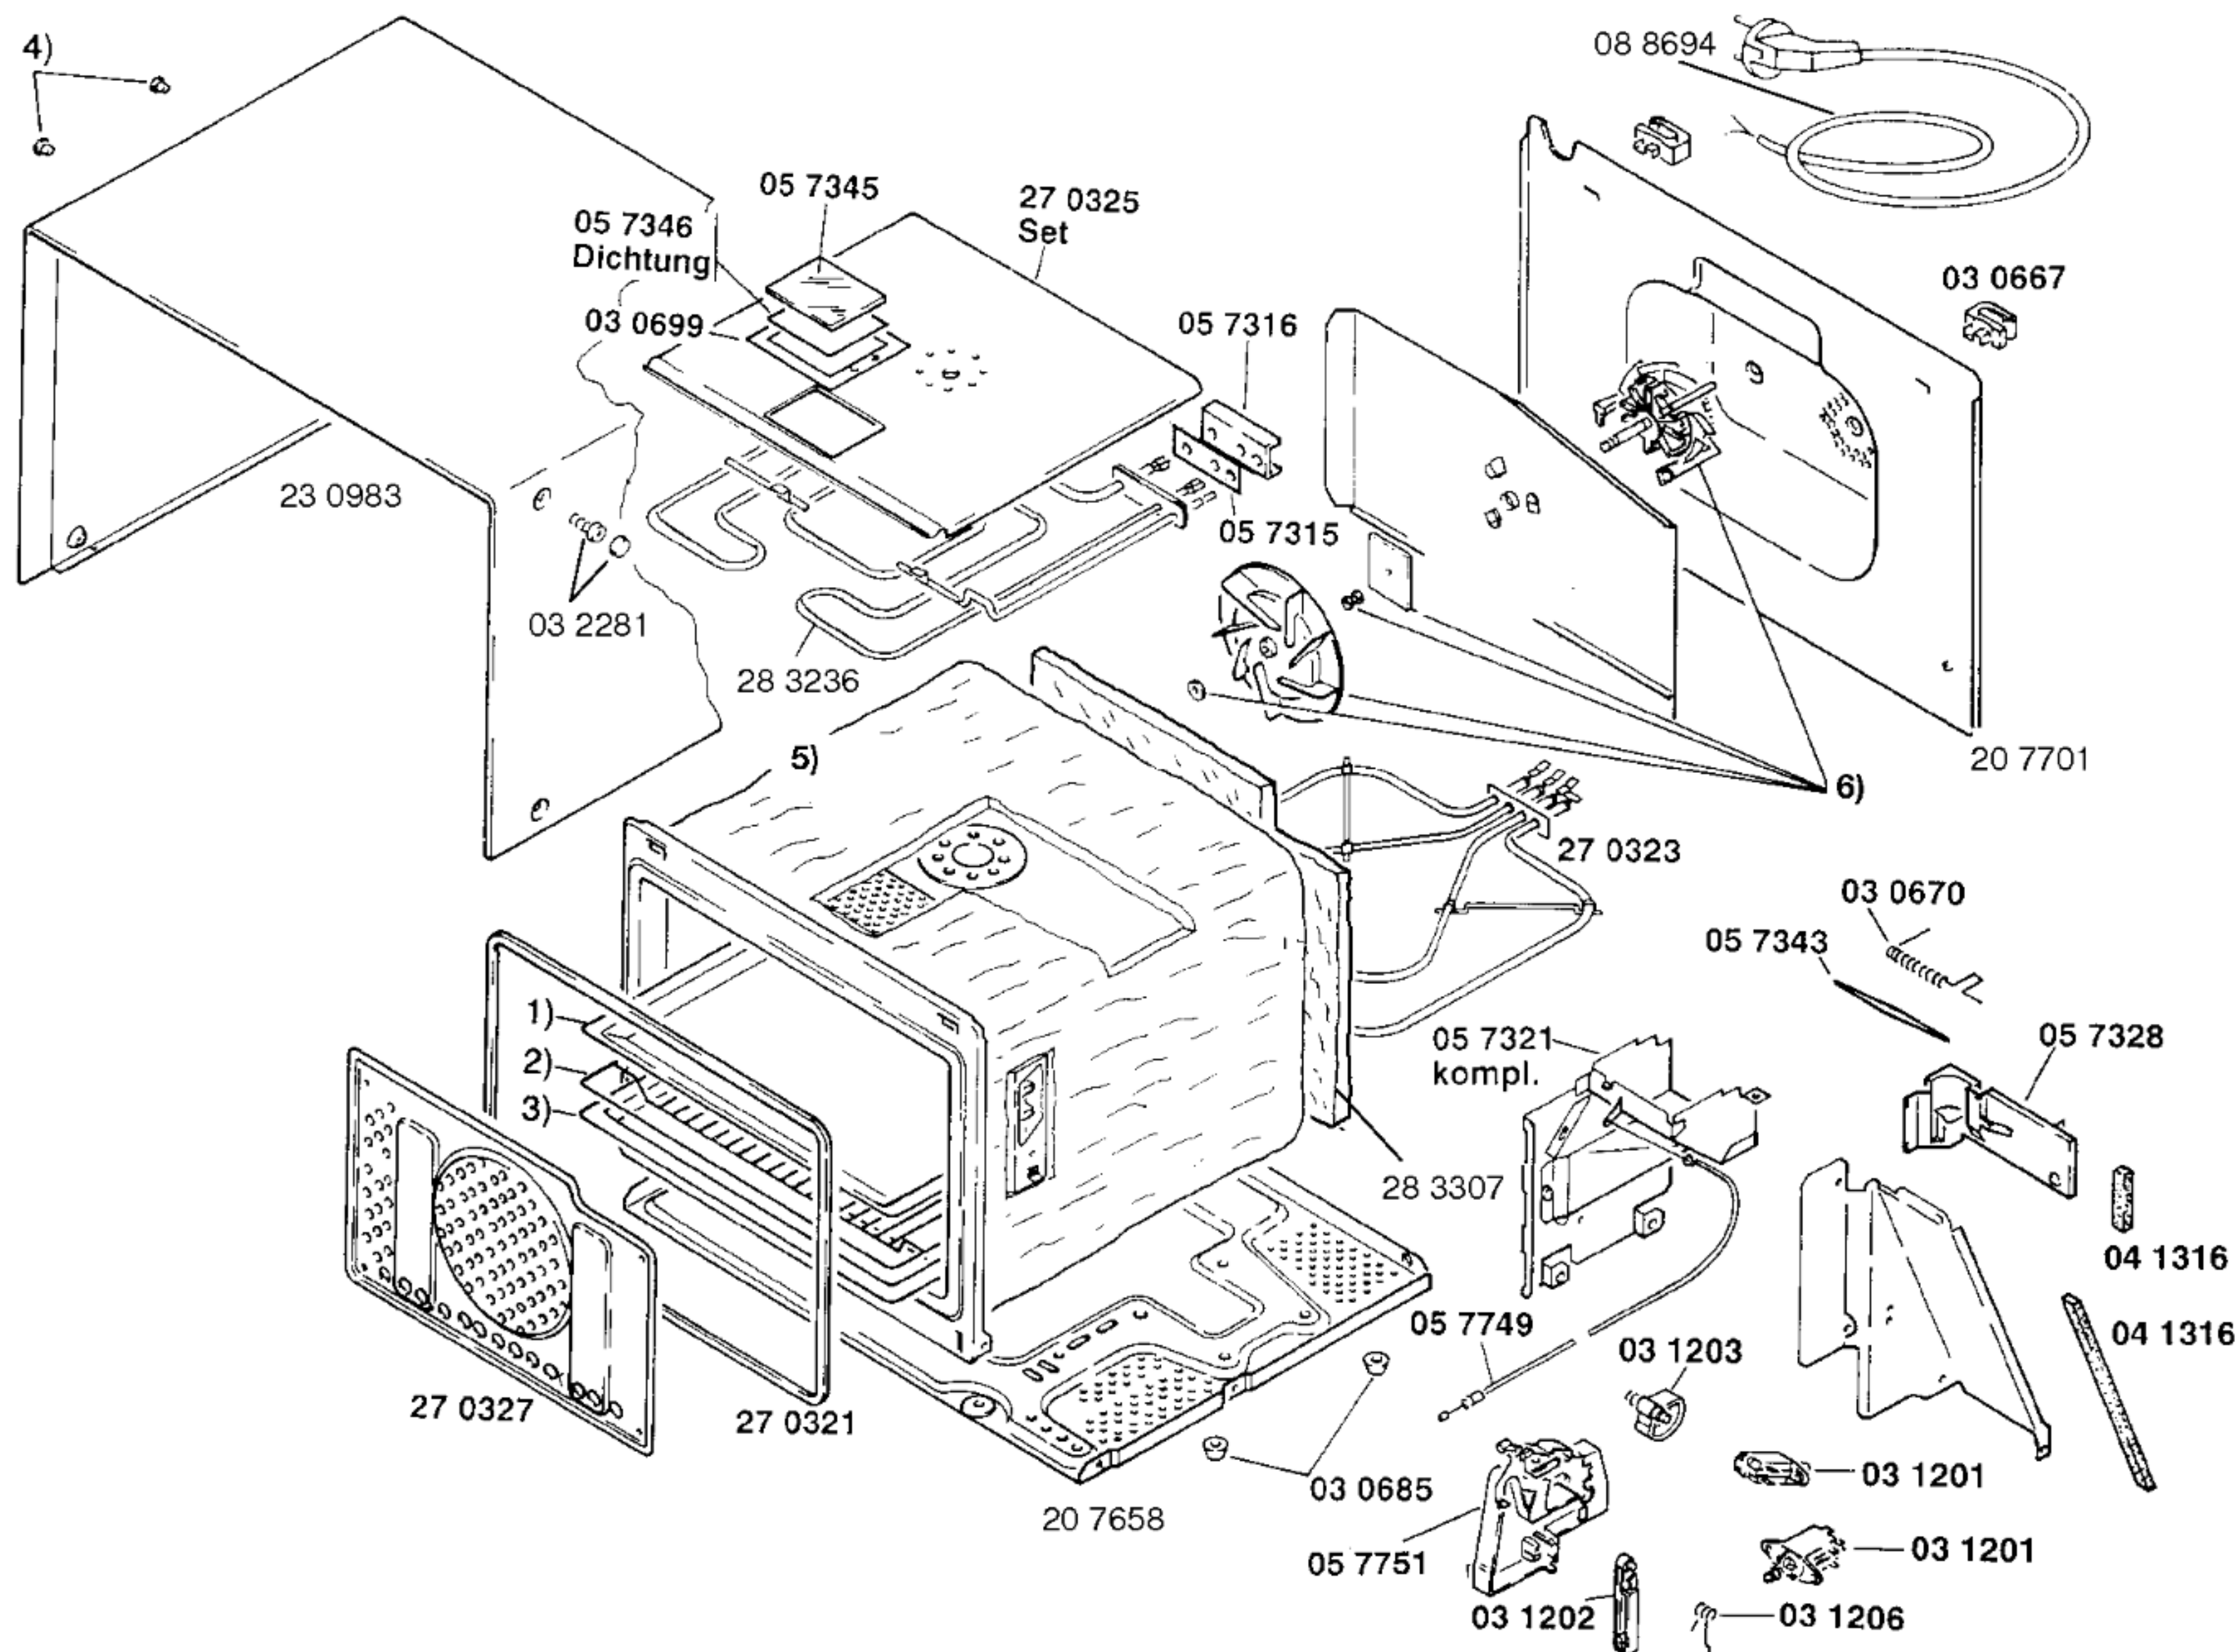

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 02 8732
Anschlag-Backblech
- 4) 03 0688
- 5) 23 2269
- 6) 09 2677
kompl.

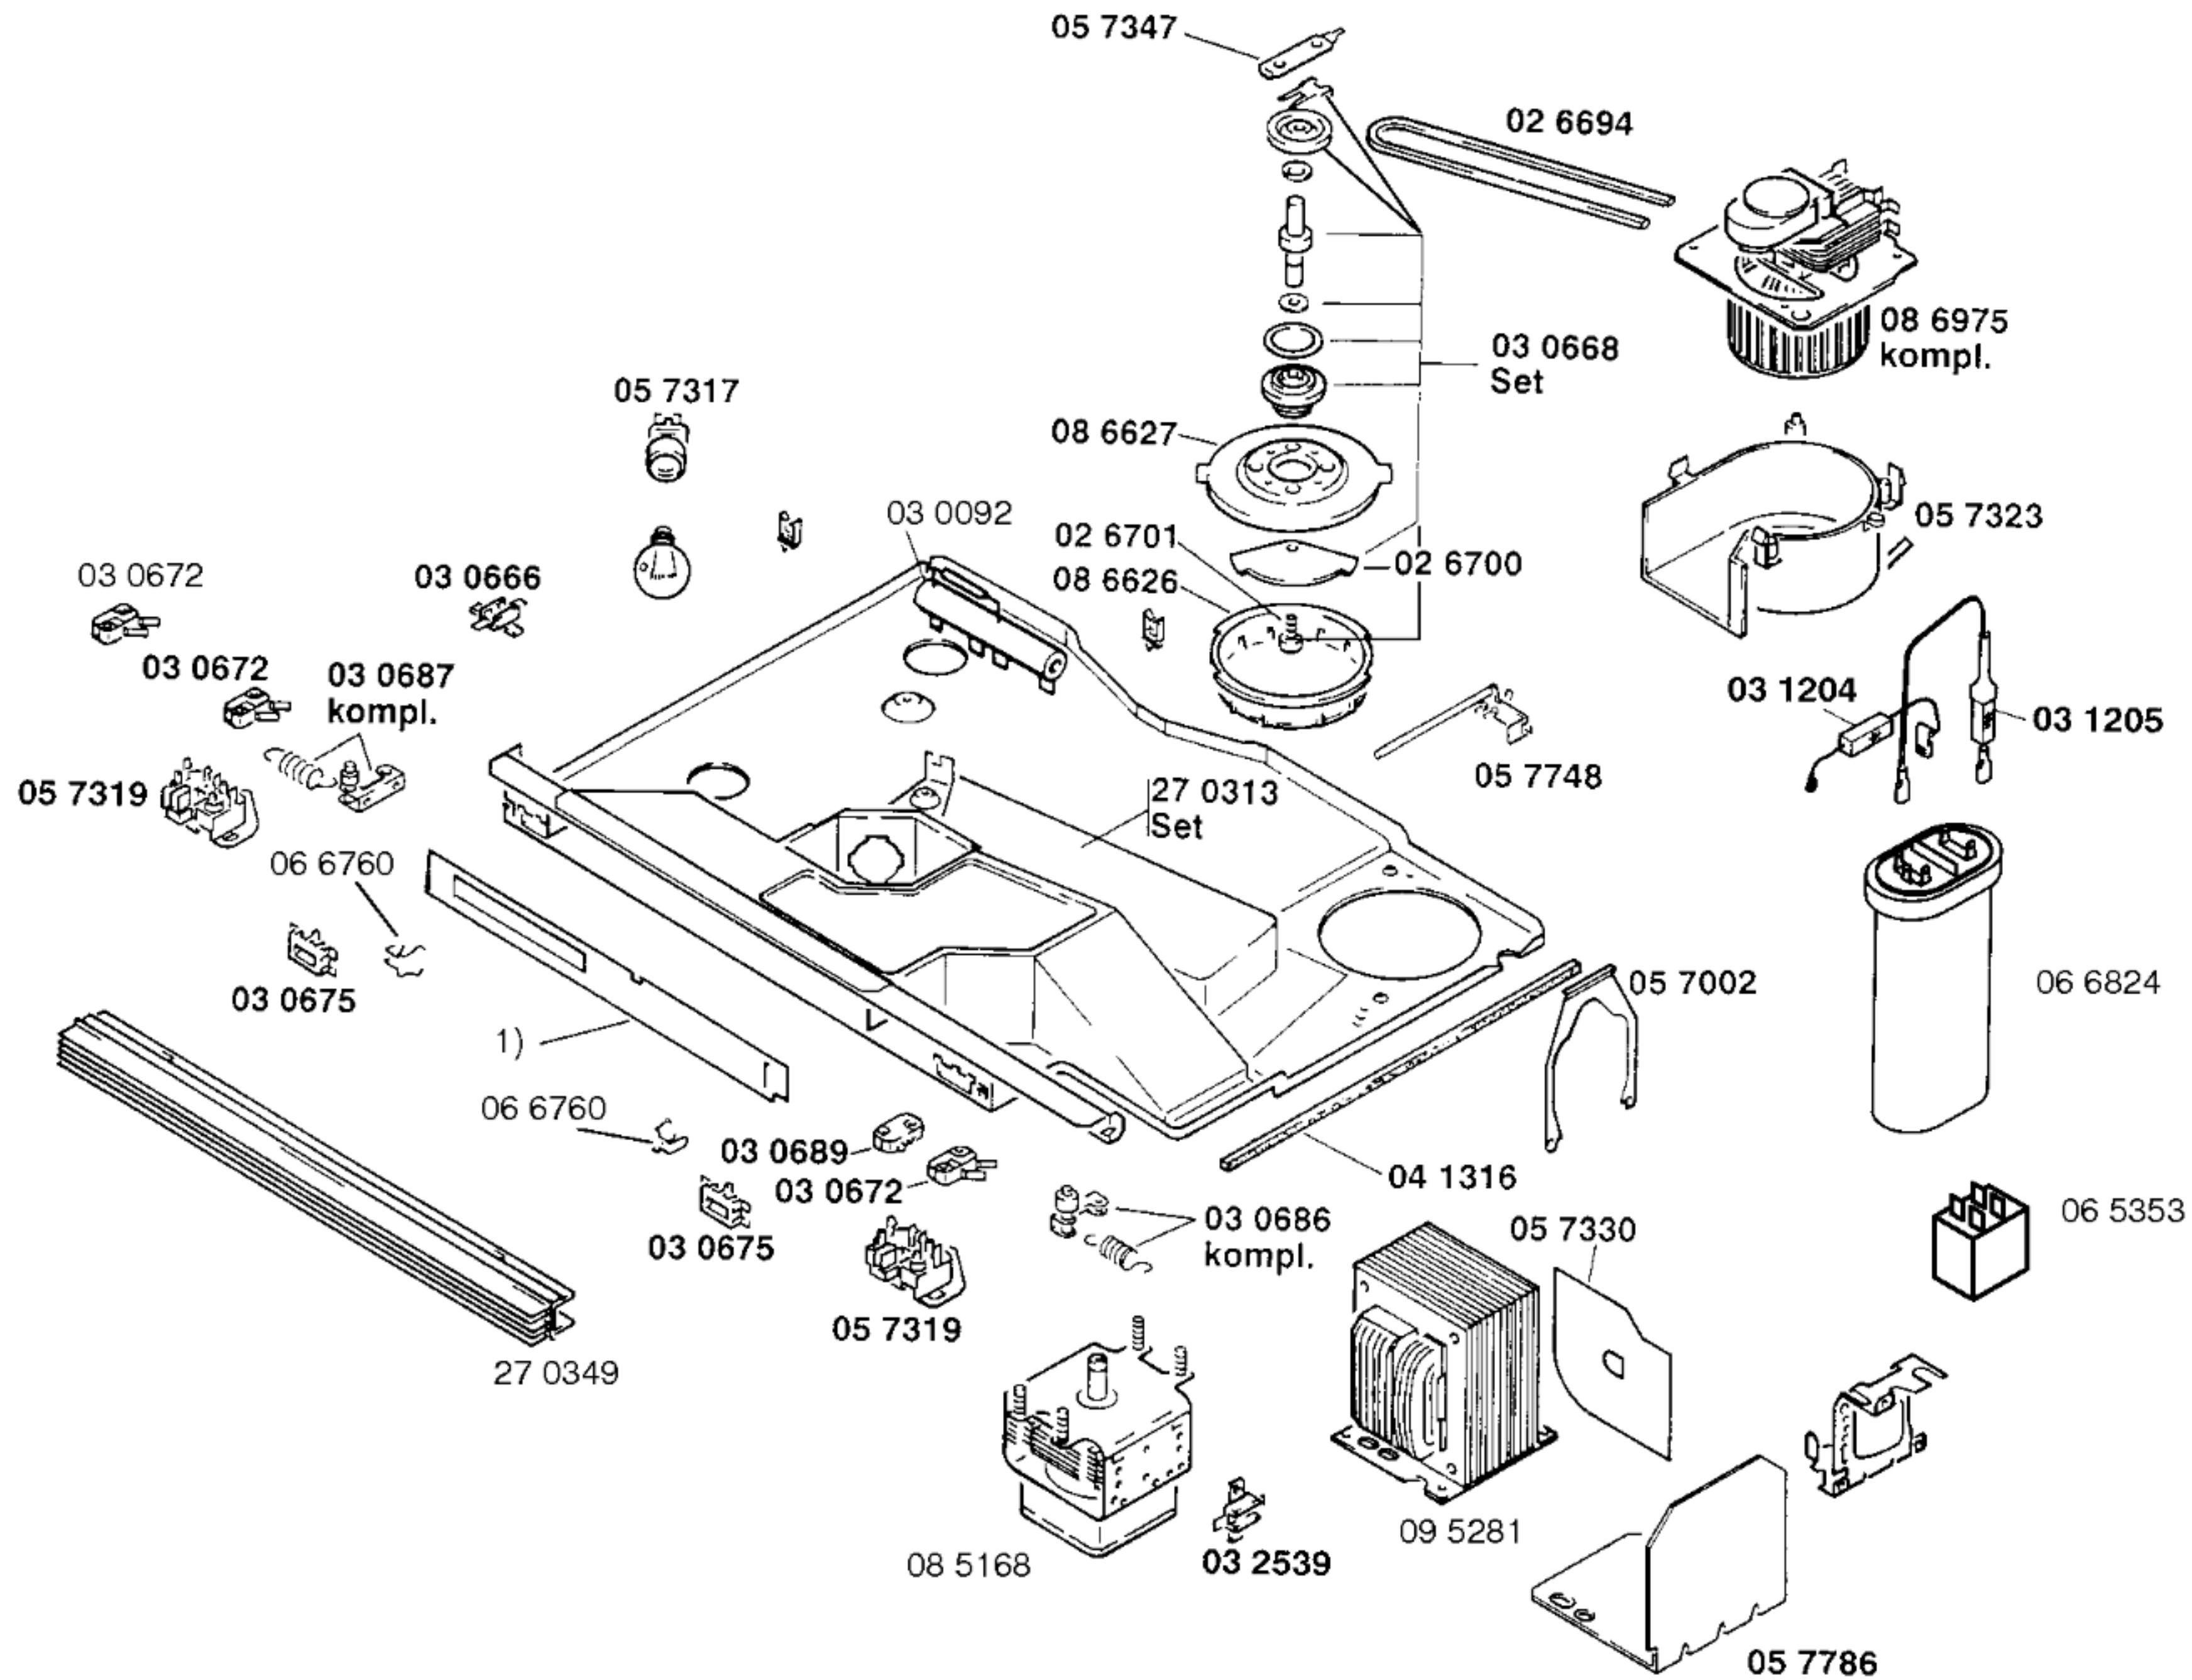

1) 28 3084