 


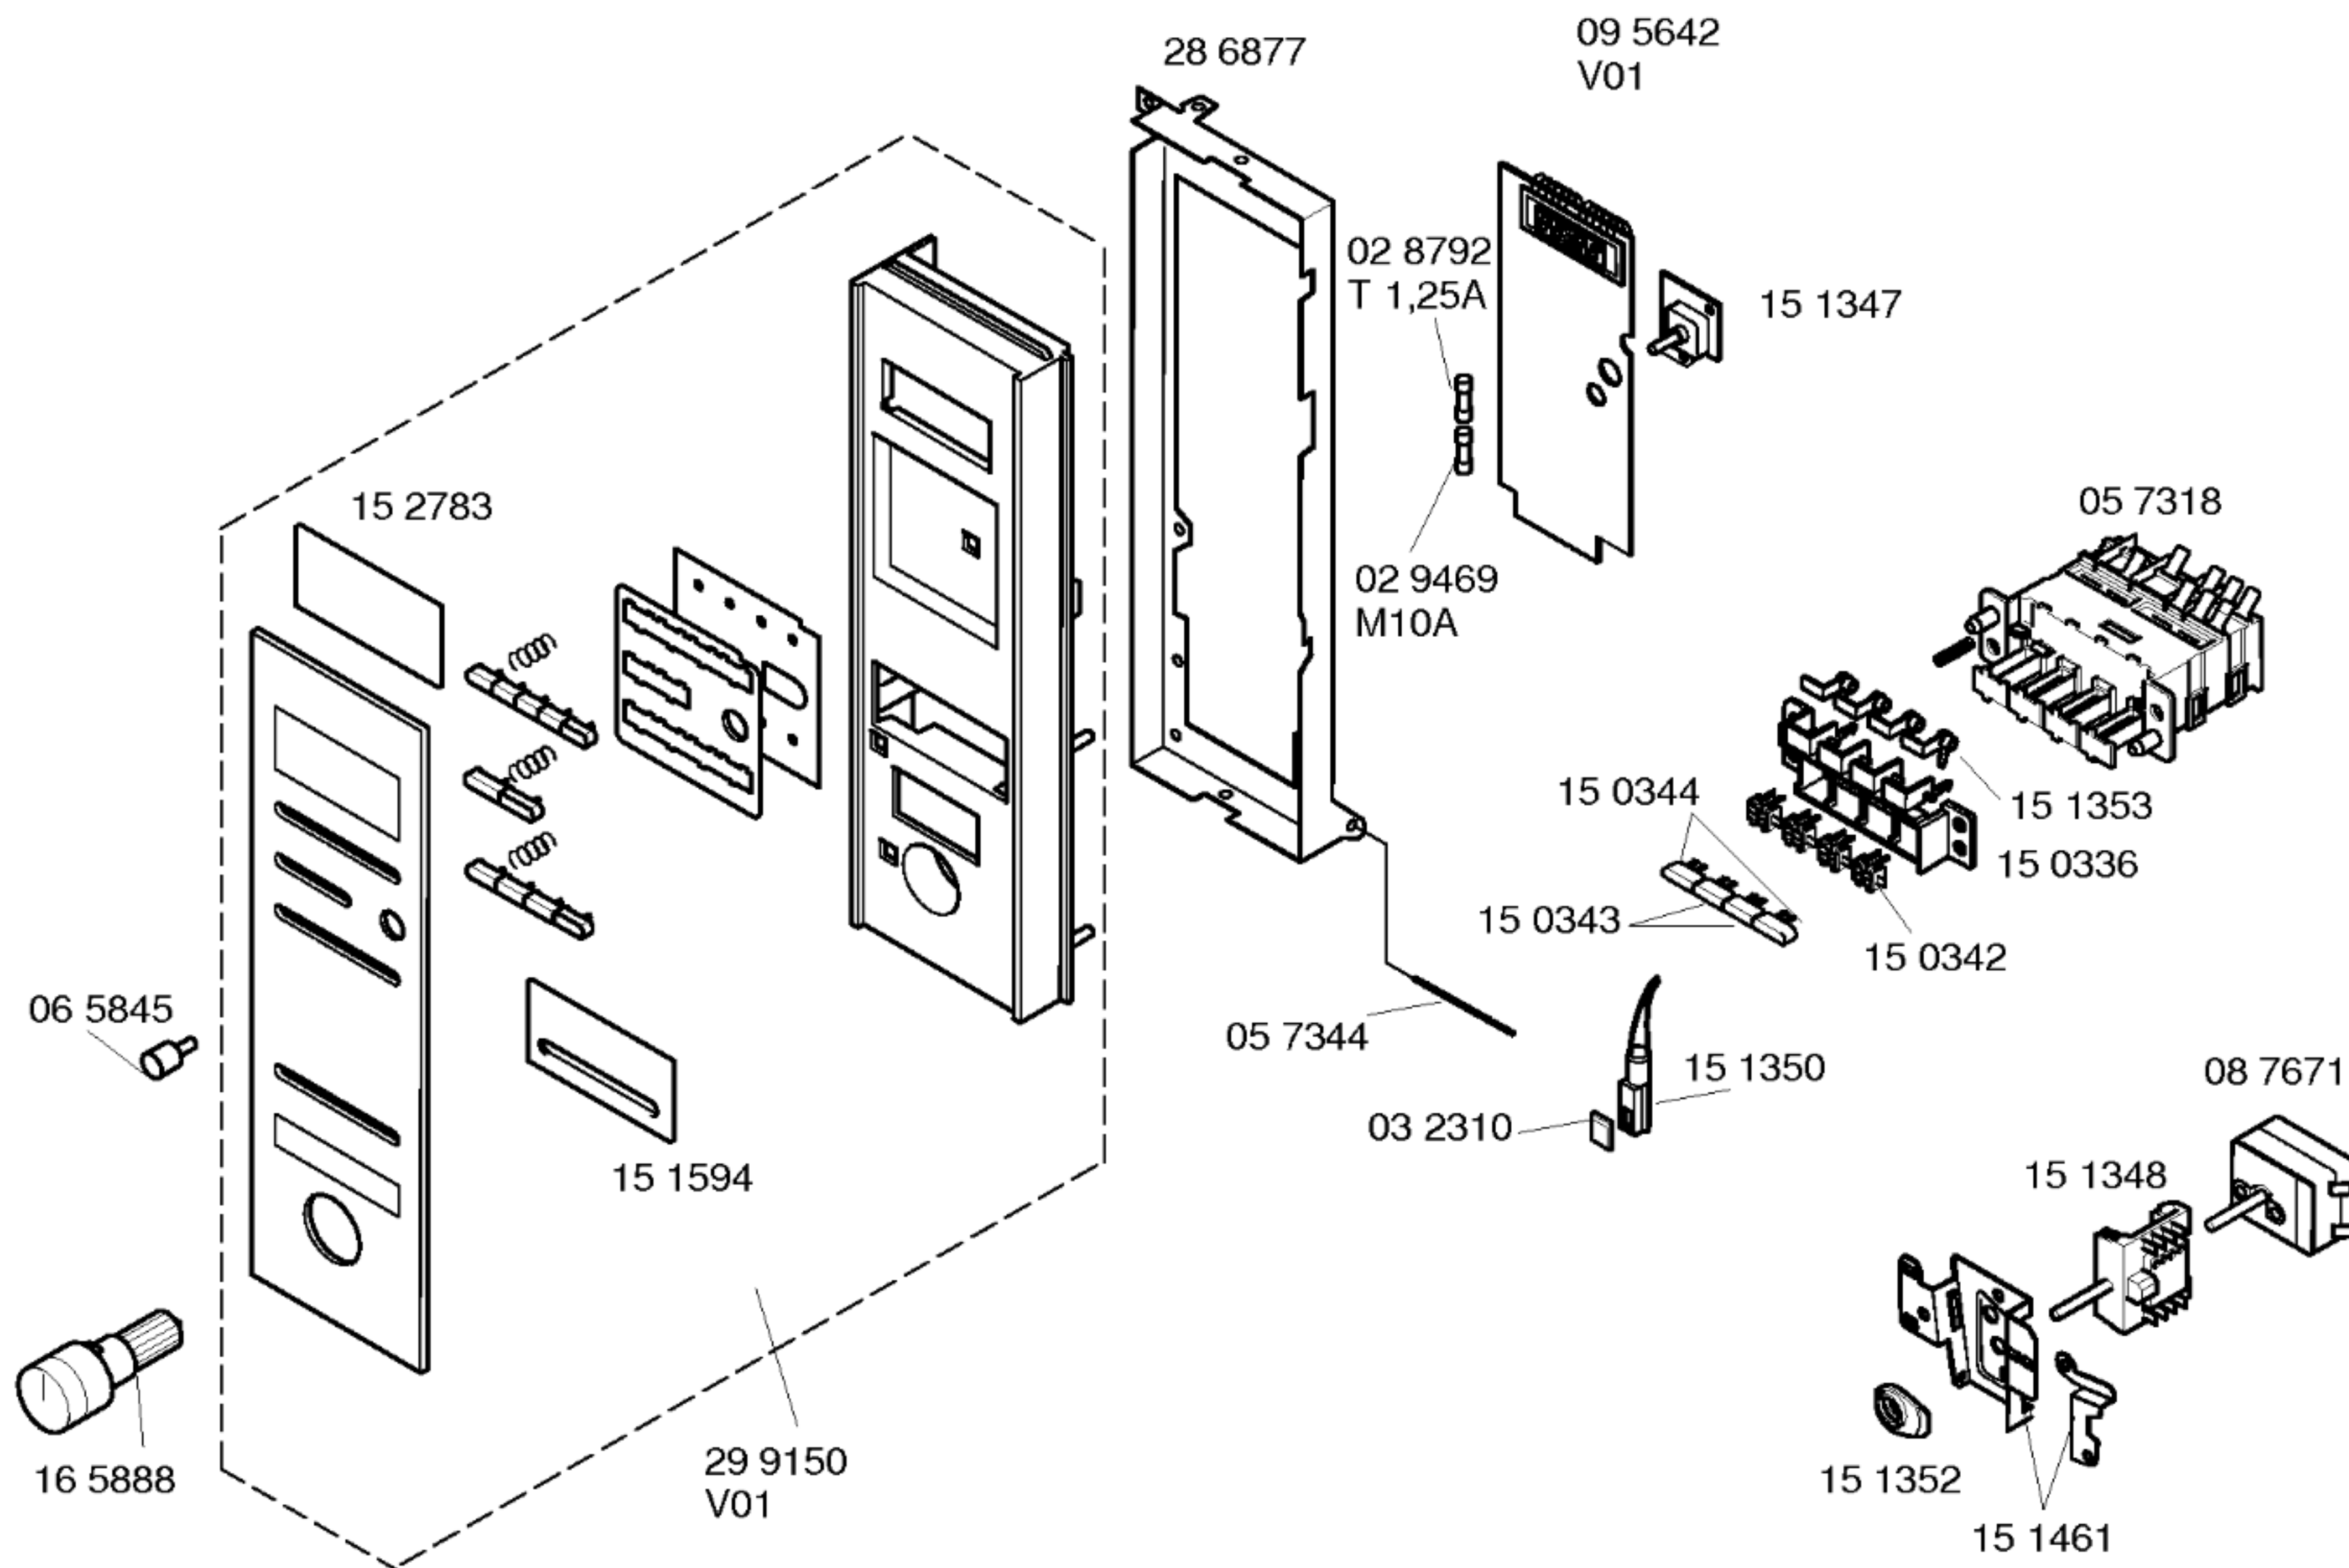

Gebrauchsanweisung
52 0104
(D,F,GB,I,NL,E)

Programmtabelle
51 7579
(D,GB,F,I,NL,E)

Kochbuch
51 5729
V01
(D)
51 5853
V02
(F)
51 5849
V02,V05
(NL)

Zubehör:

 
Einbaurahmen
HZ 67042

 
Alu-Backblech
HZ 8055

Glasbräter
HZ 9150

Glaspfanne
HZ 8056

Abdeckplatte
HZ 67740

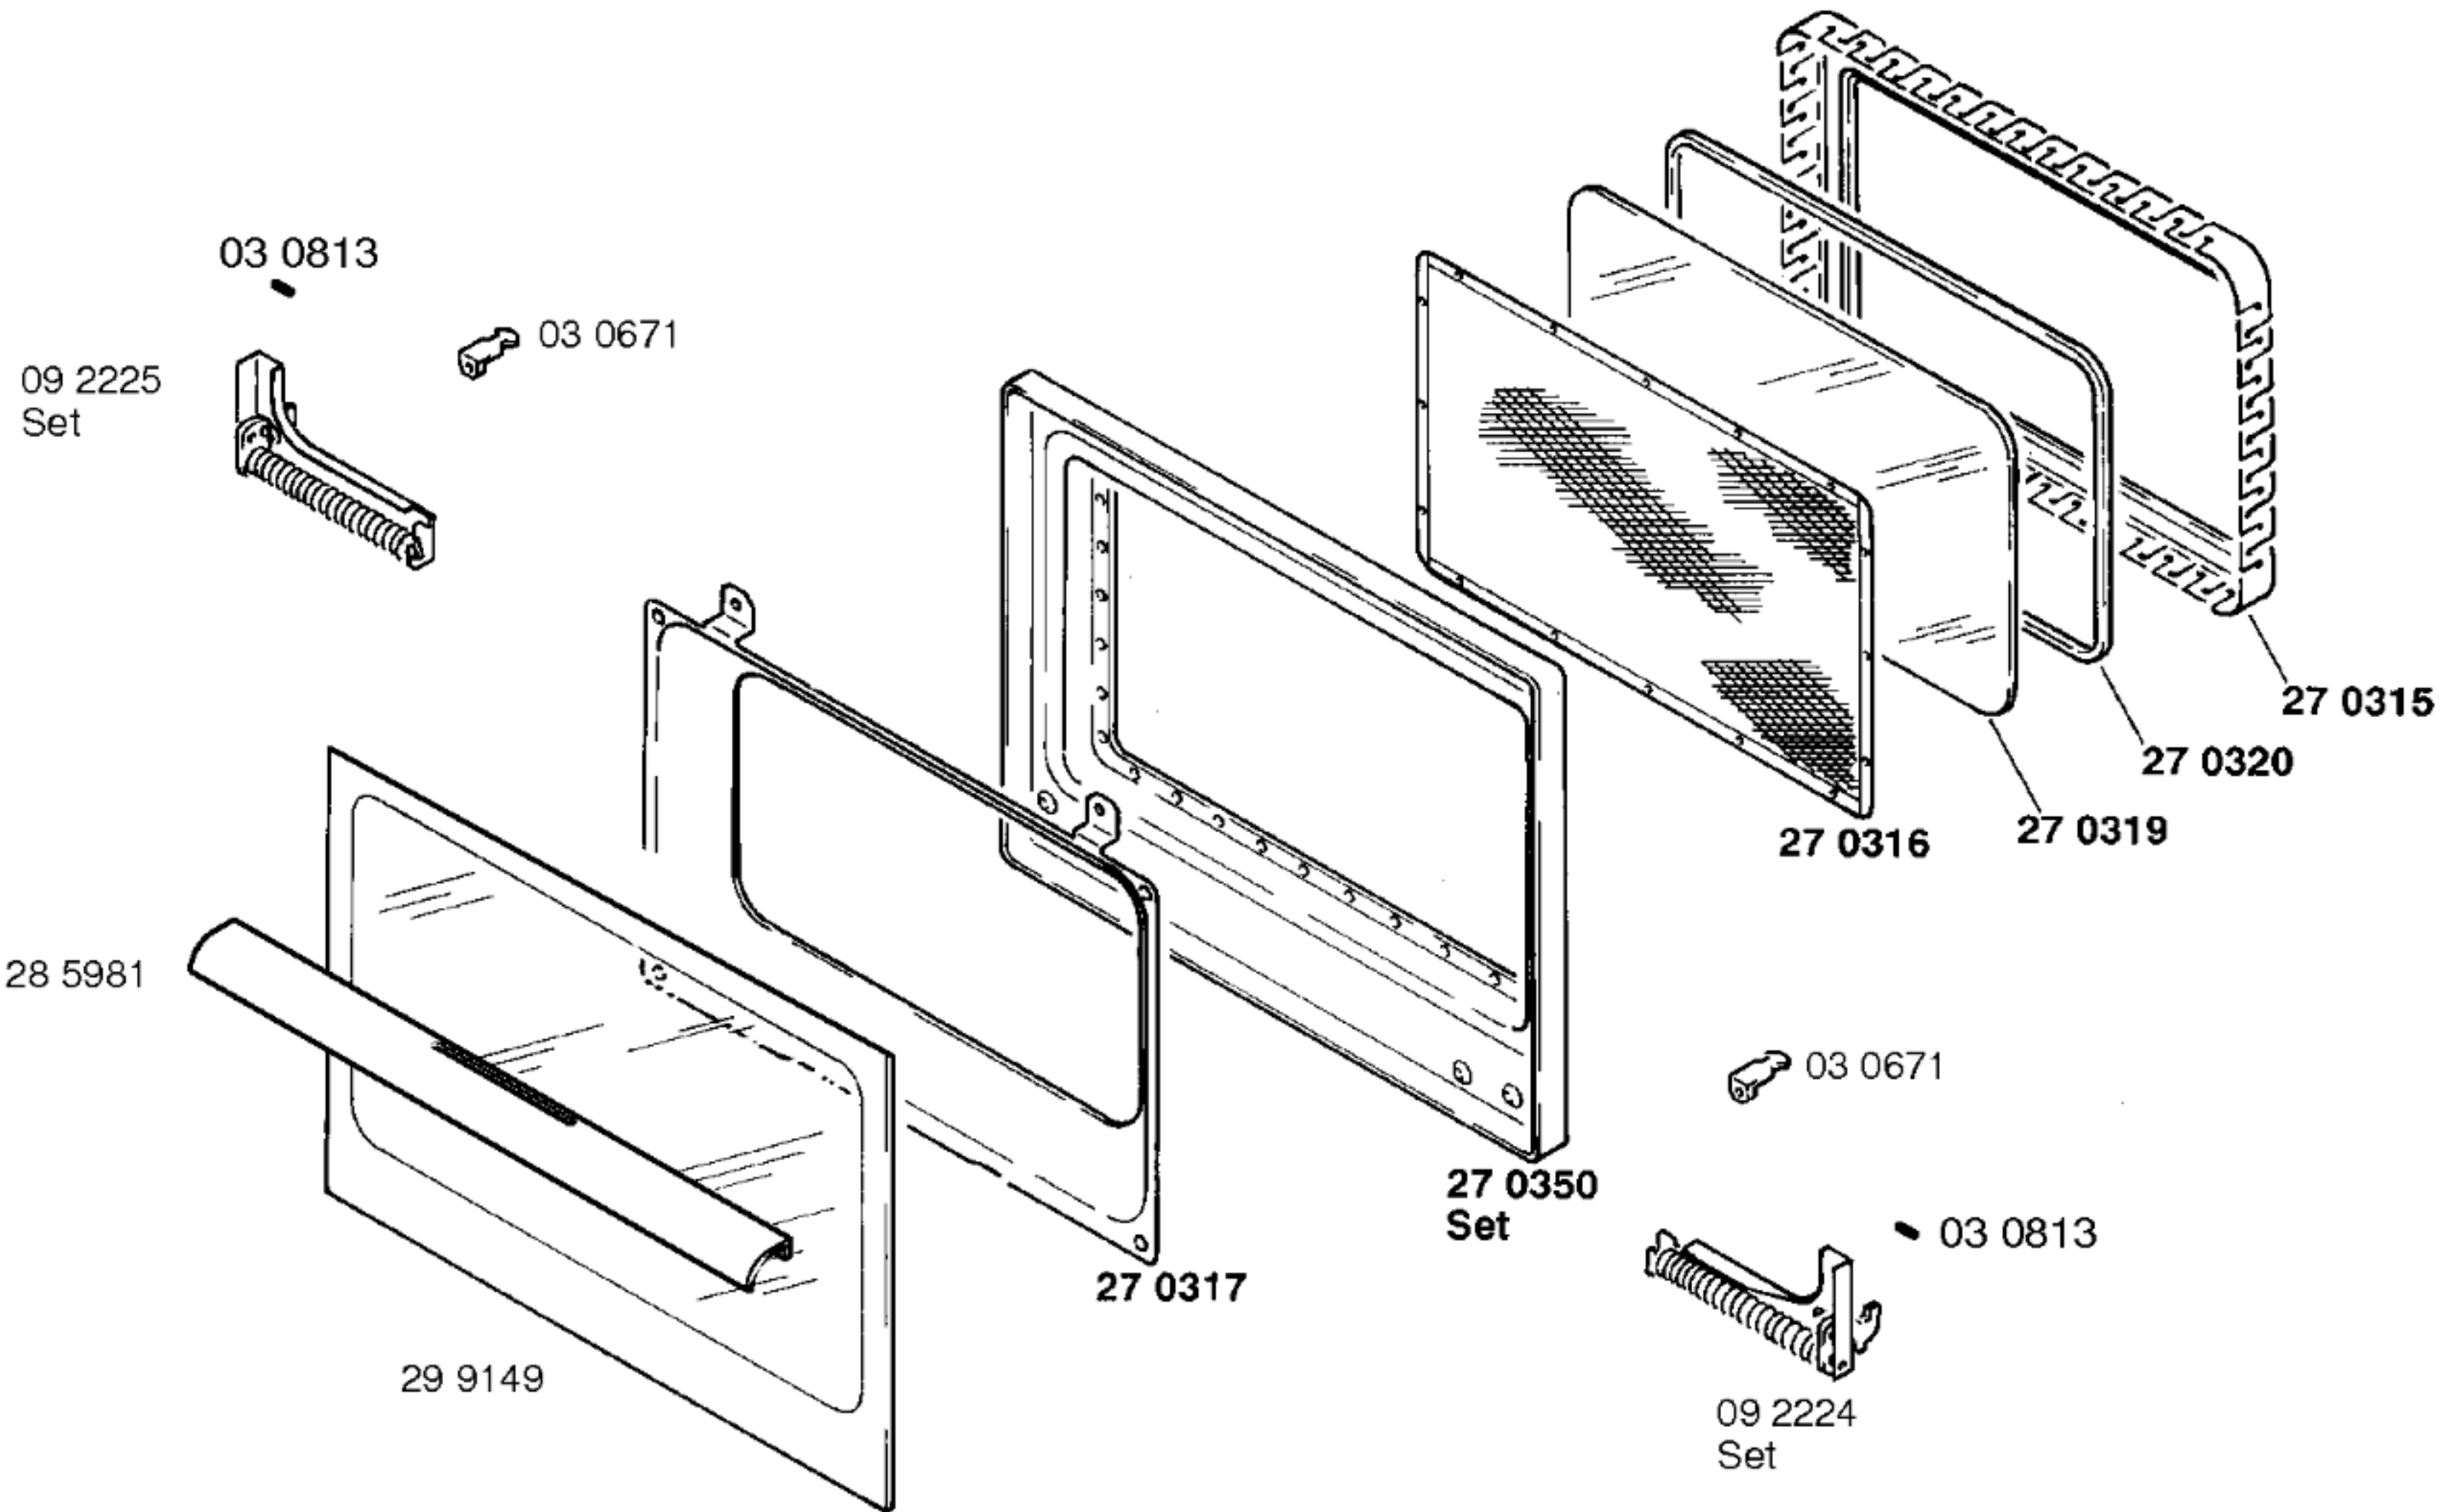

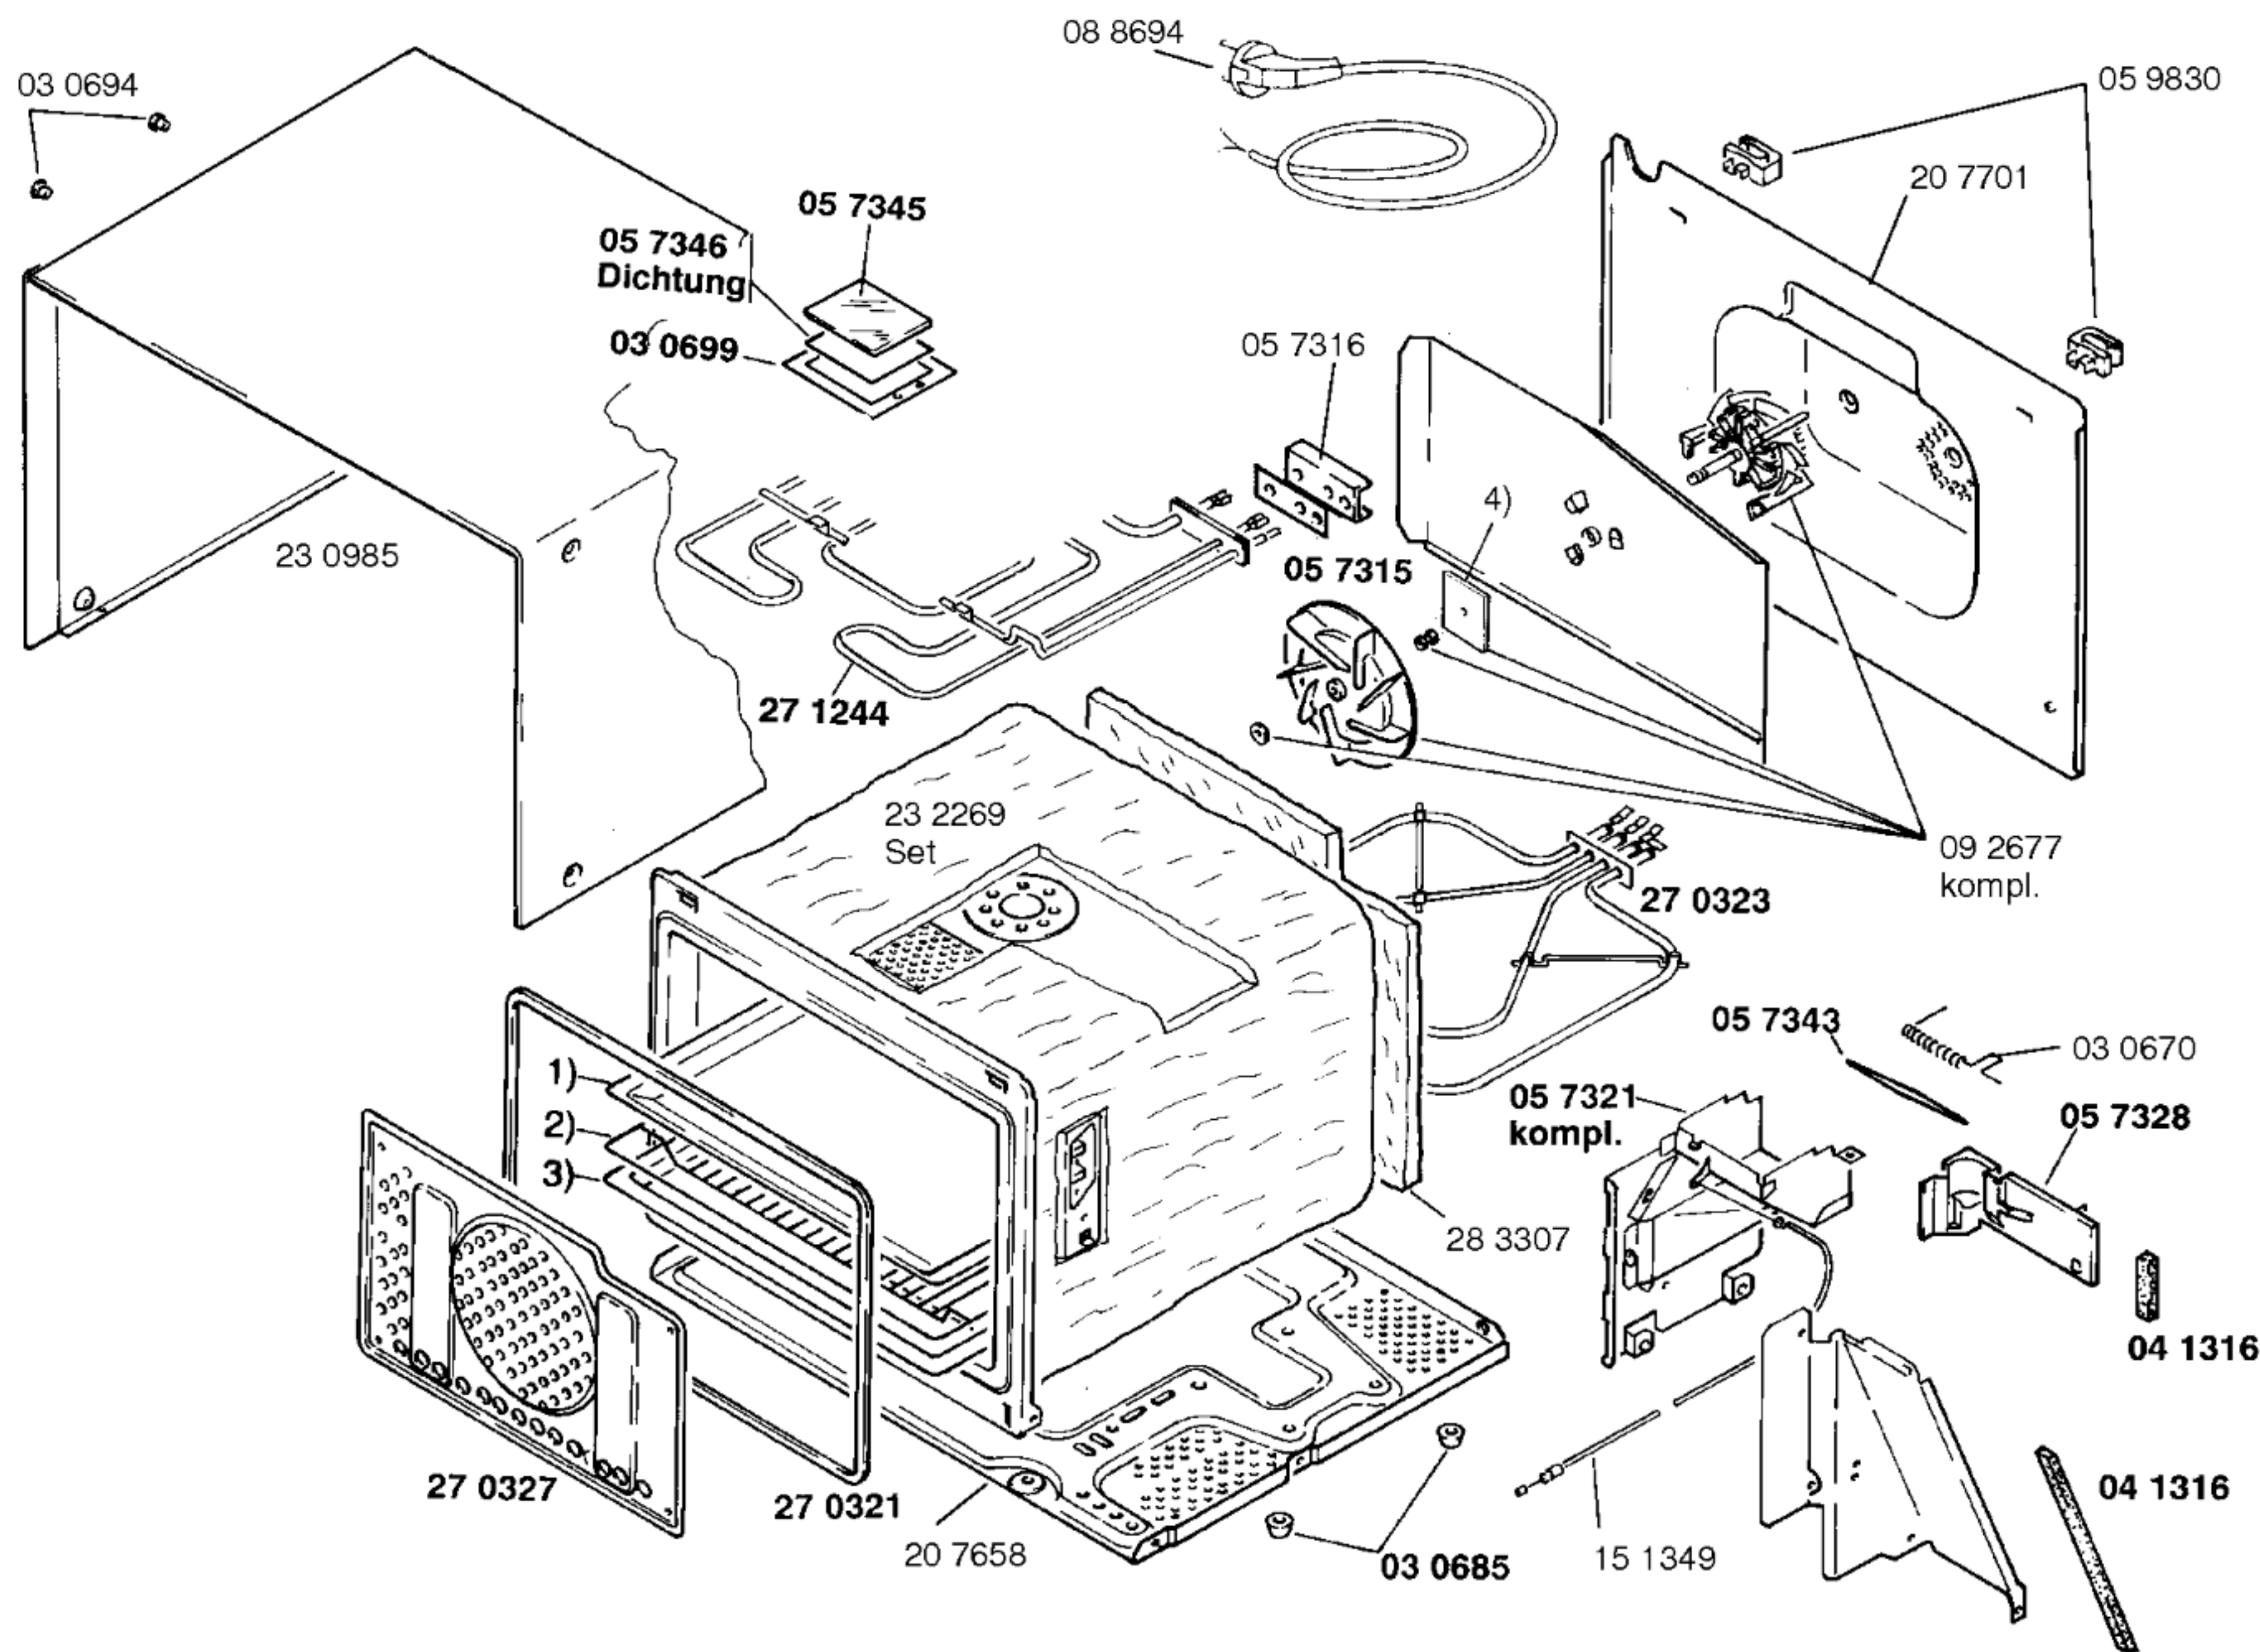

- 1) 11 4537
Glaspfanne
- 2) 11 4539
- 3) 11 4538
Backblech
- 4) 03 2778

02 8732
Anschlag-Backblech

