



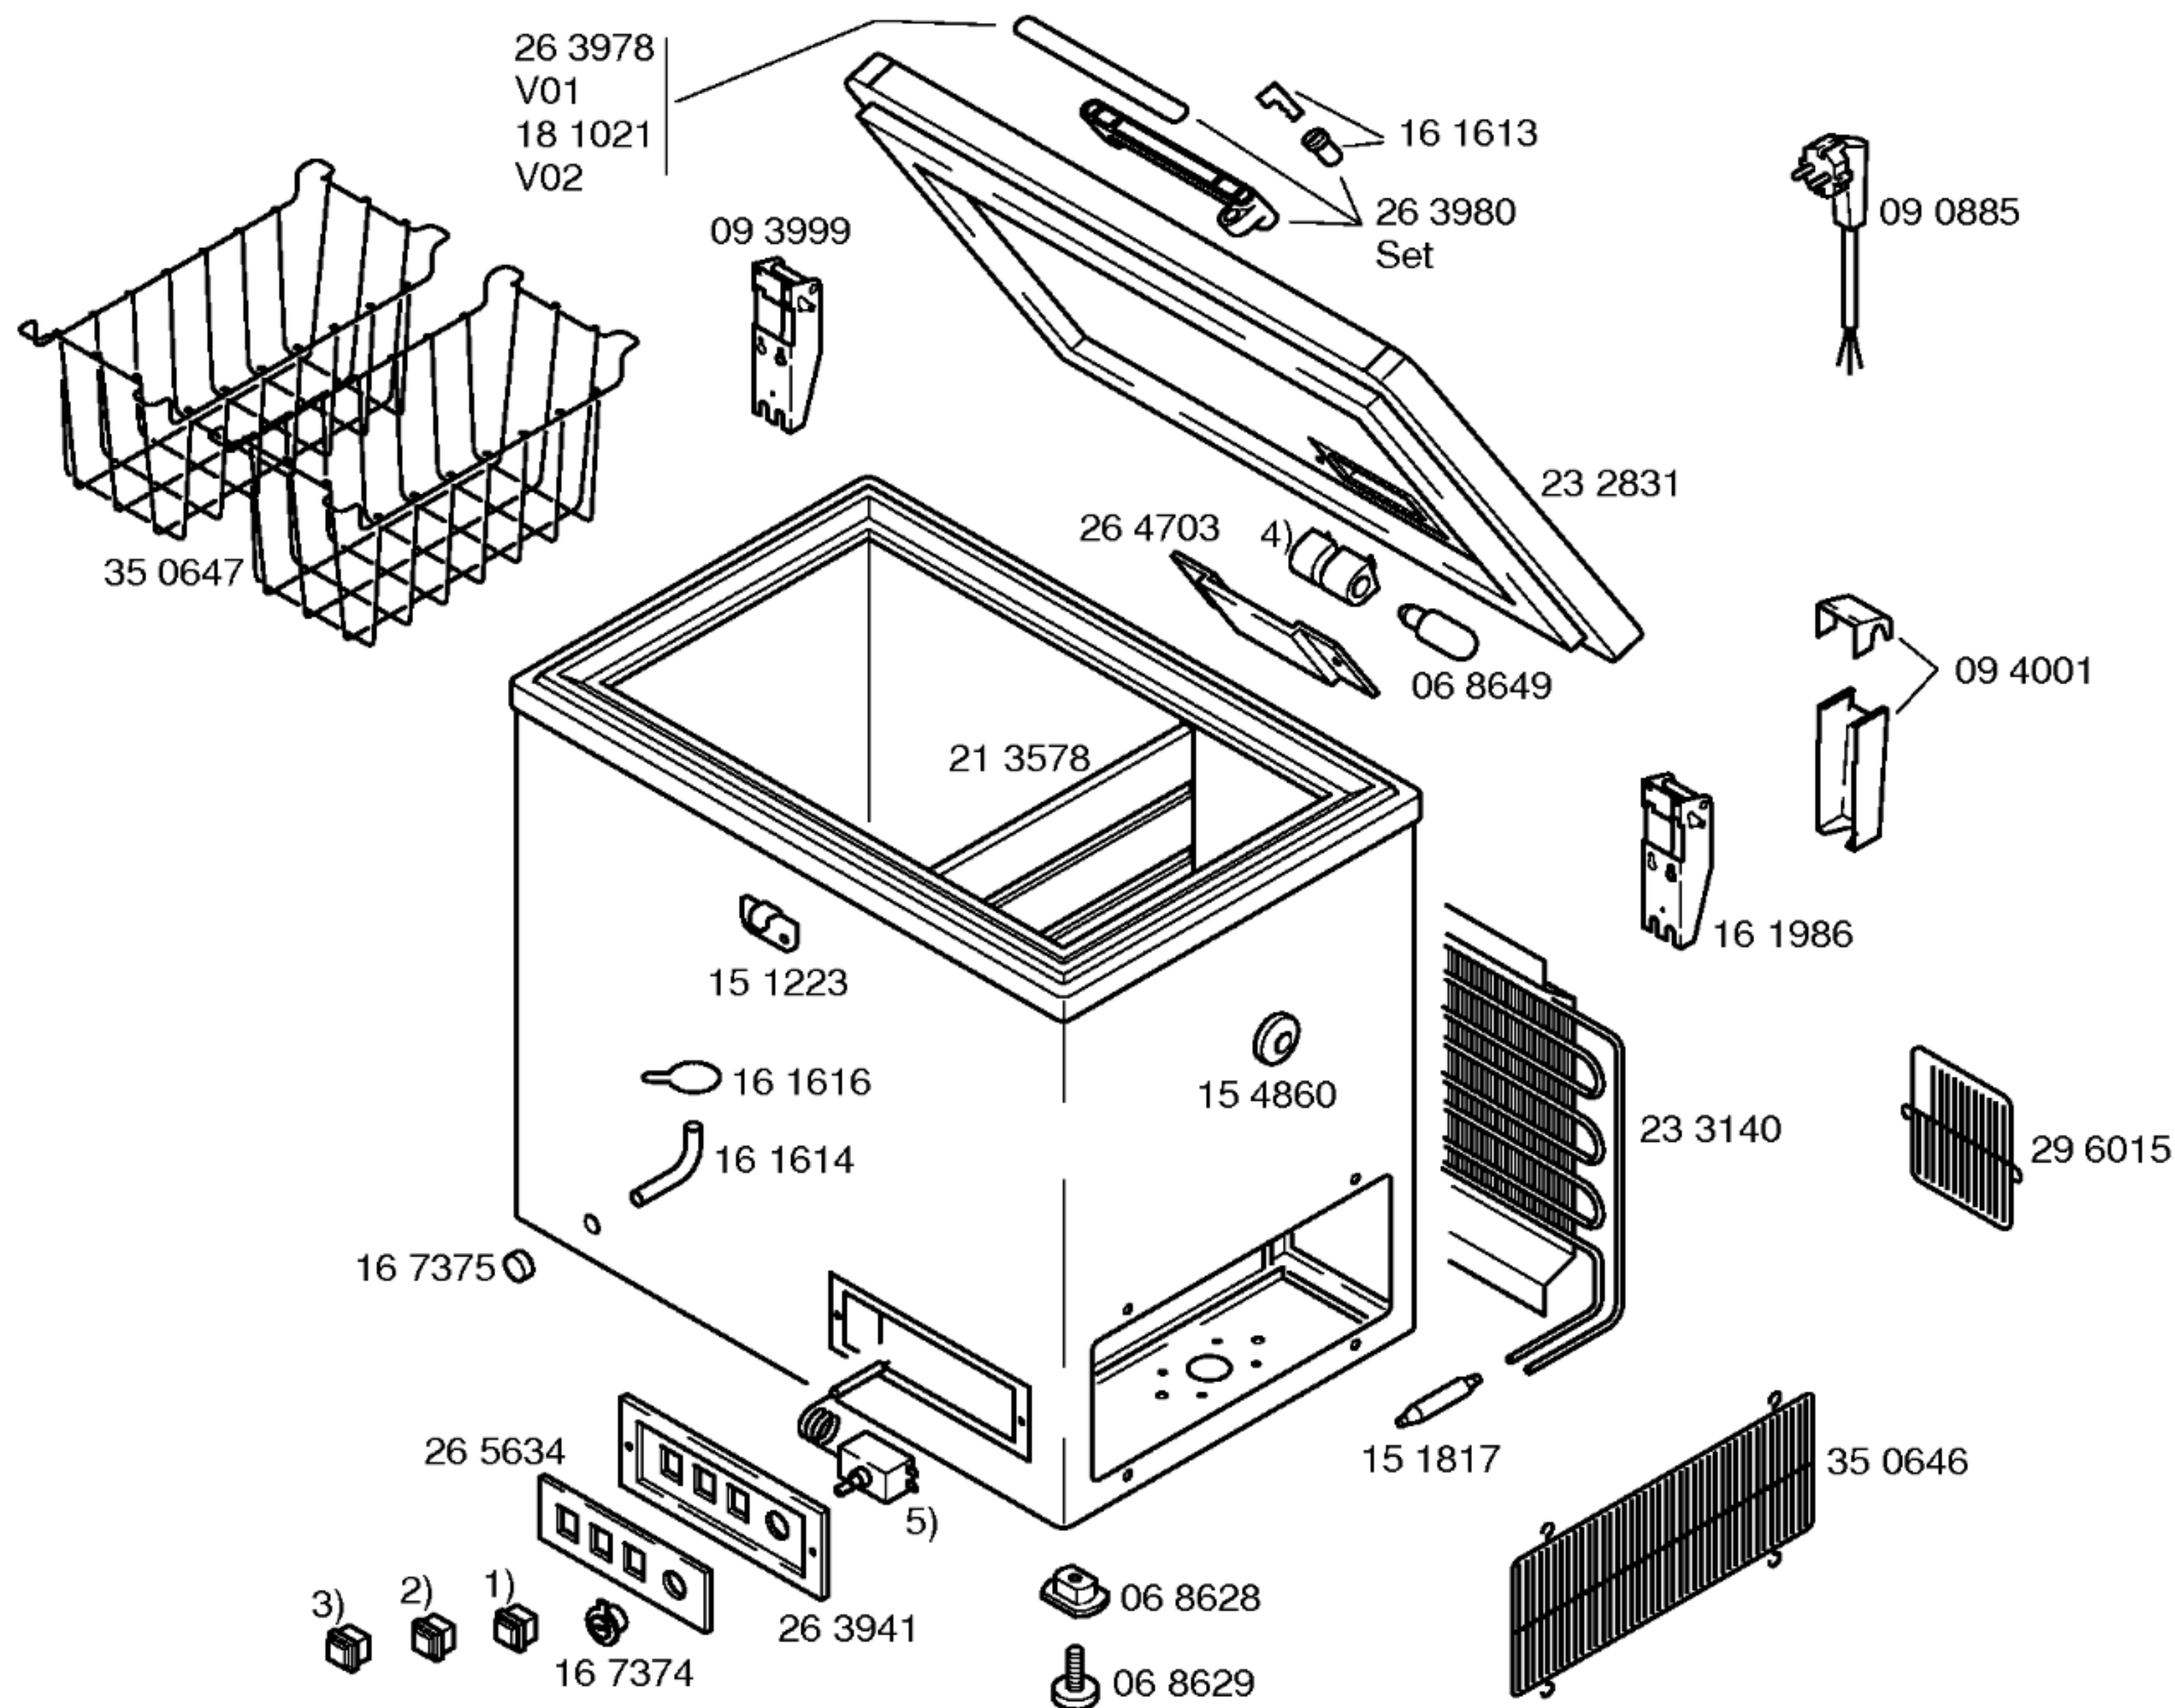

Libro de instrucciones

52 2792
V01 (E)
52 6741
V02 (E)

- 1) 06 8641
Ambar
- 2) 06 8639
Rojo
- 3) 06 8640
Verde
- 4) 06 8643
- 5) 06 8645
V01
17 9559
V02

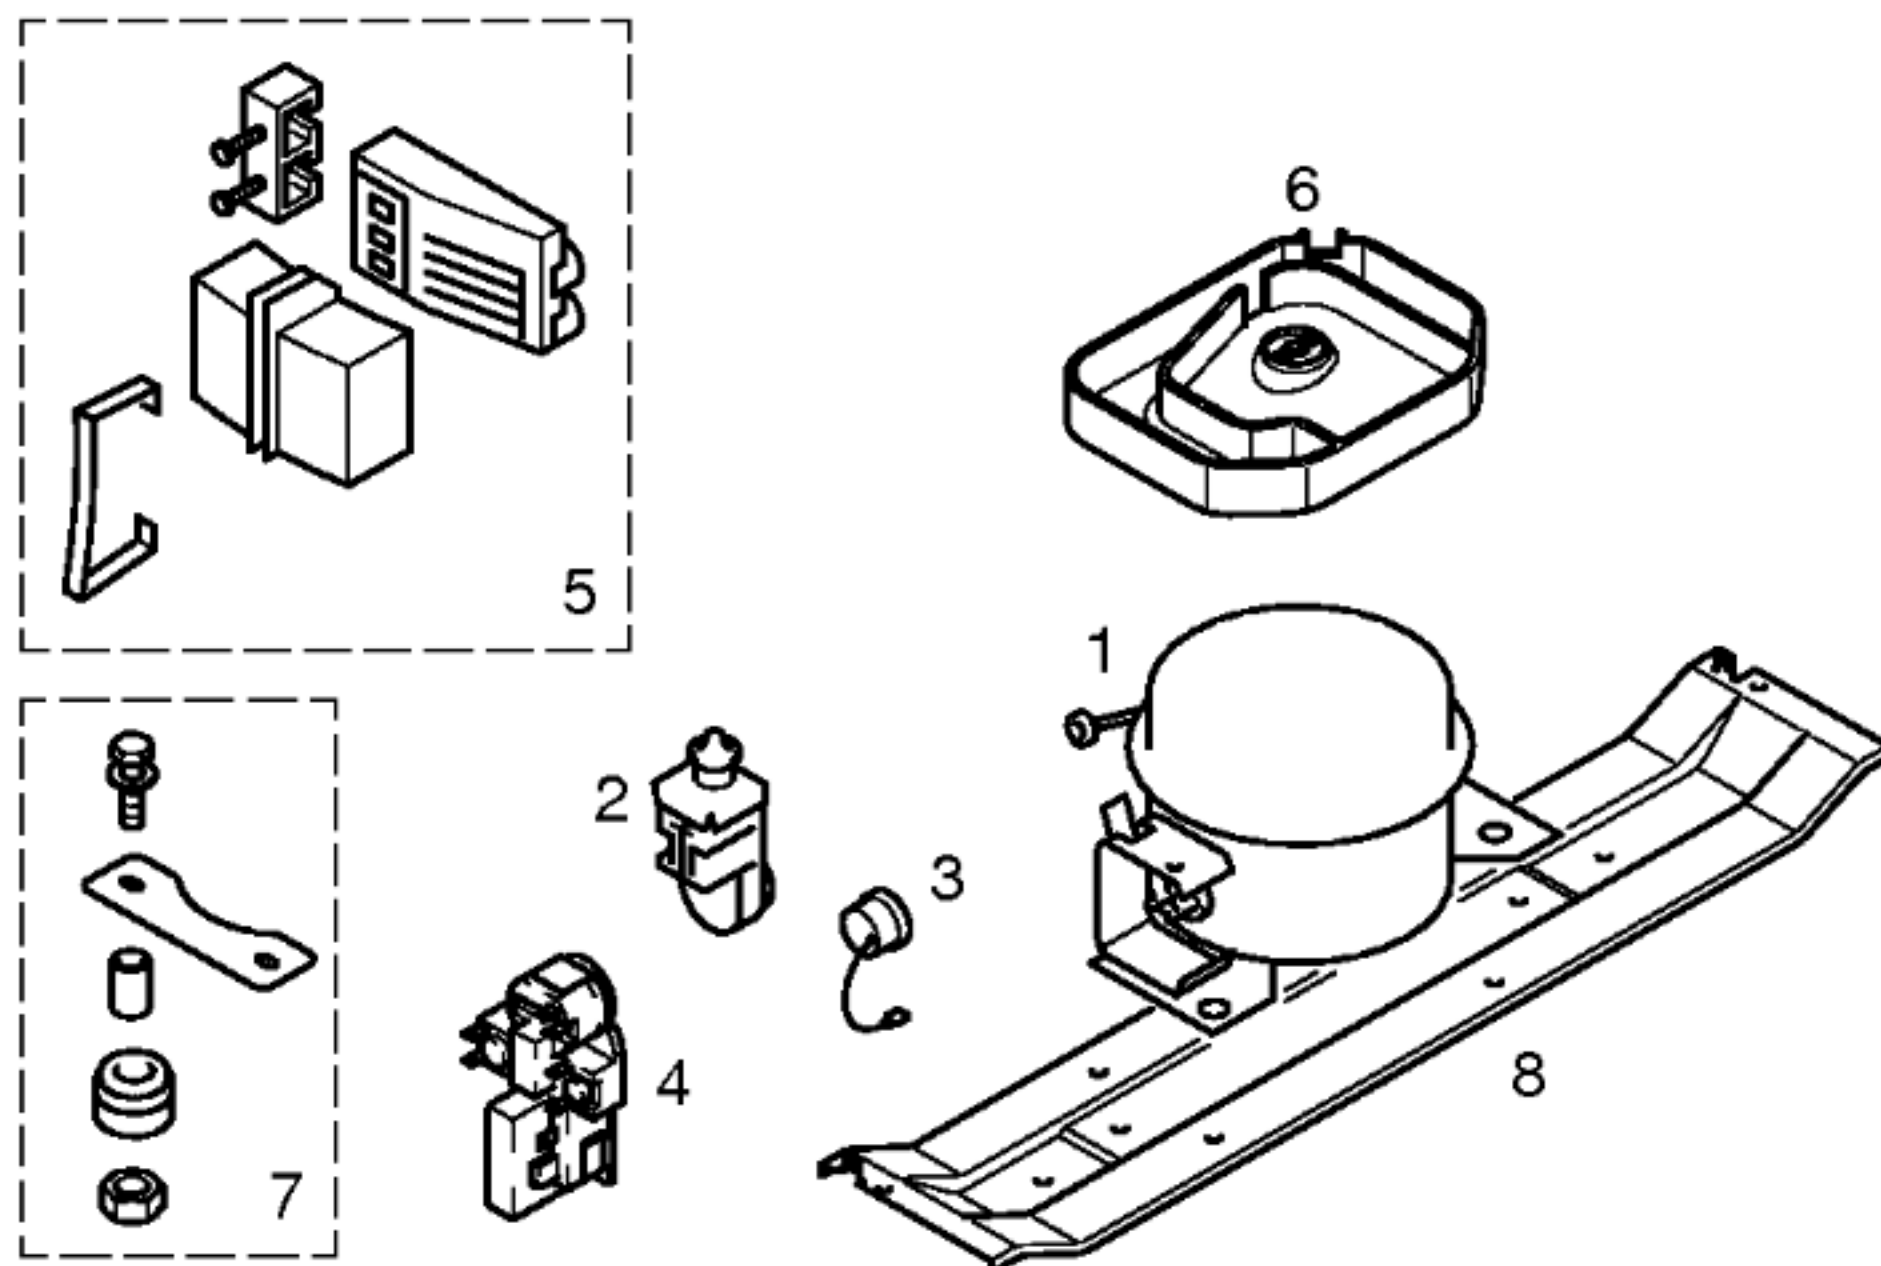

Pos.	Danfoss NL11F	Necchi ESR11K	Danfoss NL10FT
1	14 1367	14 1367	141367
2		16 1632	
3		17 0814	
4	15 4892		18 1029
5	15 4894	16 1634	
6			
7	15 4861	15 4861	15 4861
8			
9			
10			
11			
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Danfoss NL11F	Necchi ESR11K	Danfoss NL10FT	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	Ranco K54–L1887 MIN. MAX. –19 –29 –14		Ranco K54–L1997 MIN. MAX. –14,5 –23 –24,5 –33	
Füllmenge/Fill. quantity/Charge/Carga R134a g	*	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	147	152		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características