


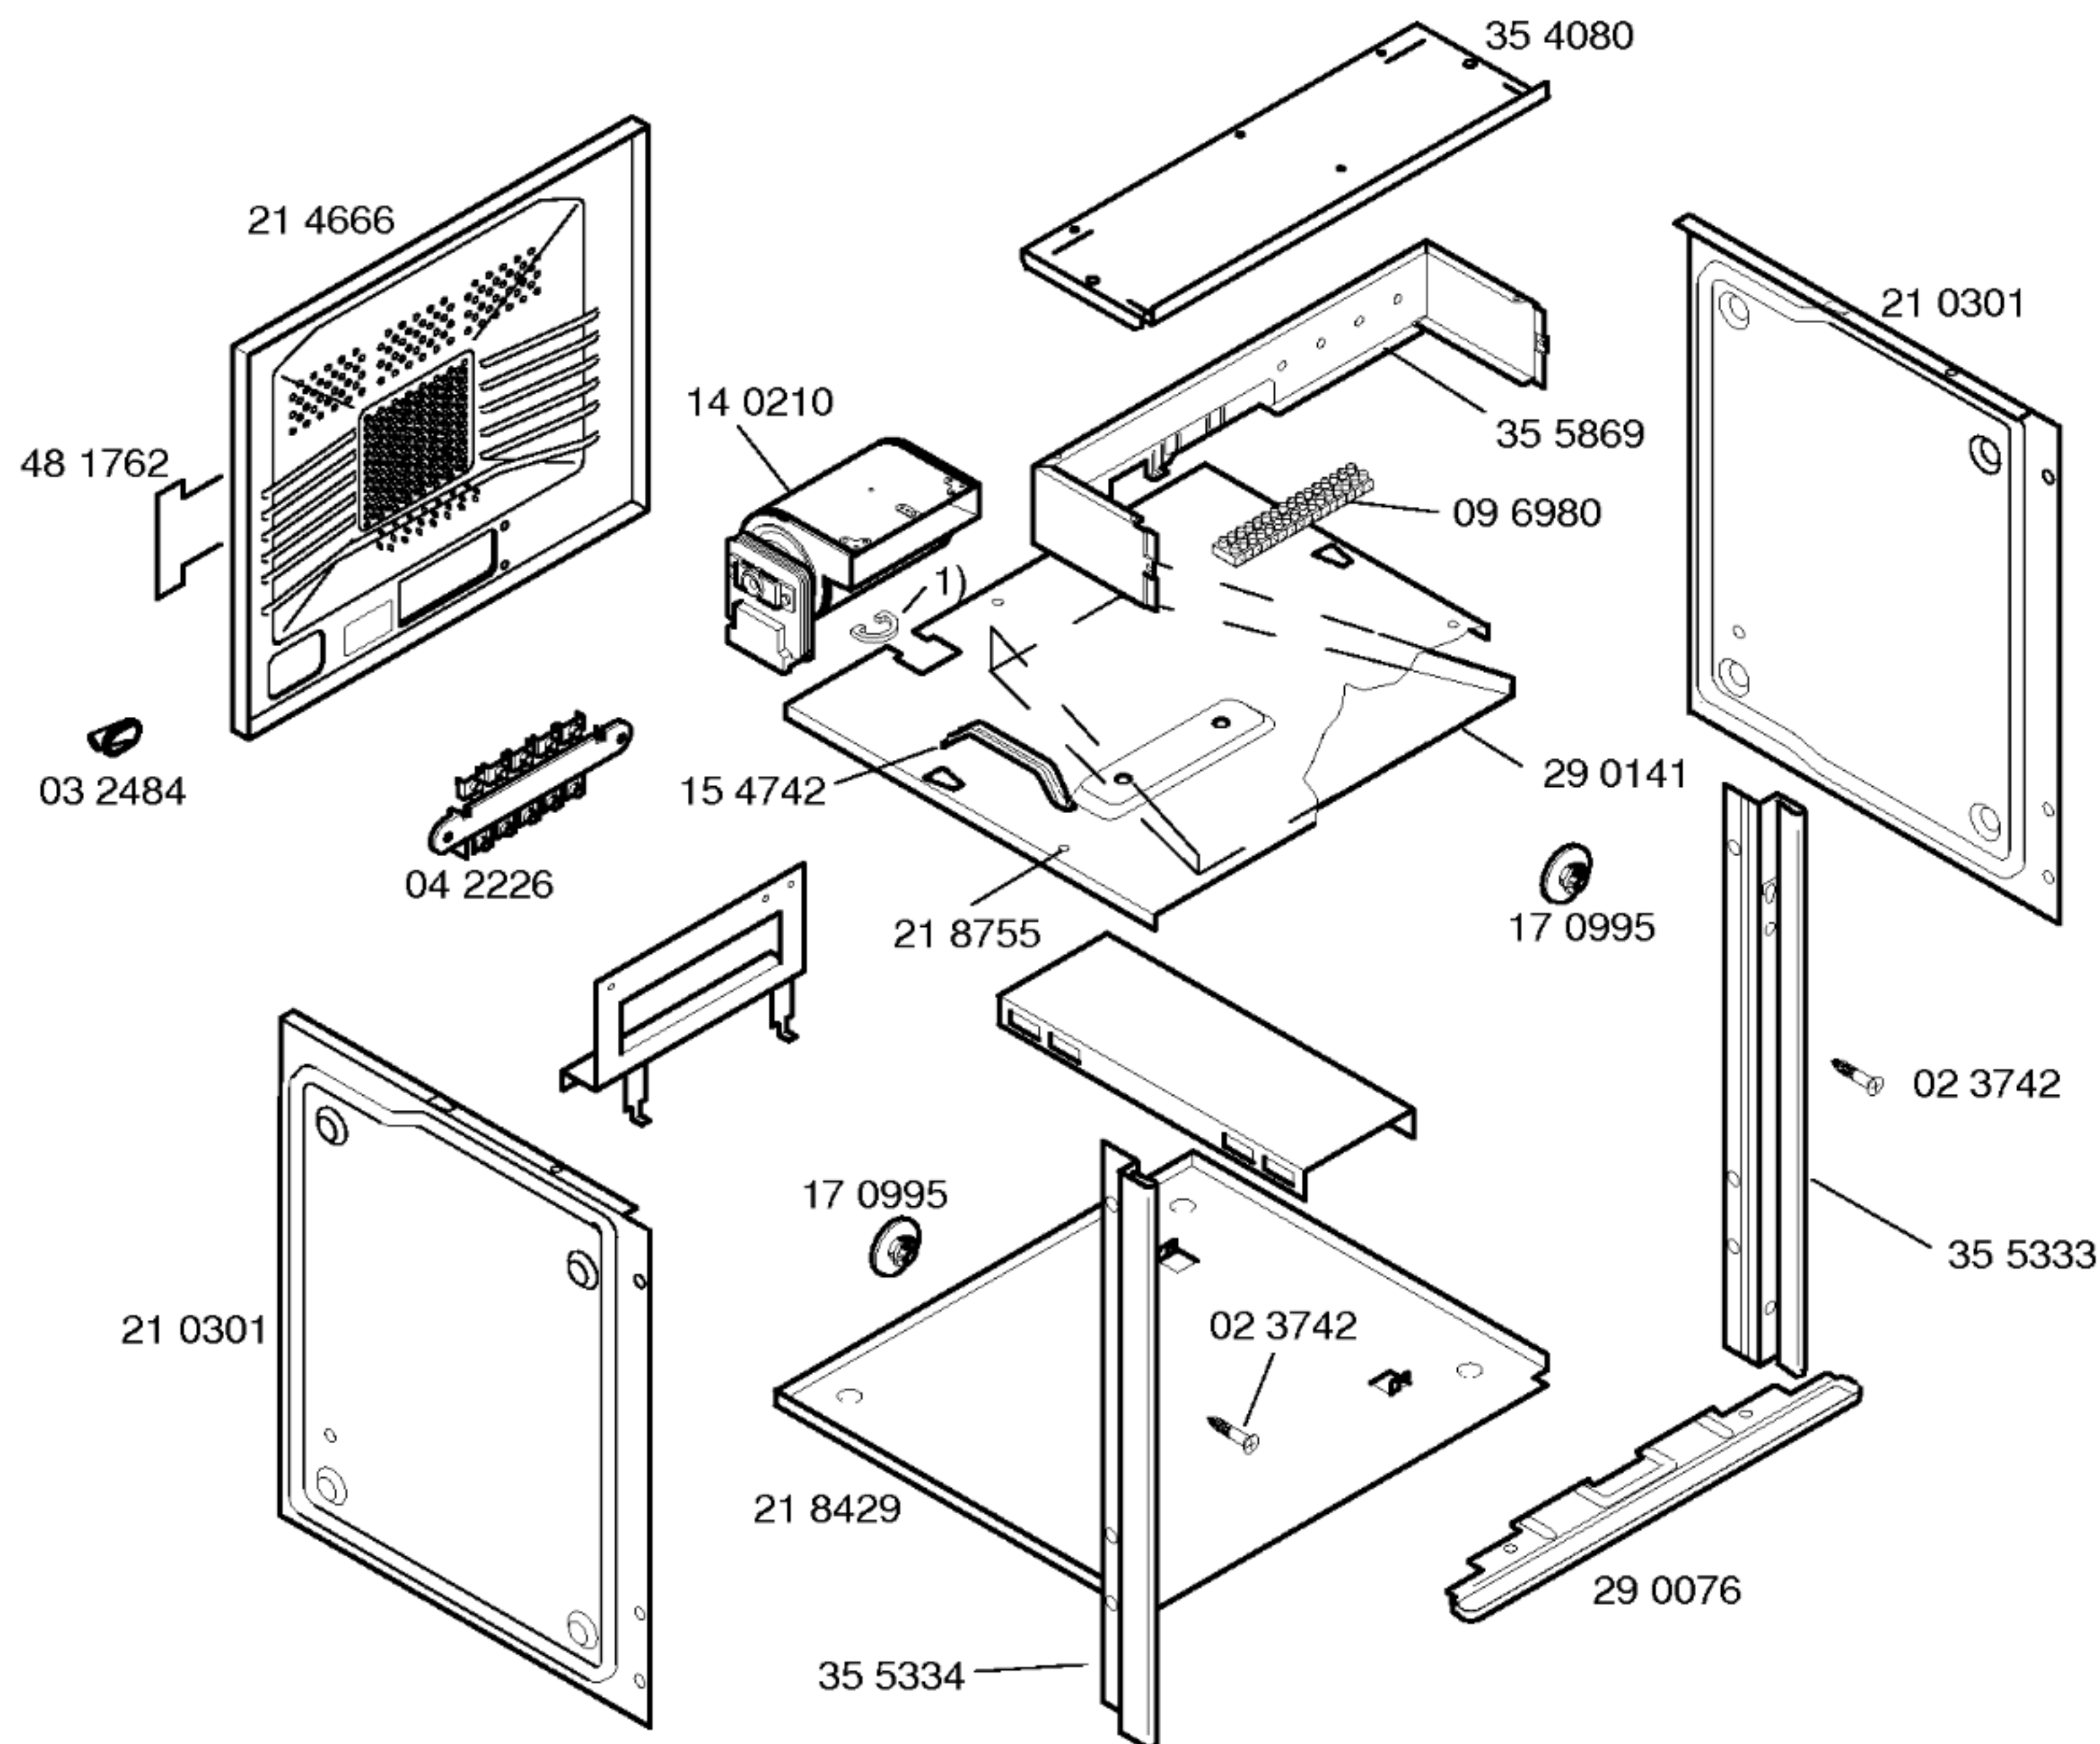

Gebrauchsanweisung
58 0792
(de)


Kochbuch
52 3564
(de)
Kpochbuch *Auflaufpfanne*
52 3817
(de)

1) 02 5876


Zubehör:

Dampfgarer
N8640X0


Back- und Bratrost
gekröpft
Z1470X0
Backblech Alu
Z1330X0
Bratenblech
Z1510X1
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X0
Auflaufform
Z1270X0

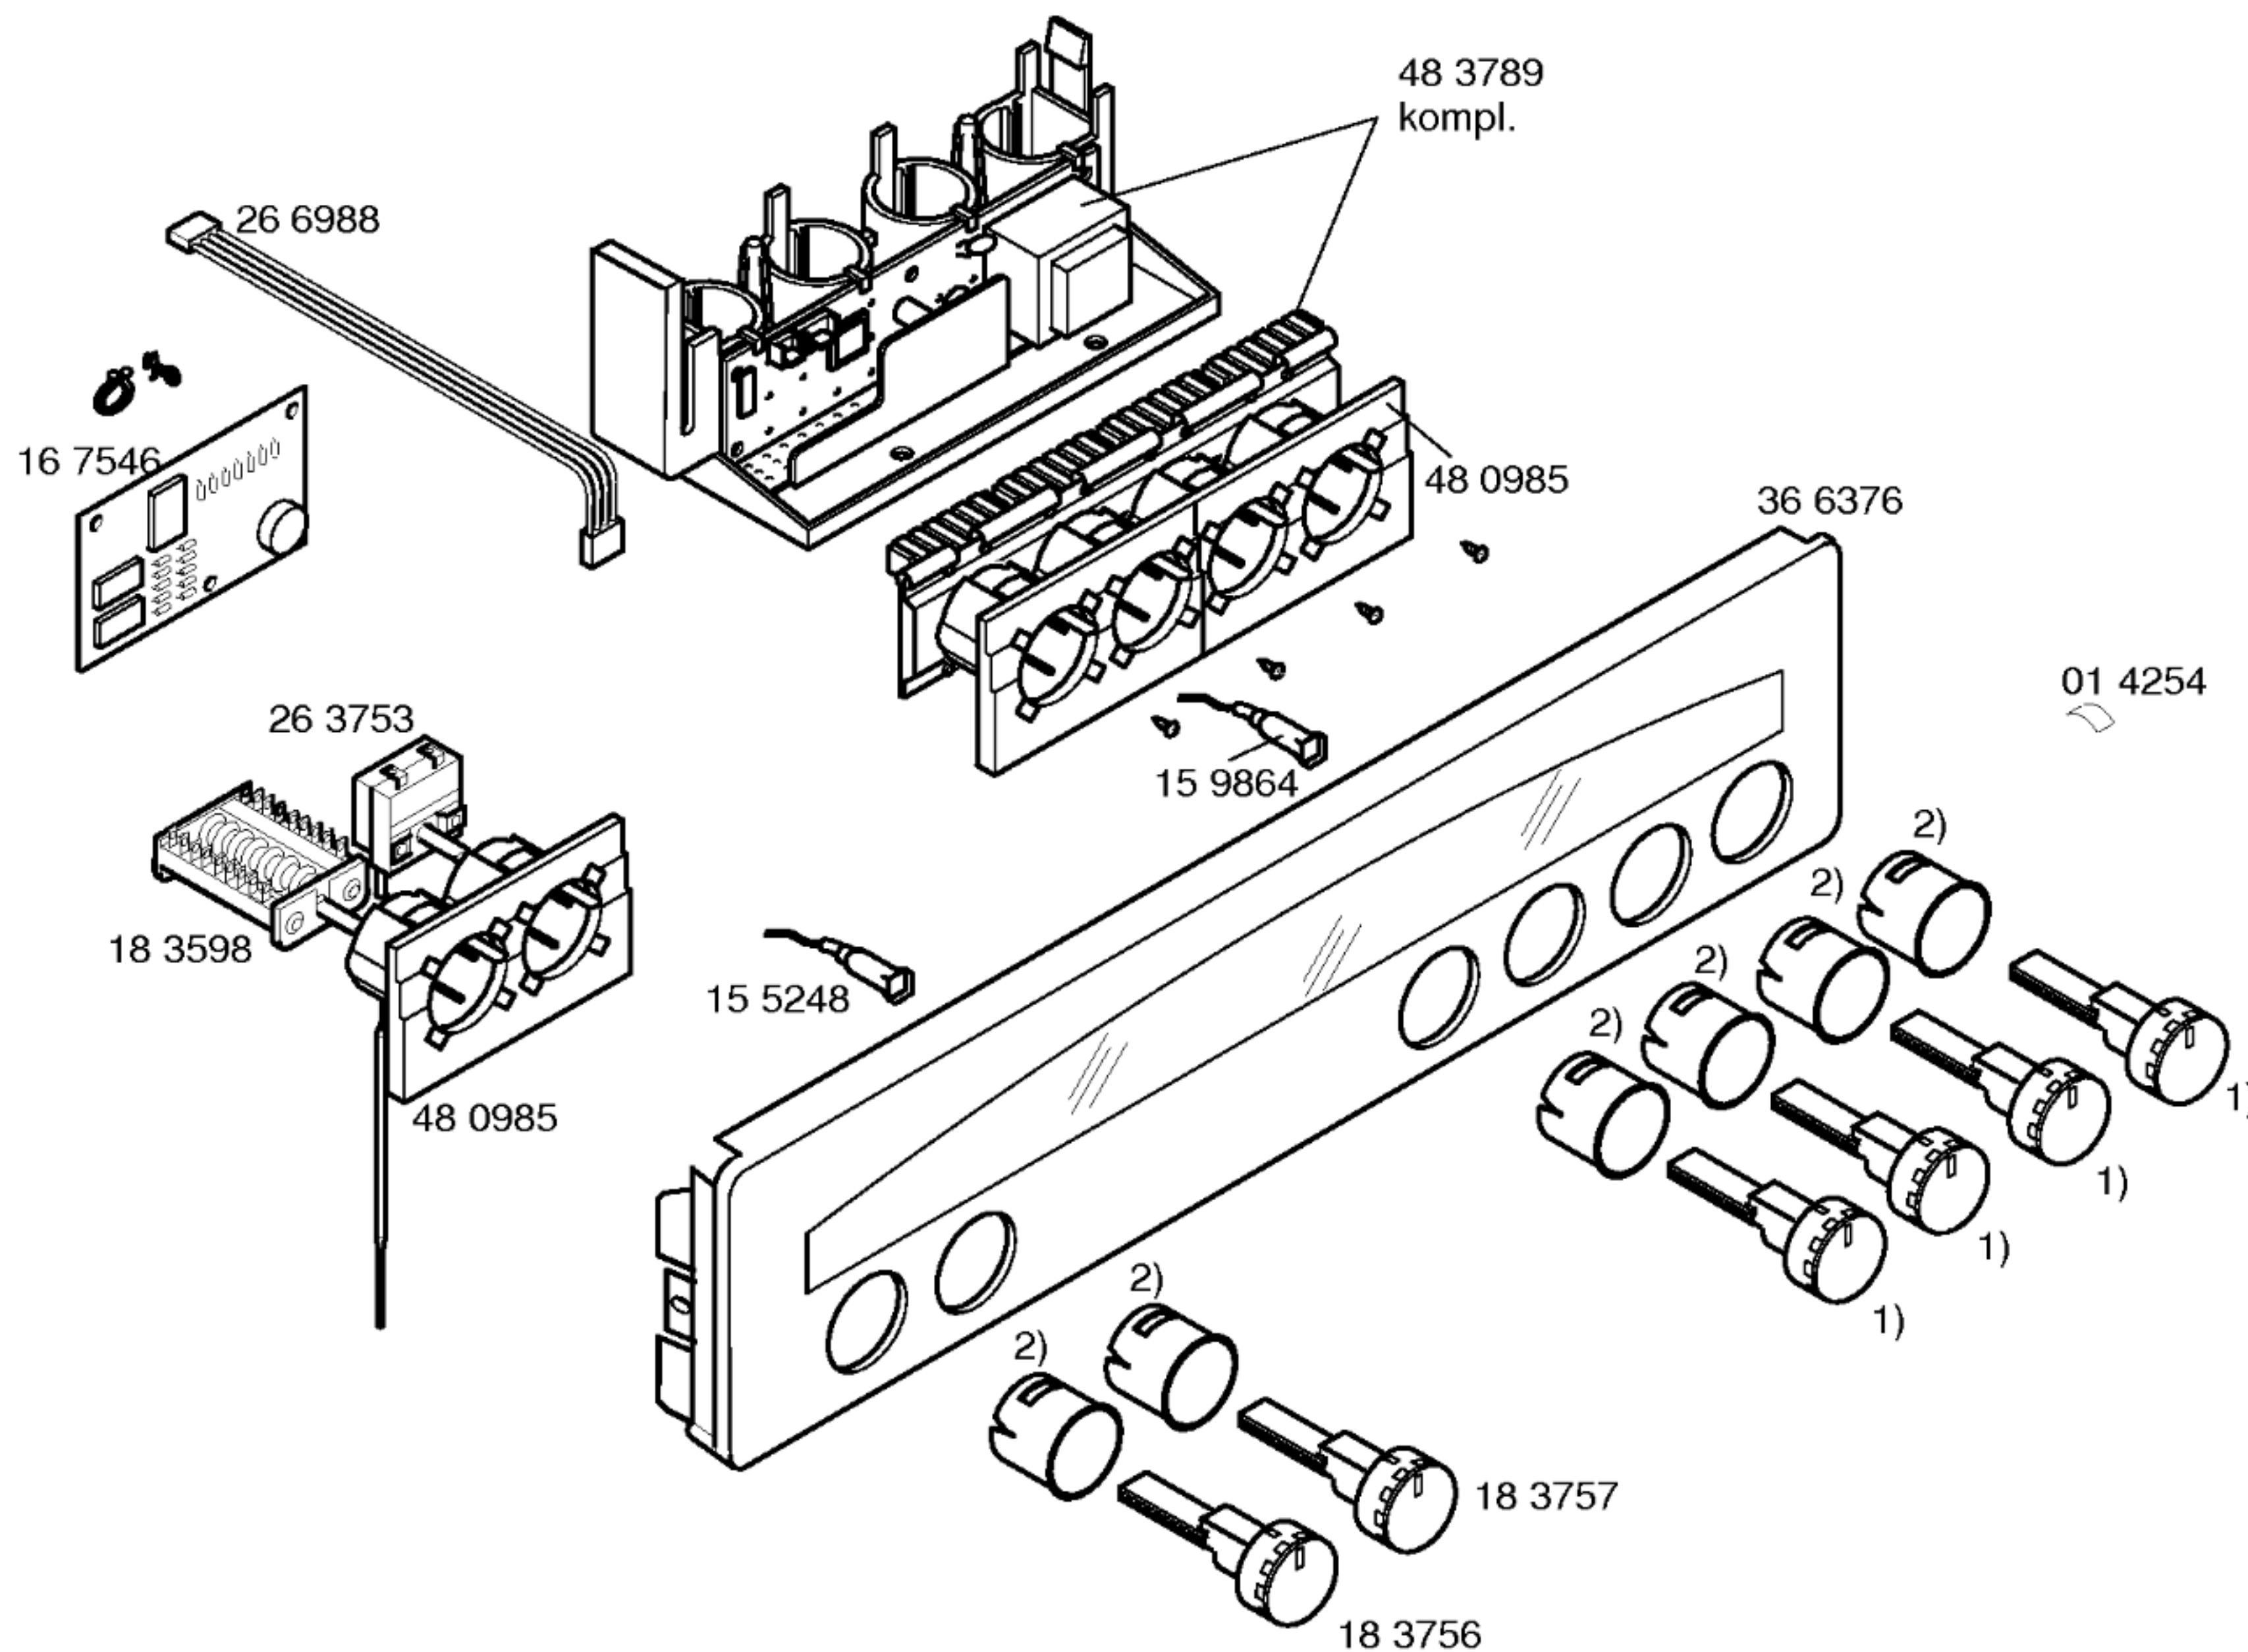

- 1) 18 8582
- 2) 18 3758

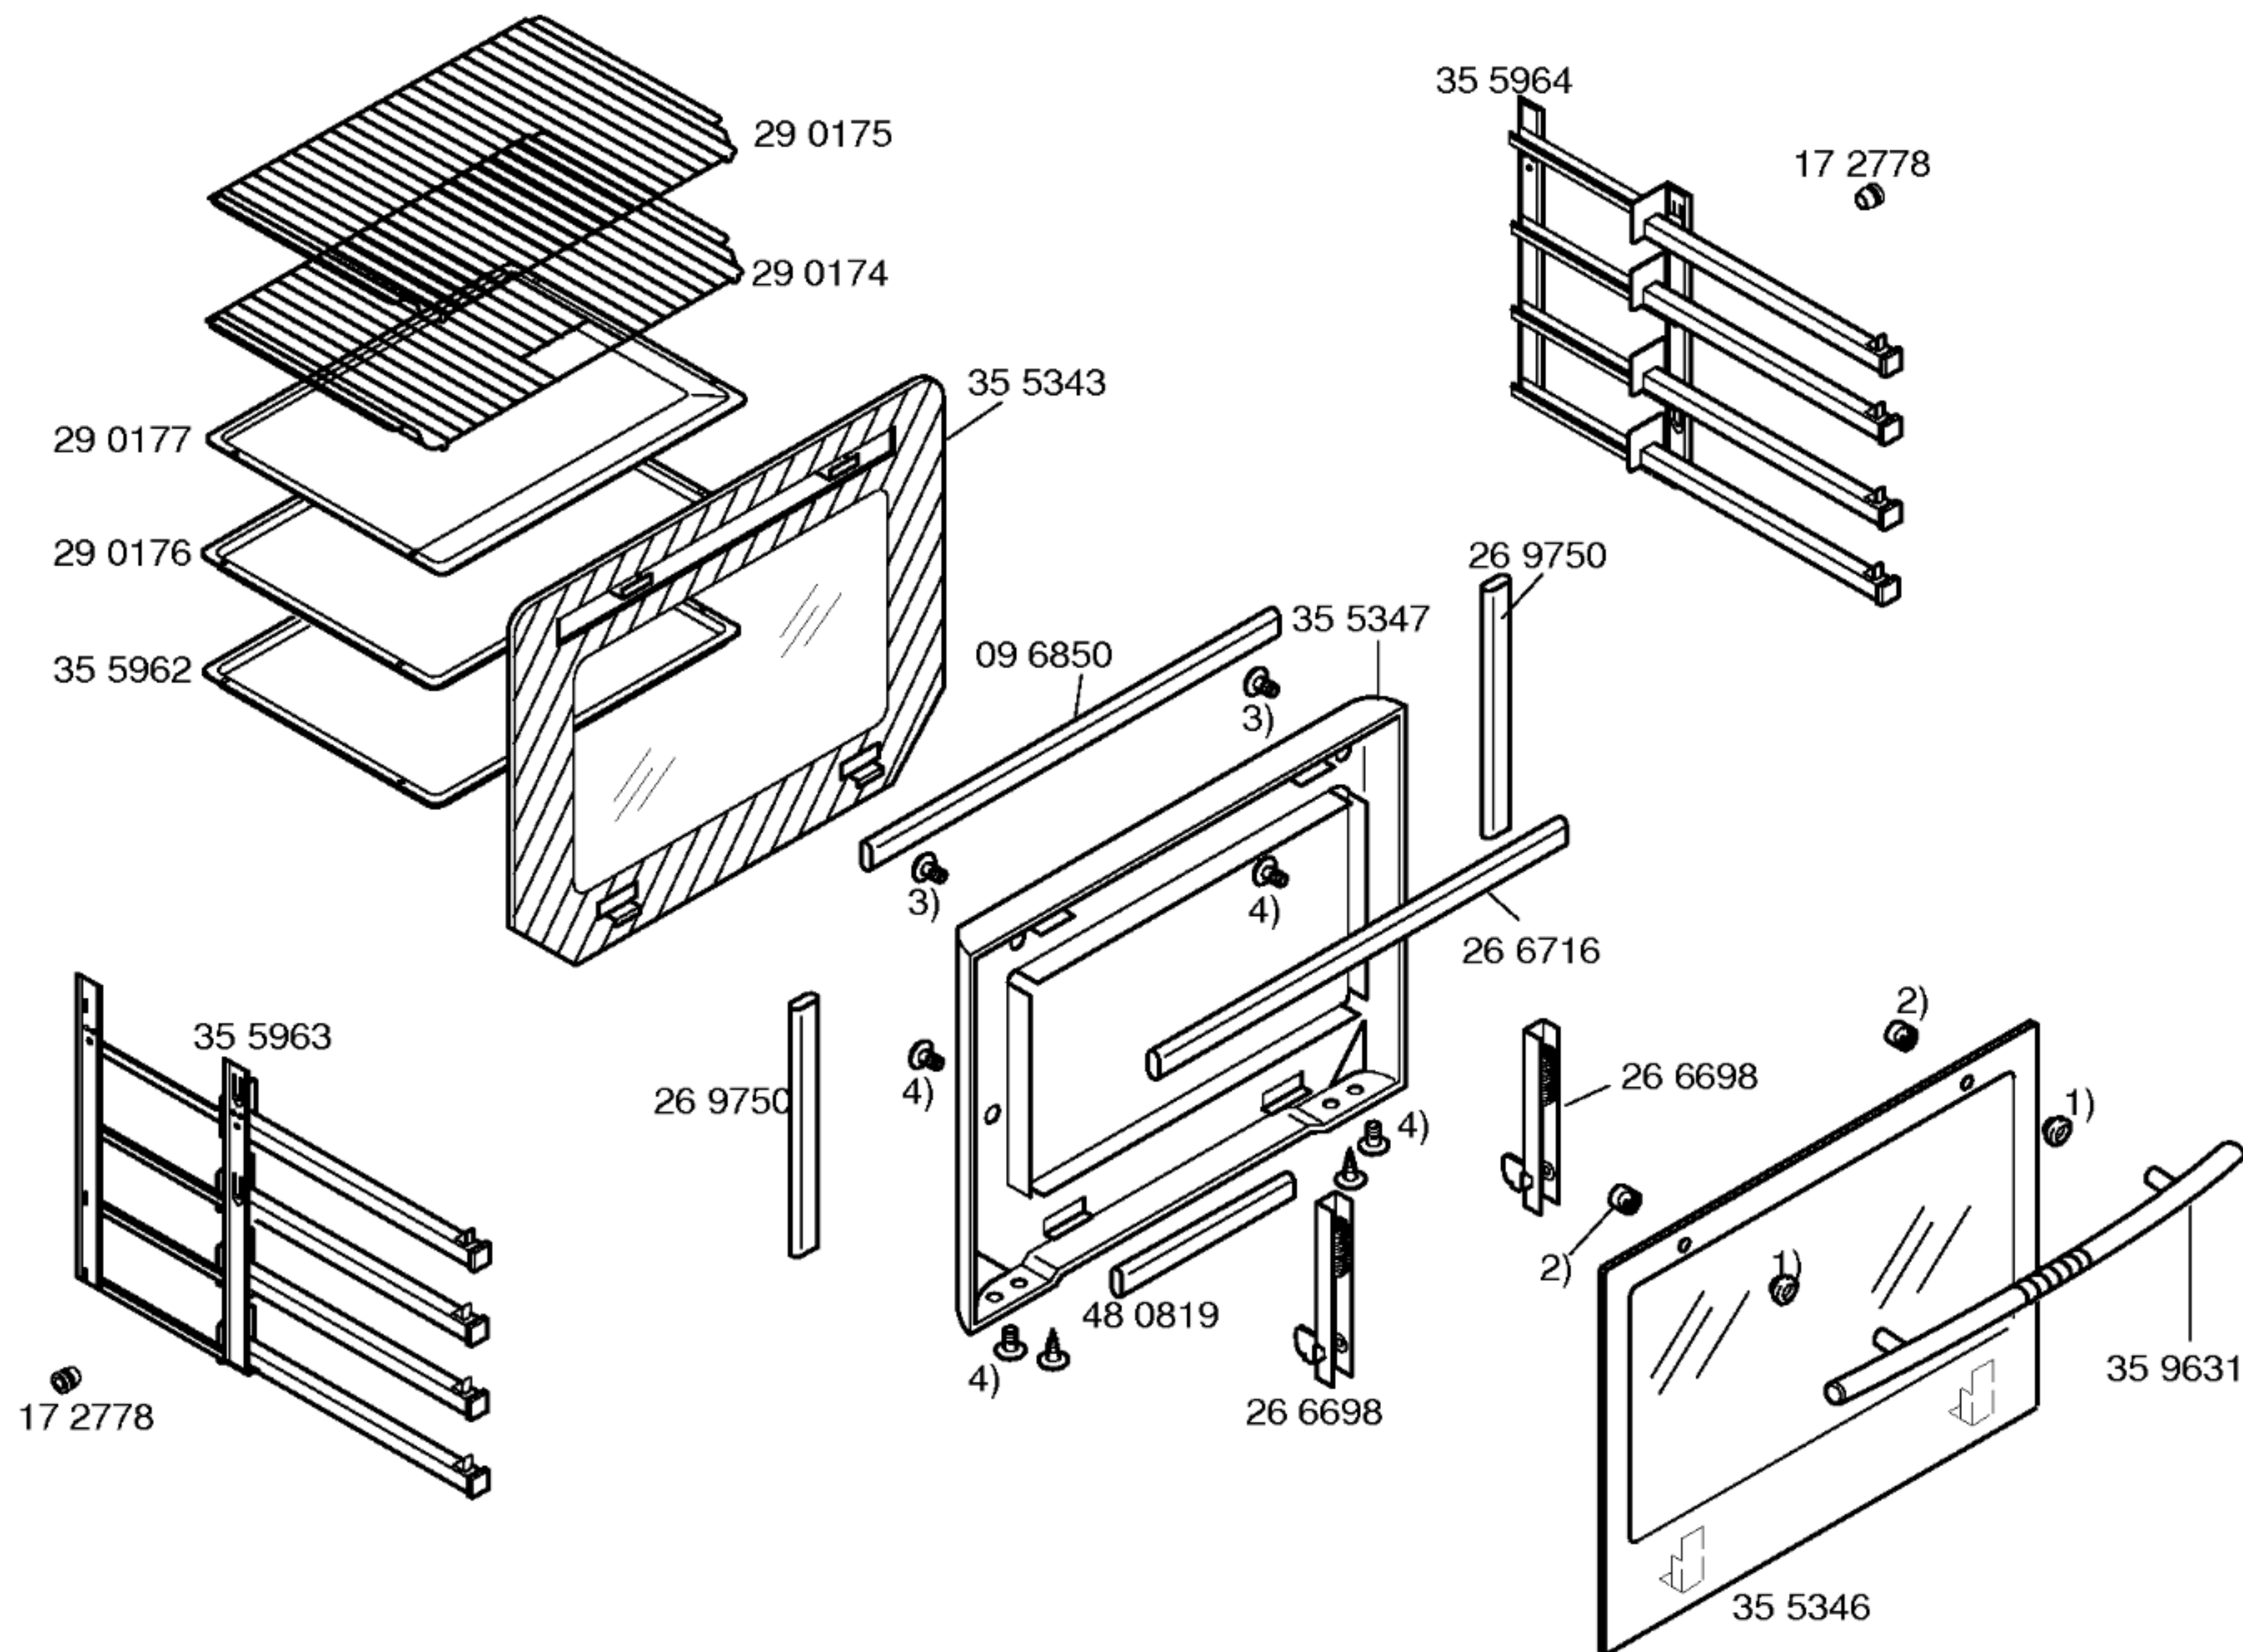

- 1) 17 2645
- 2) 17 2643
- 3) 17 2765
- 4) 17 2646

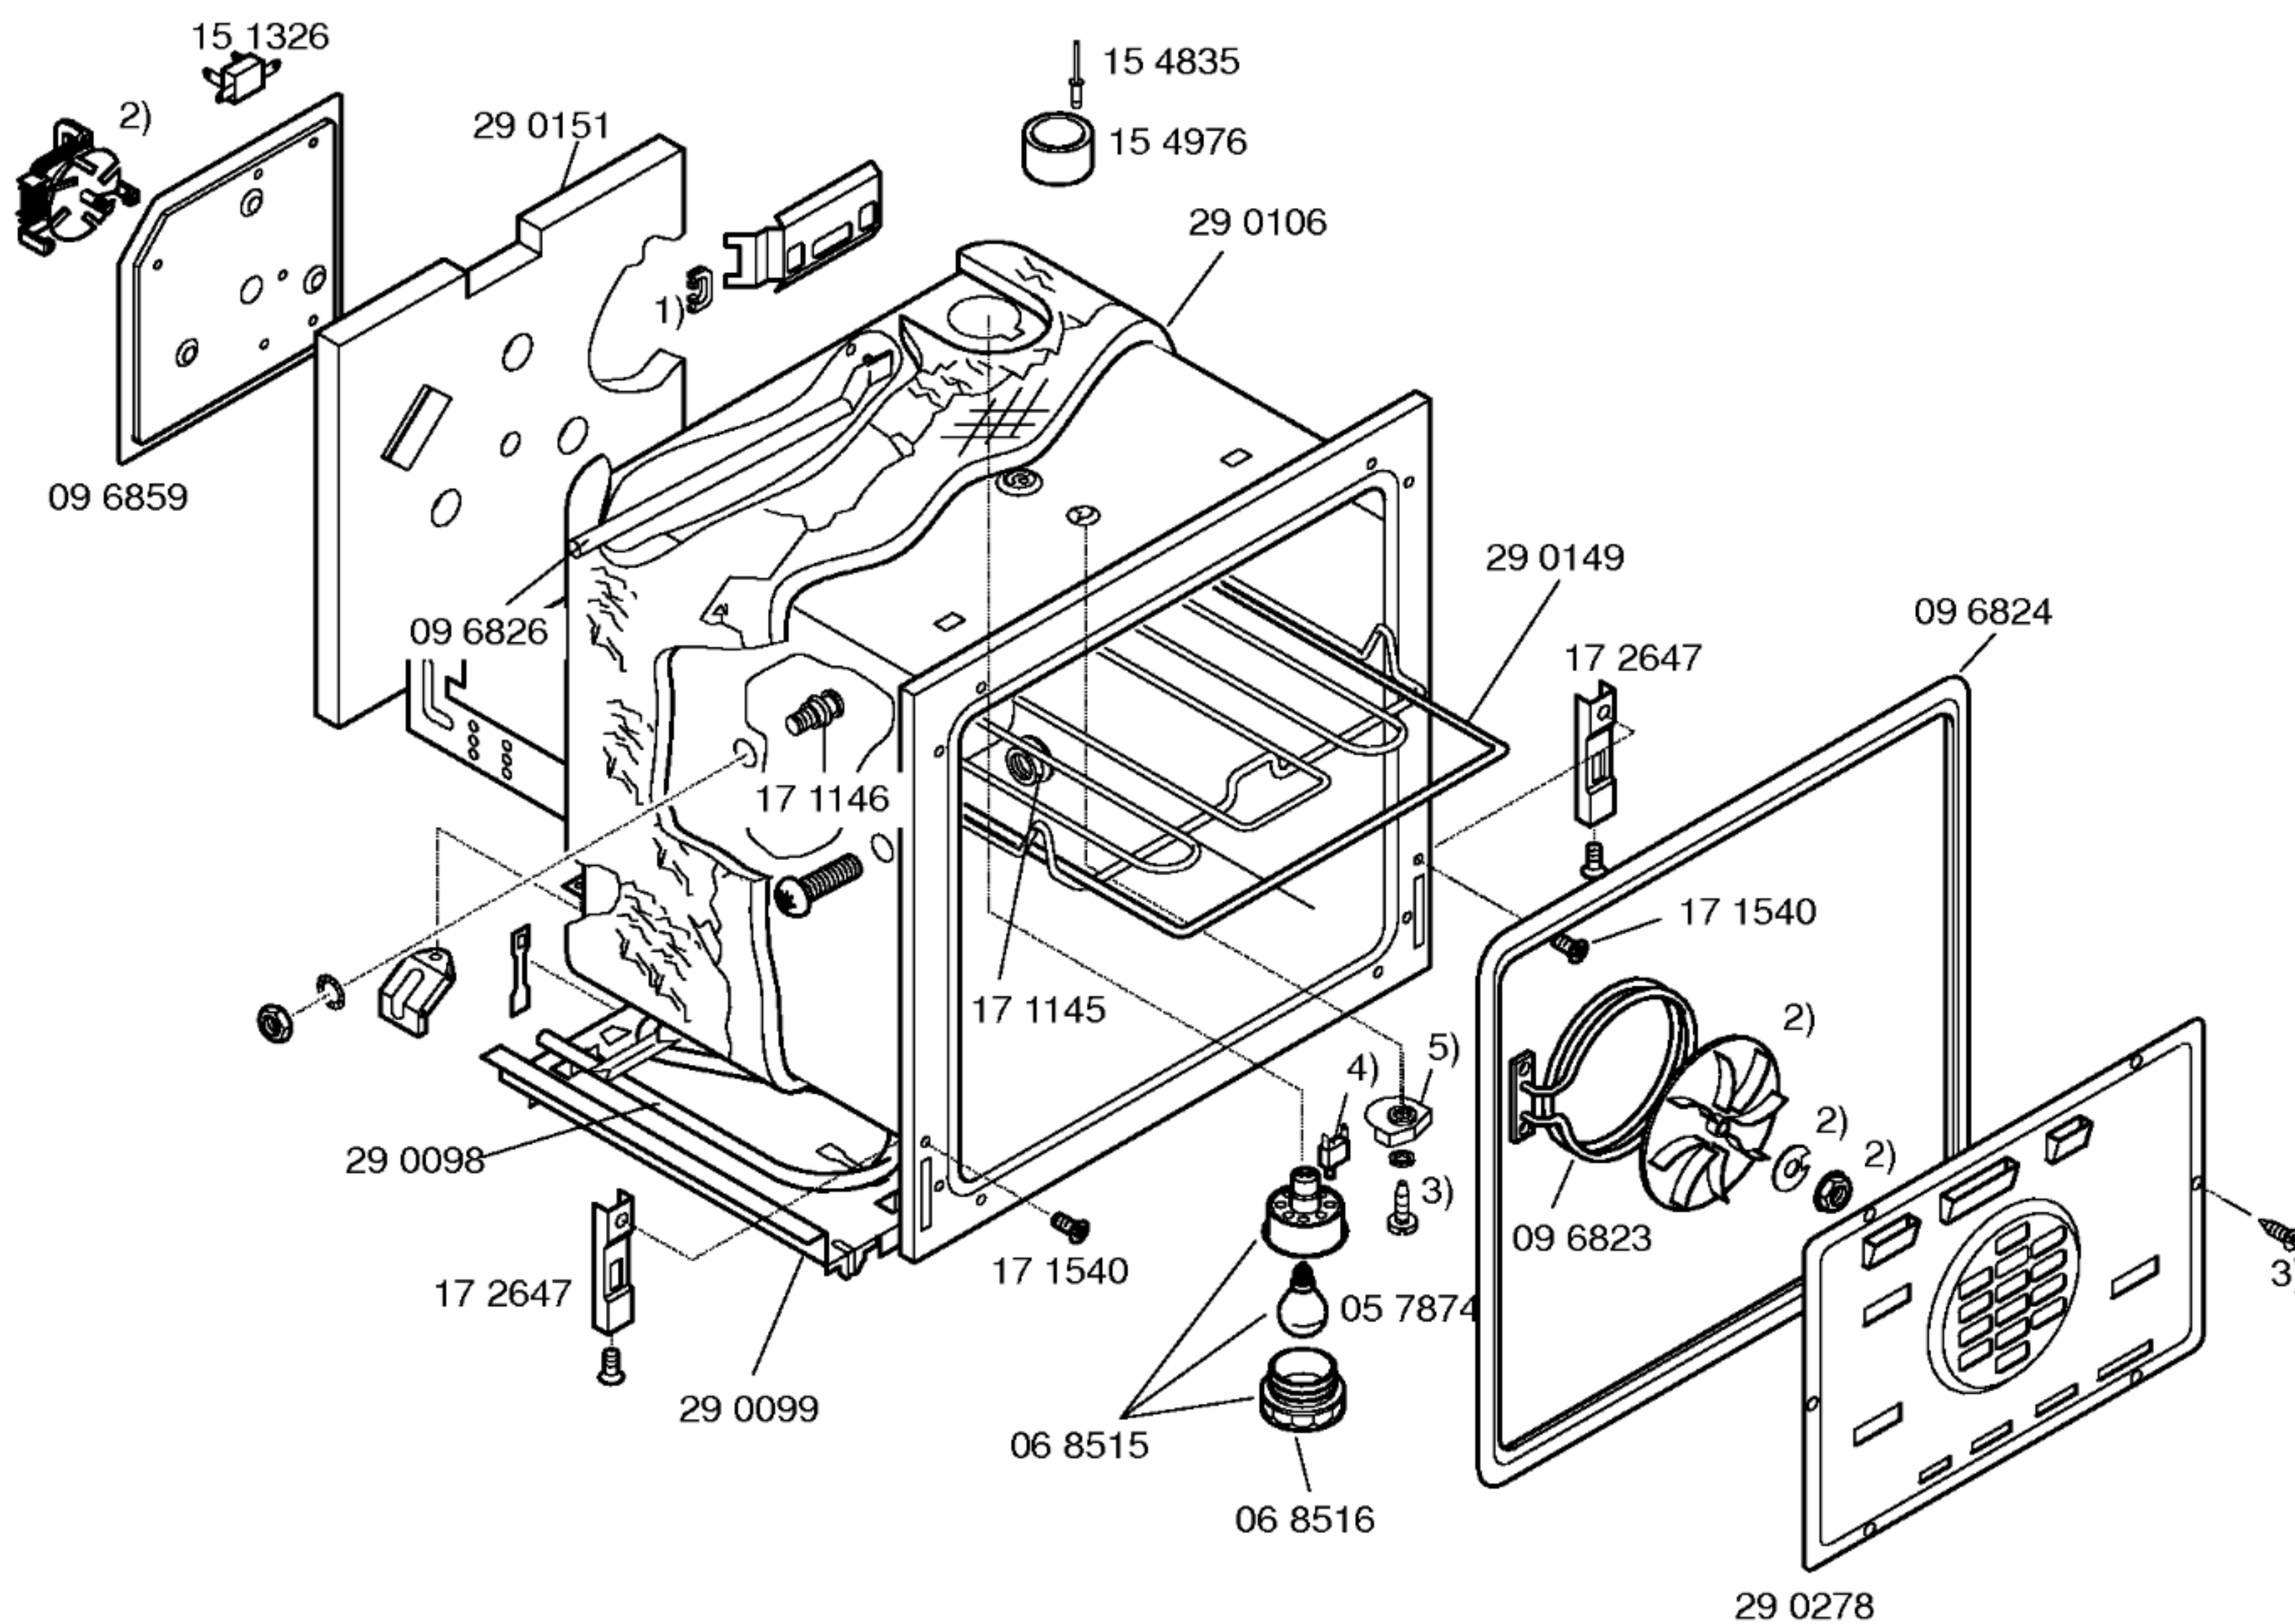

- 1) 02 5876
- 2) 26 1674
kompl.
- 3) 16 0916
- 4) 15 4836
- 5) 15 5033