




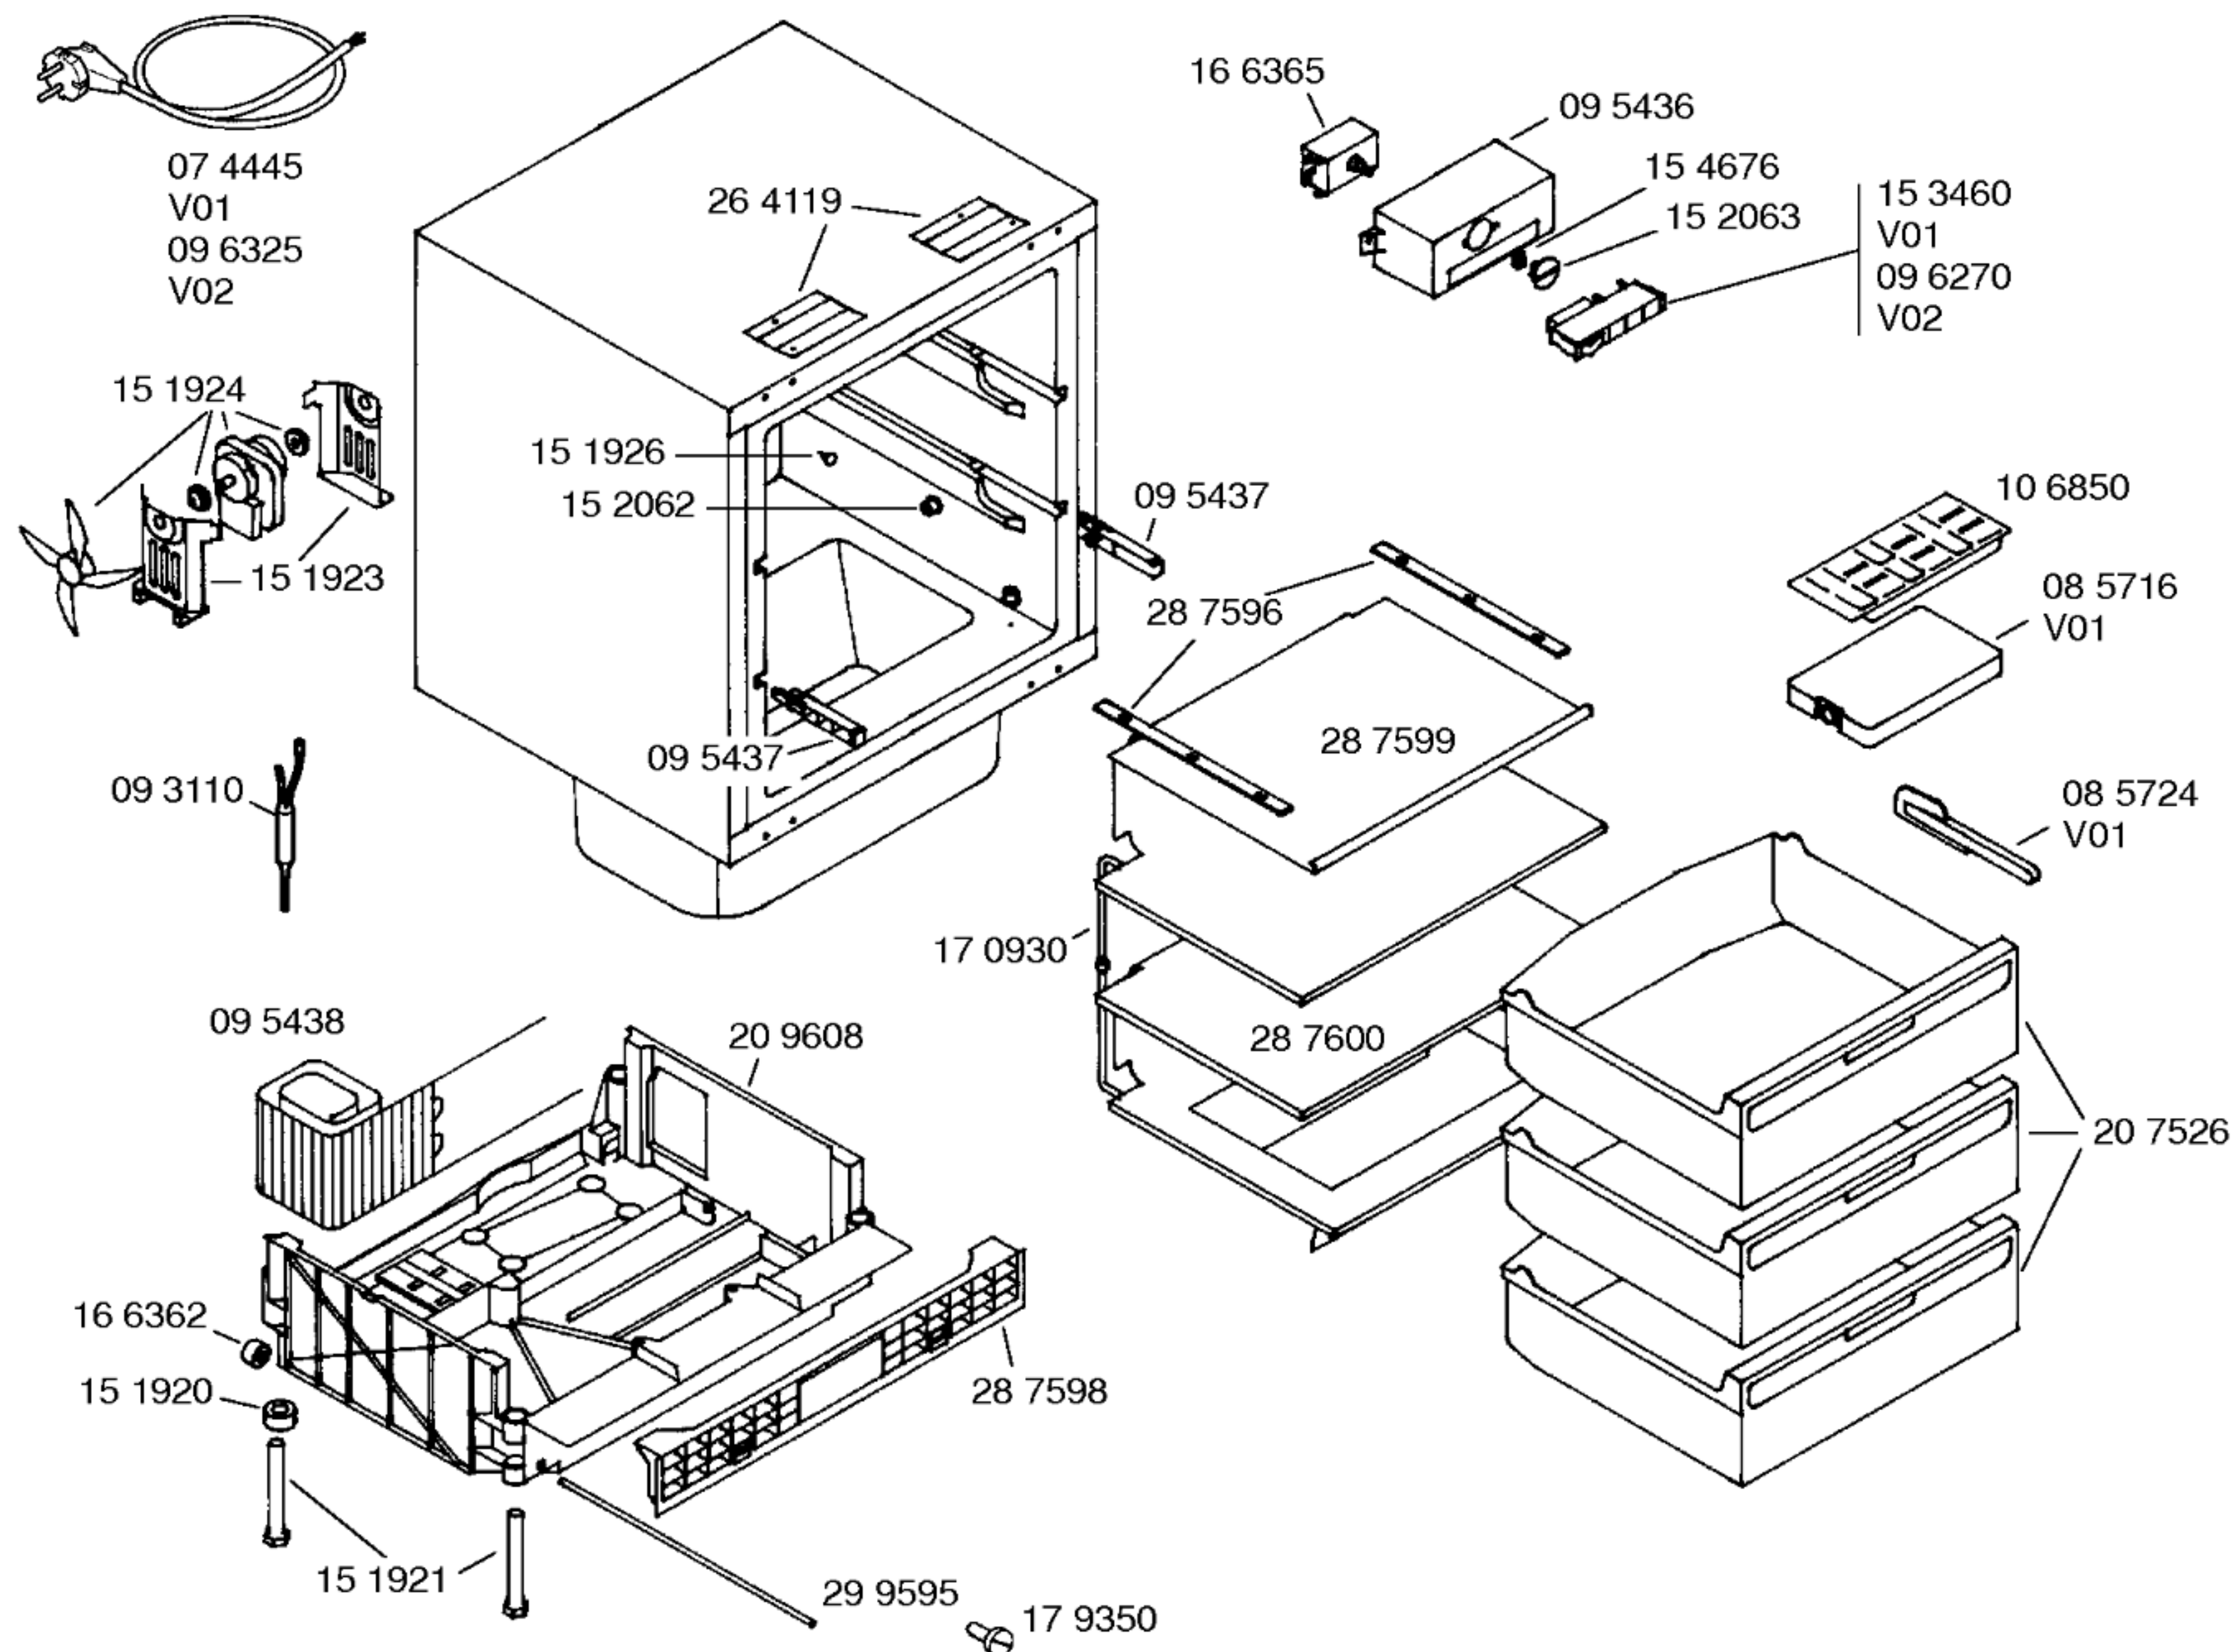

Gebrauchsanweisung
51 7448
Montageanleitung
52 1679

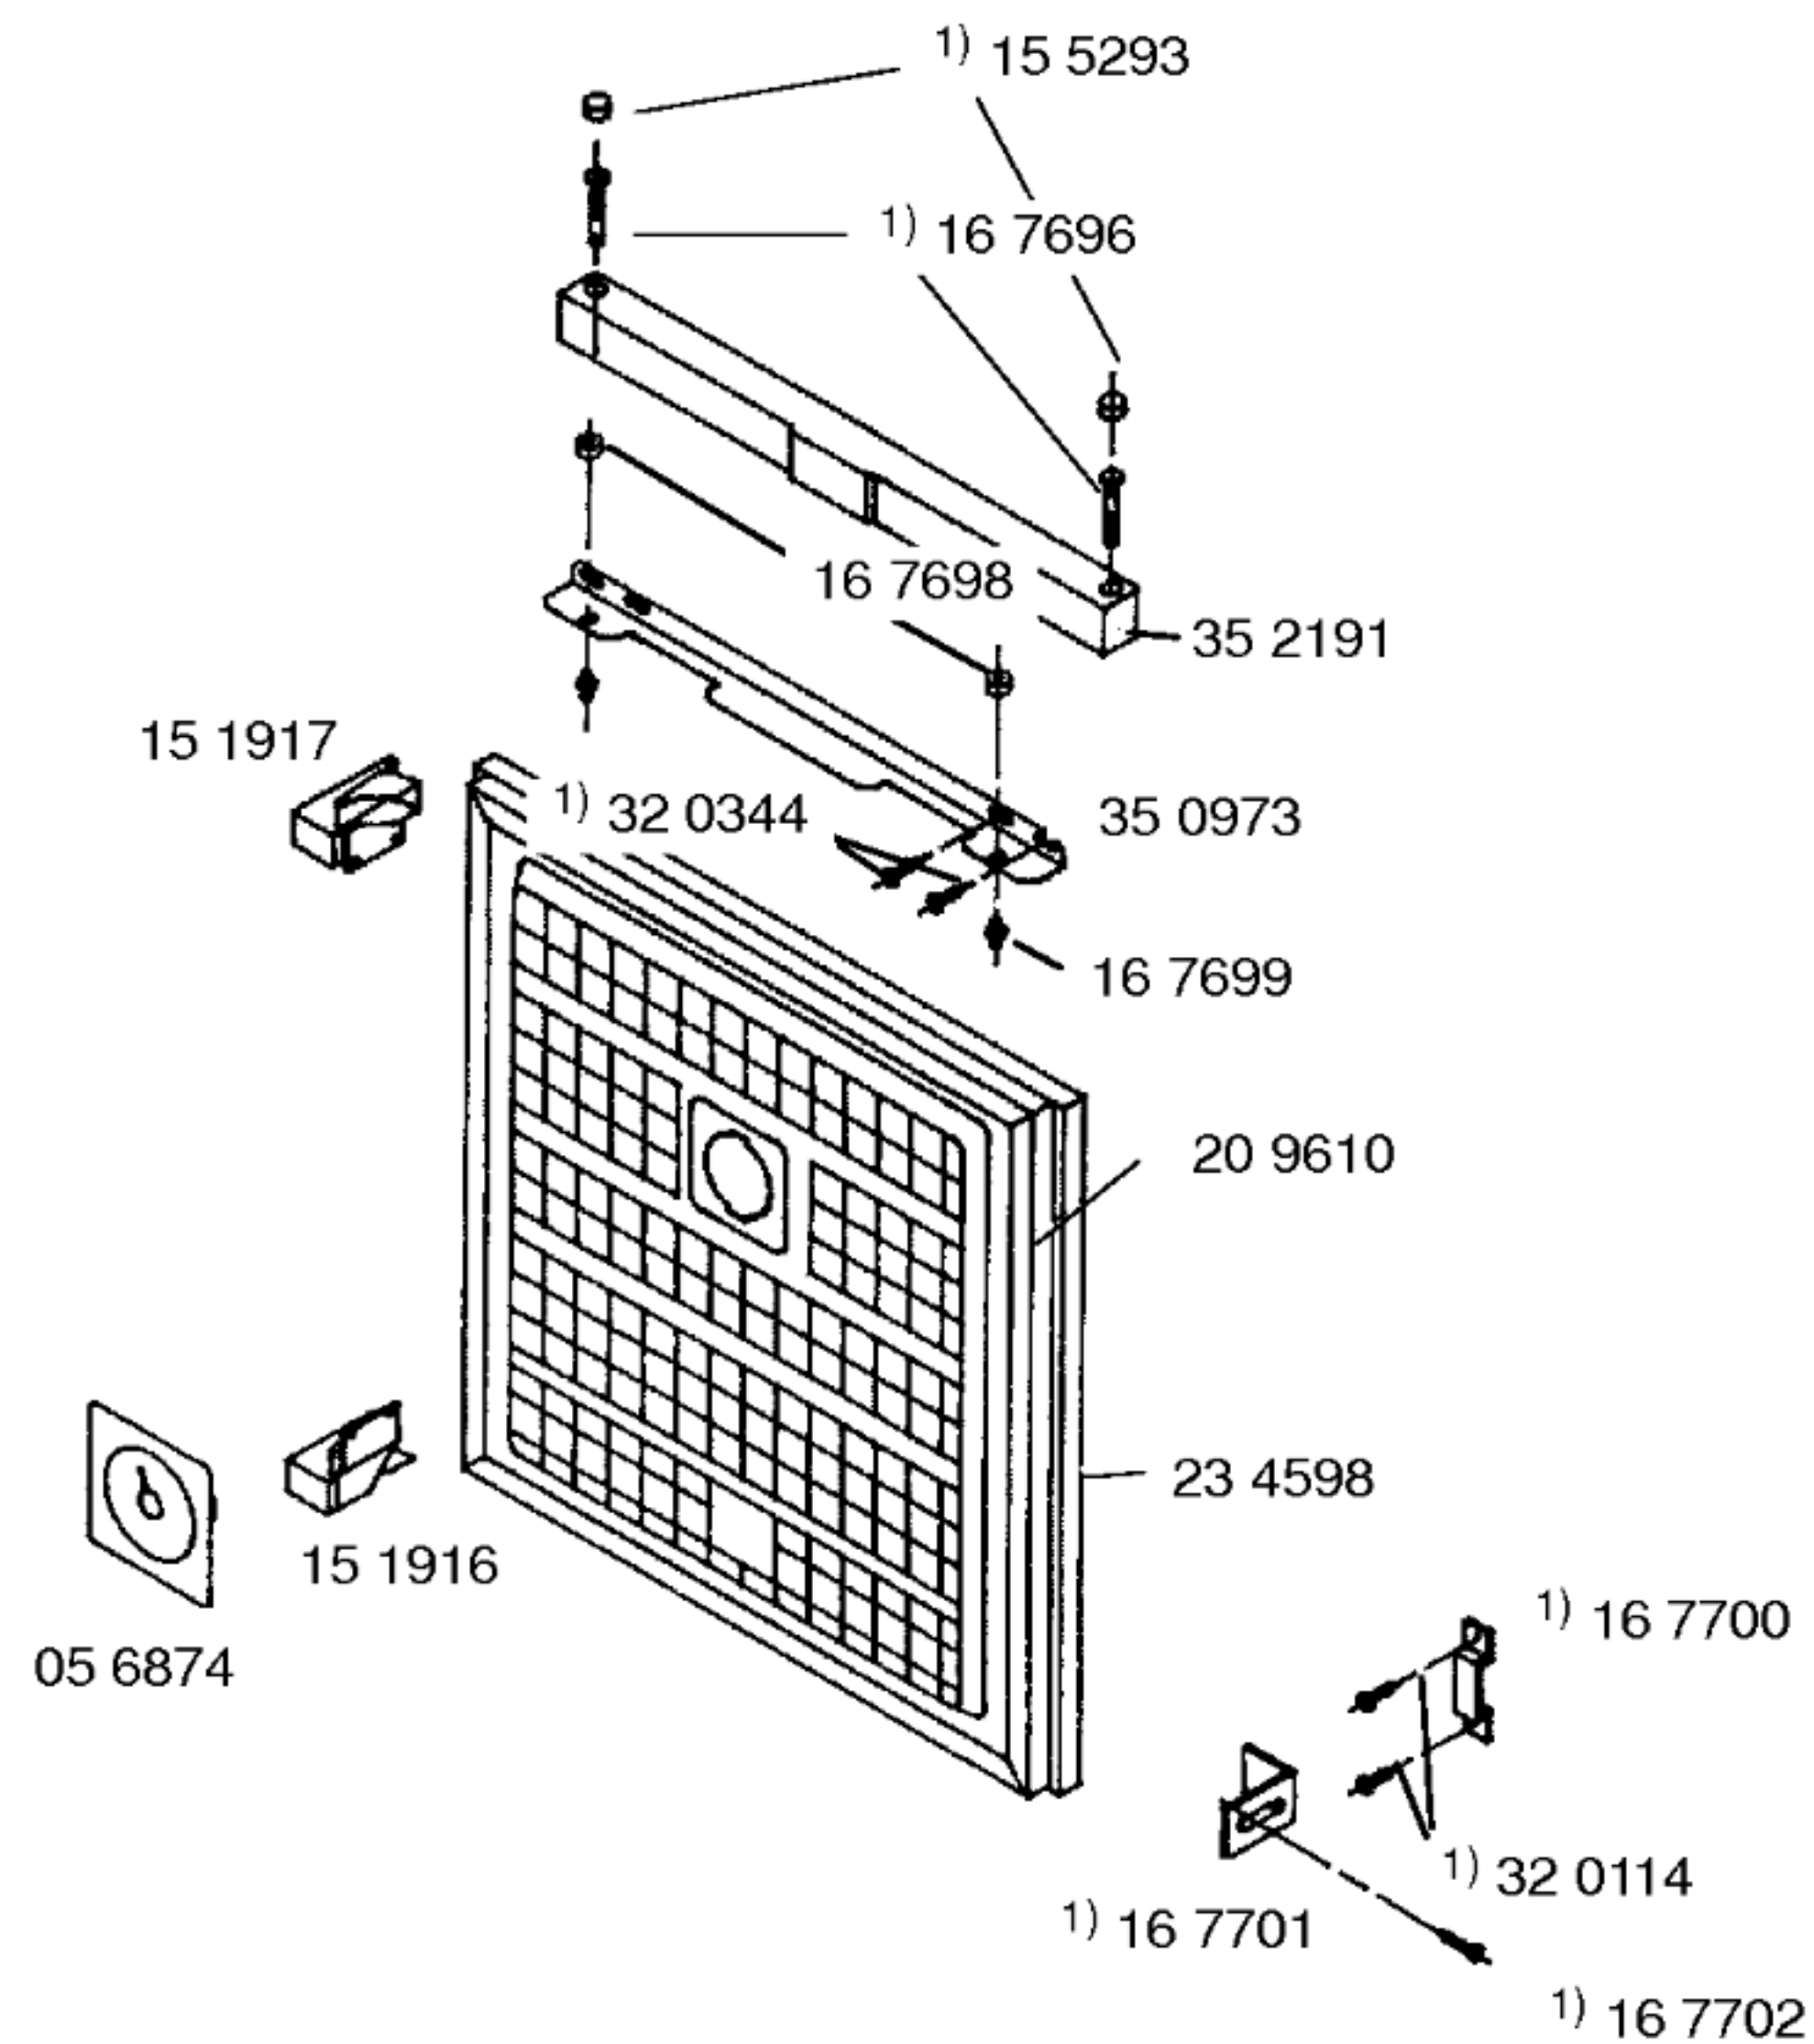

1) 35 0986

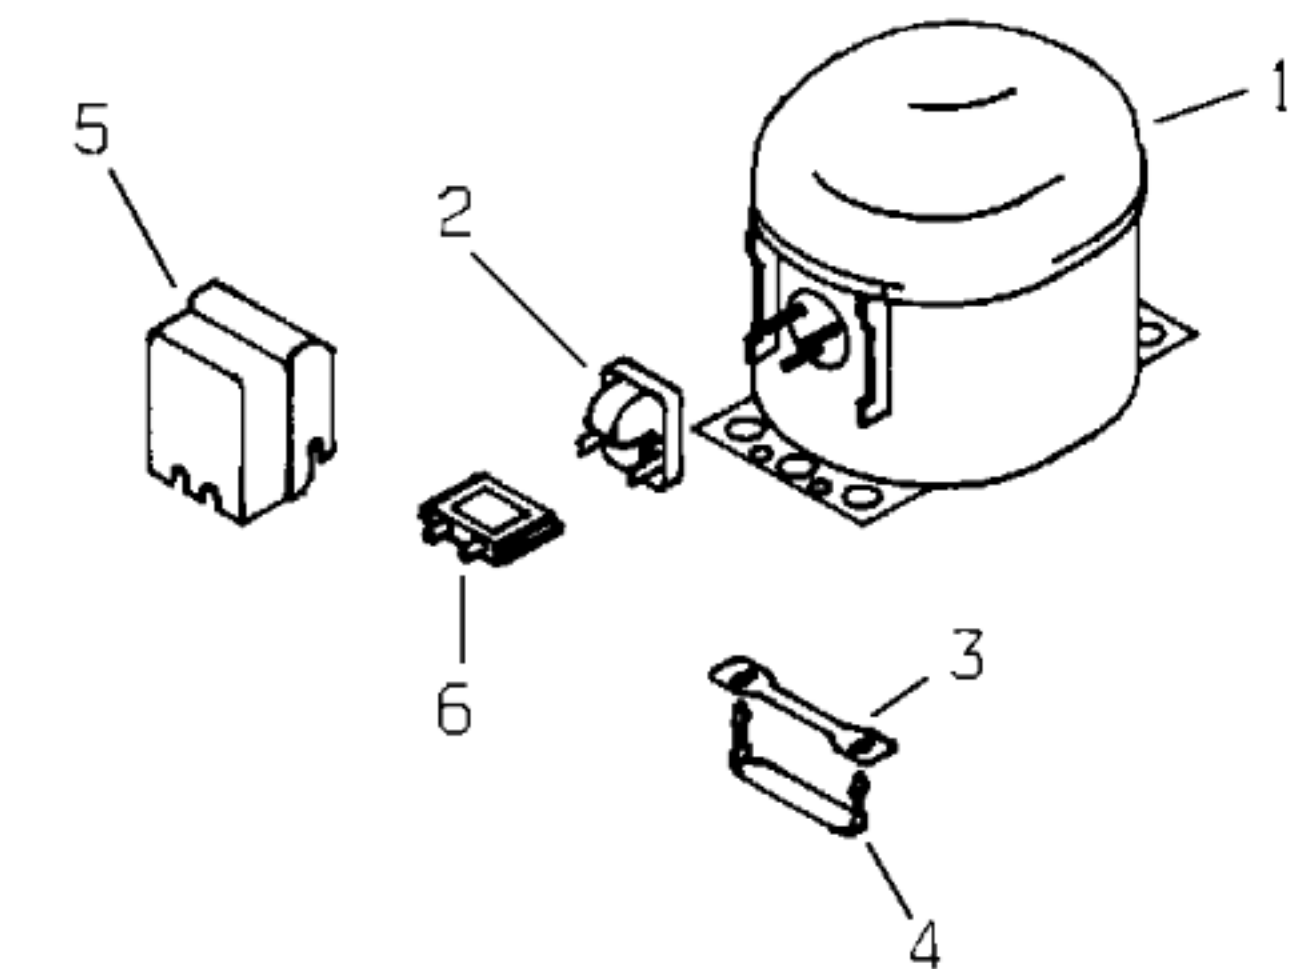

Pos.	Danfoss		
	TLES 9 K		
1	14 1308		
2	15 1055		
3	15 1919		
4	15 1918		
5	15 1072		
6	15 1053		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 9 K	
Förderleistung/Delivery/Débit		l/h	1584
Anlaufstrom/Starting current/Cour de démarrage		A	4,5
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	16,5
		Hi/aux Ω	16,9
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K56-1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/		°C	-25 -15
Valeurs de commutation		„ein“	-36 -23
		„aus“	
		(„abtauen“ od.)	„alarm“
Füllmenge/Fill.quantity/Charge		R600a	g
			53
Anschlußwert/Conn.load/Puiss. connectée		W	70
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	MES F61-10
			680
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	