

**BOSCH**

TAT3611US-USA1
TAT3621US-USA2
TAT3631US-USA3
TAT3641US-USA4

TAT3636US-USA5

KLEINE HAUSGERÄTE
Toaster

Ident – Nummern – Konstante
3740

51 4667
Instruction for use
(USA)

1) 03 1496
2) 27 1817
USA1, USA2, USA3, USA4
27 3944
USA5

27 2841
USA1, USA4
27 2839
USA2
28 2221
USA3
28 4330
USA5

03 1499
USA1, USA3
03 2803
USA2, USA5
03 1501
USA3
05 9837
USA4

27 1826
USA1, USA3
27 2840
USA2, USA5
28 1873
USA4

03 1497
USA1
03 2101
USA2, USA5
03 1500
USA3
05 8935
USA4

03 1498
03 2974

05 8082

27 2086

08 7808

27 2838

03 1495
USA1, USA3
03 2100
USA2, USA5
05 9836
USA4