


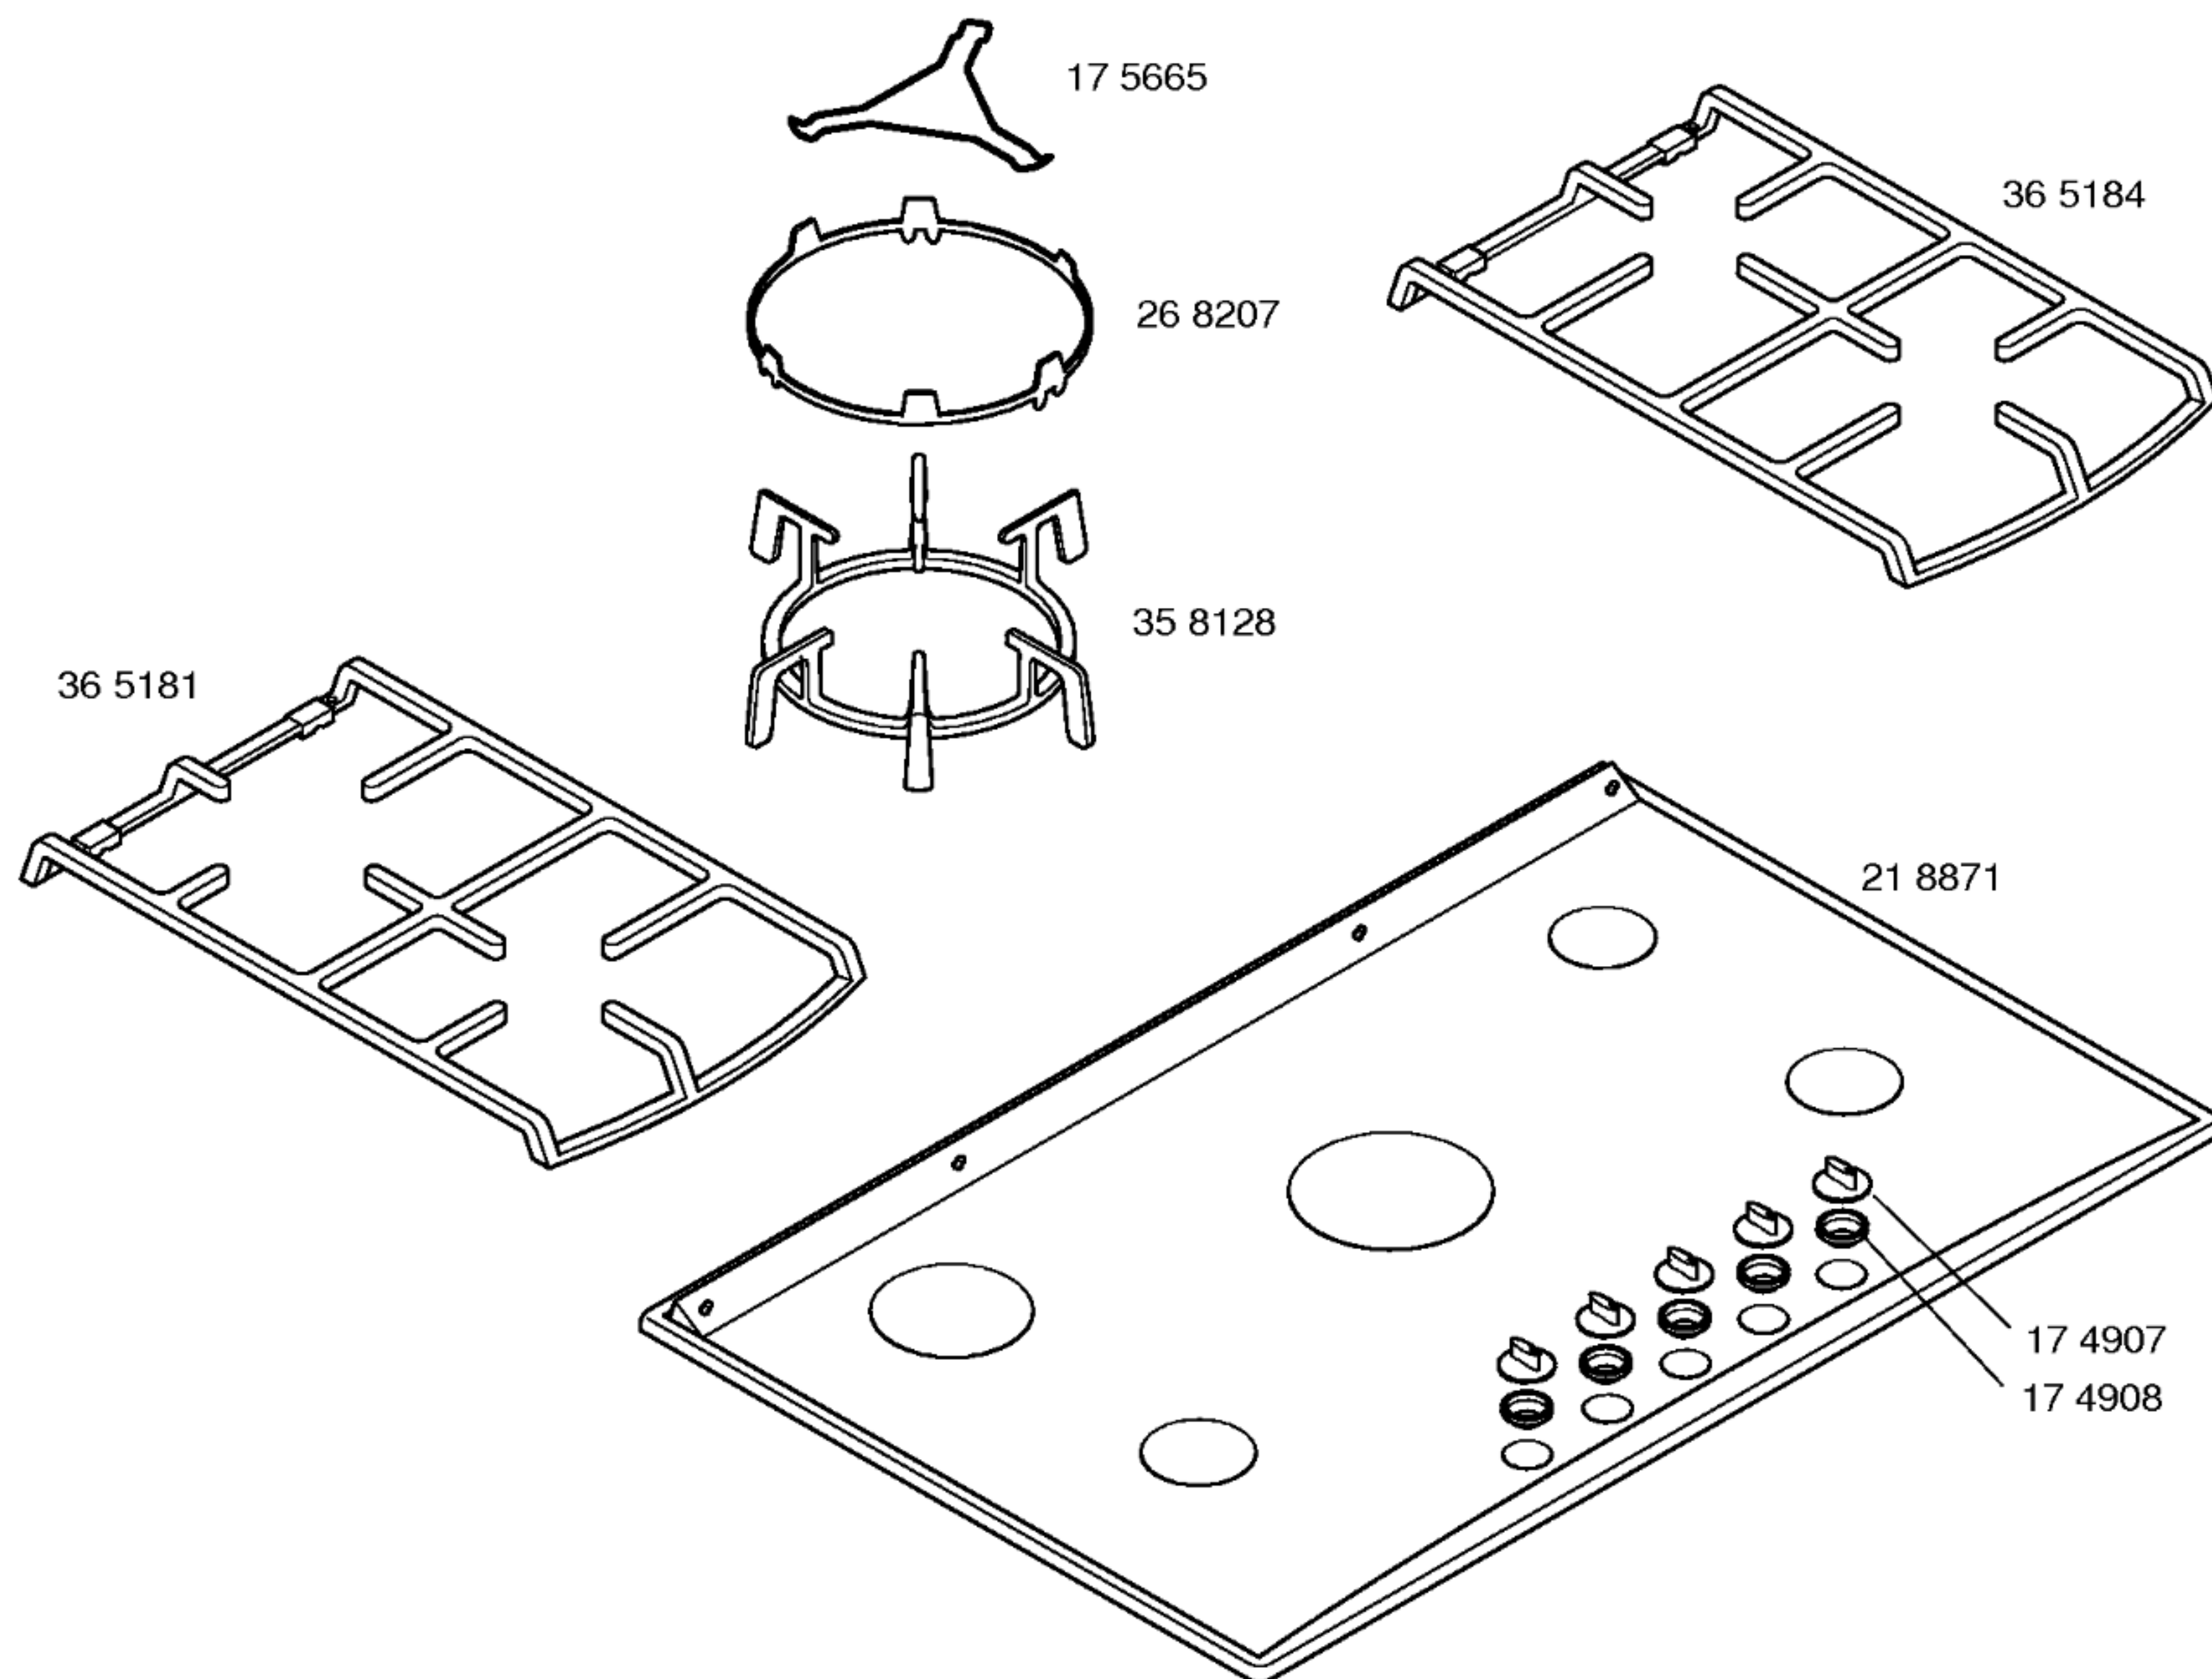

Gebrauchsanweisung
58 1287
(de,en,fr,it,nl,es,el)
V01
58 1667
(de,en,fr,it,nl,es,el)
V02

Düsensätze:

Flüssiggas
50 mbar
18 4160

Flüssiggas
30 mbar
18 4195

Erdgas E/H
G20 20 mbar
18 4197

Erdgas LL
G25 20 mbar
18 4199

Erdgas L
G25 25 mbar (nl)
18 4198

