



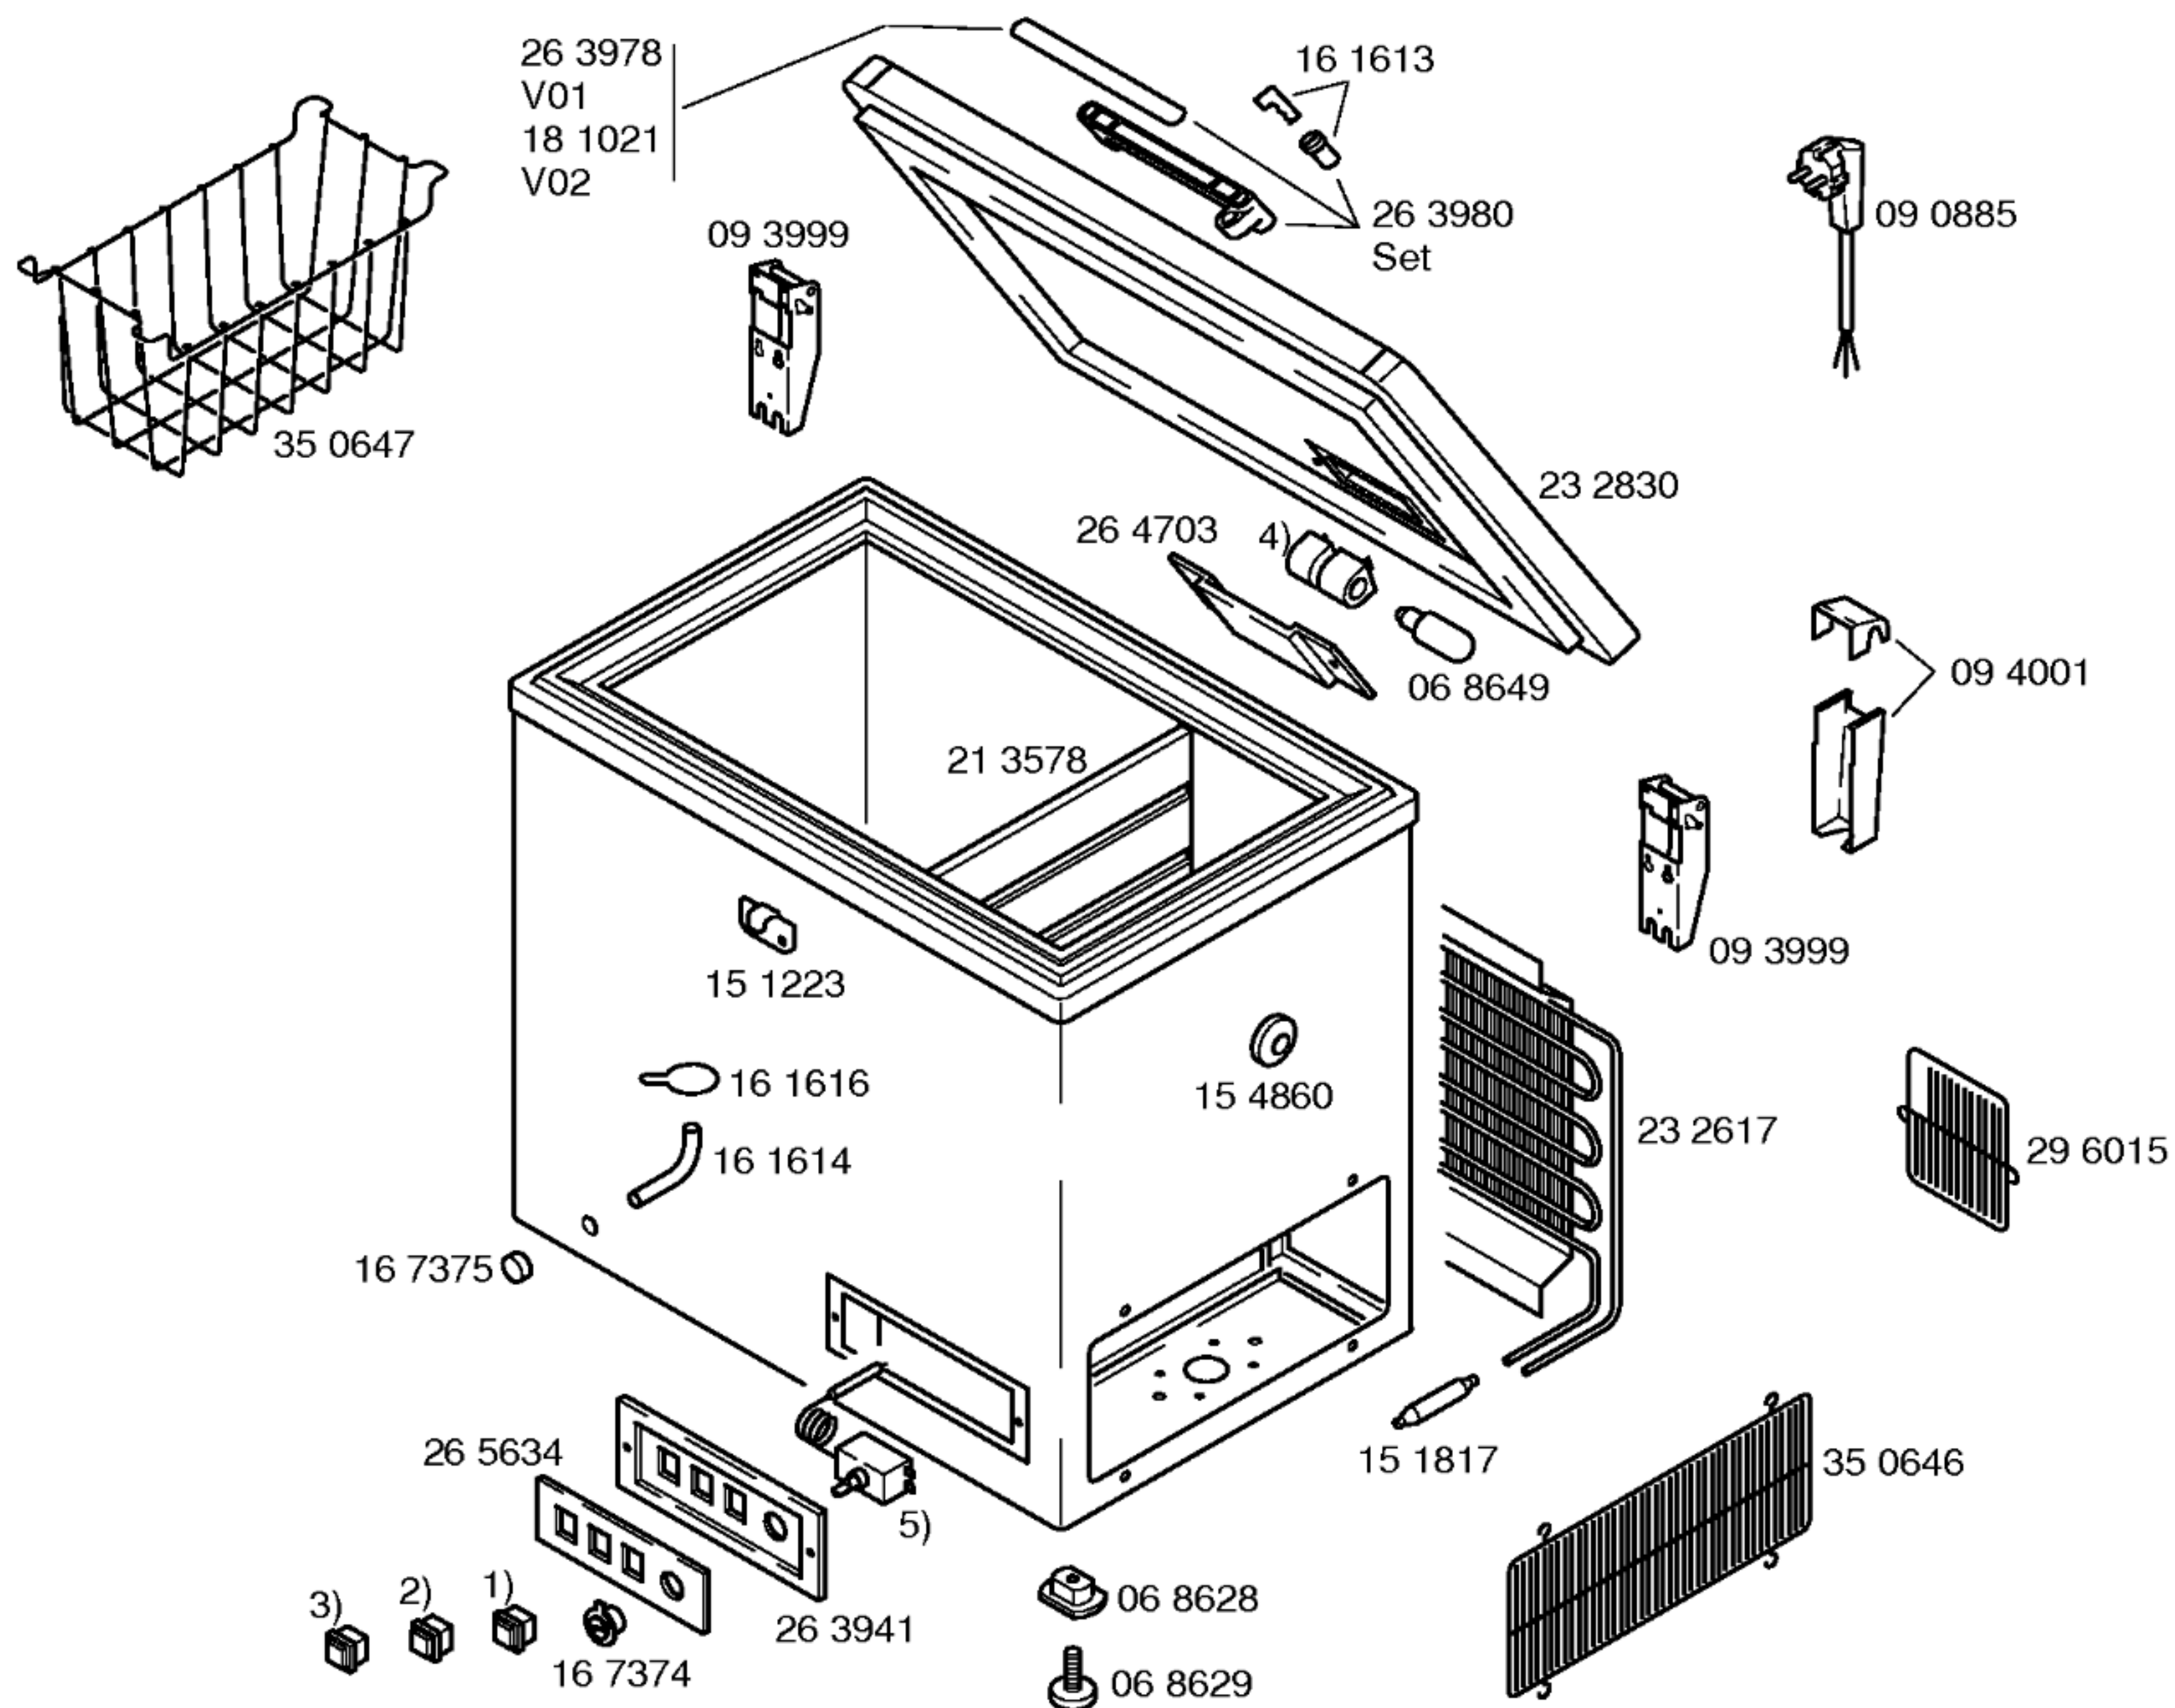

Libro de instrucciones

52 2792
V01 (E)
52 6741
V02 (E)

- 1) 06 8641
Ambar
- 2) 06 8639
Rojo
- 3) 06 8640
Verde
- 4) 06 8643
- 5) 06 8645
V01
17 9559
V02

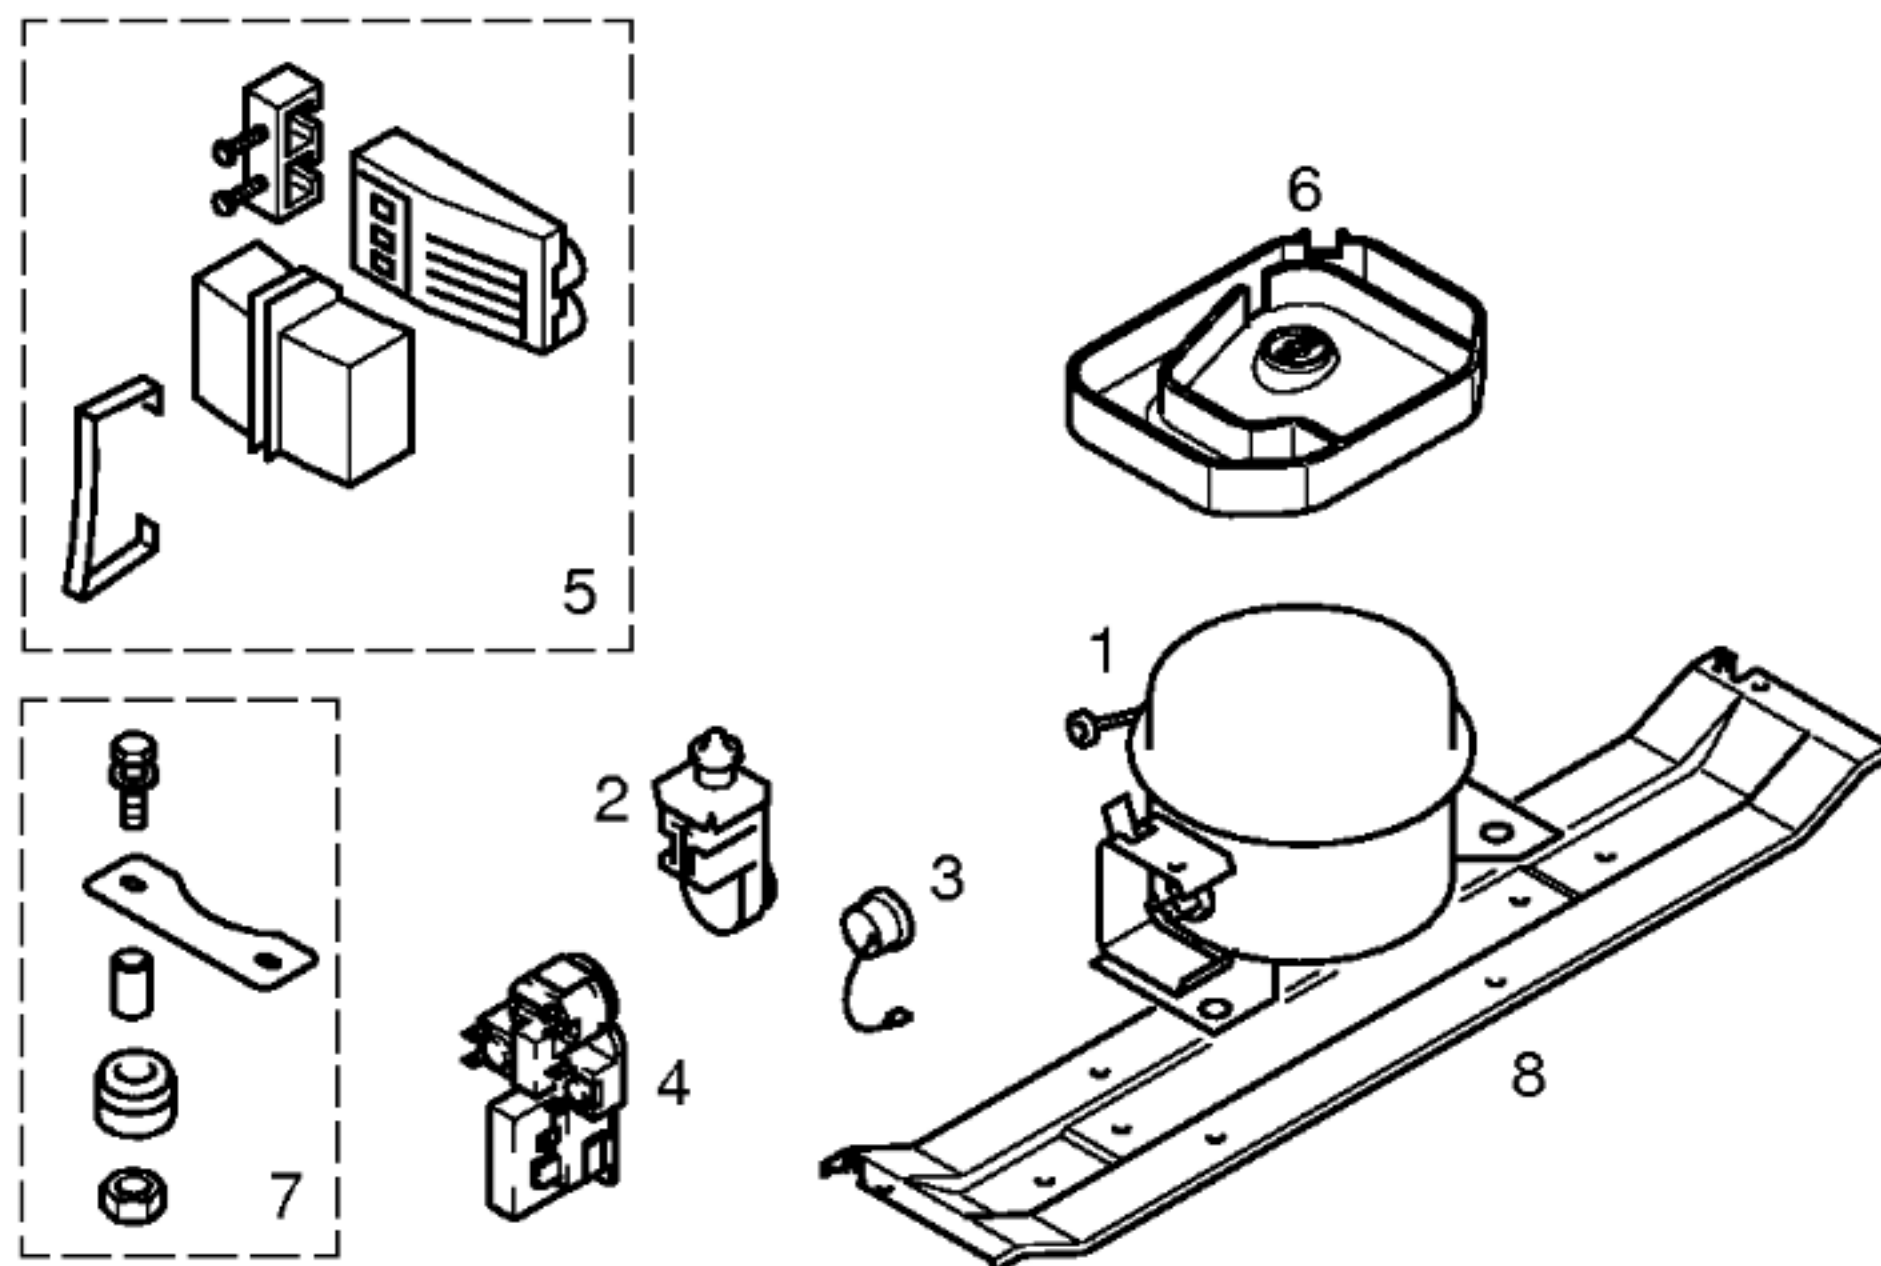

Pos.	V01	V01	V02	
	ZEM GL90AB	Aspera B1118Z	U.H. GLY80AA	
1	14 1600	14 1600	14 1600	
2	15 4887	16 1631	16 0675	
3	15 4891	16 1636	18 1042	
4				
5	09 6836	16 1633		
6				
7	15 4861	15 4861	15 4861	
8				
9				
10				
11				
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				
	V01	V01	V02	
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	ZEM GL90AB	Aspera B1118Z	U.Hermetica GLY80AA	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	Ranco K54–L1887 MIN. MAX. –19 –29 –14	Ranco K54–L1997 MIN. MAX. 14,5 –23 –24,5 –33		
Füllmenge/Fill. quantity/Charge/Carga R134a g	*	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	147	152		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características