


**BOSCH**

HMG8002/01-D1, weiss
 HMG8002/02-D2, weiss
 HMG8002/03-D3, weiss
 HMG8002NL/01-NL1, weiss

HMG8002NL/02-NL2, weiss
 HMG8002NL/03-NL3, weiss

HERDE
 Mikrowellenherde

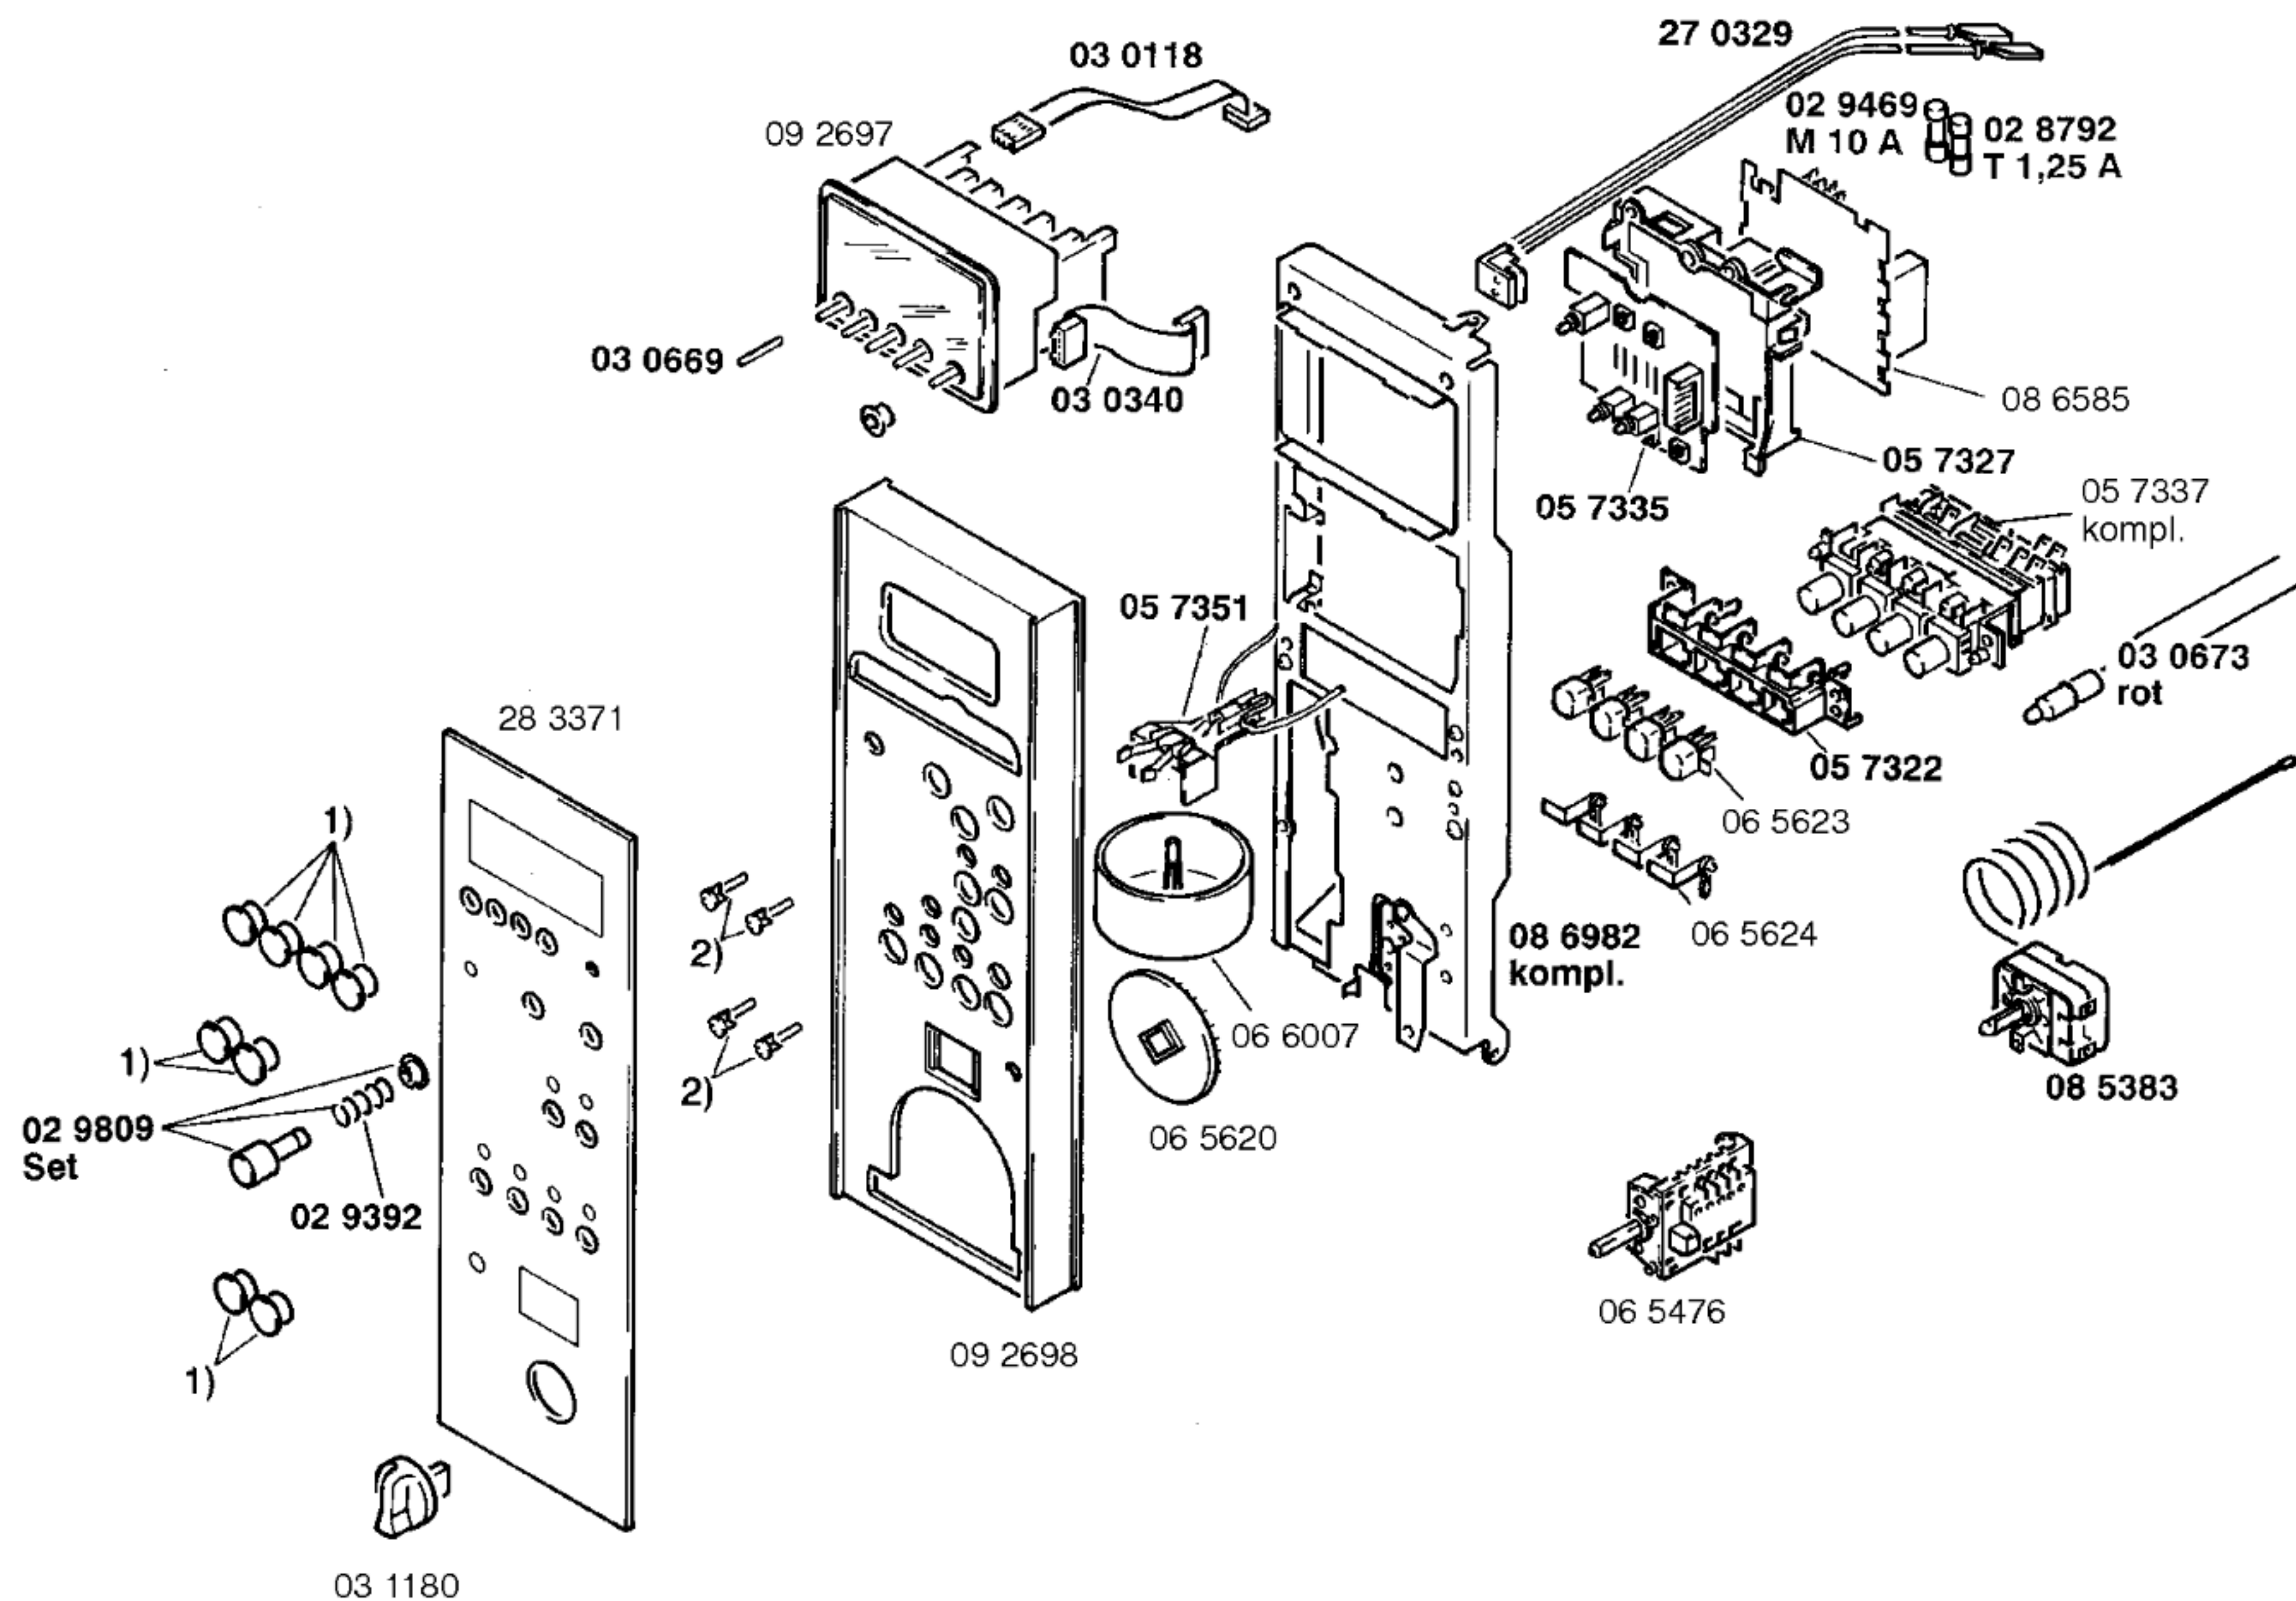

Ident - Nummern - Konstante
 3740

Gebrauchsanweisung

51 6124

(D)

51 5891

(D, GB, F, I, NL)

Kurzanweisung

51 6009

(D)

Kochbuch

51 5732

(D)

51 5858

(F)

51 5859

(NL)

1) 03 0696

2) 03 0679

Alu-Backblech

HMZ 19 BB

Glaspfanne

HMZ 10 GP

Glasbräter

HMZ 21 GB



BOSCH


HMG8002/01-D1, weiss
HMG8002/02-D2, weiss
HMG8002/03-D3, weiss
HMG8002NL/01-NL1, weiss

HMG8002NL/02-NL2, weiss
HMG8002NL/03-NL3, weiss

HERDE
Mikrowellenherde

Ident – Nummern – Konstante
3740

- 1) 03 0671
- 2) 03 0813
Arretierstift

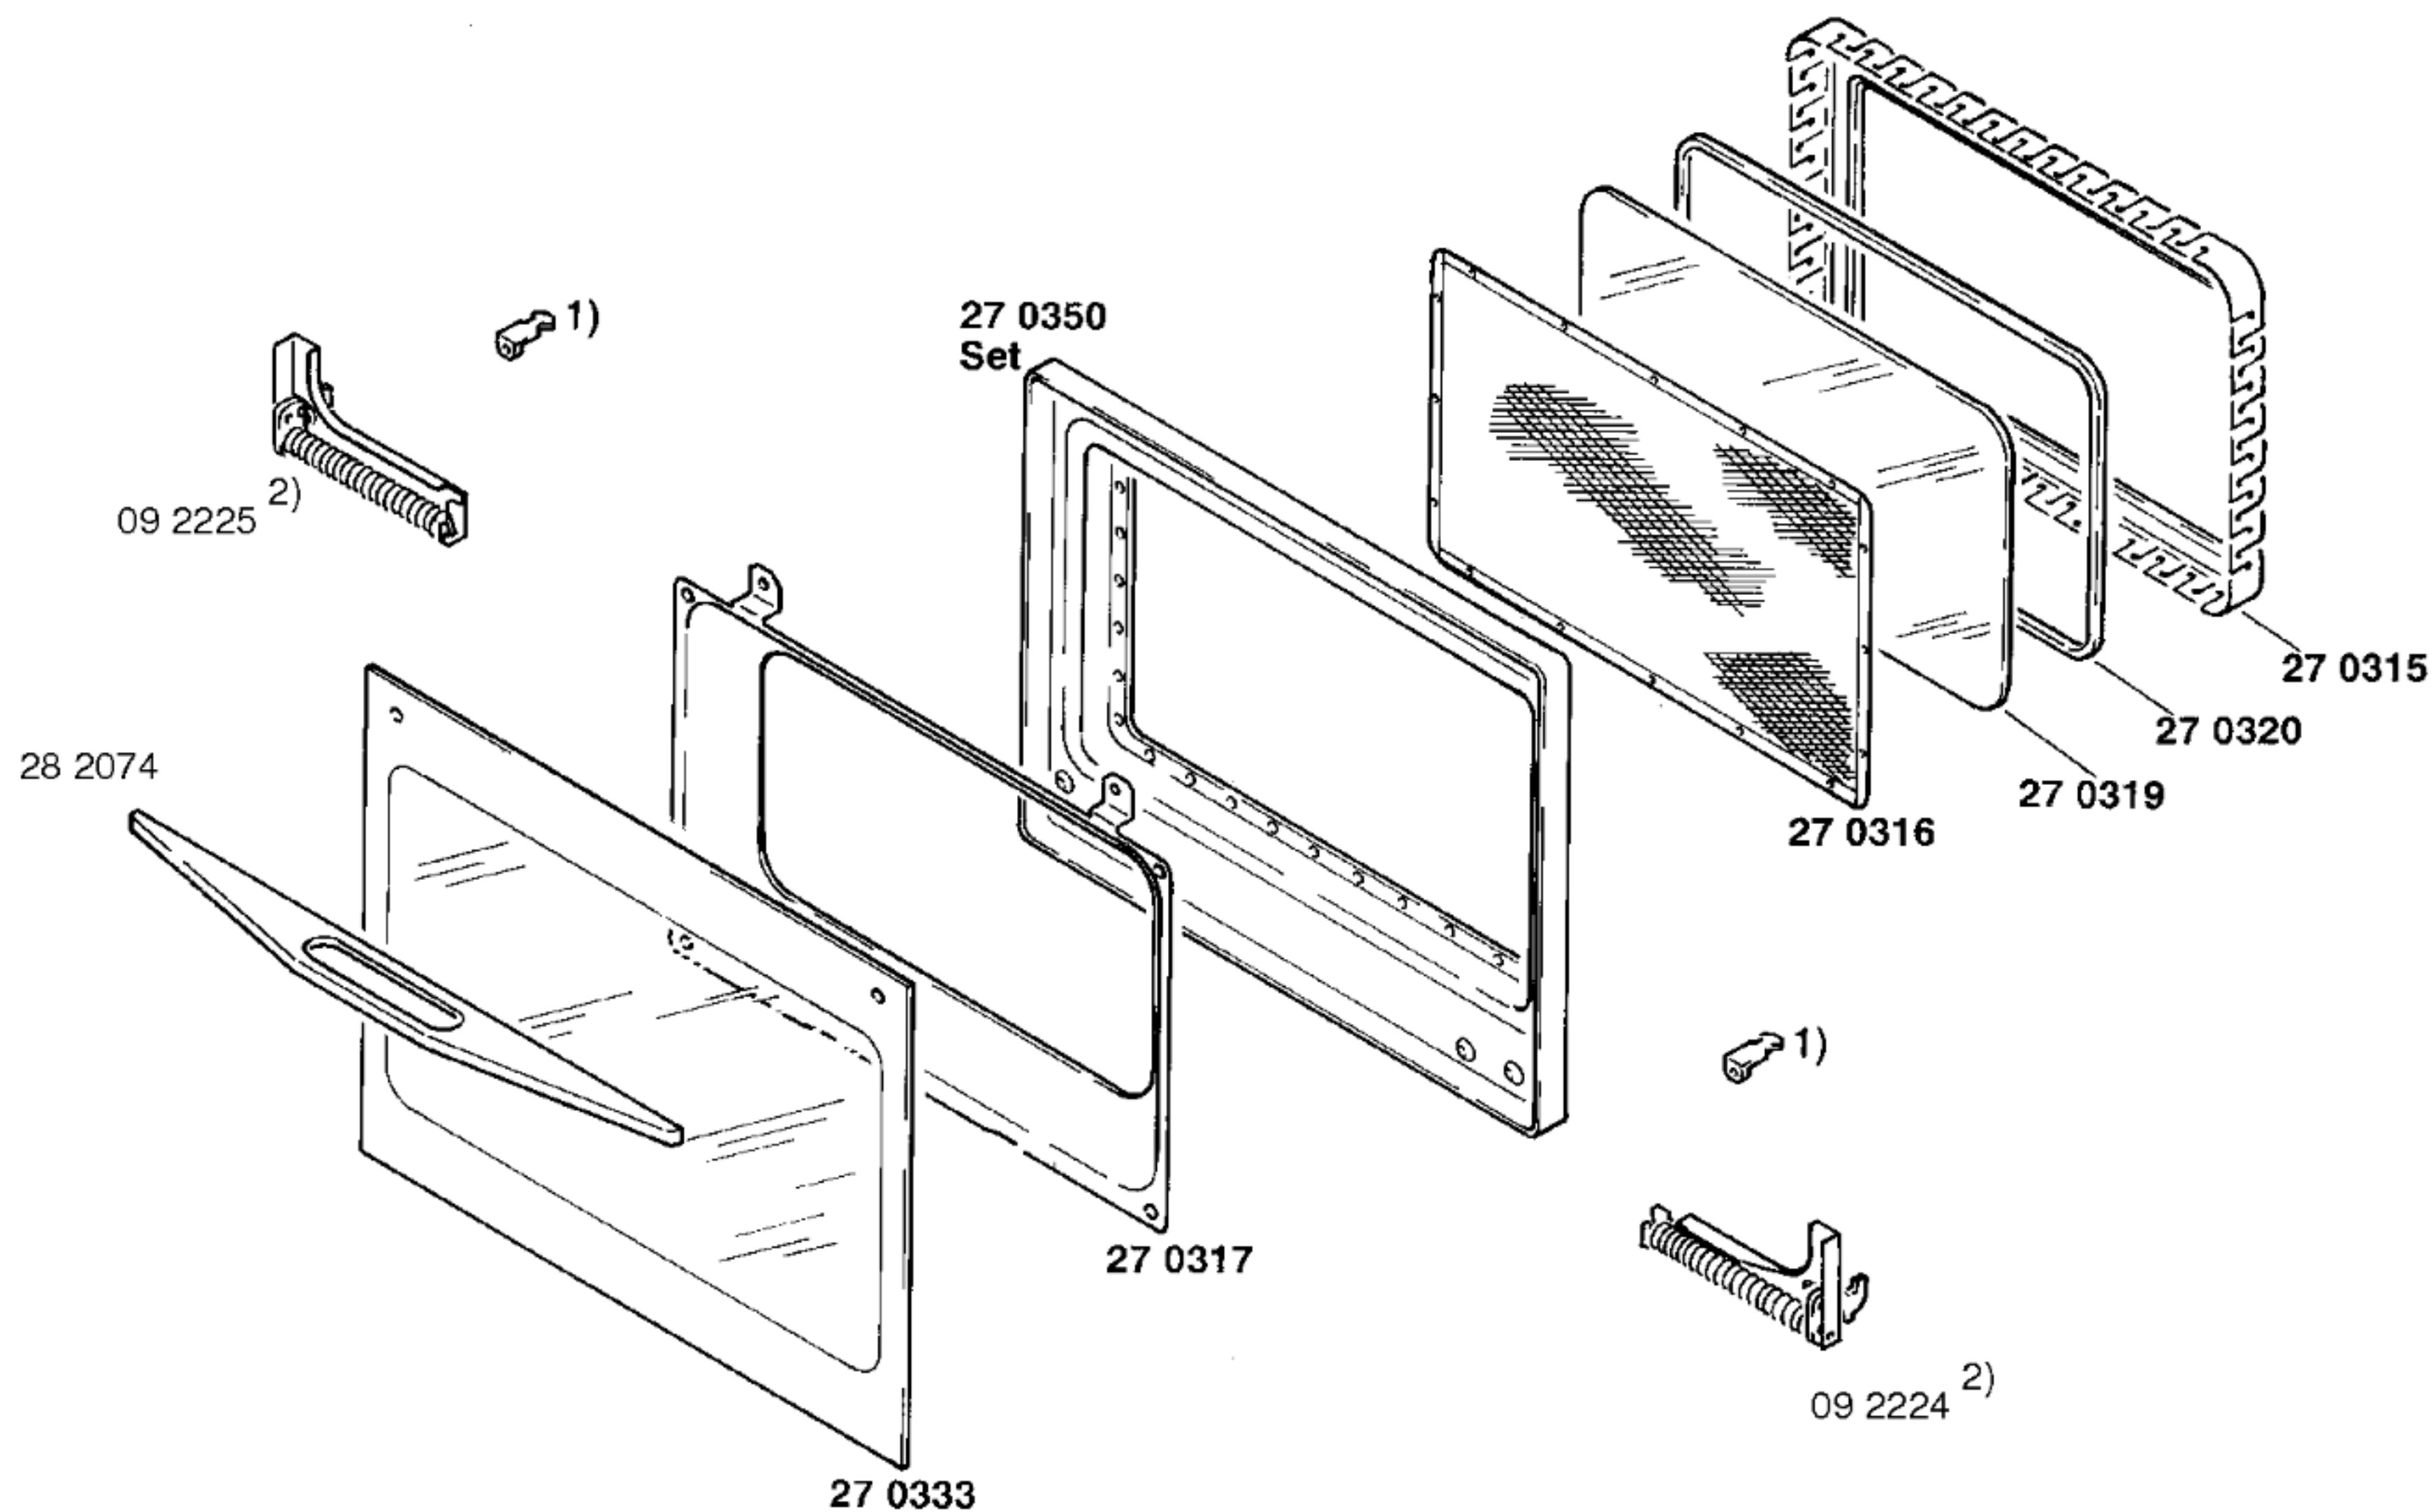


**BOSCH**

HMG8002/01-D1, weiss
 HMG8002/02-D2, weiss
 HMG8002/03-D3, weiss
 HMG8002NL/01-NL1, weiss

HMG8002NL/02-NL2, weiss
 HMG8002NL/03-NL3, weiss

HERDE
 Mikrowellenherde

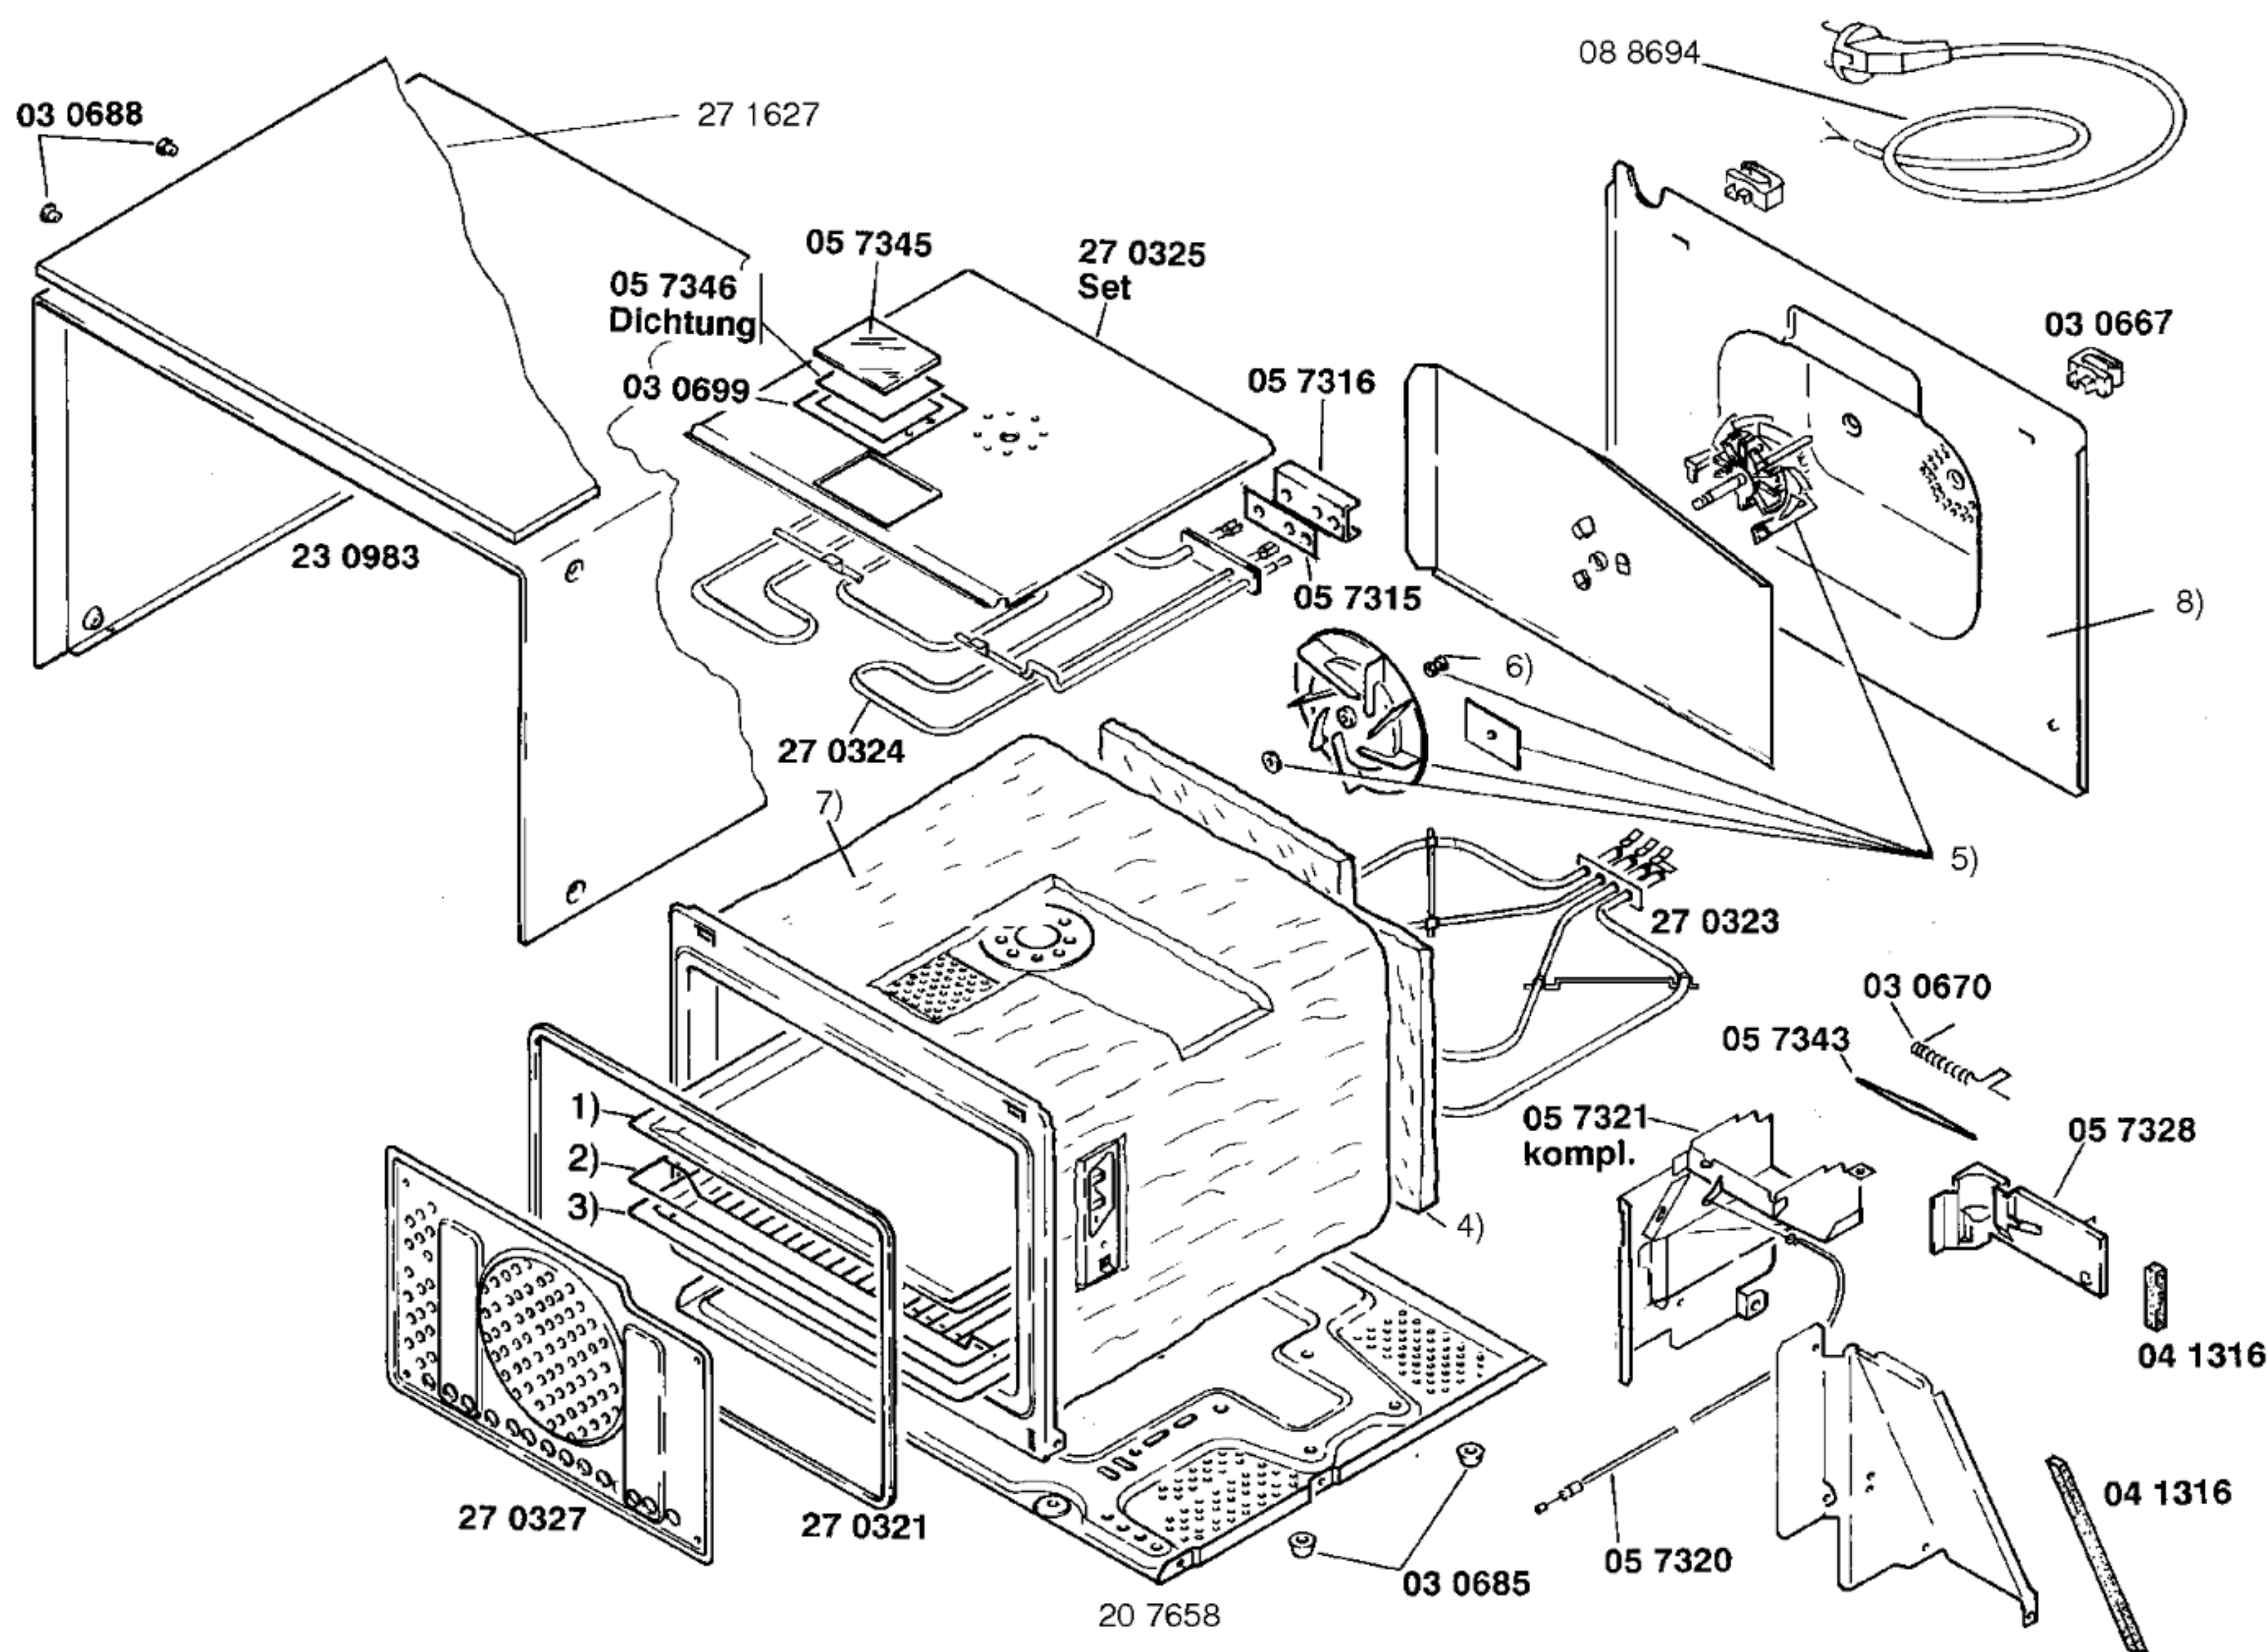

Ident - Nummern - Konstante
 3740

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 4) 27 3122
D1, NL1
28 3307
D2, D3, NL2, NL3
- 5) 09 2677
D2, D3, NL2, NL3
08 8518
D1, NL1
- 6) 03 2778
D1, NL1
- 7) 23 1101
D1, NL1
23 2269
D2, D3, NL2, NL3
- 8) 20 7659
D1, NL1
20 7701
D2, D3, NL2, NL3

02 8732
Anschlag-Backblech

**BOSCH**

HMG8002/01-D1, weiss
HMG8002/02-D2, weiss
HMG8002/03-D3, weiss
HMG8002NL/01-NL1, weiss

HMG8002NL/02-NL2, weiss
HMG8002NL/03-NL3, weiss

HERDE
Mikrowellenherde

